

ASSEMBLY INSTRUCTION





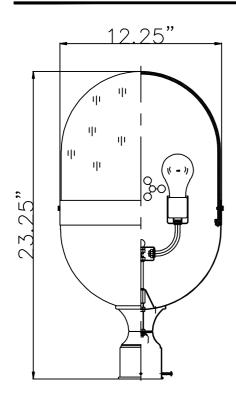

All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

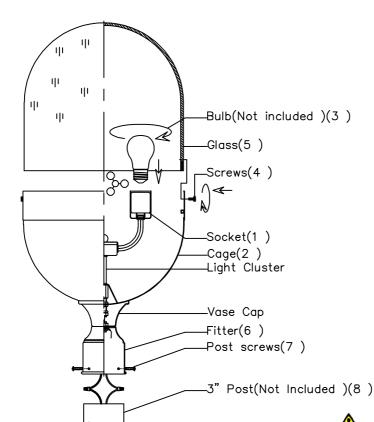

LISTED

You will need 3 - Med.Bulb 40 Watts Recommended

60 Watts Max

USE LED BULBS FOR EXTENDED USE

California T24 JA8-2016 Qualified: Satco

(S9612); 10.5 watt LED Medium Base

recommended. Bulb not included

How to install

- 1.To install glass , separate the Cage (2)), by removing the Screws (4).
- 2. Install the bulb (3) to the socket (1).
 3. Connect the Glass (5) and the Cage (2), by screwing in Screws (4) to secure cage.
- 4. The Fitter(6) can now be mounted to the Post(8) by the Post screws(7).

Replacement Glass installation:

1 .Follow instructions # 1 and # 3 above to install new glass. Complete by connecting the Cage (2) and the Glass (5) by screwing in Screws (4) to secure cage.


Bulb replacement:

- 1. Separate the Glass (5) and the Cage (2), by removing Screws (4).

 2. Install the bulb (3) into the socket
- 3. Complete by connecting the Glass (5) and the Cage (2) by screwing in Screws (4) to secure

WARNING: This product can expose you to Lead, which is known to the State of California to cause cancer and/or birth defects or reproductive harm. For more information go to www.P65Warnings.ca.gov

PART NUMBER

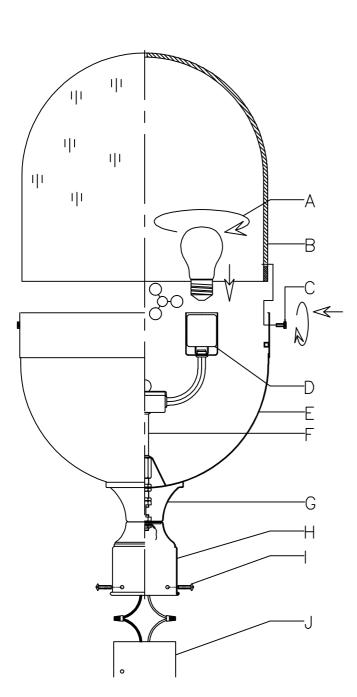

Part Number

- Part Numbers
 A. (3)—Bulb(Not Included)
 B. (1)—Glass; Ф11.75"X11";
 C. (3)—Screws
 D. (3)—Socket

- D. (3)—Socket
 E. (1)—Cage
 F. (1)—Light Cluster
 G. (1)—Vase Cap
 H. (1)—Fitter
 I. (3)—Post Screws
 J. (1)—3" Post(Not Included)