



Installation Steps



Safety tip: Please ensure power is switching off before installation!

7

Pass the main power cable through a round iron ball along the hanging chain, and then lead to the ceiling plate along the hanging chain.




Fix the hanging board on the ceiling with screws.



Assemble the four wooden sticks as shown

2

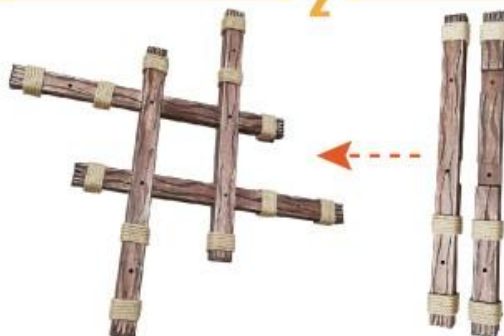

Lead the lampshade power cord out of the hoisting ring and the chain.

3



6

Pass the main power cable through the round iron ball and along the hanging chain to the ceiling plate.



5

Fix each lamp head line along the lamp body with a wire buckle, buckle the movable buckles on the four hanging chains into the light ring and tighten them.



4



The dental rod passes through the wooden board lamp body and is fixed with a nut.