

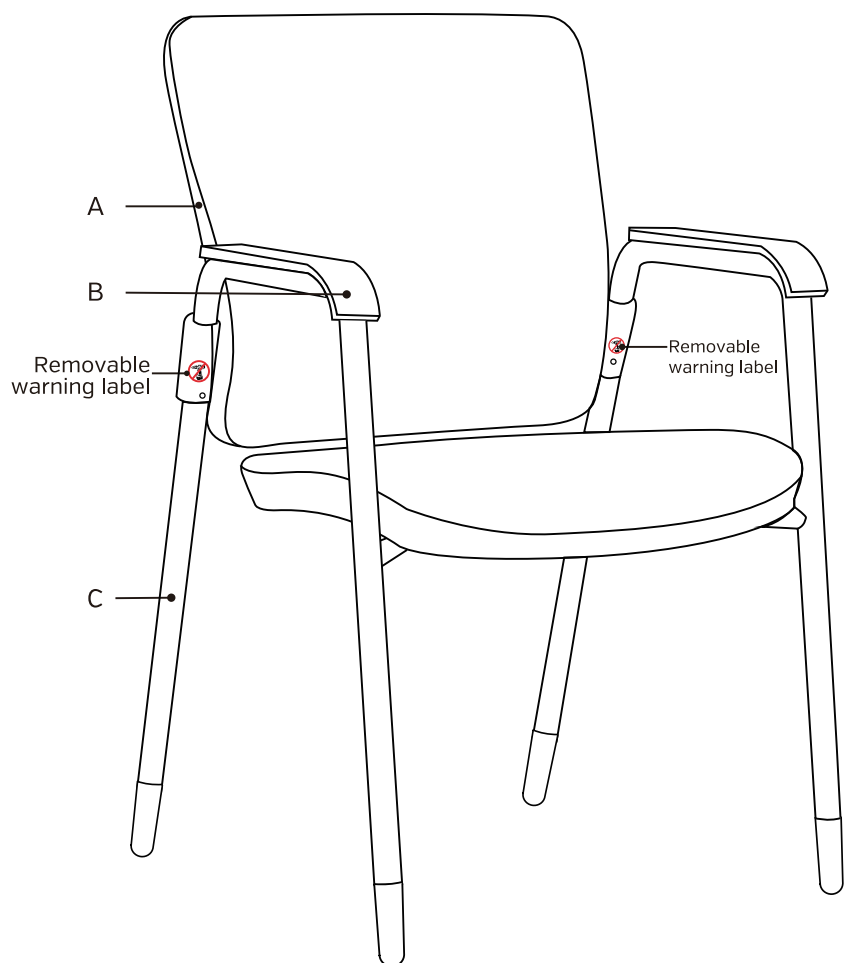
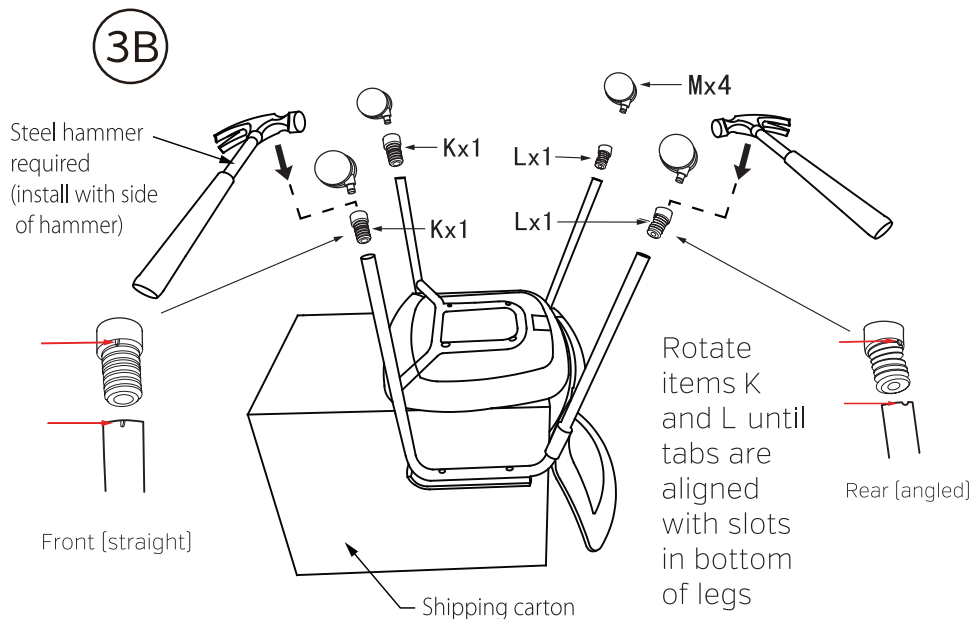
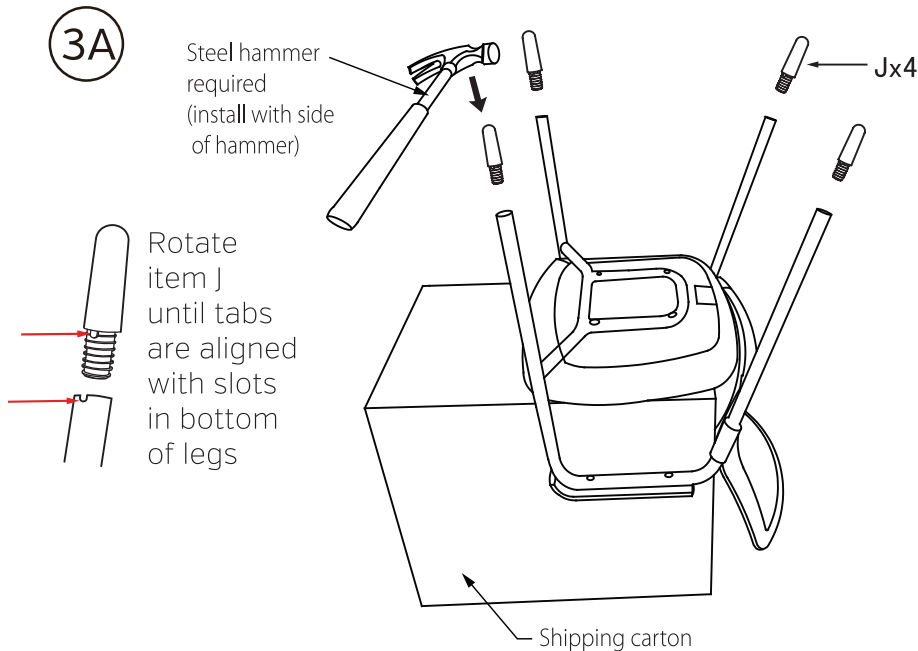


Assembly Instructions
EON Visitor Chair

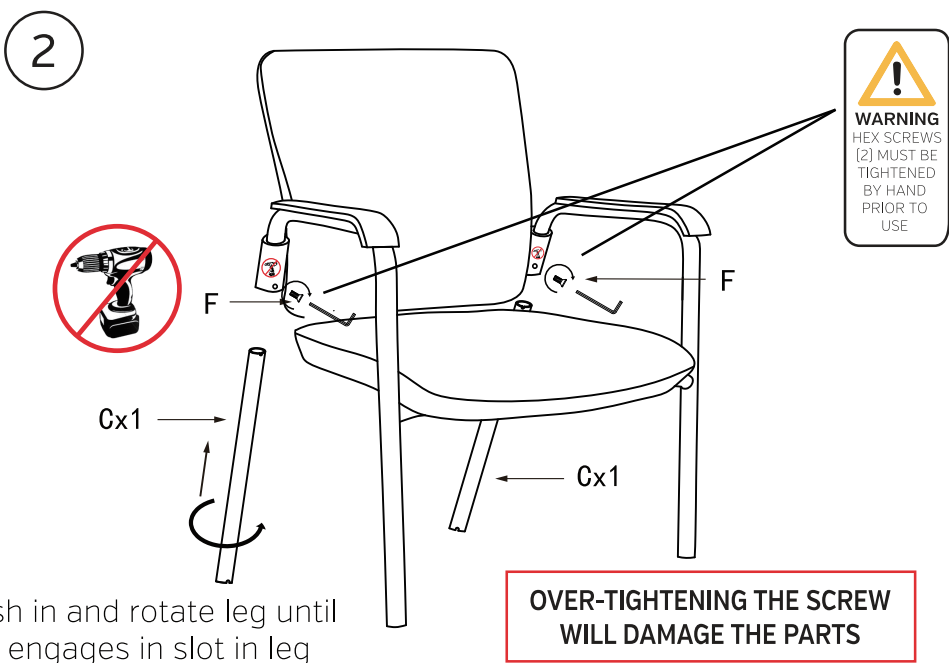


Item		Part Name	Part #	Qty
A		Back Frame	G00324/G00326	1
B		Arm Frame	G00325/G00327	1
C		Back Leg	G00044	2
D		Flat Washer	G00045	2
E		Long Bolt	G00046	2
F		Short Bolt	G00073	2
G		4mm Hex Wrench	G00066	1
H		6mm Hex Wrench	G00048	1
J		Leg End Cap	G00049	4
K		Front Leg Caster Insert [2] [Optional]	403CASTERS	1
L		Back Leg Caster Insert [2] [Optional]		
M		Casters [4] [Optional]		
N		Spring Washer	G00242	2


- Warning**
- Product is for single person use only.
 - Do not use this chair unless all bolts and knobs are securely tightened.
 - Check that all bolts and knobs are tightened every six months or as needed.
 - Dispose of packing material properly. Do not use plastic cover as a head covering. Suffocation may result.
 - Do not use this chair as a stepladder.

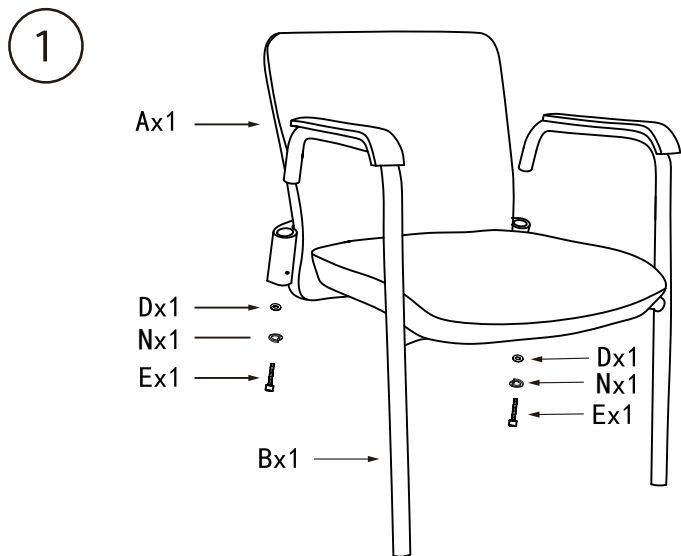


Assembly Instructions
EON Visitor Chair

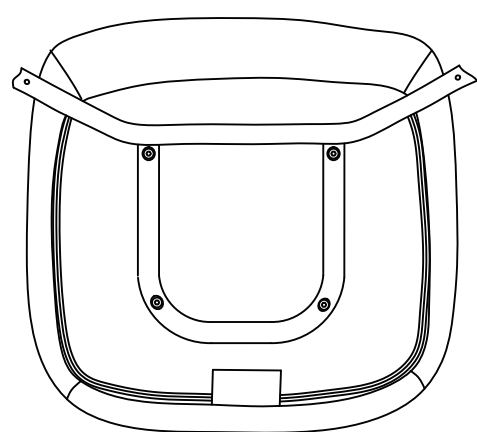


1) Remove seat from chair frame

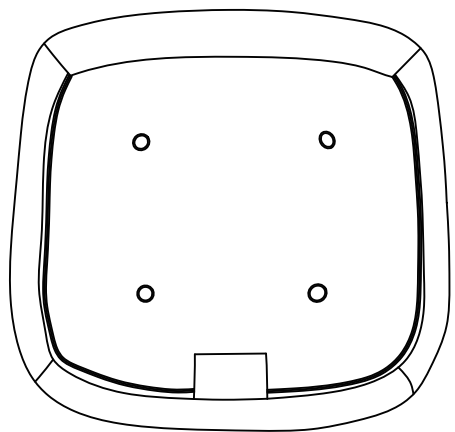

2) **Remove law label and weight capacity label and put to the side.**
Unzip and the old slip cover and remove

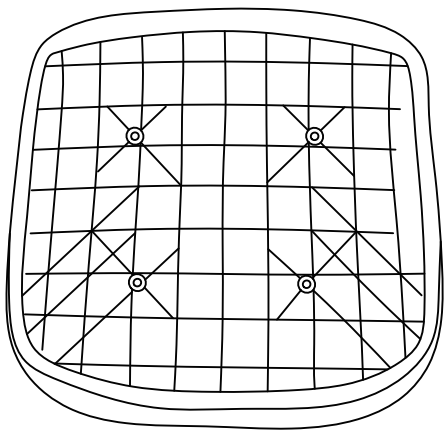

3) Install new slip cover. Make sure all 4 slip cover corners match the foam corners, top and bottom holes on bottom of slip cover match to holes on the seat pan

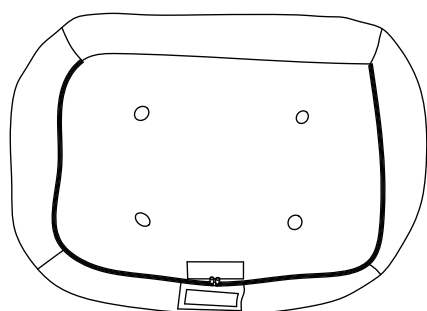

4) Re-attach the seat pan to the slip cover using the four screws from step 1. **Re-apply the law label and weight capacity label. Make sure labels are pressed down hard to ensure attachment**