

## Notes


- Put the towel into the cabinet and onto the shelf. Keep the towel away from any container side, otherwise the towel might be discolored and even deformed.
  - The towel shall not stay in the warmer for over 1 day, otherwise, it will become too dry, deformed or stink. The dry towel is not suitable for heating.
  - Put the drain tray steadily. Take excess water out of drain tray as necessary.
  - Clean cabinet exterior using a dry cloth or damp cloth with mild detergent. Unplug the unit when cleaning.
  - Do not use cleaners containing thinners, benzene, or abrasives.
  - For periods of disuse exceeding three days, wipe the inside of cabinet thoroughly and leave the door ajar to allow it to dry up completely.
  - A towel warmer with ultraviolet can only work after door is closed, otherwise, the radiation will be harmful for humans. Do not expose your eyes to the ultraviolet light!
  - The ultraviolet light is on when a towel warmer is working. Please turn off the light after 20 minutes and no more than 20 minutes.
  - When the temperature inside the cabinet reaches upper limits of the unit temperature range designed, the thermostat will work automatically to shut itself off until the inside temperature drops below a certain level, at which time it will turn the heating element back on again.
  - To test normal UV operation, open the cabinet door; while avoiding eye contact with the UV light, switch the UV button to "ON" at the right-hand side of the unit; depress the safety button on the cabinet frame and the UV light will come on.
- Do not expose your eyes to the ultraviolet light!**

## Product Specification


Model	SD-109W/D/UV(Single-door)	SD-108W/D/UV(Double-door)
Power Supply	200W, 50/60Hz	400W, 50/60Hz
Temp Adjust	Bimetal Thermostat	Bimetal Thermostat
Inside Temp	70°C - 80°C	70°C - 80°C
Safety Unit	Thermal Link	Thermal Link
Outer Size	L450XW300XH350mm	L450XW300XH640mm
Inner Size	L372XW200XH250mm	L372XW200XH250mm
Inner Capacity	23 liters	46 liters(2 inners)
Insulation	Glass wool fiber	Glass wool fiber
Weight	6kg	10kg
Accessories	2 shelves, 1 Drain tray	4 shelves, 1 Drain tray

(Model number for products with ultraviolet light has the letter "UV" as sign)



# HOT TOWEL CABINET OPERATION MANUAL

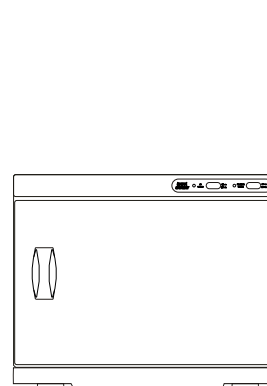

Single-door

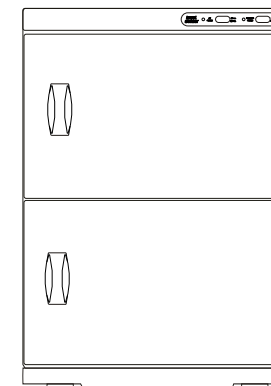

Double-door

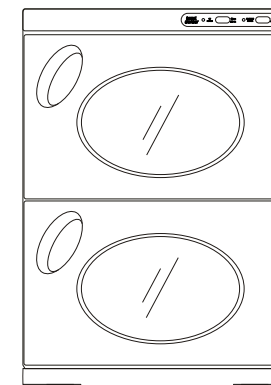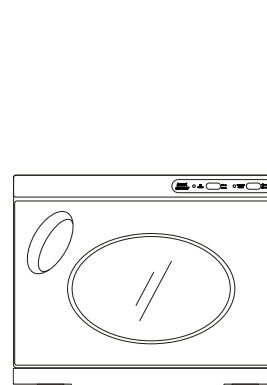

window-vision

Thank you for purchasing our Hot Towel Cabinet (Towel Warmer). To use this product safely, please read this manual carefully and abide by all directions and notes. This appliance provides warm, wet or dry towels, it's the ideal choice for towel warming and storage in your spa or salon, restaurant, hotel.

## Important Safeguards

When using electrical appliances, in order to reduce the risk of fire, electric shock, and/or injury, these basic safety precautions should always be followed:

### For Your Safety

Read all instructions carefully, even if you are familiar with the appliance.

- Young children should be supervised to ensure that they do not play with the appliance.
- Always unplug the warmer when not in use.
- Do not operate the warmer with a damaged cord or plug or after the warmer malfunctions, has been dropped or damaged in any manner.
- Never locate the warmer where it may fall into a bathtub, shower, swimming pool or any other water container.
- Towels, Steam, Rack, Tray and inside surfaces of appliance are HOT and can be dangerous. Pay your special carefulness when reloading or removing hot towels, racks or trays out of the unit. Always use protective gloves when handling hot tray, rack or towels.
- To avoid burns, do not put "hot" towels right taken out from a towel warmer on any bare surfaces of human's bodies.
- Do not place heavy objects or a container water in or on top of the cabinet.
- Do not use the door left opened.
- Do not run power cord under carpeting.
- Do not cover cord with throw rugs, runners or the like. Arrange cord away from traffic areas and where it will not be tripped over.
- To disconnect the warmer, set control to OFF and then remove the plug from the outlet.
- Do not abuse the cord. Never carry the appliance by the cord or yank it to disconnect if from an outlet; instead, grasp the plug and pull to disconnect.
- Do not attempt to repair, disassemble or modify the appliance. There are no user-serviceable parts.
- Use the unit only as directed in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock or injury to persons.

### Compulsory Warning

- No user serviceable parts inside. Unauthorised modification voids warranty. If faulty, return to place of purchase for replacement.
- Before first using your Towel Warmer, it is most important that you read and follow the instructions in this use and care booklet, even if you feel you are quite familiar with this type of appliance.
- Your attention is drawn particularly to the section dealing with IMPORTANT SAFEGUARDS. Find a place and keep this booklet handy for future reference.
- Your Towel Warmer is safe and easy to use. It has been designed to function quietly and safely under normal circumstances.
- Check that the voltage marked on the product corresponds with your supply voltage.


**Warning: This appliance must be earthed.**

**Cautions: When the device is turned on, it will take some time to start heating.**

### Installation

- Place the unit horizontally on a flat, stable surface away from excessive heat, humidity and vibration.
- Set the removable drain tray into its slot below the cabinet door.
- Plug into a standard house current outlet.
- Place shelf in grooves along inner sides of the cabinet. Open the door and fill unit with towels to be warmed, then close the door.

## Names of All Major Parts

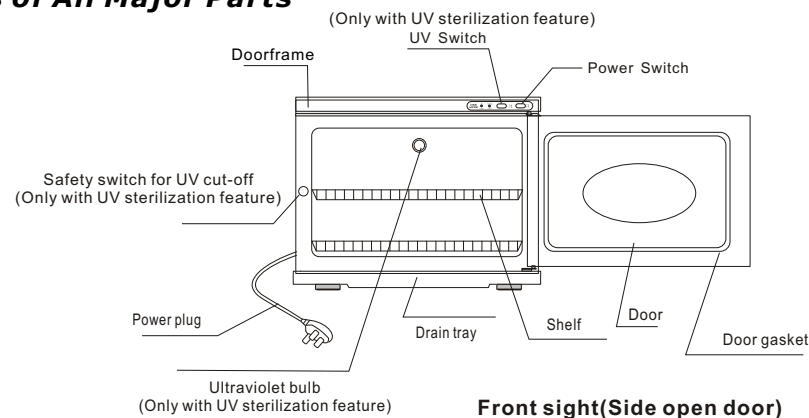

**Operations** Close the doors before connecting the power supply and get ready to work.

#### Single-door, without ultraviolet sterilization feature

\* Switch the Power button to "ON", the red switch indicator light will come on, and the cabinet start heating. The unit will reach the preset temperature. Switch the Power button to "OFF", the switch indicator light will go out, and the unit will stop heating.

#### Double-door, without ultraviolet sterilization feature

\* When using the upper or lower cabinet separately, switch the upper or the lower Power button to "ON", the relevant red switch indicator light will come on, and the cabinet start heating.  
\* Switch the Power button to "OFF", the switch indicator light will go out, and the relevant cabinet will stop heating.  
\* Upper and lower cabinets can be controlled respectively as well as working at the same time with separate instructions.

#### Single-door, with ultraviolet sterilization feature

\* Switch the Power button to "ON", the red switch indicator light will come on, and the cabinet start heating.  
\* Switch the UV button to "ON", and the blue switch indicator light will come on, and the ultraviolet sterilization feature will begin. Switch the UV selection button off after 20 minutes, and the blue indicator light will go out. It will extend the life of the UV bulb. As long as Power button is on, the unit will remain in heating mode.  
\* The Power switch and UV switch can work simultaneously or can work separately.  
\* Switch the Power button to "OFF"; the red indicator light will go out, and the unit will stop working.

#### Double-door, without ultraviolet sterilization feature

\* When using the upper or lower cabinet separately, switch the upper or the lower Power button to "ON", the switch indicator light will come on, and the cabinet start heating, the ultraviolet sterilization feature will begin, too.  
\* Switch the Power button to "OFF", the switch indicator light will go out, and the relevant cabinet will stop working.

**\* Opening the door with the UV in operation will shut the UV and heating feature off. Closing the door will cause UV sterilization and heating feature to resume.**