


# Owner's Manual

## Adjustable Base With Wall Hugger

TwinXL / Full / Queen sizes

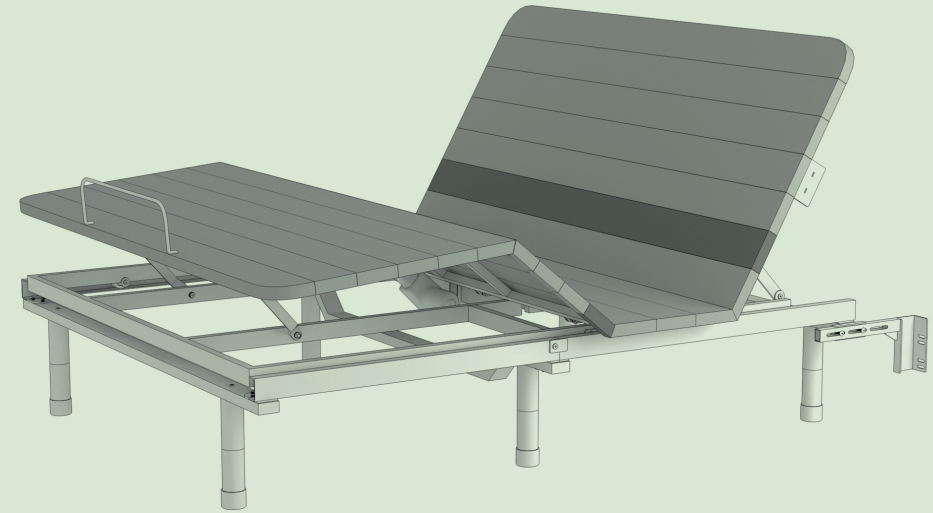

# Contents

Safe Use & Operation Guidelines	02
Weight Restrictions	03
Product Rating	03
Components	03
Assembly Instructions	04
Remote Control	10
Remote Control Pairing Instructions	11
5-Year Warranty Statement for Manufacturing Defects	12

## Safe Use & Operation Guidelines

**This bedframe is exclusively designed and manufactured for use indoors only.**

**Don't try to impress the neighbors with it on the patio – just saying!**

- Also, this bedframe is meant for residential use. As tempting as it may be to take your bed with you to a hospital, please note that it is not approved for hospital use.
- Using the bed with oxygen administering equipment other than the nasal masked type creates a possible fire hazard. So don't do it!
- Exercise caution when using a nasal or masked type administering equipment. Route and secure air tubing properly to ensure that it doesn't get entangled or damaged when you operate the bed.
- Keep moving parts free of obstruction during bed operation (including sheets, clothing, tubing, wiring, and products using electric power cords). Just the basic stuff!
- Obviously, you want to be careful when having liquids in or around the bed to ensure no spilling occurs. It could damage the bedframe, mattress et al. But life happens! And if you end up spilling, stand in a dry, clean area of the floor and unplug the bed immediately. Clean up spill (remember what your mama taught you) and allow the area around bed to dry thoroughly before using the electric controls again. If you aren't great at cleaning up, then we recommend that you just don't eat or drink hot liquids while operating the bed.
- Let kids be kids! So do the adult-like thing and don't allow them to operate the bed without supervision.
- While this bed is cool, it's not safe for gymnastics. So when you operate this bedframe, please make sure body is positioned within the confines of the bed. Even if you like living on the edge, please do not place extremities over the sides of the bed when operating bedframe functions.
- Do not weigh down any one part of your bed; distribute body weight evenly at all times and always return the bed to a flat position before getting in and out.

## Weight Restrictions

This product will structurally support weights up to **650lbs (295kgs)**.

This limit is inclusive of any mattress and bedding placed on it.

The bed will structurally support this weight, provided it is evenly distributed across the bedframe.

This product is not designed to support or lift this weight in the head or foot sections alone.


Exceeding the weight limit could damage the bed and/or cause injury and will void the warranty.

## Product Rating

The motors are not designed to operate continuously for more than **one (1) minute** in an **eight (8) minute** time period.

Attempting to exceed this rating will shorten the life expectancy of the bedframe and will void the warranty.

## Components

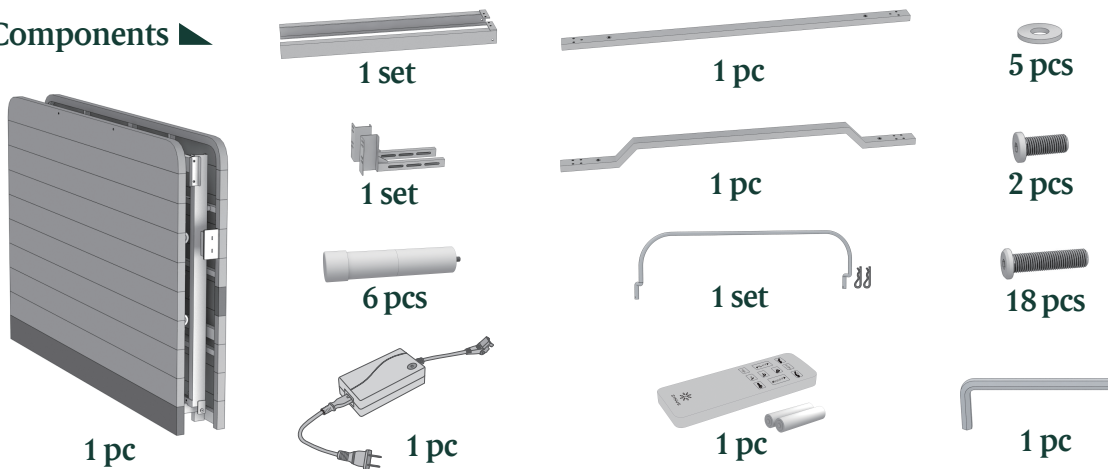




## Assembly Instructions

### Set up 1


Team up! At least **two (2) people** are required to assemble this cool new adjustable bedframe.


Lay the box flat on your floor and carefully unfold the bedframe.

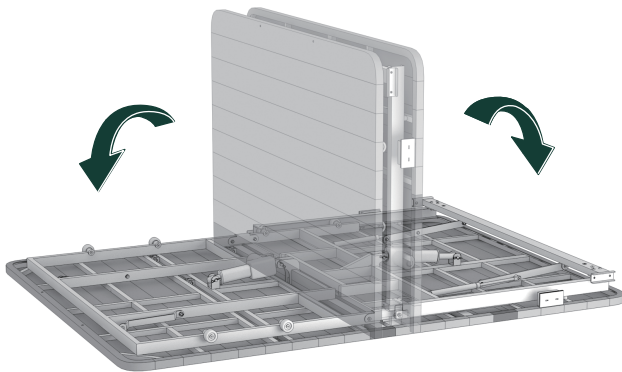

### Set up 2

Find the bar with number 1 label on it.  
Align it with the number 1 label on the side rail  
of the bed frame as shown in the adjoining image.  
Connect the two parts using a screw.

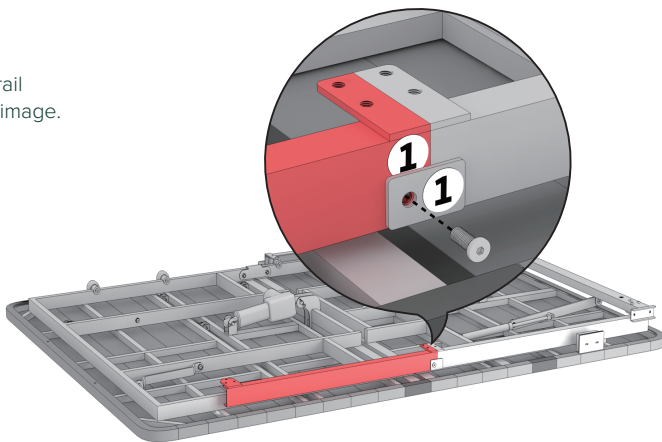

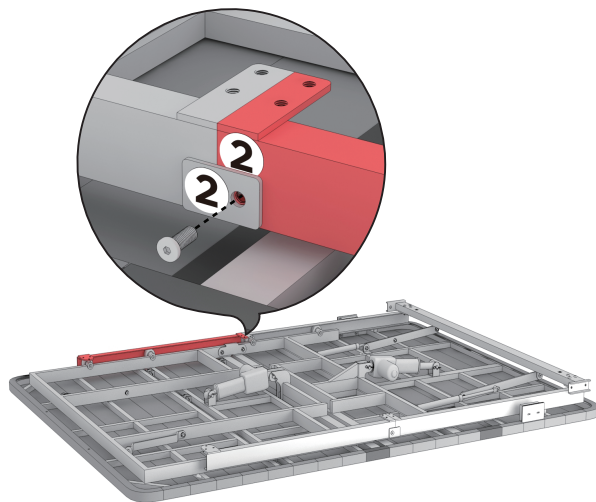


### Set up 3

Find the bar with number 2 label on it. Align it with the number 2 label on the opposite side of the side rail of the bed frame as shown in the adjoining image. Connect the two parts using a screw.


### Set up 4

Find the connector bar with number 3 label on it. Align it with four corresponding holes on both right and left sides of the bed frame (labeled number 3). Use 4 screws on each side to attach the connector bar to the bed frame.

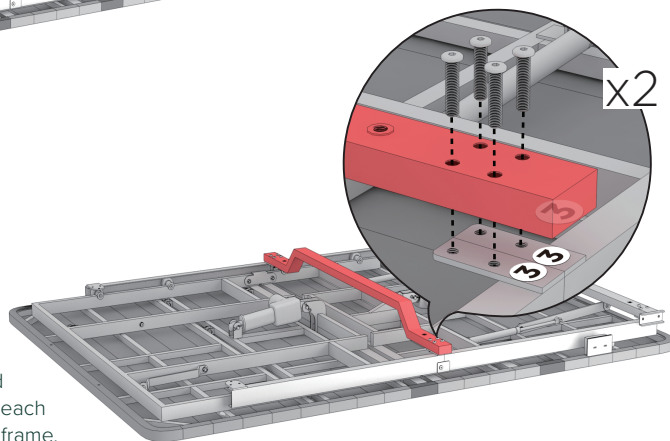


## Set up 5

Align the parallel bar labeled number 4 with the number 4 sticker on both right and left side rails. Use 3 screws to attach the parallel bar to the bed frame on one side. Repeat the process on the other side with 3 more screws.

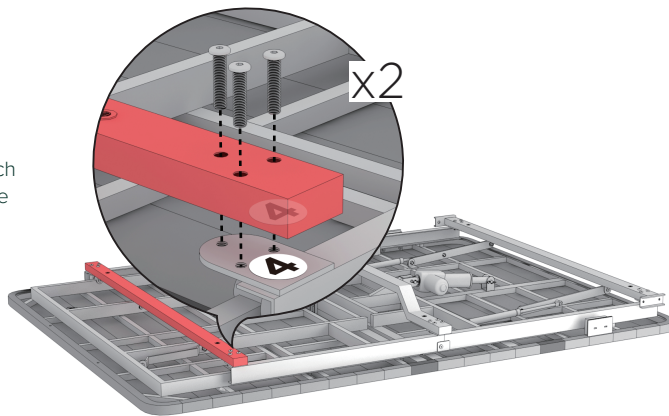


## Set up 6

Before installing the legs, determine your preferred bed height. Each of the six (6) included legs is preassembled to a 9-inch unit of two separate 4.5-inch legs. Should you prefer a lower bed height, separate each leg in half before threading the bolt into the frame by hand until tight. Repeat the steps for all six legs. Place plastic caps on the end of each leg.

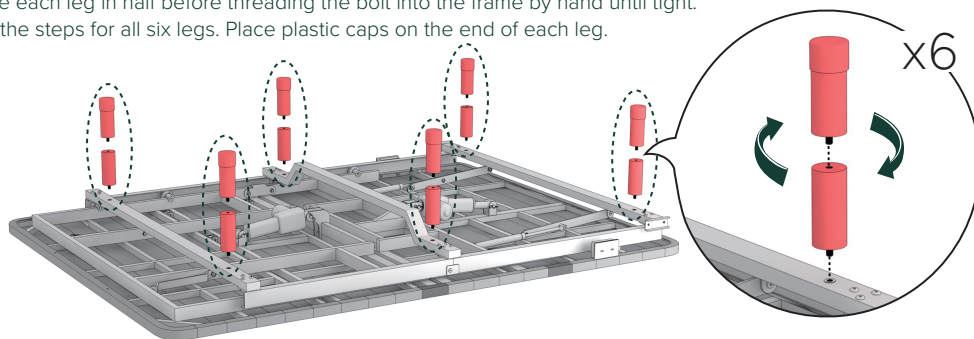


### Set up 7

Locate the receptacle cord on the underside of the bedframe. Plug the power cord into it.

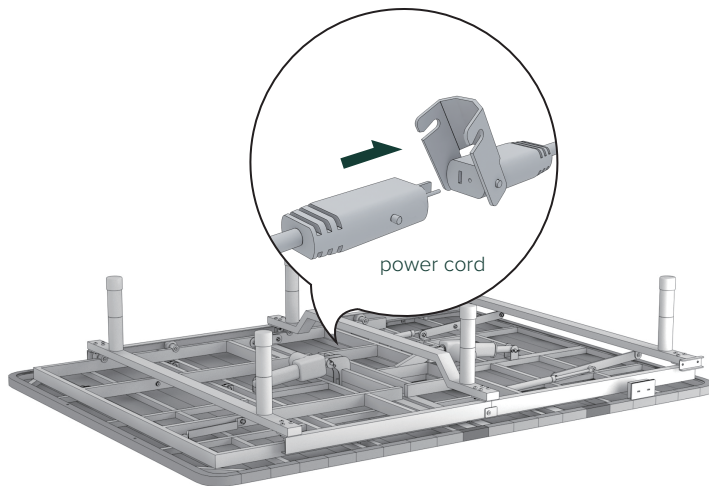


### Set up 8

With the help of a friend, lift the bed by the outer frame and turn it over so the mattress side is facing up. Be careful not to lift the bed by any moving parts. Also, don't use the legs as pivot points to practice your latest dance routine. All of these can damage your bedframe.

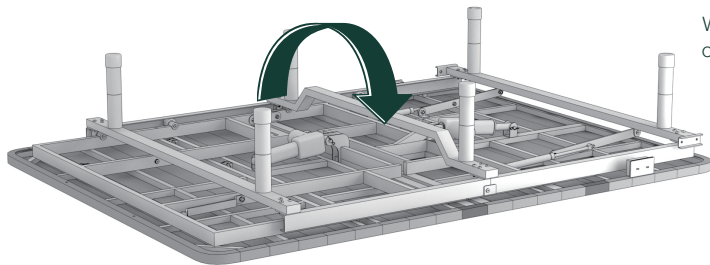


## Set up 9

Secure the zippers as shown.

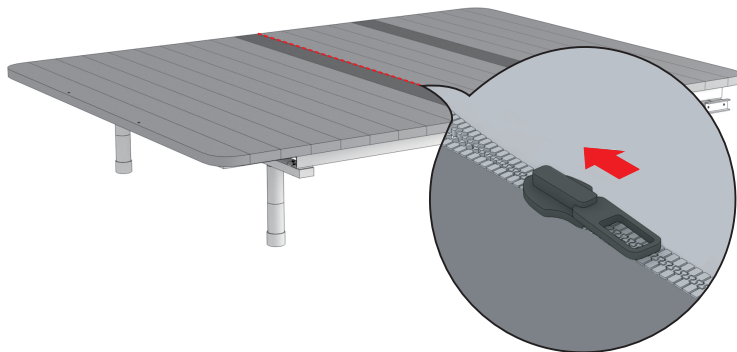

(a)

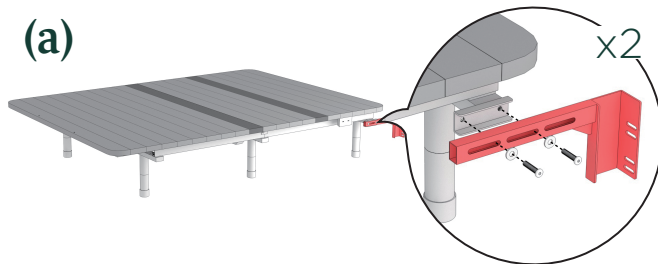


## Set up 10 (Optional)

To attach headboard brackets to the frame:

(a) If setting up for leg height of 9 inches , position both brackets so their 90 degree angle is facing down. Connect using 2 screws. Repeat on other side.


(b)

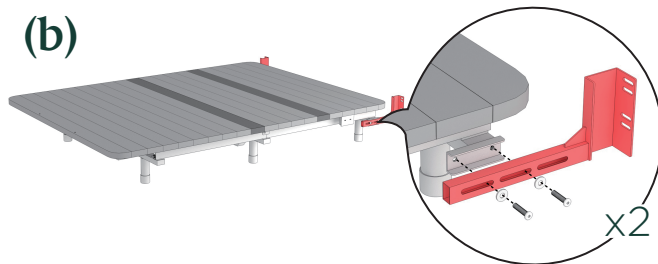

(b) If setting up for leg height of 4.5 inches, position both brackets so their 90 degree angle is facing upward. Connect using 2 screws. Repeat on the other side.


## Set up 11

To install the mattress retainer bar, insert its ends into holes at the foot of the bed. Use cotter pins to secure the retainer bar.

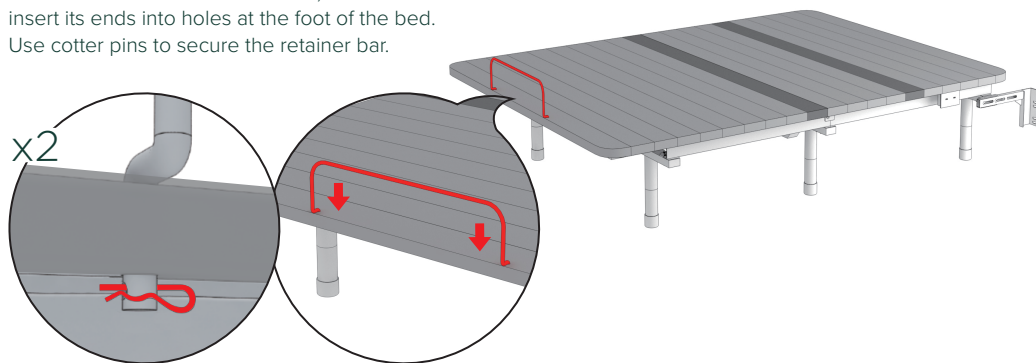

## Set up 12

Secure the zippers as shown.

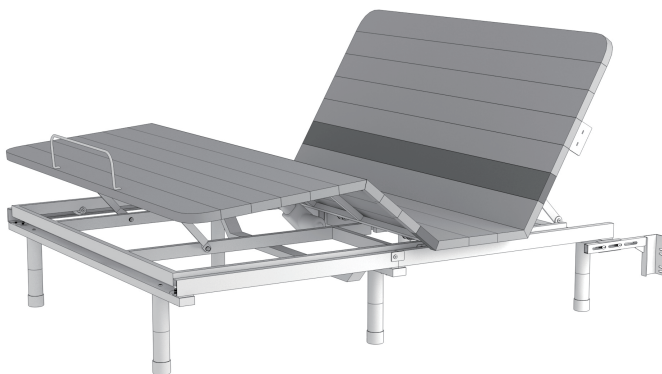

# Remote Control

## Overview

So, you're done with assembly and ready to explore everything you can do with your cool new adjustable bedframe. Here's a snapshot of what to expect!

## Adjustable



Press and hold for 3 seconds.



Press and hold to turn ON or OFF.



Raise or lower the head of your adjustable bed.



Raise or lower the foot of your adjustable bed.



Raise or lower the head and foot of your adjustable bed synchronously.



Turn ON or OFF the under bed night light. (Defaults to off after 15 minutes).




### To Set Your Memory Positions:

Step 1: Use the head and foot controls to achieve your desired, most comfortable position.

Step 2: Press and hold down a memory button [M1 or M2] for 3 seconds to save your setting.


**NOTE:** To alter/adjust M1 or M2, repeat the steps above.

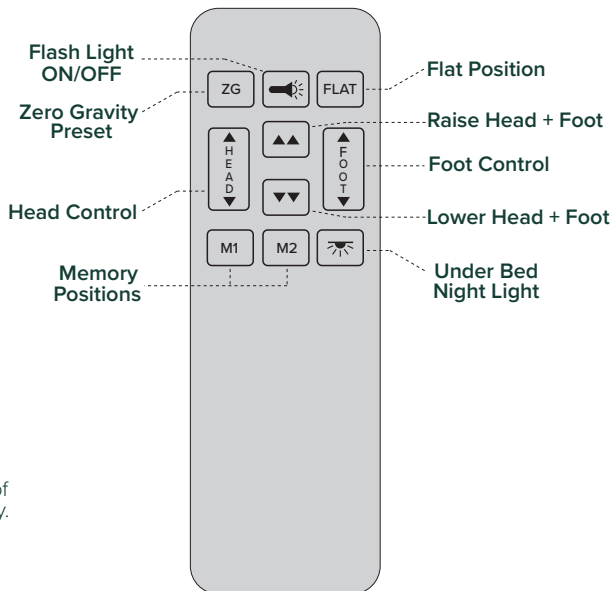

## Remote Control Pairing Instructions

Your snazzy new adjustable bed frame comes ready to go with a pre-programmed wireless remote. Although your remote should work automatically once out of the box, occasionally this twosome can become disconnected while on their long journey to your doorstep. If this happens, don't panic! Follow these simple instructions to pair this dynamic duo back together:

1. On the remote, press and hold the FOOT CONTROL (Raise) and HEAD CONTROL (Lower) buttons while simultaneously pressing the pairing button on the power cord. Hold all buttons down for 3 seconds.
2. Once you hear a faint whistling noise, pairing is complete.

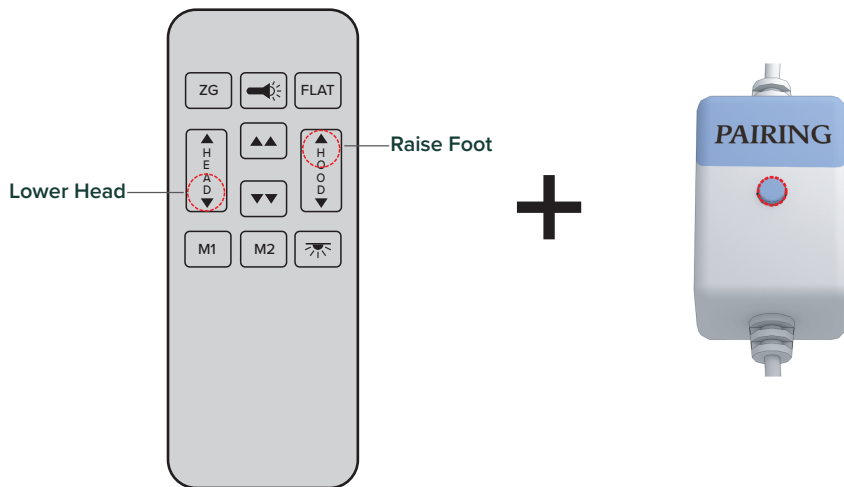



## 5-Year Warranty Statement for Manufacturing Defects

Please read this Limited Warranty carefully. To maintain your Warranty, you will need to comply with the conditions stated here. This warranty is for manufacturing defects only and does not cover damages as a result of misuse.

1. The warranty starts on the date of purchase. No warranty will be honored without an original sales receipt. The warranty and financial responsibility of the manufacturer applies only to the product itself and does not extend to any mattress that is placed on the product.

2. Your new product comes with a 2-year full warranty and a 3-year limited warranty against manufacturing defects only and is administered according to the tiers set forth below: **2-Year Full Warranty** During the period of two (2) years from the date of purchase, the manufacturer will offer replacement parts for any defective part to the purchaser at no cost to purchaser. The manufacturer shall bear all part(s) and shipping costs associated with the repair or replacement of the defective part(s).

**3-Year Limited Warranty** During the years three (3) through five (5) from the date of purchase, the manufacturer will

offer replacement parts for any non-electronic mechanical bed parts (excluding electronics, electrical components, and drive motors) only. The manufacturer shall bear all authorized part(s) and shipping costs associated with the repair or replacement of the defective part(s).

4. Manufacturing defects include circumstances where the product has broken under normal use and no longer provides proper support for your mattress. Proper support is defined as a smooth, flat, rigid surface. In the event you encounter a manufacturing defect, please stop using this product immediately and contact customer service. Please note that it is not uncommon for some of the short metal welds to become loose in transit or during normal use. A manufacturing defect for these welds is considered to be 5 or more loose welds at the time of purchase. The manufacturer cannot be responsible for the consequences of improper assembly by the consumer.

5. This warranty applies only when the product has been properly used by consumers who purchased the product from authorized dealers as a new product. Proper use means using the product on a level surface where all legs touch the floor with an equal distribution of weight. Proper use also means that the product was not abused by the consumer, as defined by the manufacturer. This warranty does not constitute an agreement to replace other parts.

6. If the product fails due to manufacturing defects, the manufacturer will repair or replace at its discretion and reserves the right to substitute comparable materials or models and does not guarantee that the replacement part will aesthetically match the existing piece or product.

7. In the event the product needs to be inspected by the manufacturer to determine a warranty claim, the transportation cost or remove cost shall be borne by the consumer.