
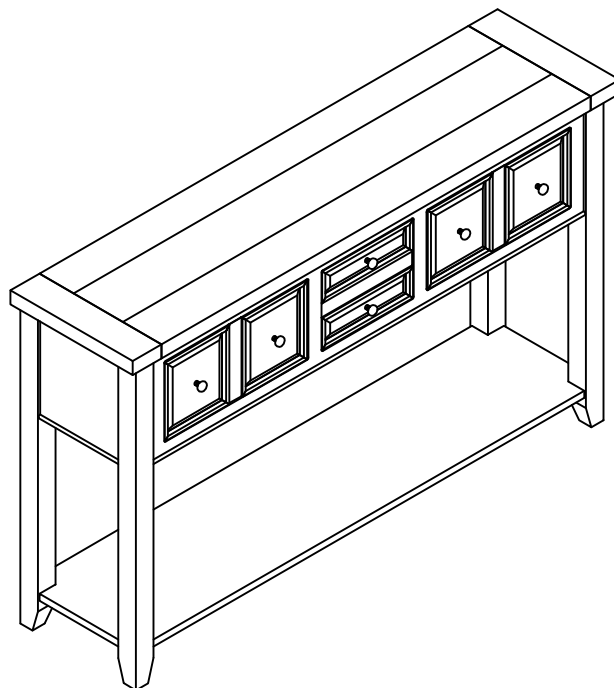
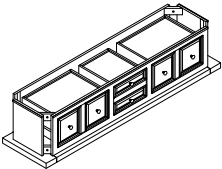



Entryway Table



PART LIST


A 	B 	C 	D 
Top Panel 1 PC	Leg 4 PCS	Bottom Panel 1 PC	Support Leg 2 PCS

HARDWARE LIST

1 	2 	3 	4 	5 
1-3/4"x ϕ 1/4"x D12 Long Bolt 9 PCS (Extra 1)	Flat Washer 17 PCS (Extra 1)	Spring Washer 17 PCS (Extra 1)	Allen Wrench 1 PC	5/8"x ϕ 1/4"x D12 Short Bolt 9 PCS (Extra 1)
6 	7 			
Metal Plate 5 PCS (Extra 1)	Safety Strap Kit 1 SET			


ADDITIONAL TOOLS (Not Provided)

Note: It is not recommended to use power tools during assembly.

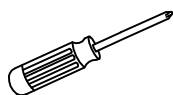


Phillips Head Screwdriver


Step 1. Carefully turn top panel (part A) upside down on a soft protective surface such as carpet, and open side drawers as shown. Attach three legs (part B) to top panel (part A) by using long bolts (part #1), flat washers (part #2), spring washers (part #3) and allen wrench (part #4). NOTE: Only install three of four legs at this time.

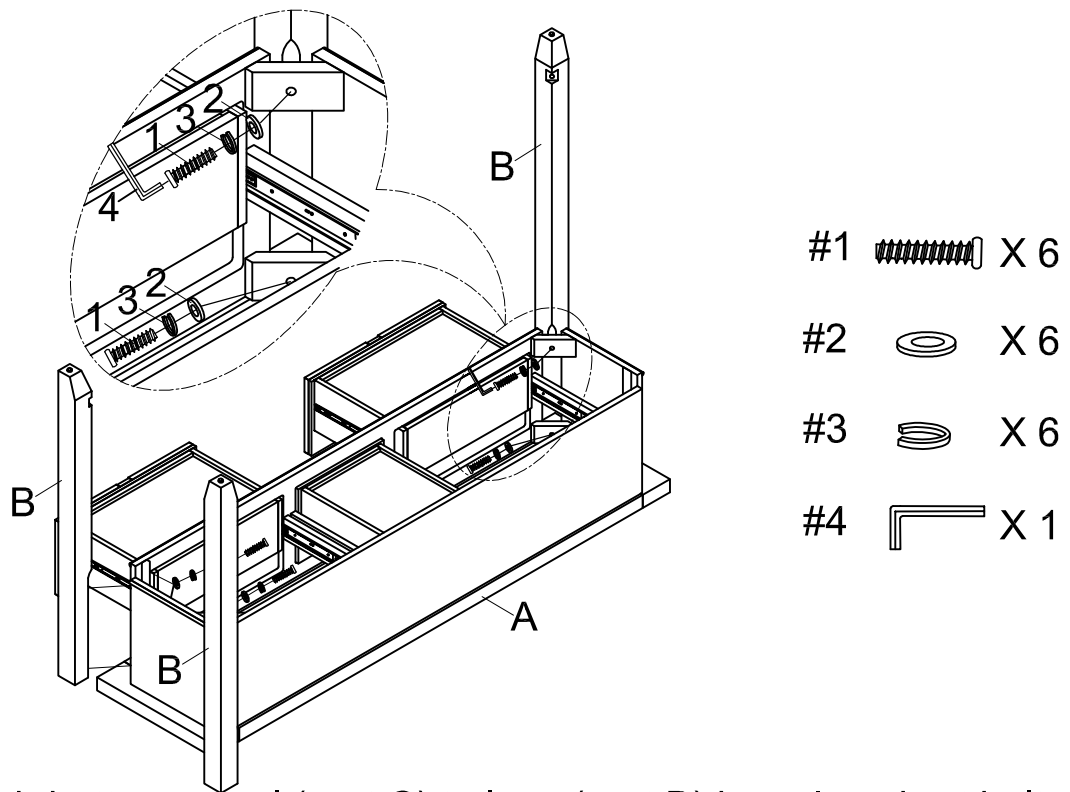


Step 2. Attach bottom panel (part C) to legs (part B) by using short bolts (part #5), flat washers (part #2), spring washers (part #3), metal plates (part #6) and allen wrench (part #4). Attach support legs (part D) to the bottom panel (part C) by turning clockwise into the pre-drilled hole.

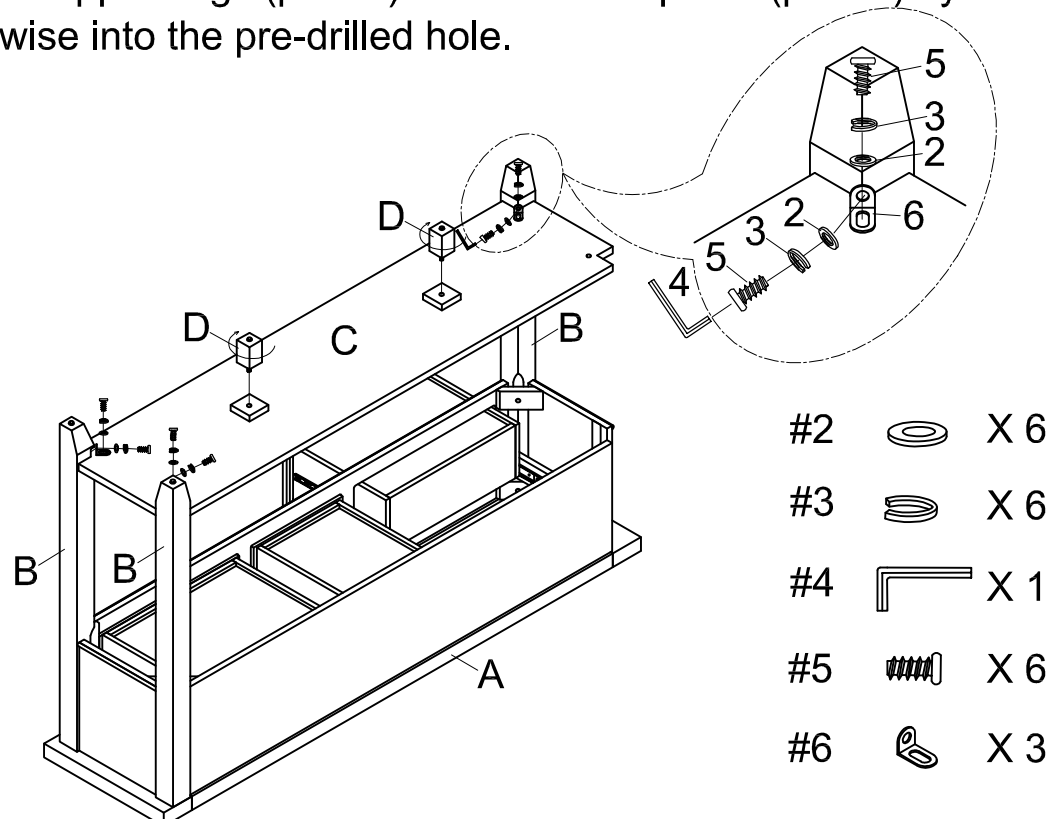

Step 3. Attach last leg (part B) to top panel (part A) and bottom panel (part C) by using long bolts (part #1), short bolts (part #5), flat washers (part #2), spring washers (part #3), metal plate (part #6) and allen wrench (part #4) .

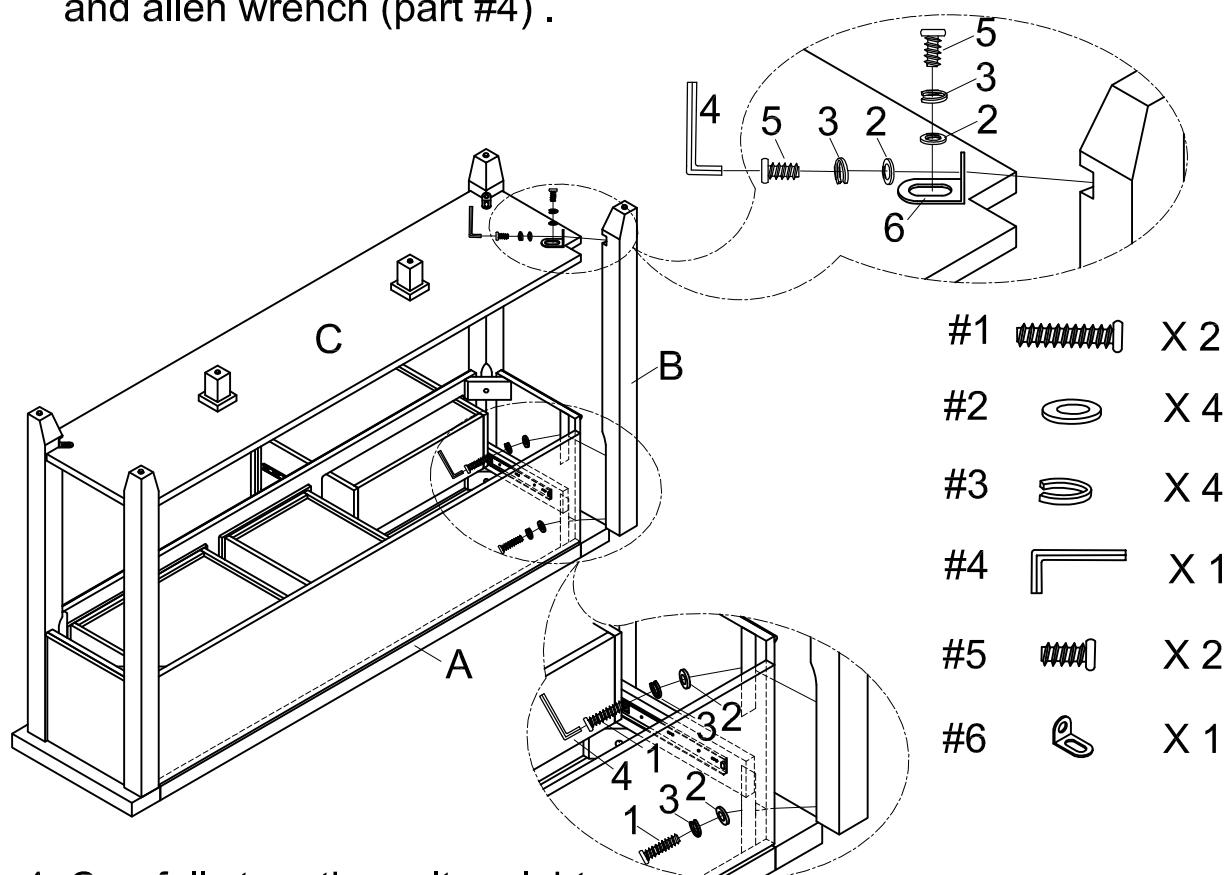

Step 4. Carefully turn the unit upright.

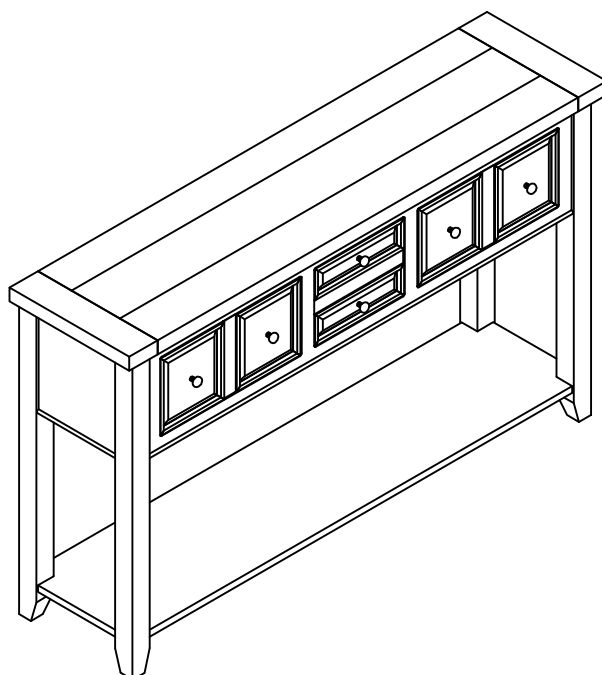

Step 5.

7	A	B	C	D	E
					
Safety Strap Kit 1 SET	Wall Anchor 1 PC	Bracket 2 PCS	5/8"x ϕ 3xD8 Short Screw 1 PC	1-1/2"x ϕ 4xD8 Long Screw 1 PC	Safety Wall Strap 1 PC

Safety wall strap assembly instruction

- 1). Insert short screw (part C) through bracket (part B) and using a phillips head screwdriver, Attach it to the pre-drilled hole in the top panel (part A).
- 2). Drill a 6mm hole in the wall where this unit will be secured. The drilled hole will be at the same height as the hole in the top panel (part A) where the bracket (part B) was attached. Tap wall anchor (part A) into the drilled hole.
- 3). Insert long screw (part D) through a bracket (part B) into wall anchor (part A) using a phillips head screwdriver.
- 4). Insert safety wall strap (part E) through both brackets (part B) and tighten to secure.

