

REAR OUTLET TOILET

BEFORE INSTALLING

Read entire Rear Outlet Toilet Installation Instructions. Observe all local building and safety codes.

INSTRUCTIONS

For the following installation instructions for a new toilet, it is assumed that all old fixtures have been removed and the toilet flange is in the new toilet.


Unpack and inspect the product for any shipping damage. Do not install if found damaged. Please contact customer service. If you need help or have questions about installing your toilet, please contact Customer Service.

If you are new to bathroom fixture installation, we recommend that you consult a professional. We are not responsible for any damage to floors, walls, pipes or personal injury during installation.

TOOLS AND MATERIALS:



Pencil



Hacksaw



Level



Drill



Adjustable Wrench

INSTALLATION

1. If you are installing a two-piece toilet, slide the tank bolts through the mounting holes on the top of the base of the toilet and thread the washers and nuts onto the tank bolts. Verify that the tank is level and alternately tighten the washers and nuts until the tank is resting firmly on the bowl. If your toilet is one piece only, move on to the next step.



2. Place the toilet in the location where it will be installed.




3. Measure the distance from the back of the waste outlet on the toilet to the wall hub fitting to determine the length of the p-trap connector. The connector should extend approximately 1-1/2" into the hub fitting.



Please contact us at kilitde980@outlook.com and our team of experts will be at your service to assist you.

6. Mark the location of the pre-drilled mounting holes using the holes in the base of the toilet as a template.

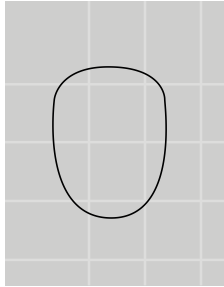

8. Slide the toilet into place and press the waste outlet into the p-trap connector.



7. Remove the toilet from the work area and drill mounting holes in the locations designated in the previous step.




10. Once the toilet is securely in place, insert anchor bolts and washers through the mounting holes in the base of the toilet and tighten into the pre-drilled holes created in step 6.



INSTALLATION (STEPS 10-13)


10. Place caps over the anchor bolts on the base of the toilet.

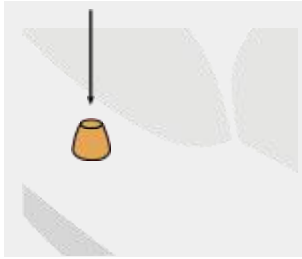

13. Finish installation.



11. Connect the water supply tubes at the bottom of the tank. Turn on the water supply and flush the toilet several times to check for any leaks around the back or base.

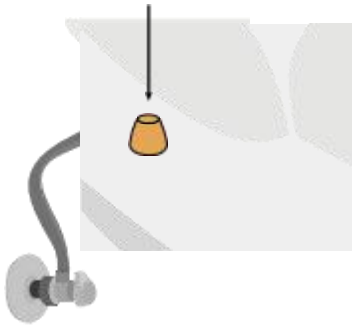

12. Attach the toilet seat.

