






Assembly Instructions

PASCAL Visitor Chair

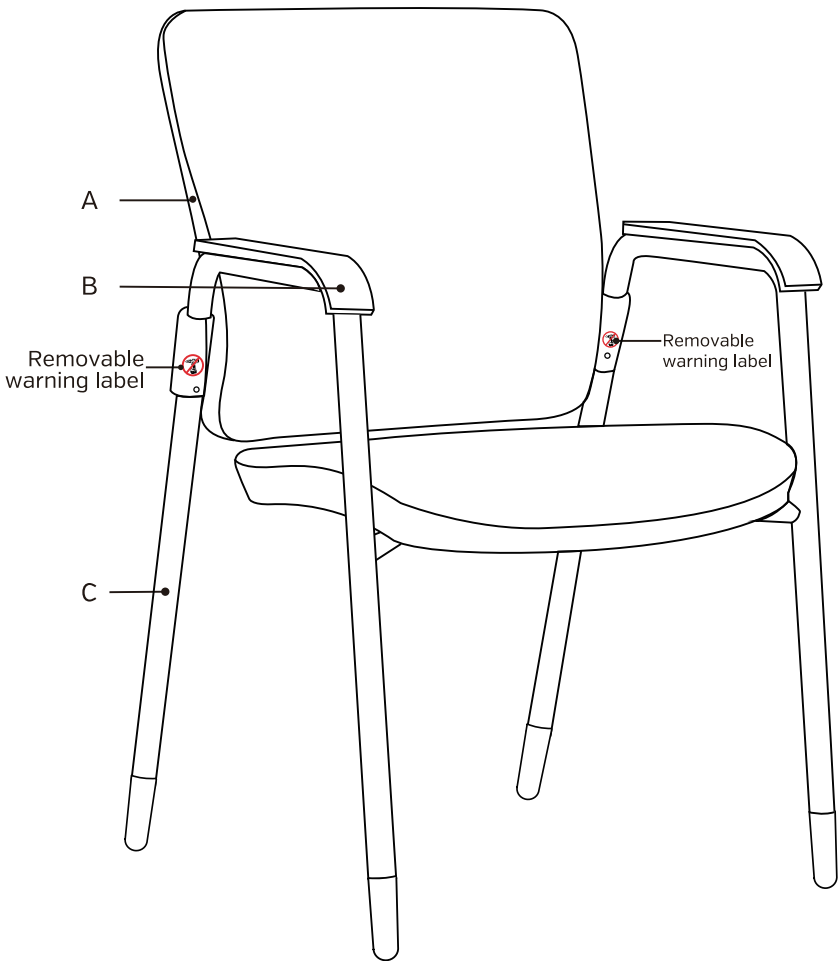


| Item |  | Part Name                                 | Part #        | Qty |
|------|--|-------------------------------------------|---------------|-----|
| A    |  | Back Frame                                | G00324/G00326 | 1   |
| B    |  | Arm Frame                                 | G00325/G00327 | 1   |
| C    |  | Back Leg                                  | G00044        | 2   |
| D    |  | Flat Washer                               | G00045        | 2   |
| E    |  | Long Bolt                                 | G00046        | 2   |
| F    |  | Short Bolt                                | G00073        | 2   |
| G    |  | 4mm Hex Wrench                            | G00066        | 1   |
| H    |  | 6mm Hex Wrench                            | G00048        | 1   |
| J    |  | Leg End Cap                               | G00049        | 4   |
| K    |  | Front Leg Caster Insert [2]<br>[Optional] | 403CASTERS    | 1   |
| L    |  | Back Leg Caster Insert [2]<br>[Optional]  |               |     |
| M    |  | Casters [4]<br>[Optional]                 |               |     |
| N    |  | Spring Washer                             | G00242        | 2   |


- Warning**
- Product is for single person use only.
  - Do not use this chair unless all bolts and knobs are securely tightened.
  - Check that all bolts and knobs are tightened every six months or as needed.
  - Dispose of packing material properly. Do not use plastic cover as a head covering. Suffocation may result.
  - Do not use this chair as a stepladder.

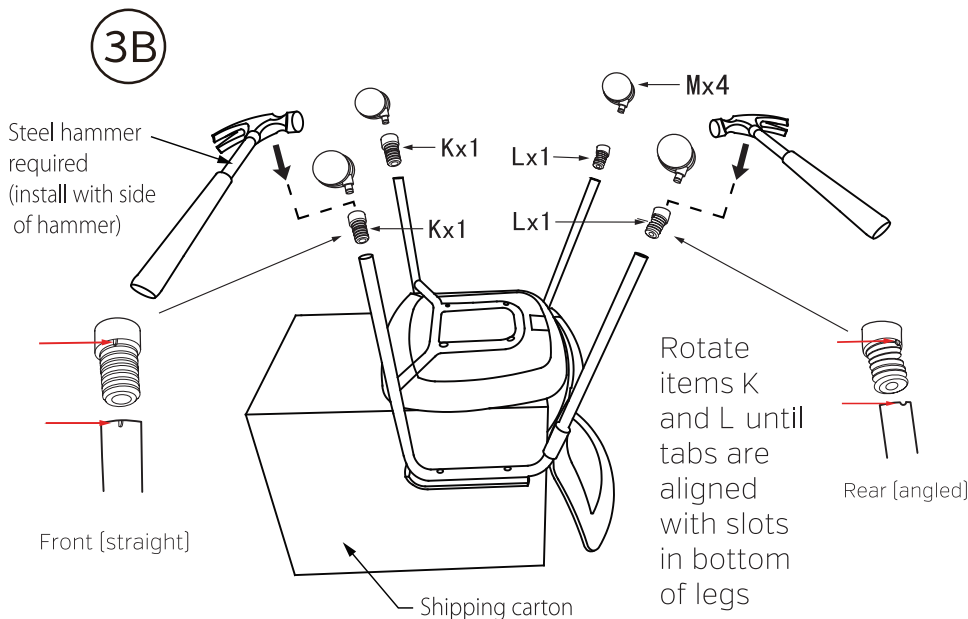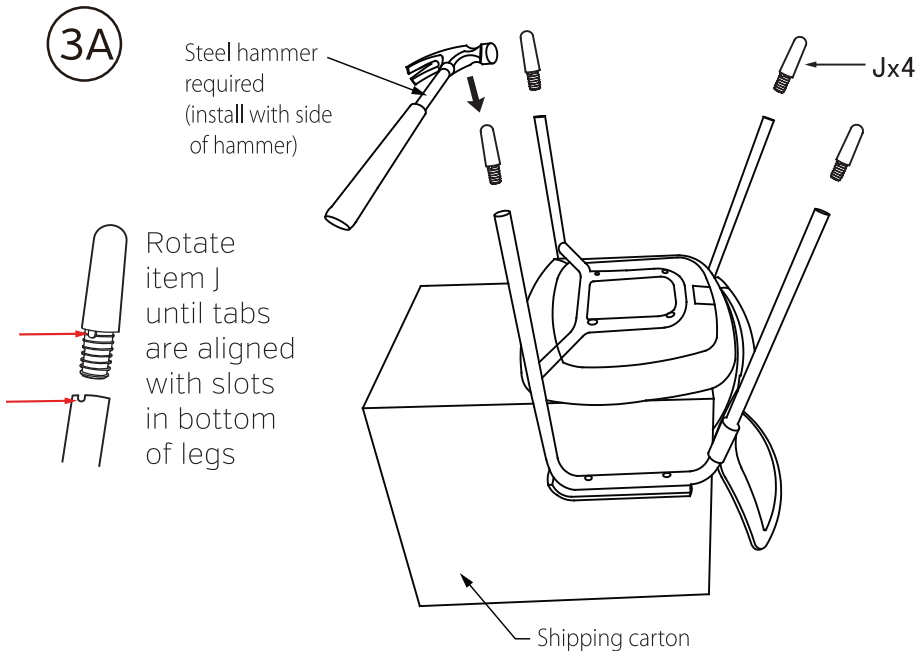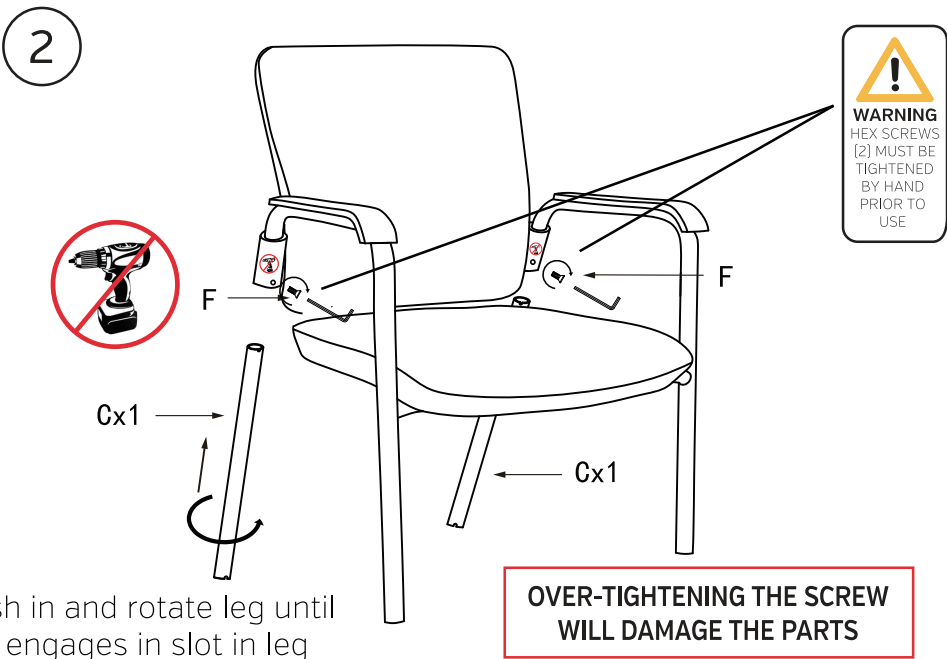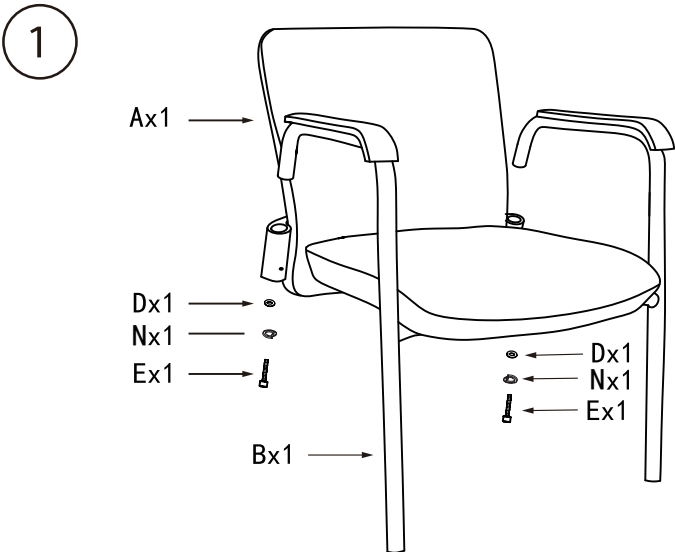


Assembly Instructions Slip Cover [Optional]

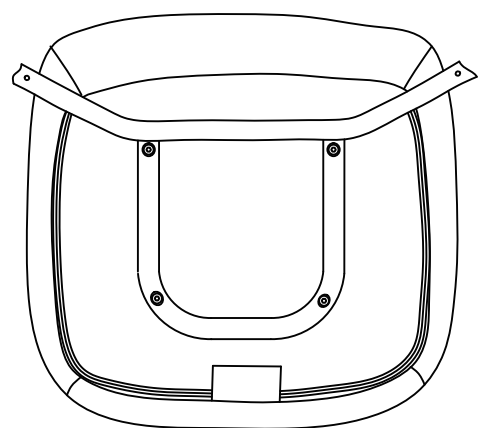


1) Remove seat from chair frame

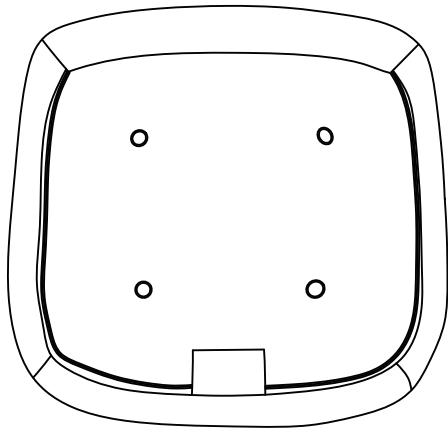

2) **Remove law label and weight capacity label and put to the side.**  
Unzip and the old slip cover and remove

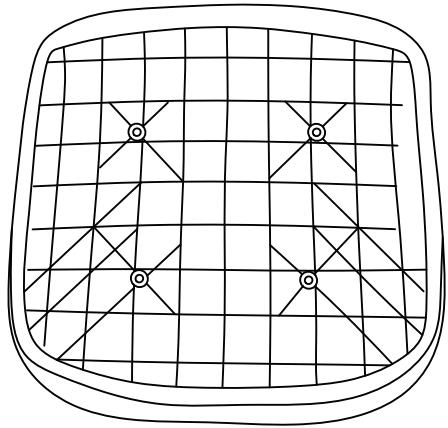

3) Install new slip cover. Make sure all 4 slip cover corners match the foam corners, top and bottom holes on bottom of slip cover match to holes on the seat pan

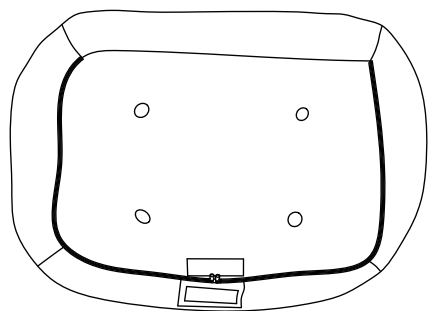

4) Re-attach the seat pan to the slip cover using the four screws from step 1. **Re-apply the law label and weight capacity label. Make sure labels are pressed down hard to ensure attachment**