


# ASSEMBLY INSTRUCTION











## ————— Massage Recliner Chair —————

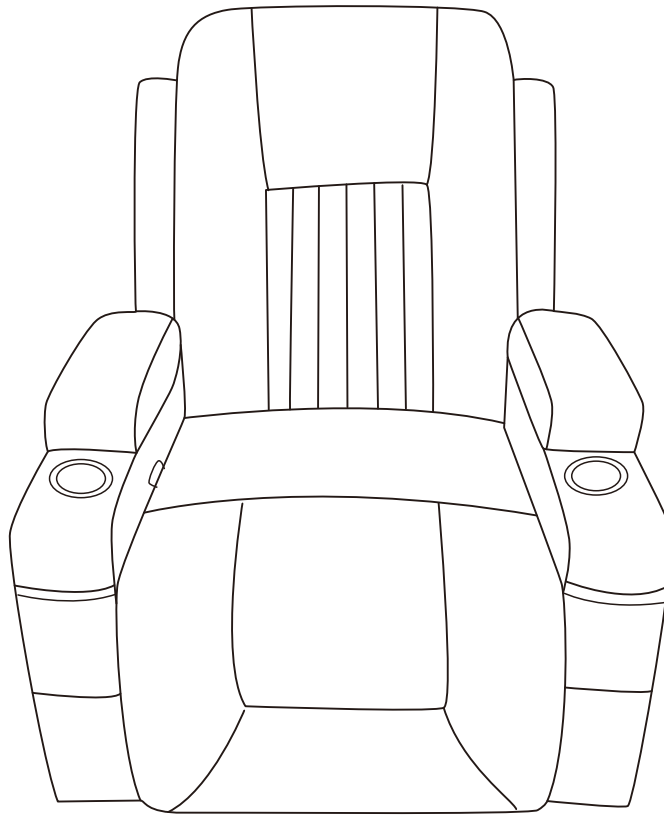

### ATTENTION





1. This sofa is shipped in 1 box. Please do not rotate 360 degrees when plugged in!
2. If there is any damage, please send us clear photos of the damaged parts as attachments. We will check and offer you the best solution soon. If there are any missing items or other issues, please feel free to contact our customer service team for assistance.
3. Product features, detailed instructions for use, and warnings are at the end of the assembly instruction.





# PARTS LIST
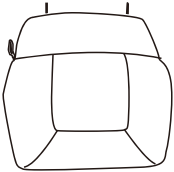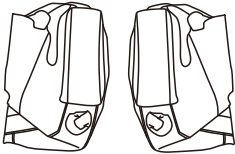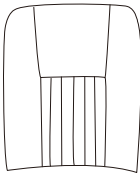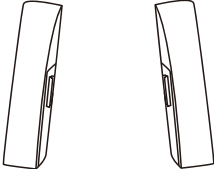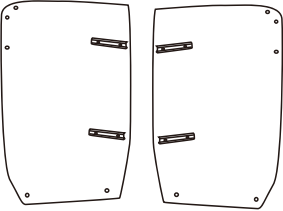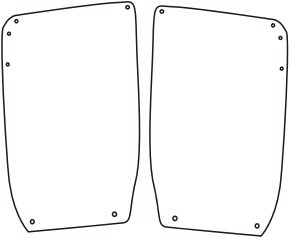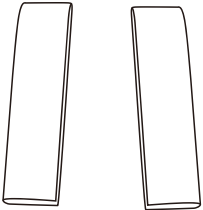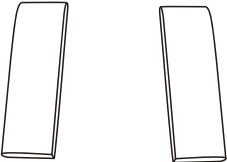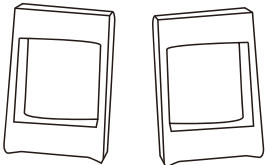
| Part |                                                                                     | Qty                   | Part |                                                                                       | Qty                   |
|------|-------------------------------------------------------------------------------------|-----------------------|------|---------------------------------------------------------------------------------------|-----------------------|
| A    |    | 1PC                   | H    |    | Left: H1<br>Right: H2 |
| B    |    | 1PC                   | I    |    | Left: I1<br>Right: I2 |
| C    |    | Left: C1<br>Right: C2 | J    |    | 2PCS                  |
| D    |  | Left: D1<br>Right: D2 | K    |  | 1PC                   |
| E    |  | Left: E1<br>Right: E2 | L    |  | 1PC                   |
| F    |  | Left: F1<br>Right: F2 | M    |  | 24PCS                 |
| G    |  | Left: G1<br>Right: G2 | N    |  | 1pc                   |

# step1

Let's start to assemble the Left Chair Arm Frame first, we named it N1 group  
Please find and prepared those pieces with Labels: C1,D1,E1,F1,G1 and M


| Label | Accessory Shape Reference                                                           | N1: Left Chair Arm N2: Right Chair Arm |                                   |
|-------|-------------------------------------------------------------------------------------|----------------------------------------|-----------------------------------|
| C1,C2 |    | C1: Right side board of Left Arm       | C2: Left Side Board of Right Arm  |
| D1,D2 |    | D1: Left side board of Left Arm        | C2: Right Side Board of Right Arm |
| E1,E2 |    | E1: Front Block of Left A rm           | E2: Front Block of Right Arm      |
| F1,F2 |  | F1: Back Block of Left Arm             | F2: Back Block of Right Arm       |
| G1,G2 |  | G1: Left cupholder frame               | G2: Right cupholder frame         |
| K     |  | Screws Pack                            |                                   |

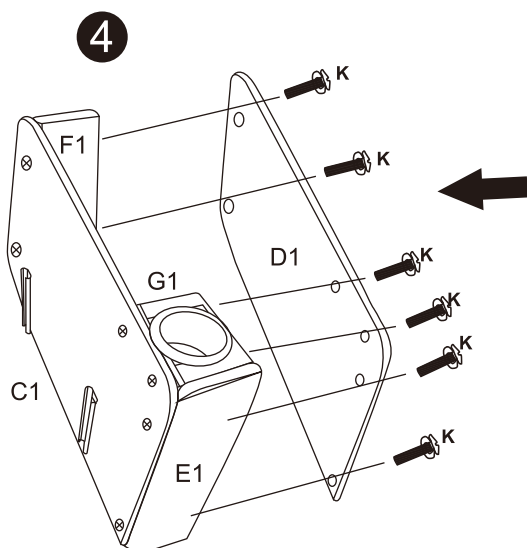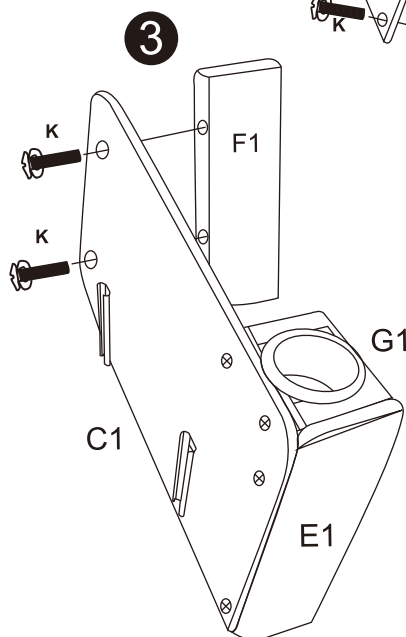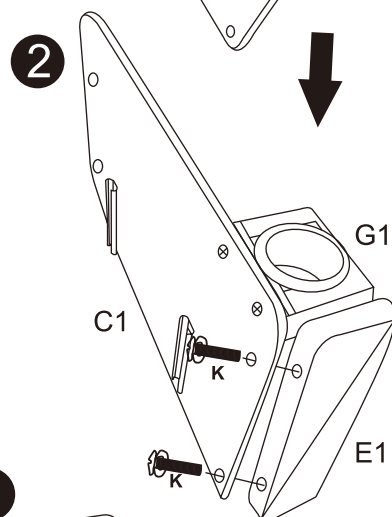
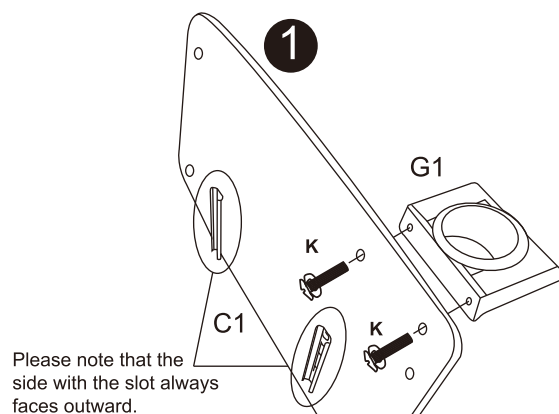


## step2

Put the Left cover pillow ( H1) to the Left chair arm frame(Assembled in step1);

**Note:** the cupholder place should aim at the cupholder frame, make sure the cover is tension and smooth.


| Label   | Accessory Shape Reference                                                         | Name                                                              |
|---------|-----------------------------------------------------------------------------------|-------------------------------------------------------------------|
| H1 , H2 |  | H1: Left Chair Am Cover Pillow<br>H2: Right Chair Am Cover Pillow |
| K       |  | Screws Pack                                                       |

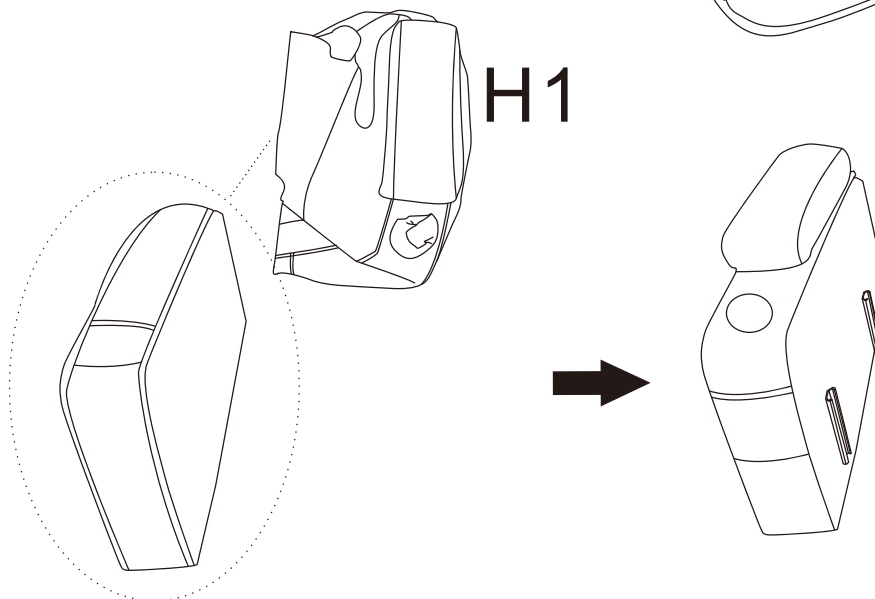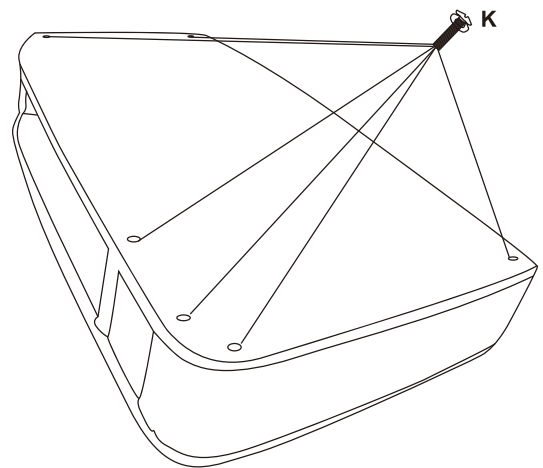

**Then do the same as to right side(H2)**

## Step 3. Assemble the backrest

- ① Attaching the Part B (Backrest) to the seat pad, by inserting the metal pegs of seat pad into the slots of the Backrest.
- ② Attach the 2 backrest wings (I1 and I2 as picture) to the backrest B with the same way.

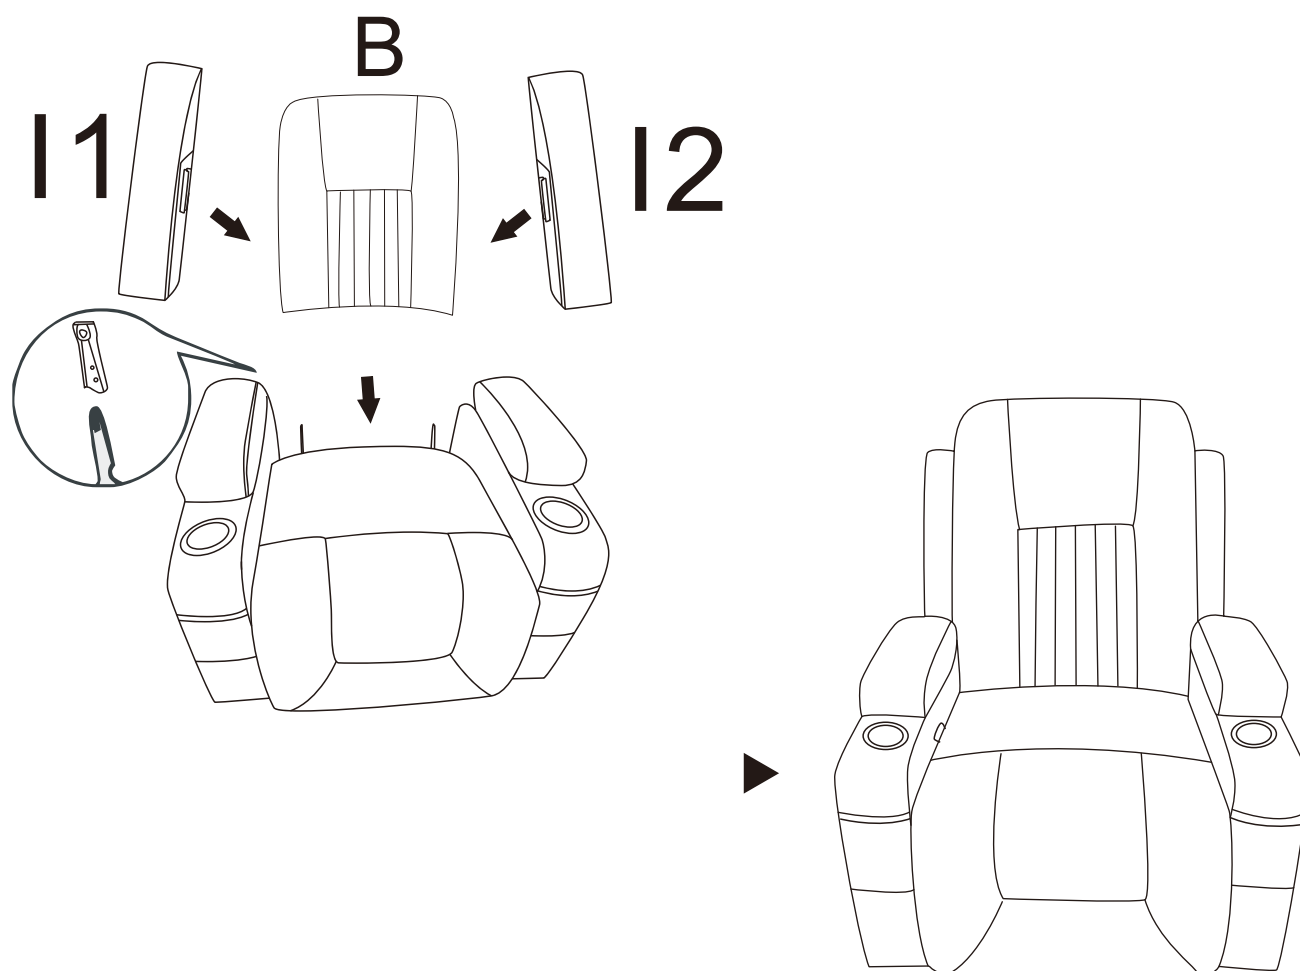

### Accessories:

**I1: Left backrest wings**

**I2: Right backrest wings**


## Step 4

Join the wires from the backrest to the corresponding wires on the seat.

Make sure that the corresponding sizes and colors match (white with white & red with red).

Locate the part L power adaptor and attach to its corresponding receiver on the backrest.

Locate the part k remote to and attach to its corresponding receiver on the backrest.

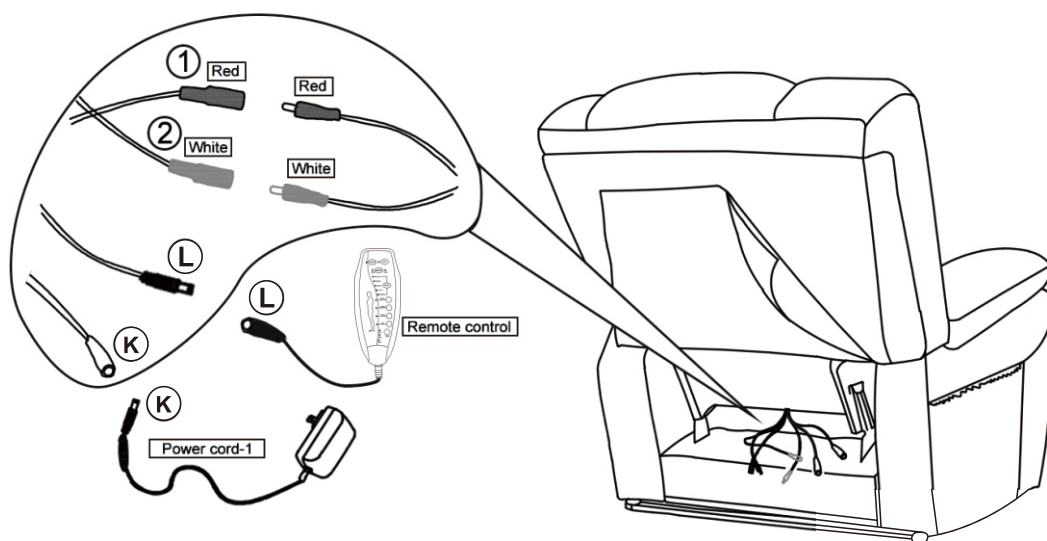

### **NOTE:**


Make sure all bolts and screws are fully tightened before using chair.  
Lubricate all moving parts and tighten all bolts/screws every 6 month or whenever needed

### **AWARNING:**

To ensure proper assembly, follow all steps and use all part.


Failure to follow this warning can result in serious injury to yourself or others

## Step 5. Enjoy the comfortable

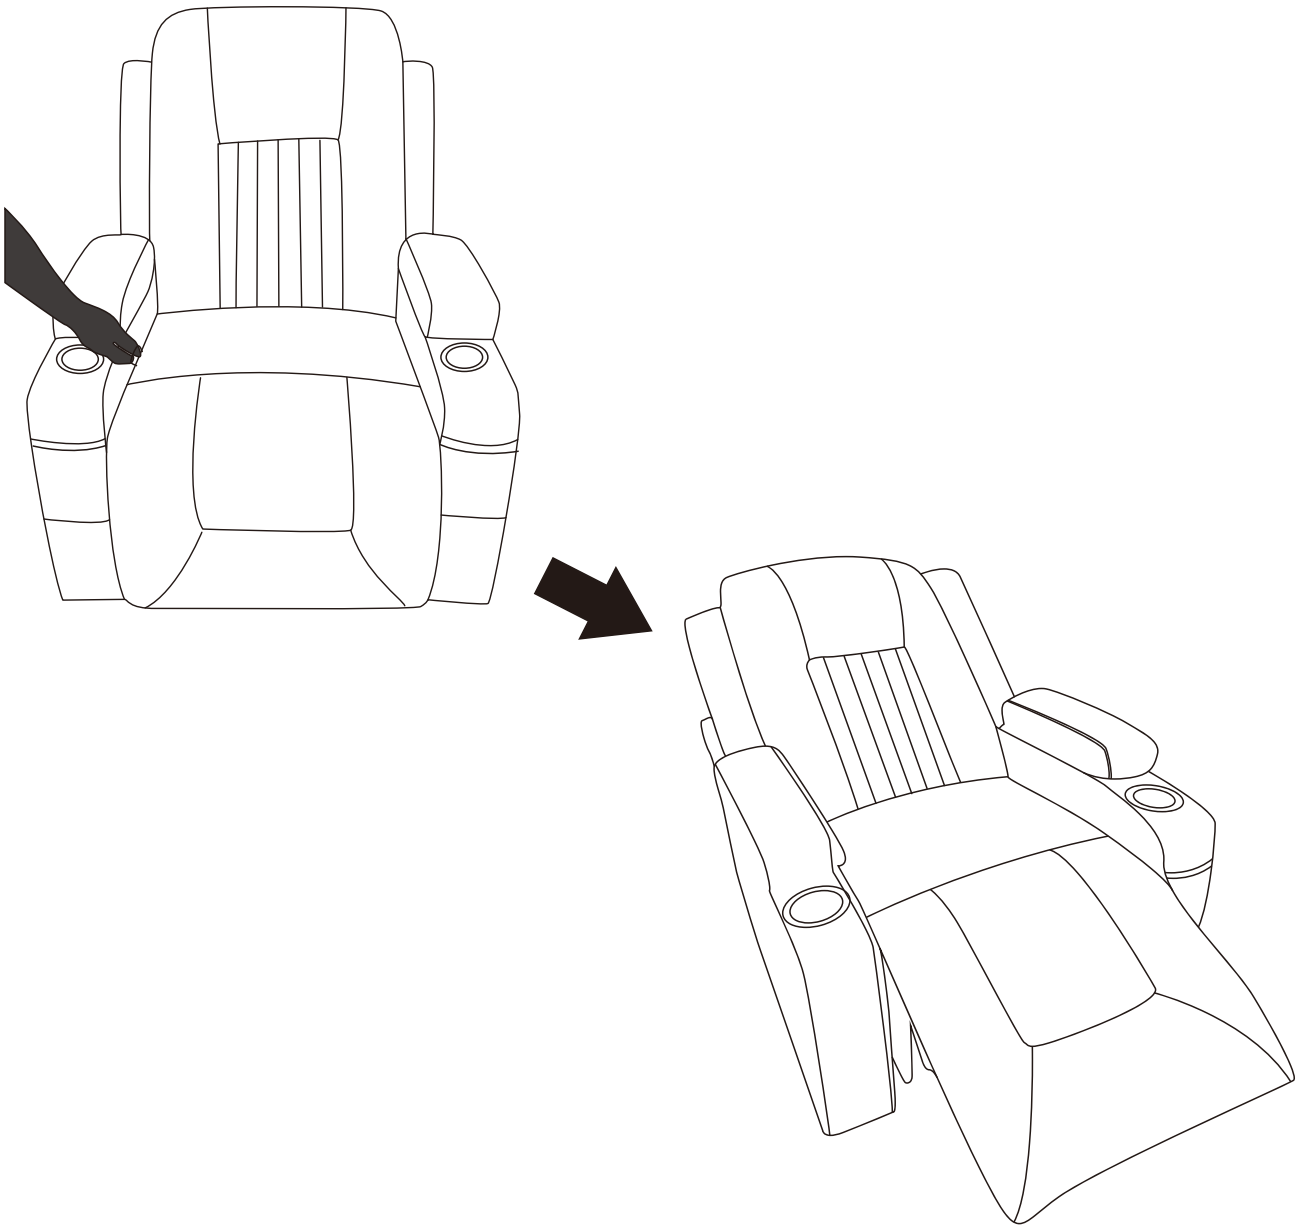

**Sit down and pull the handle on right side, then the footrest raise up; move body backwards a little bit and with your own gravity to recline, enjoy the comfortable.**

# Functional instruction

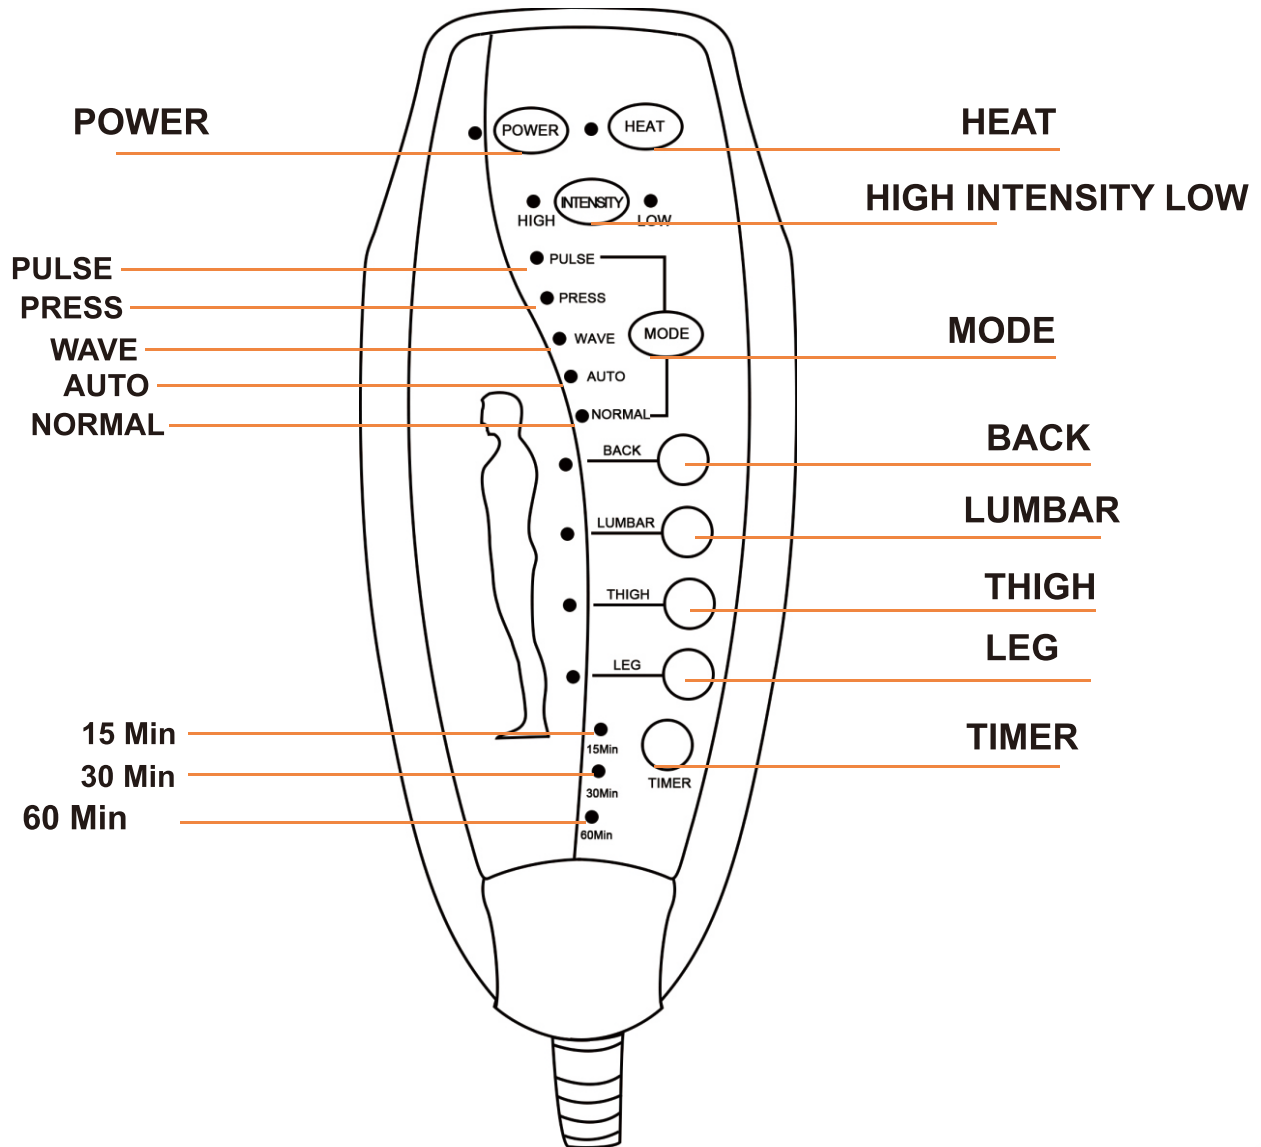

- **INTENSITY:** Switch between HIGH/LOW intensity massage.
- **MODE:** Select 5 types of massages, PULSE, PRESS, WAVE, AUTO or NORMAL.
- **BACK, LUMBAR, THIGHS, and LEGS:** Target massages to specific areas.
- **TIMER:** The default timing is 15-30-60 min selection,





## Product Feature


- Heating massage
- 8 Vibration Motors
- 5 Massaging modes
- 2 Massaging intensity
- 4 massage zones, each zone can be operated individually
- The default timing is 15-30-60 min the selection



## How to use

- 1、 Insert adapter jack into the socket found on back of the massage chair, then plug the adapter into a wall outlet.


(see Figure A)

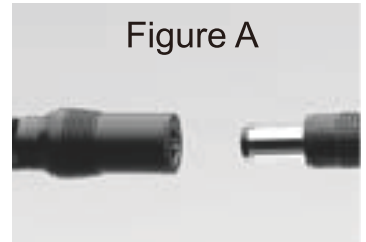


- 2、 Turn the unit ON by pressing the POWER button once, The LED will illuminate when power is on.
- 3、 Turn on the massage in each zone by pressing the BACK, LUMBAR, THINGS or LEGS buttons. LEDS will illuminate when each zone is activated.  
To turn off a zone, press the button again.
- 4、 To choose a desired massage mode, press the MODE button. To change modes, press MODE button until LED for desired mode illuminates.  
**PULSE**-for deep tapping massage  
**PRESS**-provides rapid tapping massage  
**WAVE**-for a gradual, side-to-side vibrating massage  
**AUTO**-automatic selection of different massages  
**NORMAL**-gentle percussive massage
- 5、 To change the massage intensity press the INTENSITY button. The LED for HIGH or LOW intensities will illuminate when chosen.  
**NOTE:** Discontinue use immediately if you feel any discomfort or pain.
- 6、 **NOTE:** for your benefit, the massage chair is equipped with an auto shut-off feature
- 7、 DO NOT use for more than 60 minutes of continuous use.

# Warning


## 2-Person lift

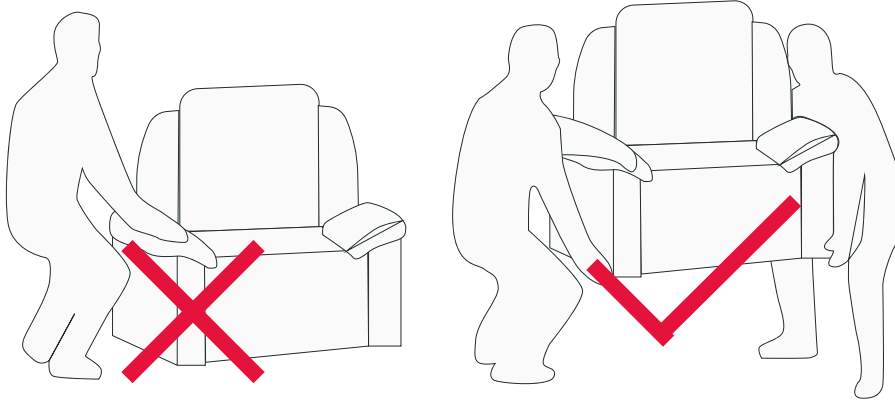

## Do not move chair when it's reclining

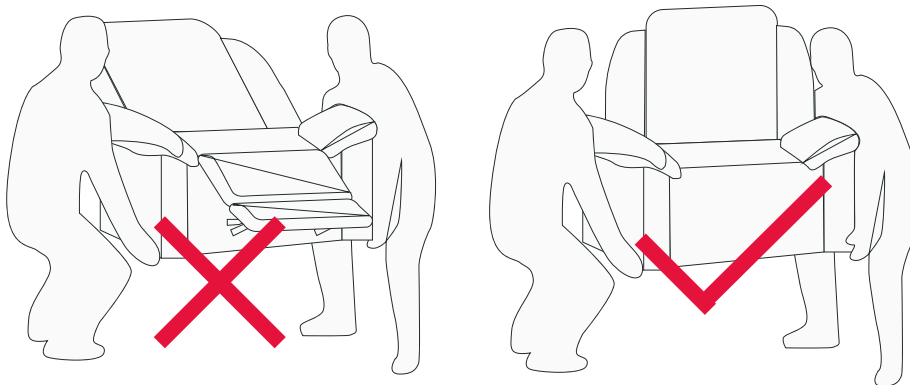


Unplug all power source from socket, then  
unplug all wires connection before move chair

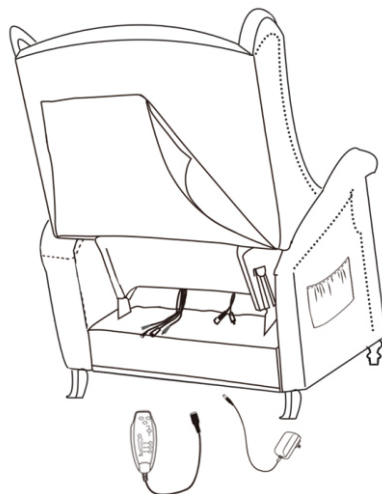


# Warning



**Do not sit/kick/stand on the footrest when the chair is on reclining position**

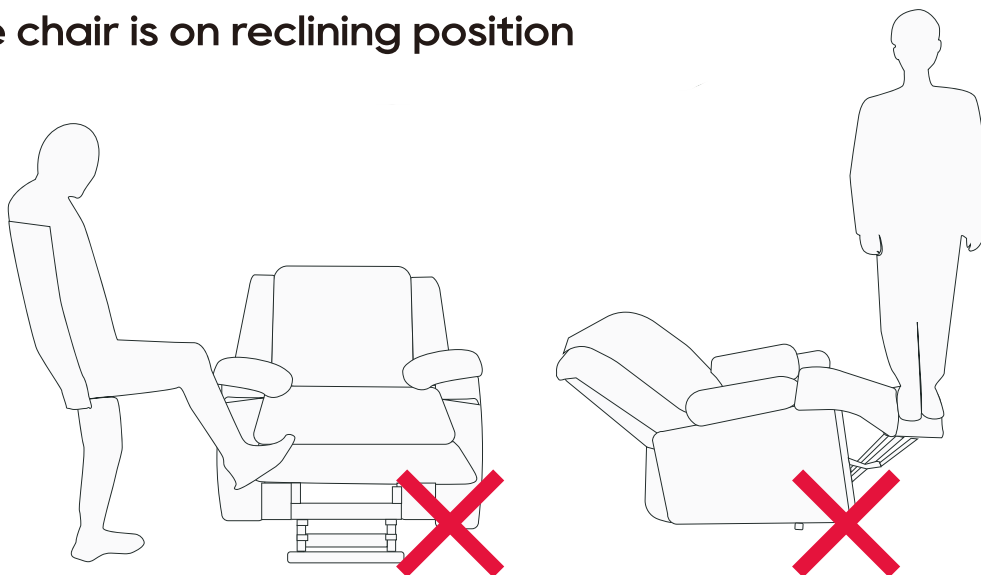


**Do not stand up when the chair is on reclining position**

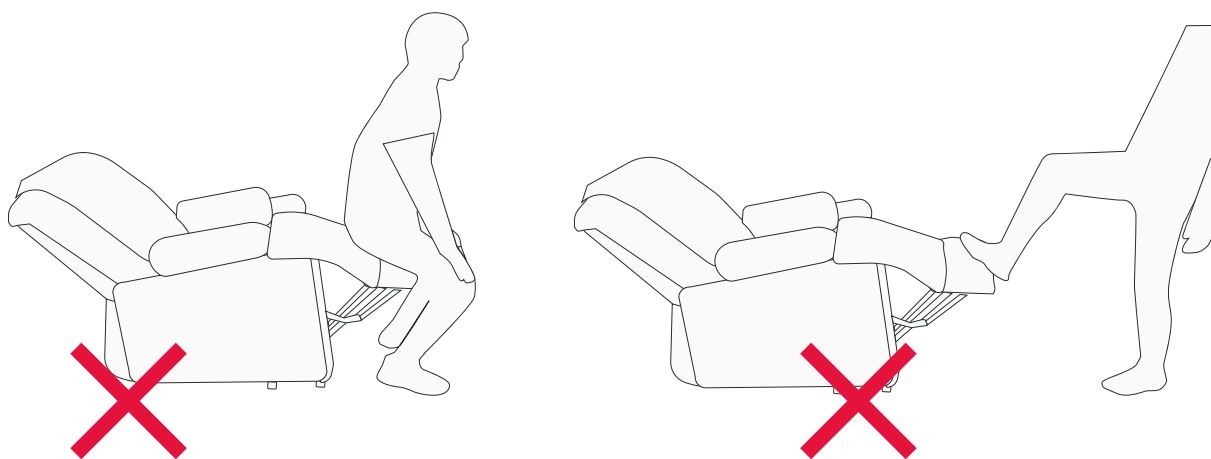

Leave enough space between chair back and wall before reclining

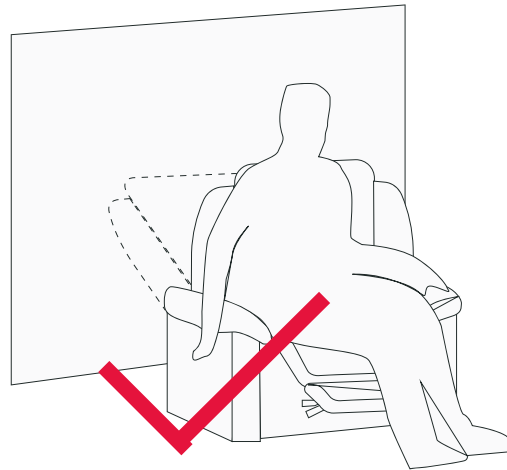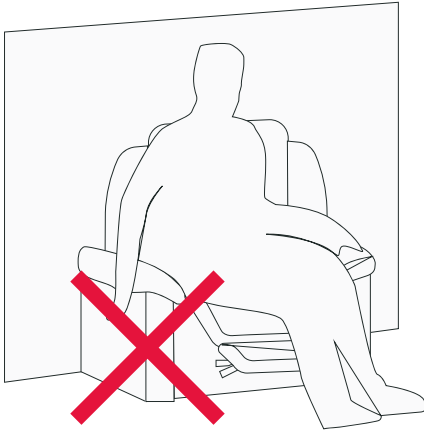

Do not sit on or  
press armrest

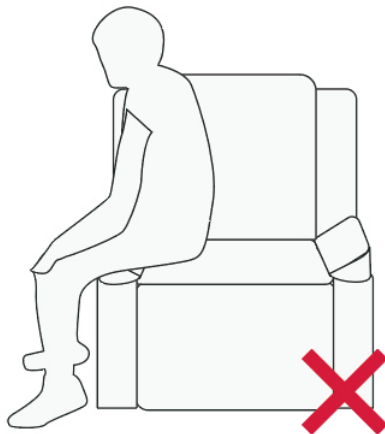

Do not press armrest  
after recline



Do not smoke or play with fire