




84037 Product Installation Instructions

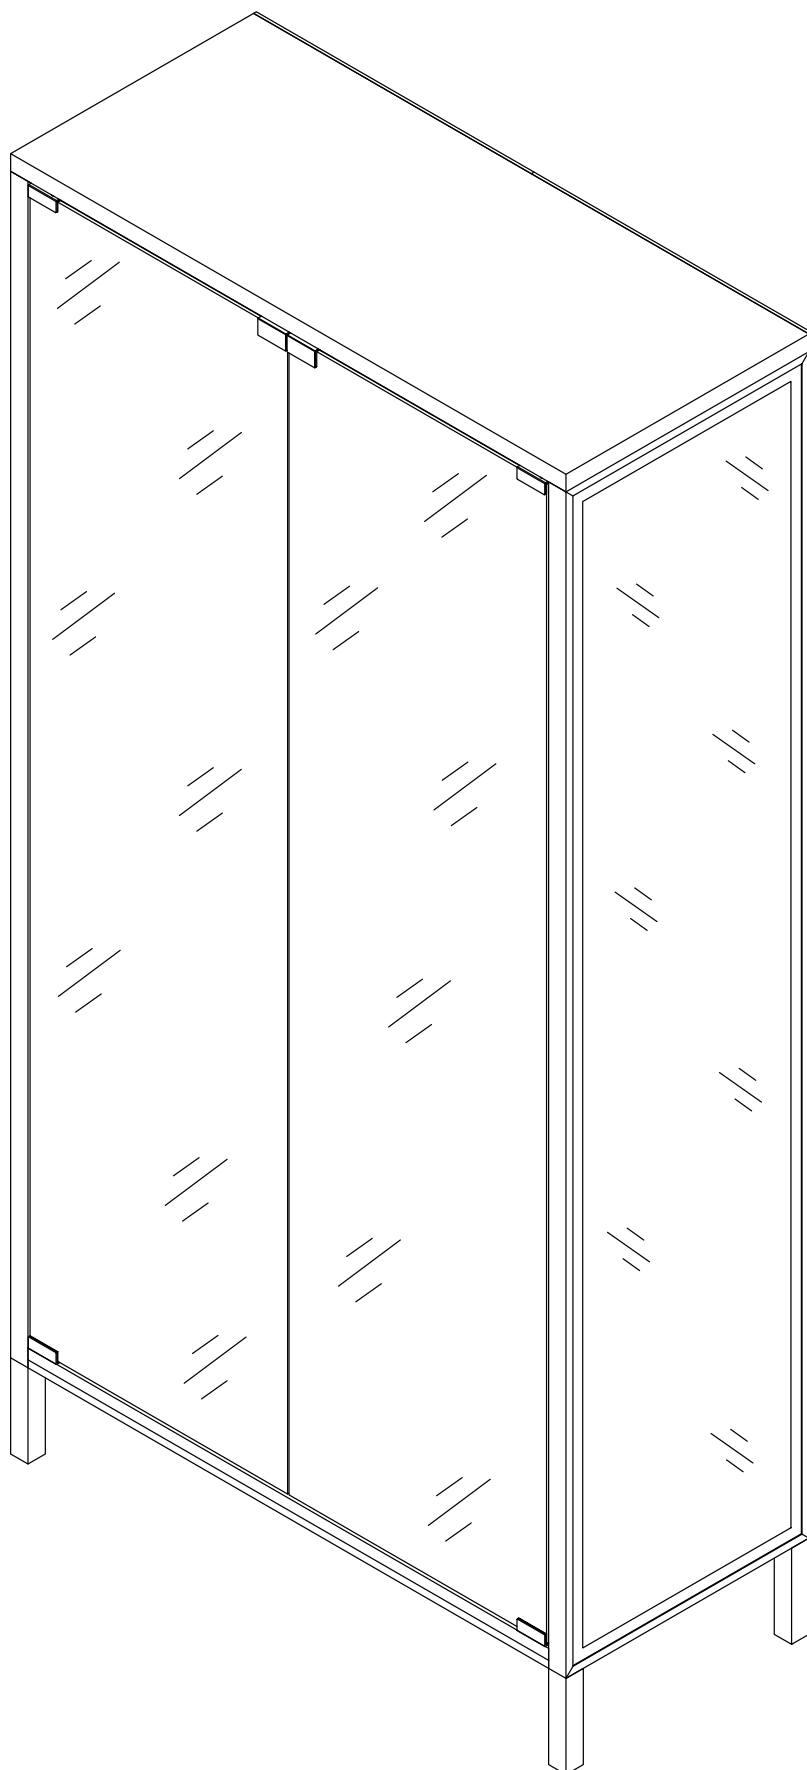





A x1

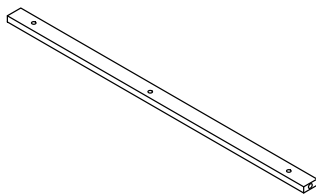


B x4

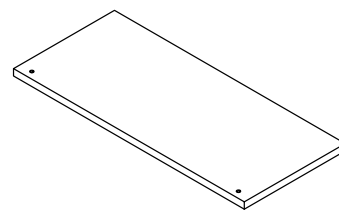


C x1




D x1

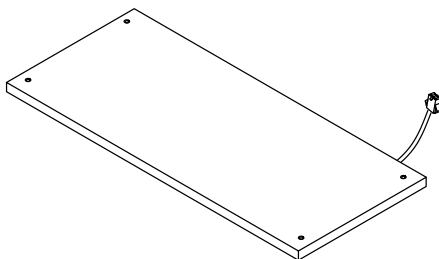


E x1

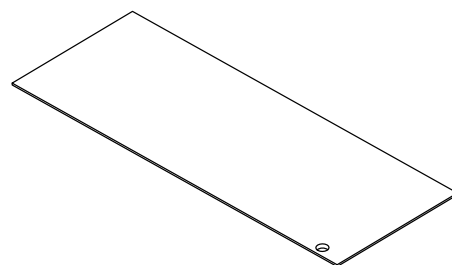


F x1

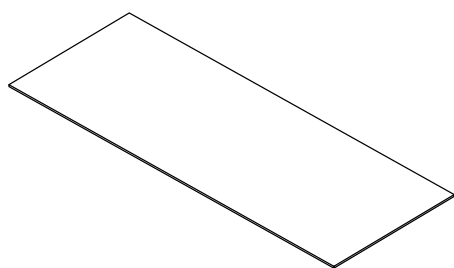


G x3

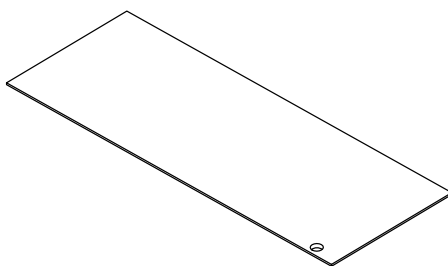


H x1

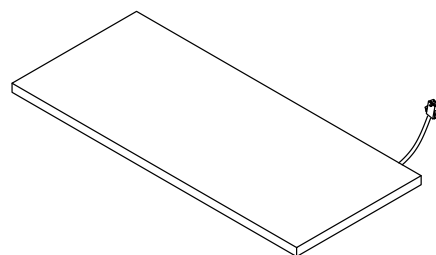


I x1

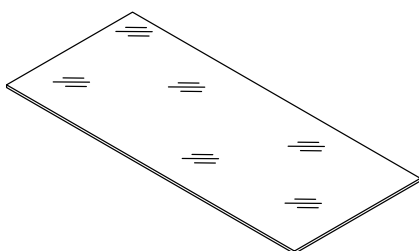

J x3








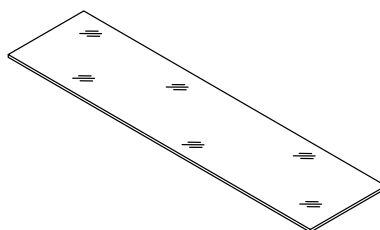


K x2


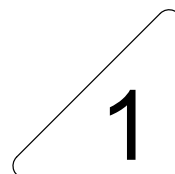


1

Accessories list

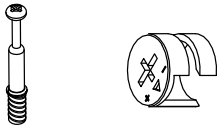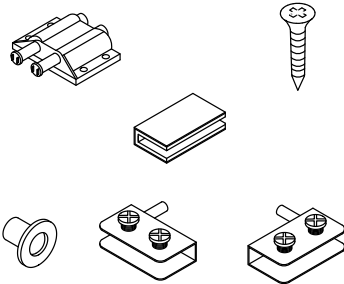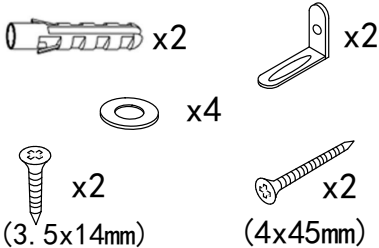
①		Two In One Screw (6x28mm) Two In One Nut (10x12mm)	4pcs +1pcs
②		screw (6x33mm)	8pcs
③		Rebound device Screw (3x16mm) Iron sheet Hinge	1pcs 4pcs 2pcs 4pcs 2pcs 2pcs
④		screw (4x30mm)	4pcs +1pcs
⑤		screw (3x12mm) washer (φ 10mm)	18pcs +4pcs
⑥		Laminate Support Nail	14pcs +2pcs
⑦		Adjustable Foot	4pcs
⑧		Anti Fall Hardware	1pcs
⑨		Wire clamp	1pcs
		AC/DC Adapter (12V=3.0A)	1pcs

Double-head screwdriver, use as required

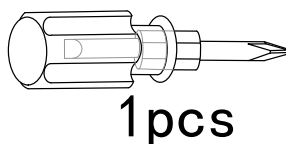


2

Product structure decomposition

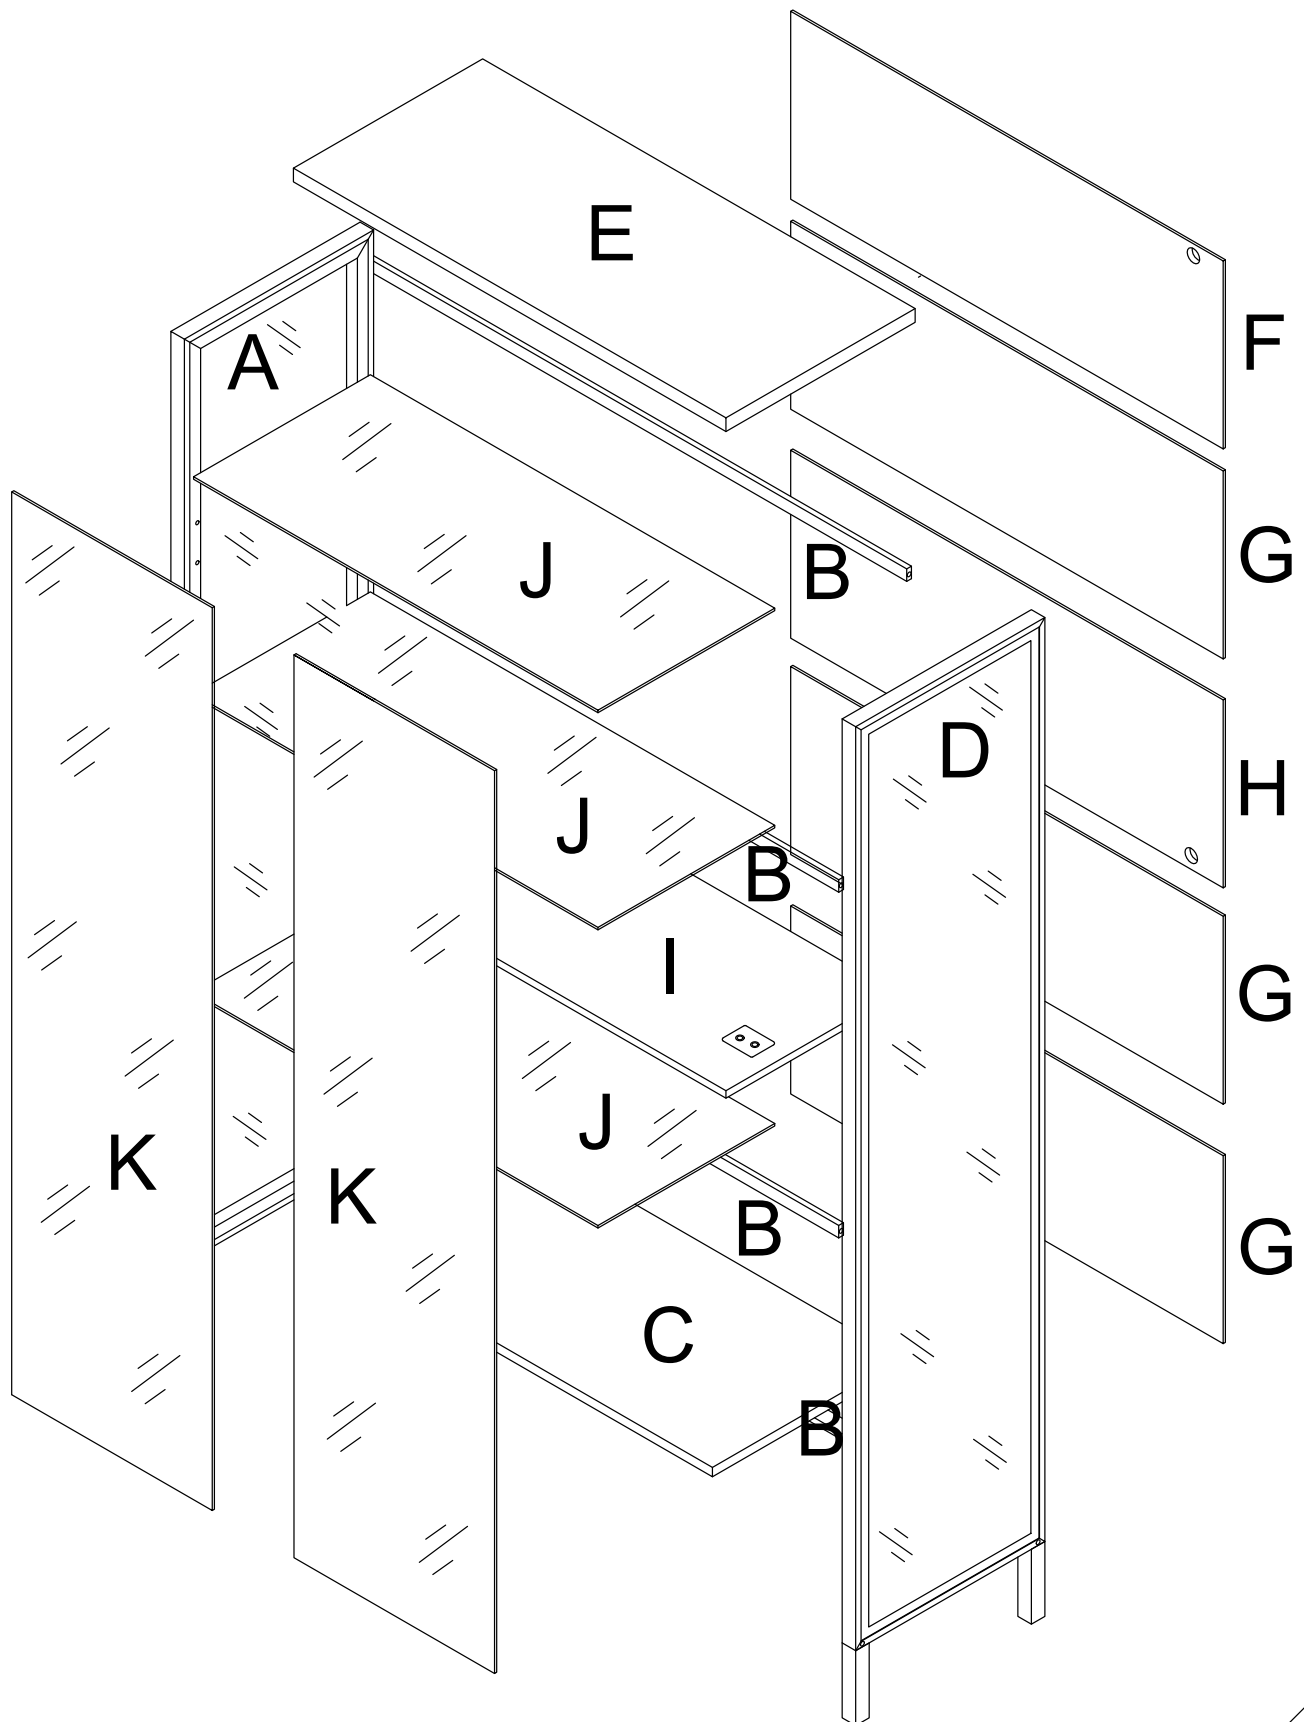


Use parts ① and ①




Step1

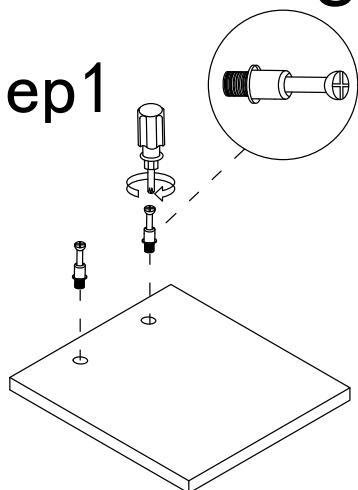

Step2

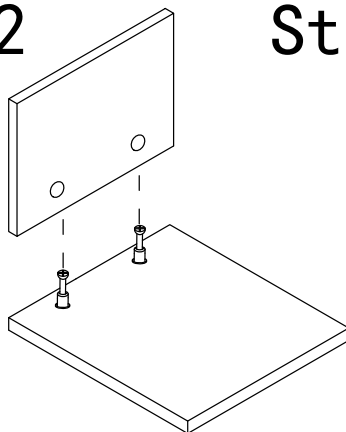

Step3

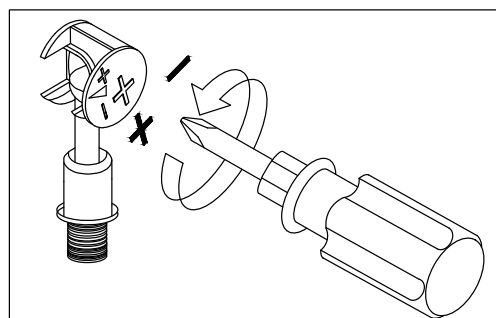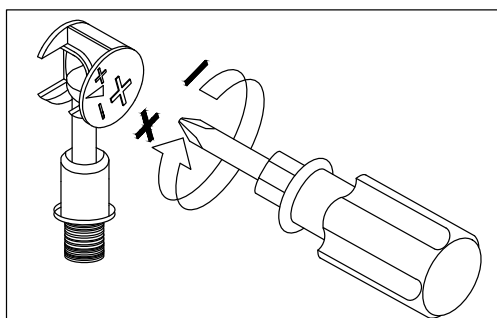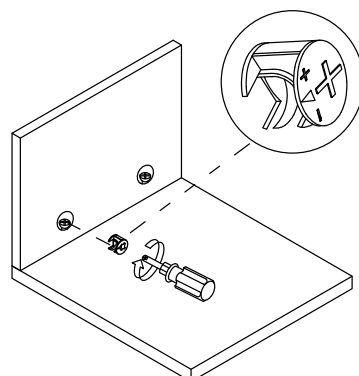

Use a screwdriver to lock in the direction of the "+" sign


Disassemble along the direction of "-" sign

Step 1

①



x2

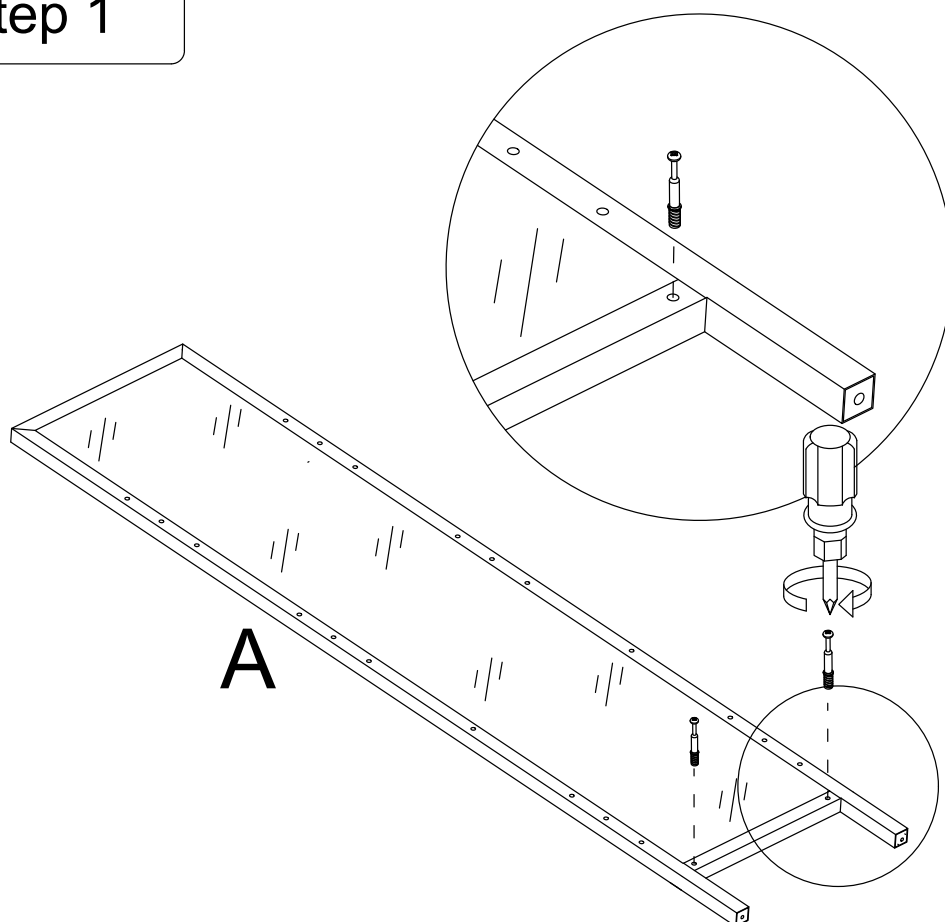


4

Step 2

1



x2

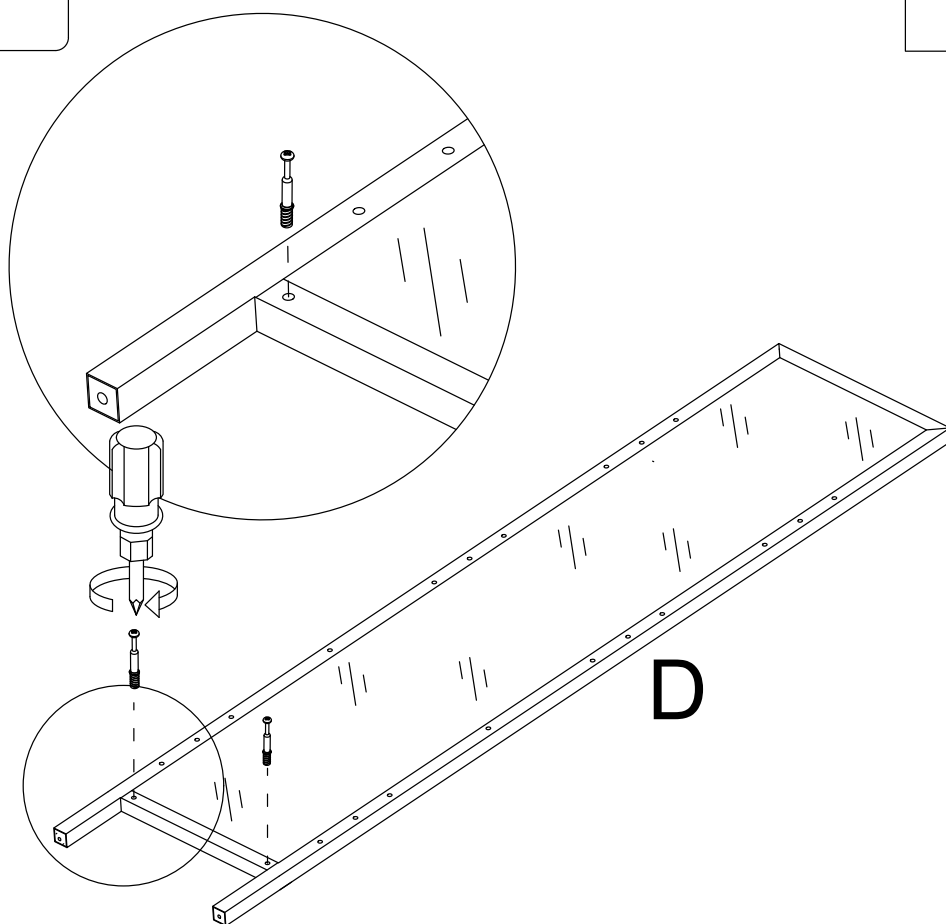


Step 3

1




x4

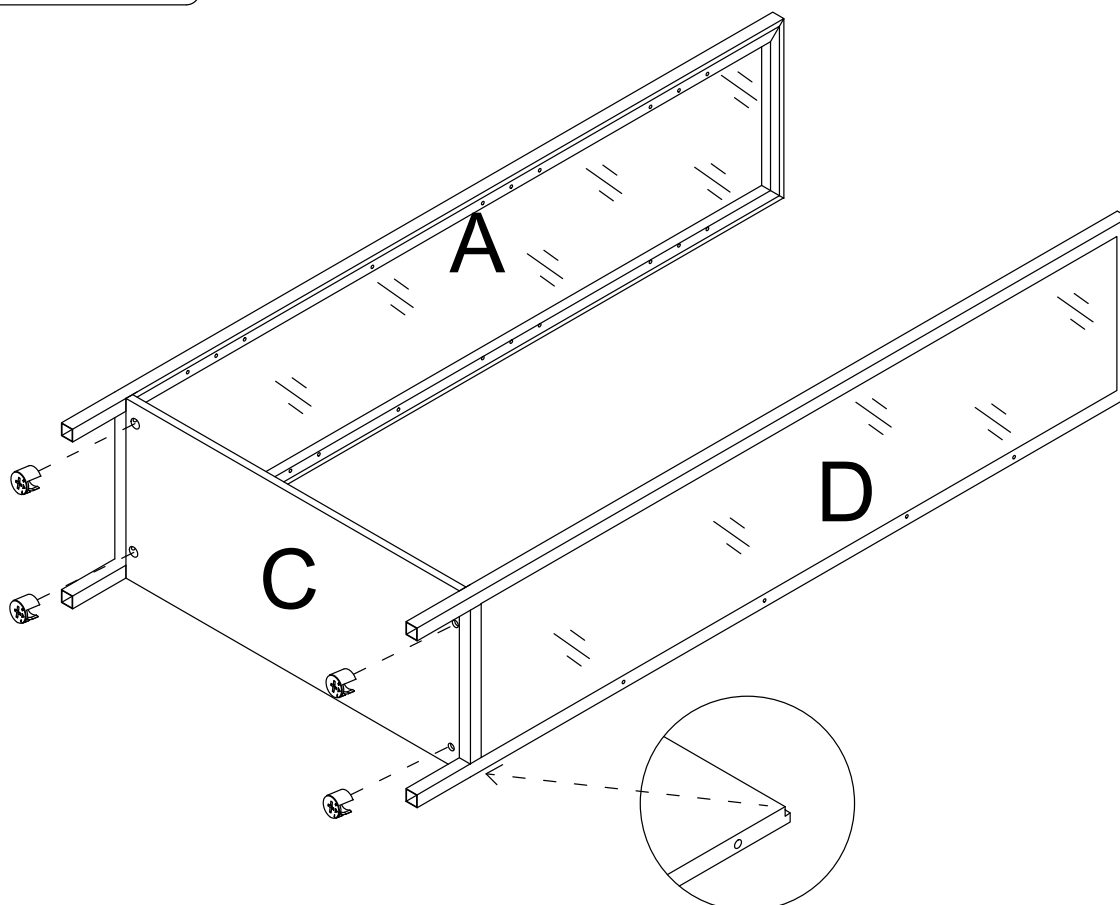

5

Step 4


3



x1



x4

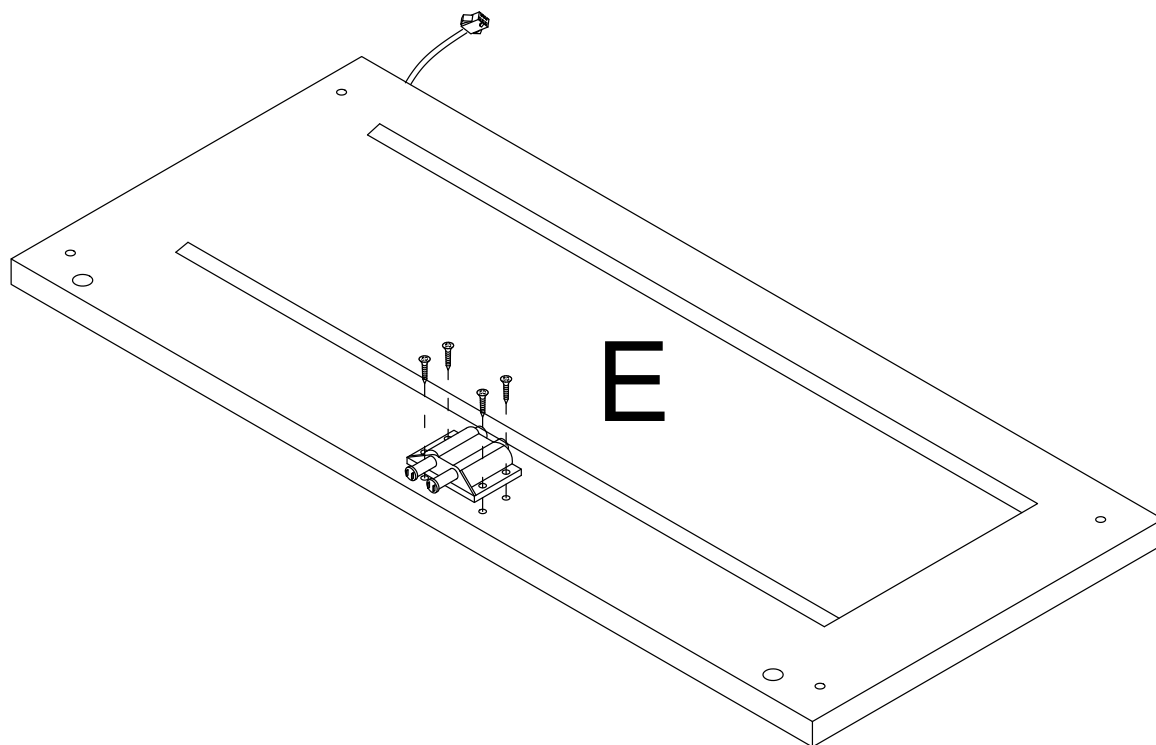


Step 5

4



x4

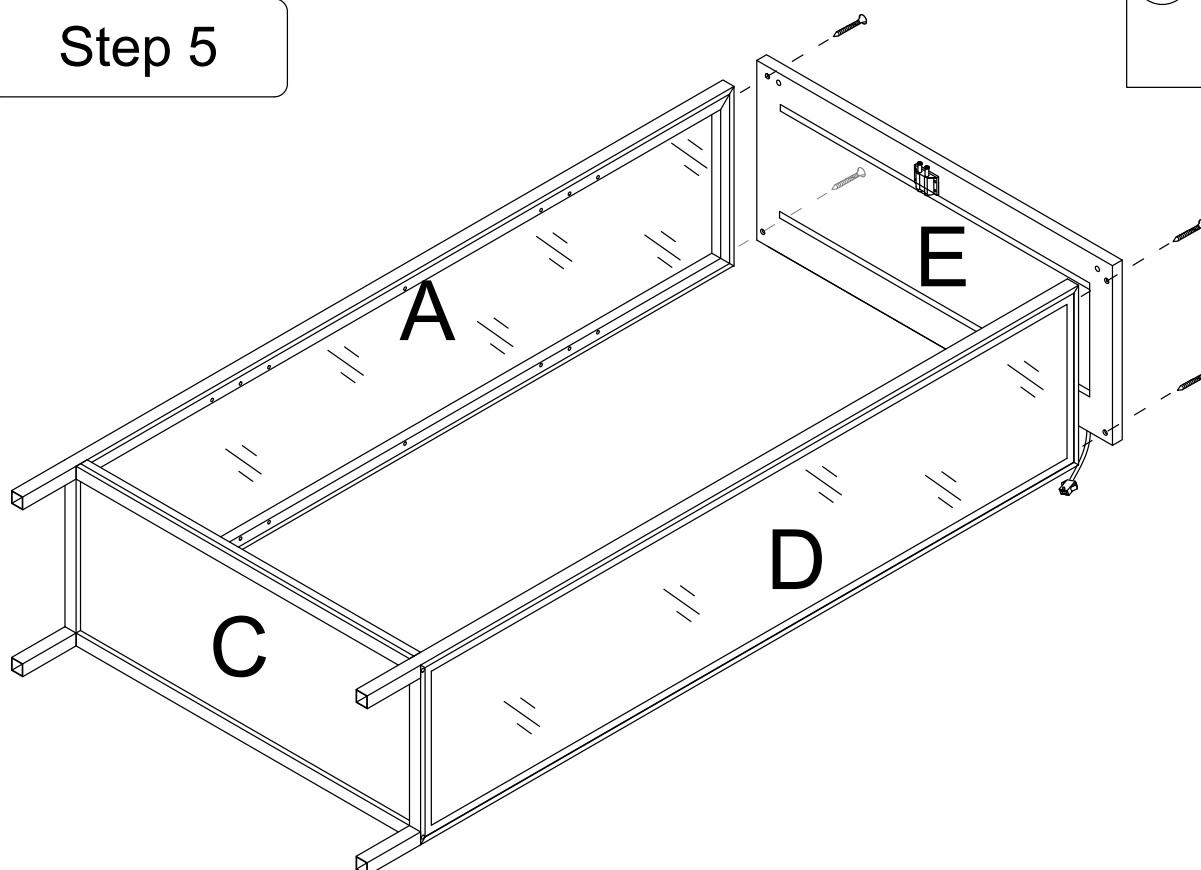


6

Step 6

7



x4

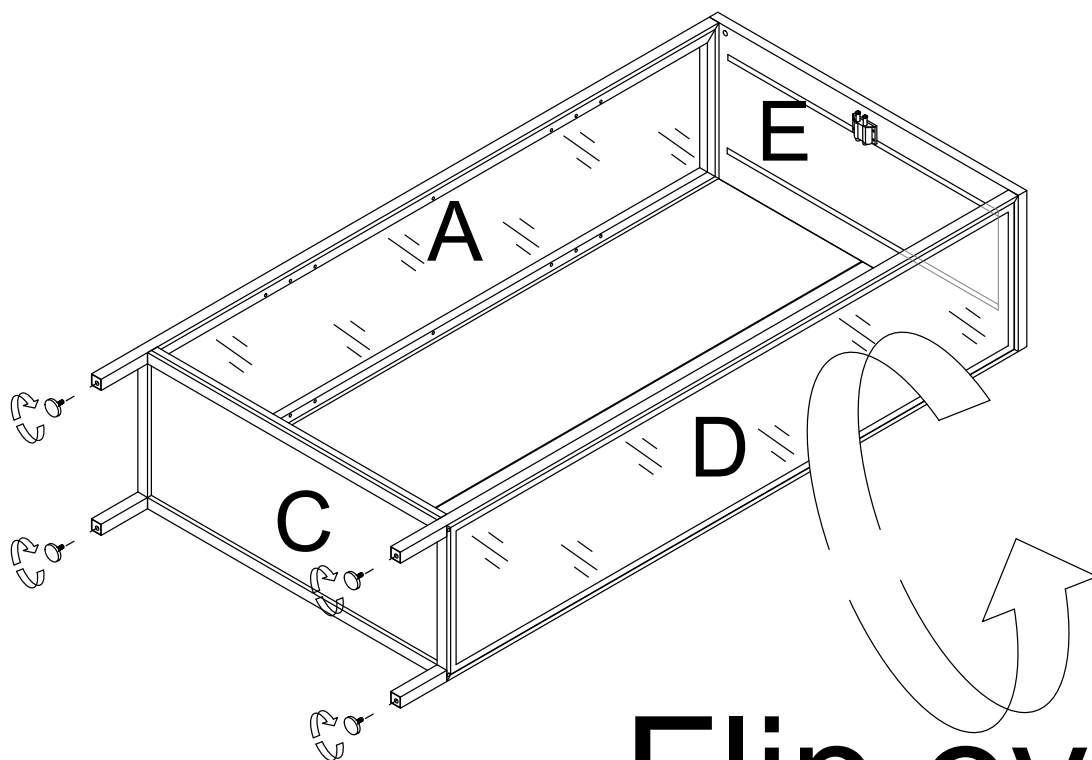


Flip over

Step 7

2




x8

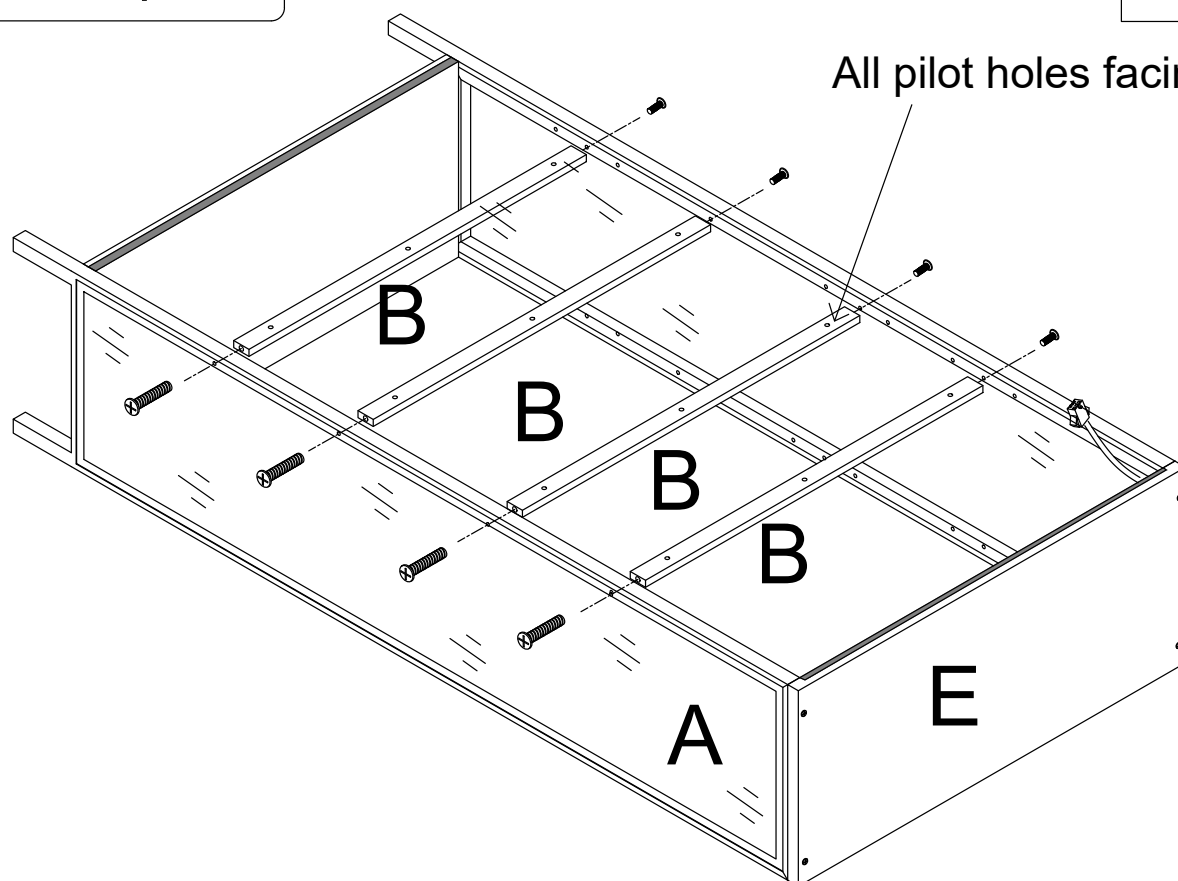


7

Step 8

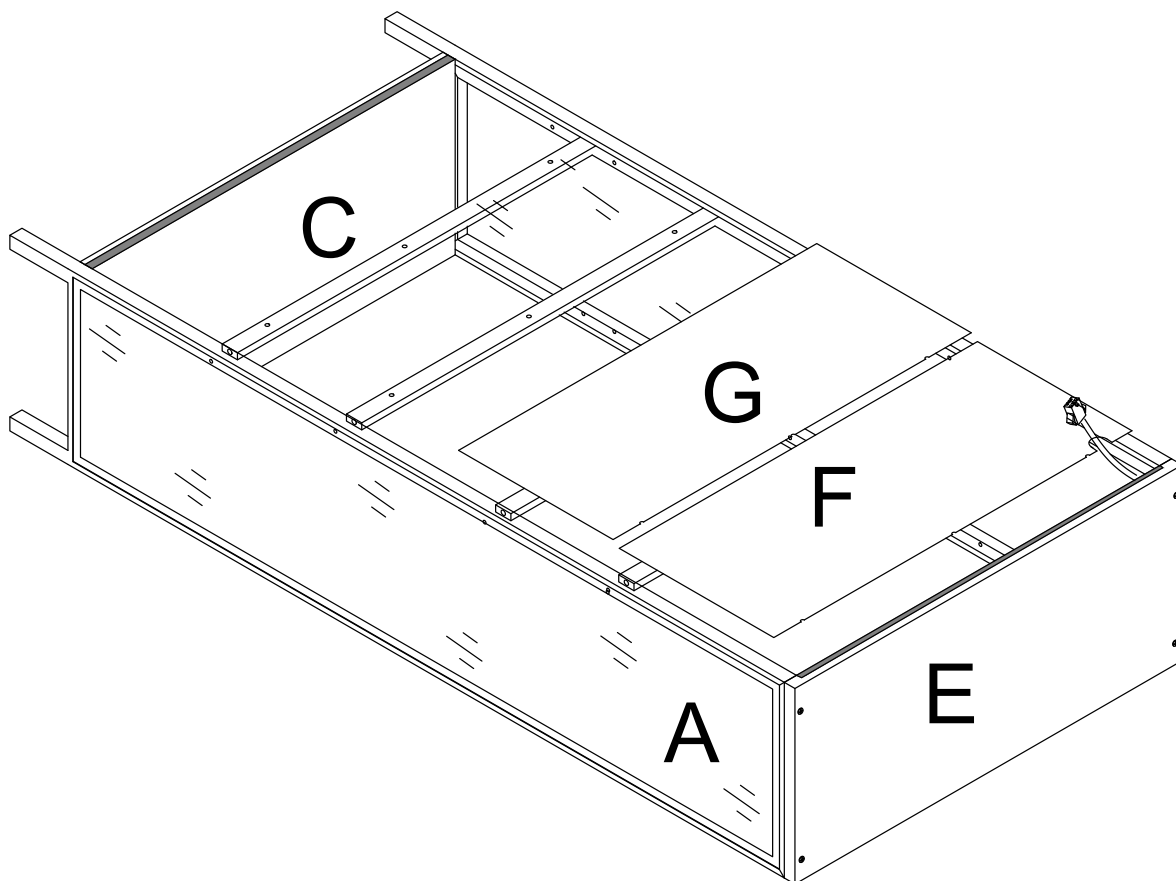


Step 9

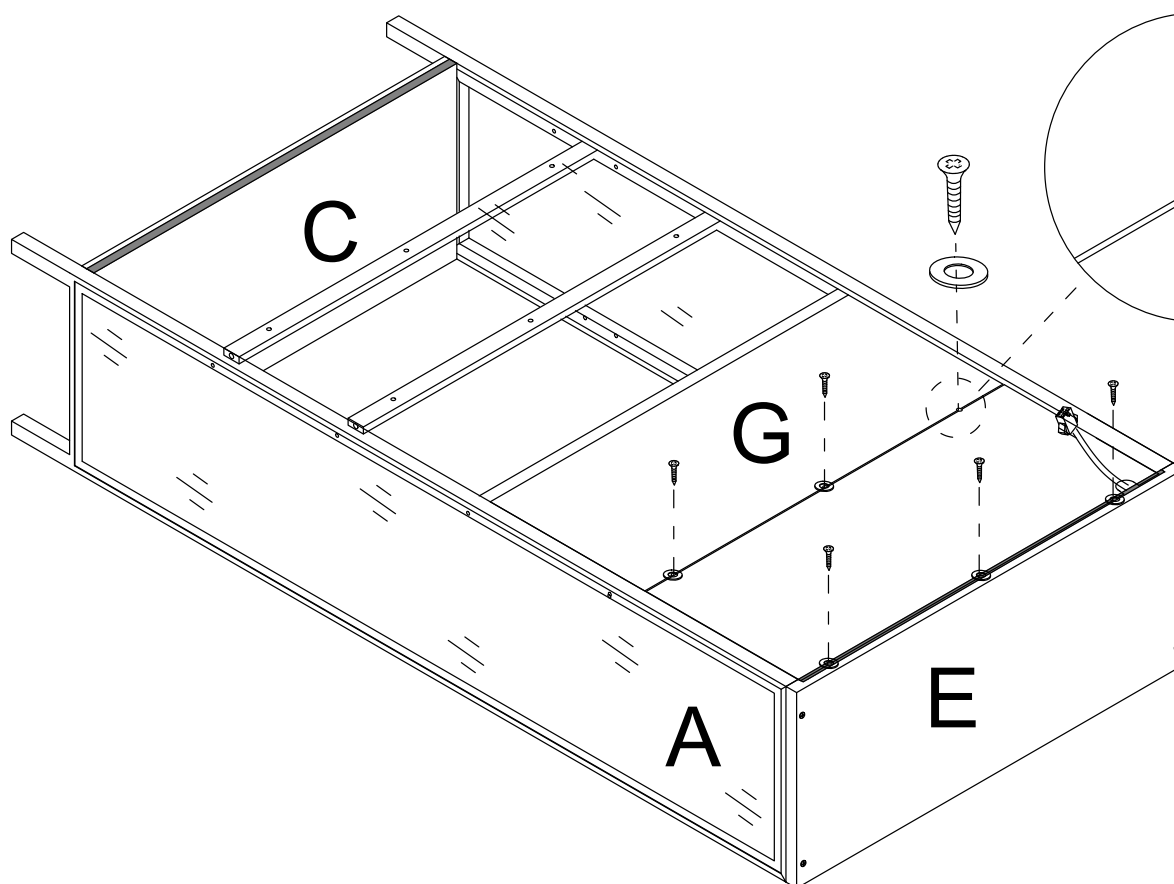

5



x6

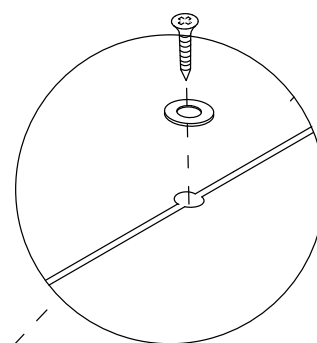


Step 10


5



x12

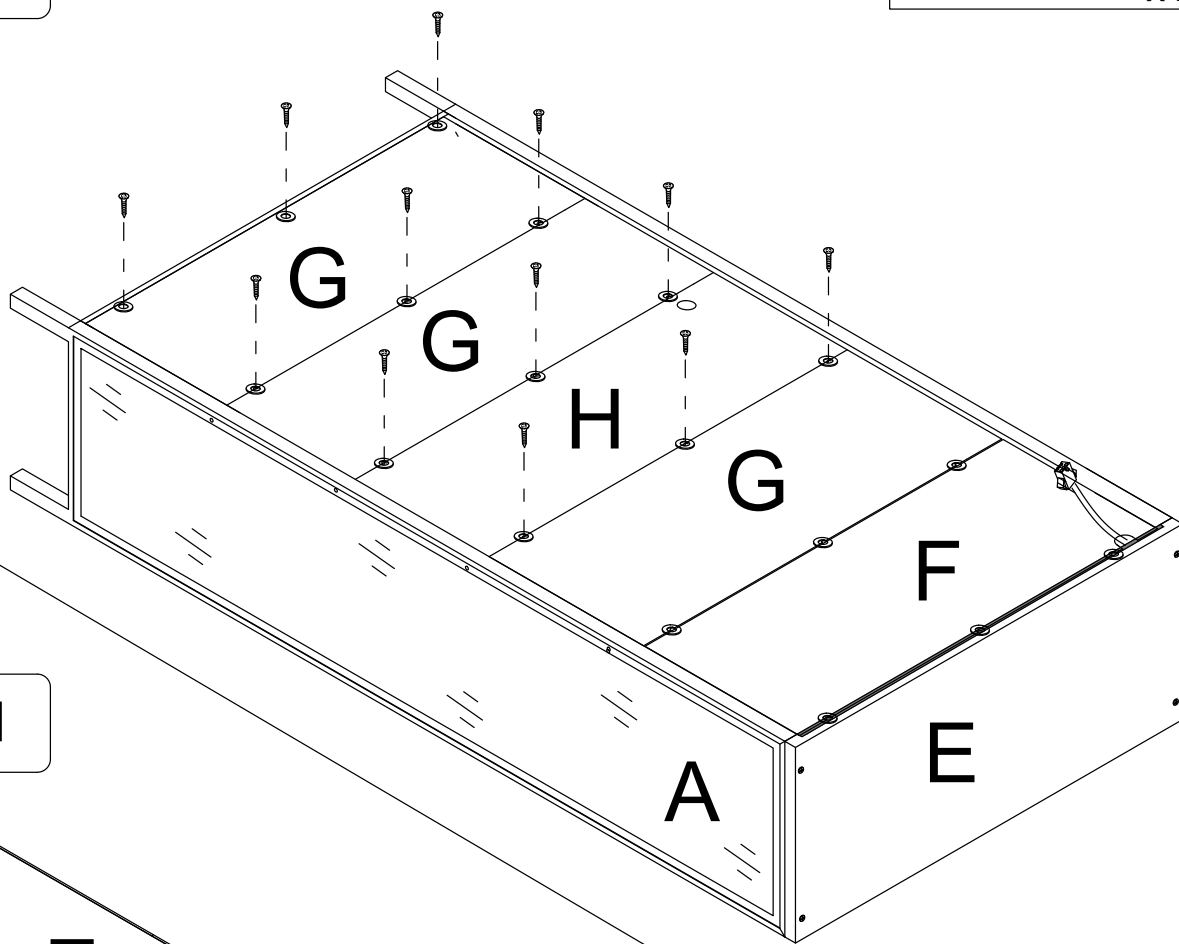


Step 11

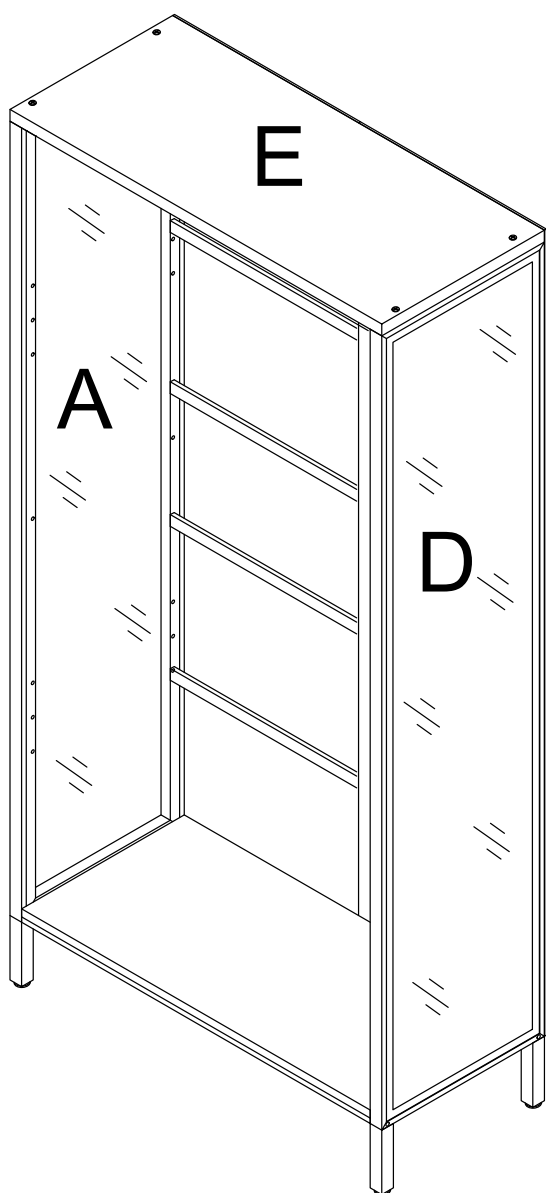

Stand the cabinet upright.


Step 12

Secure the shelf bracket by rotating it.

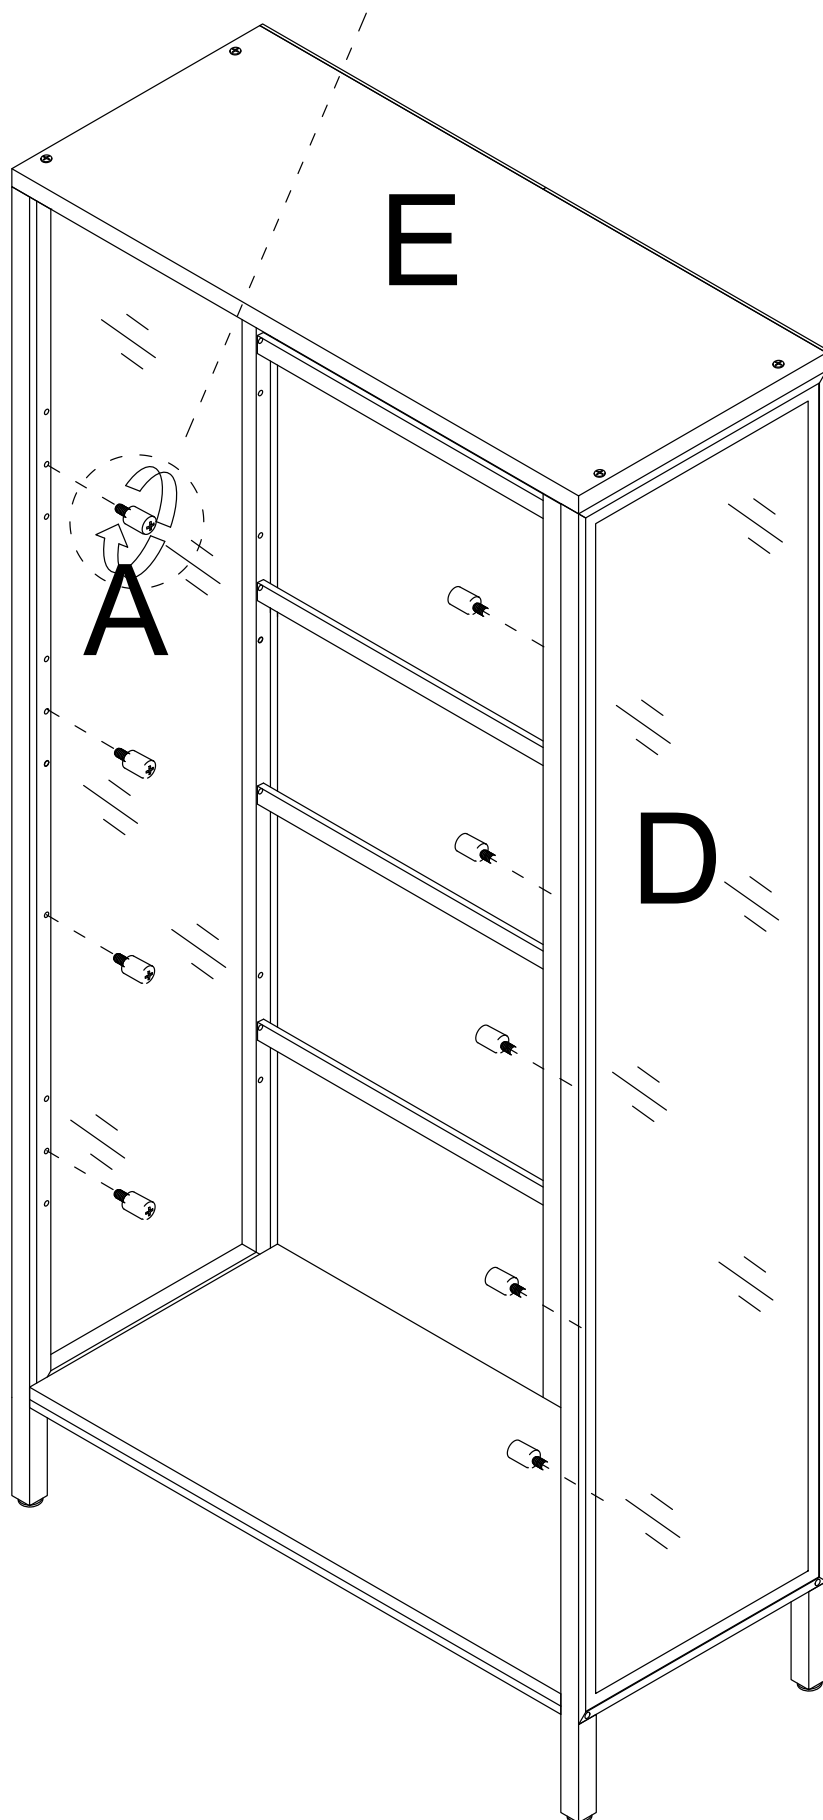

Step 13

Thread the lamp wire through the wire outlet.

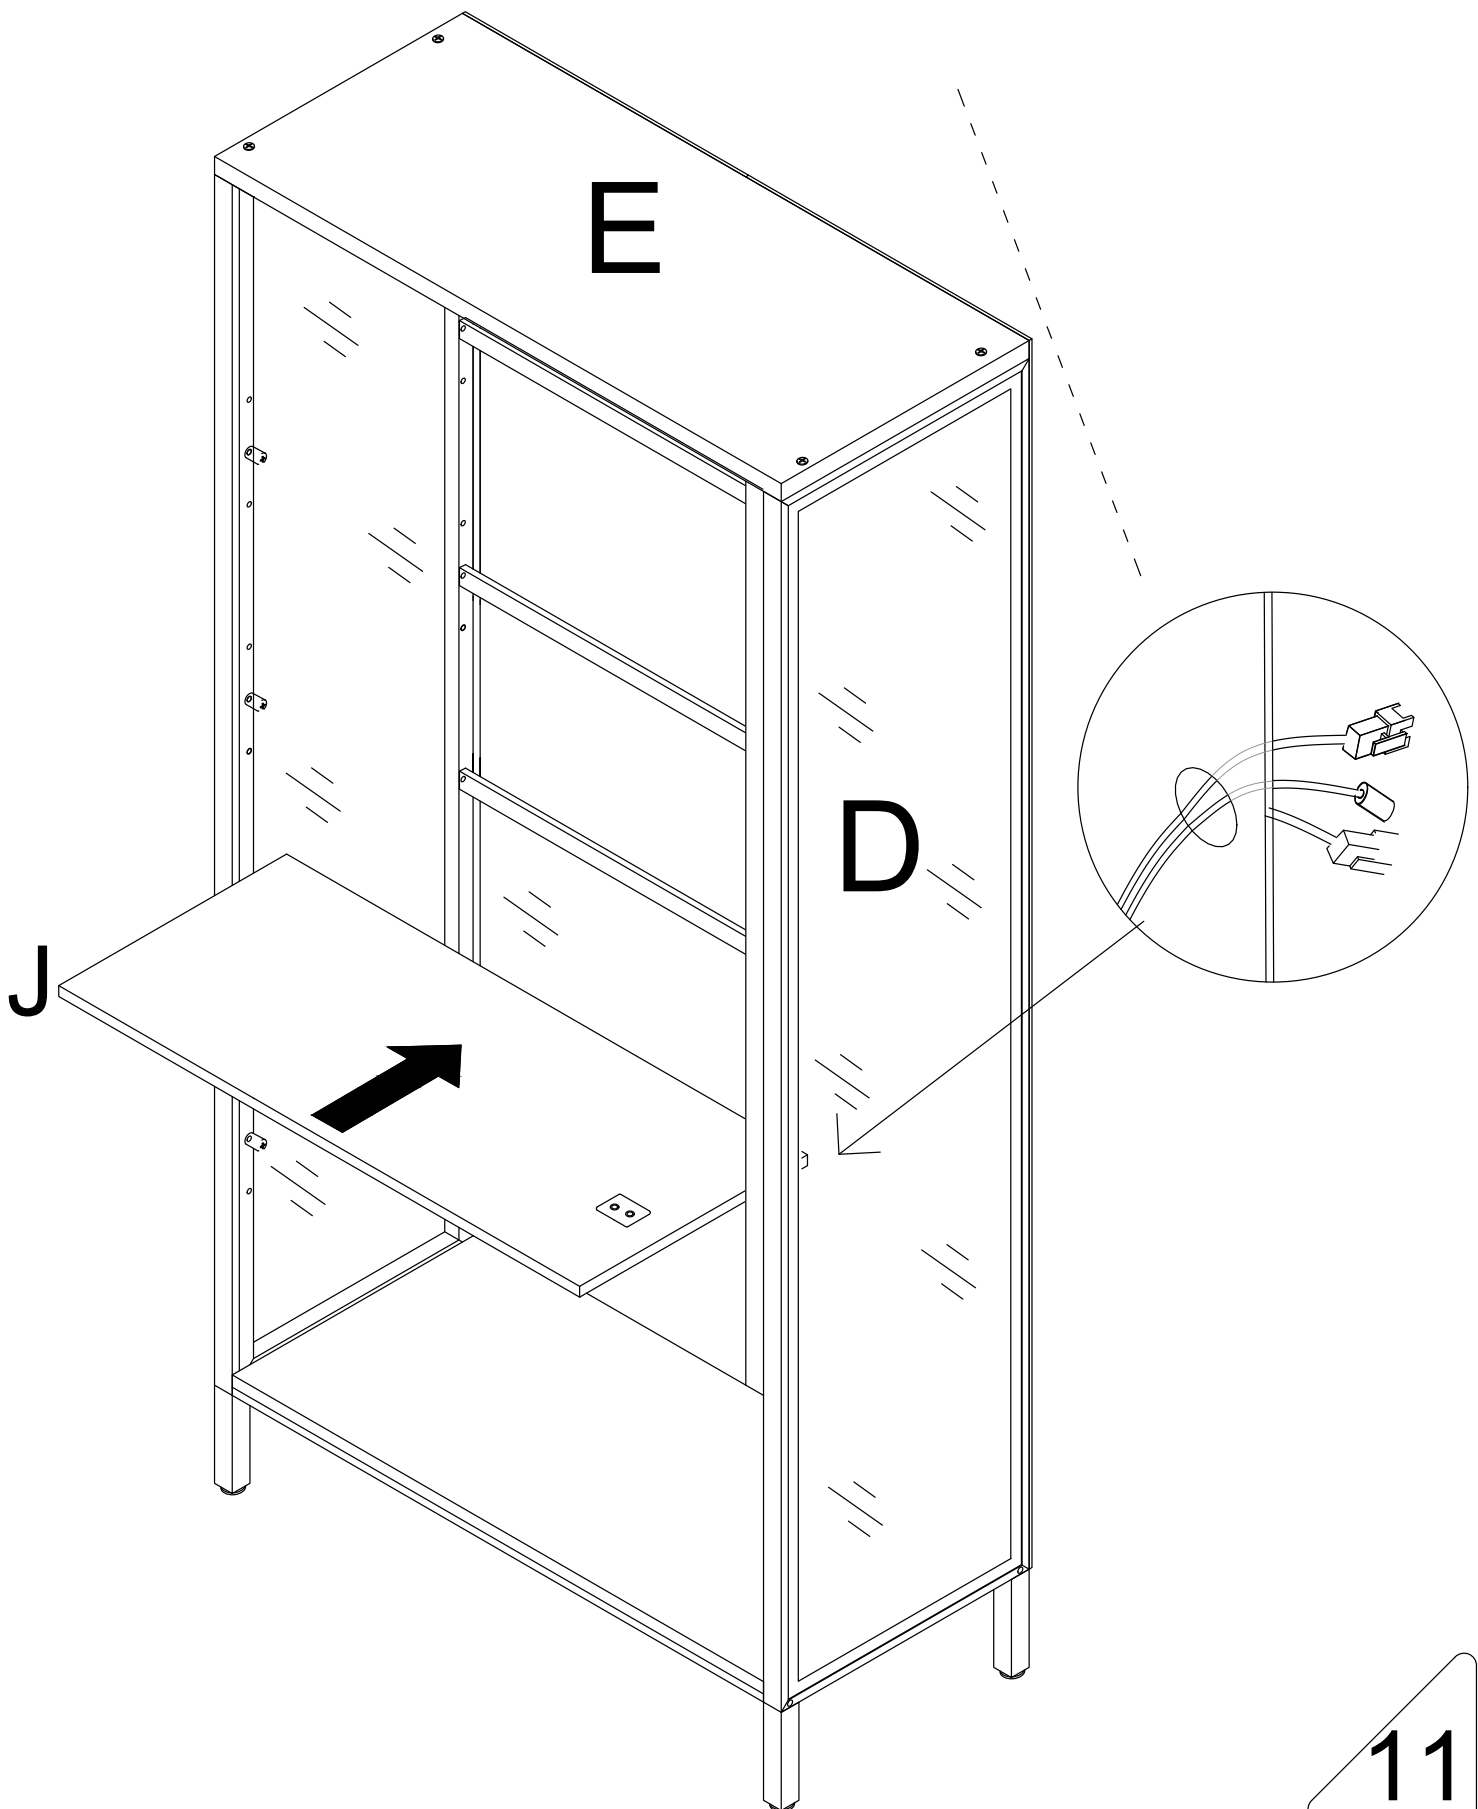



Step 14




- 3



x2
- x1



- x1



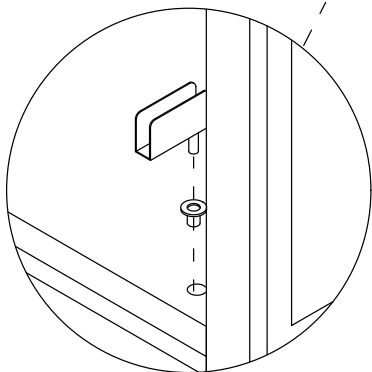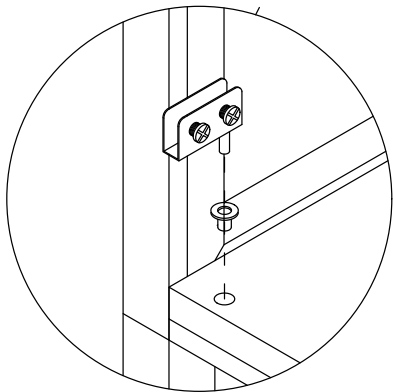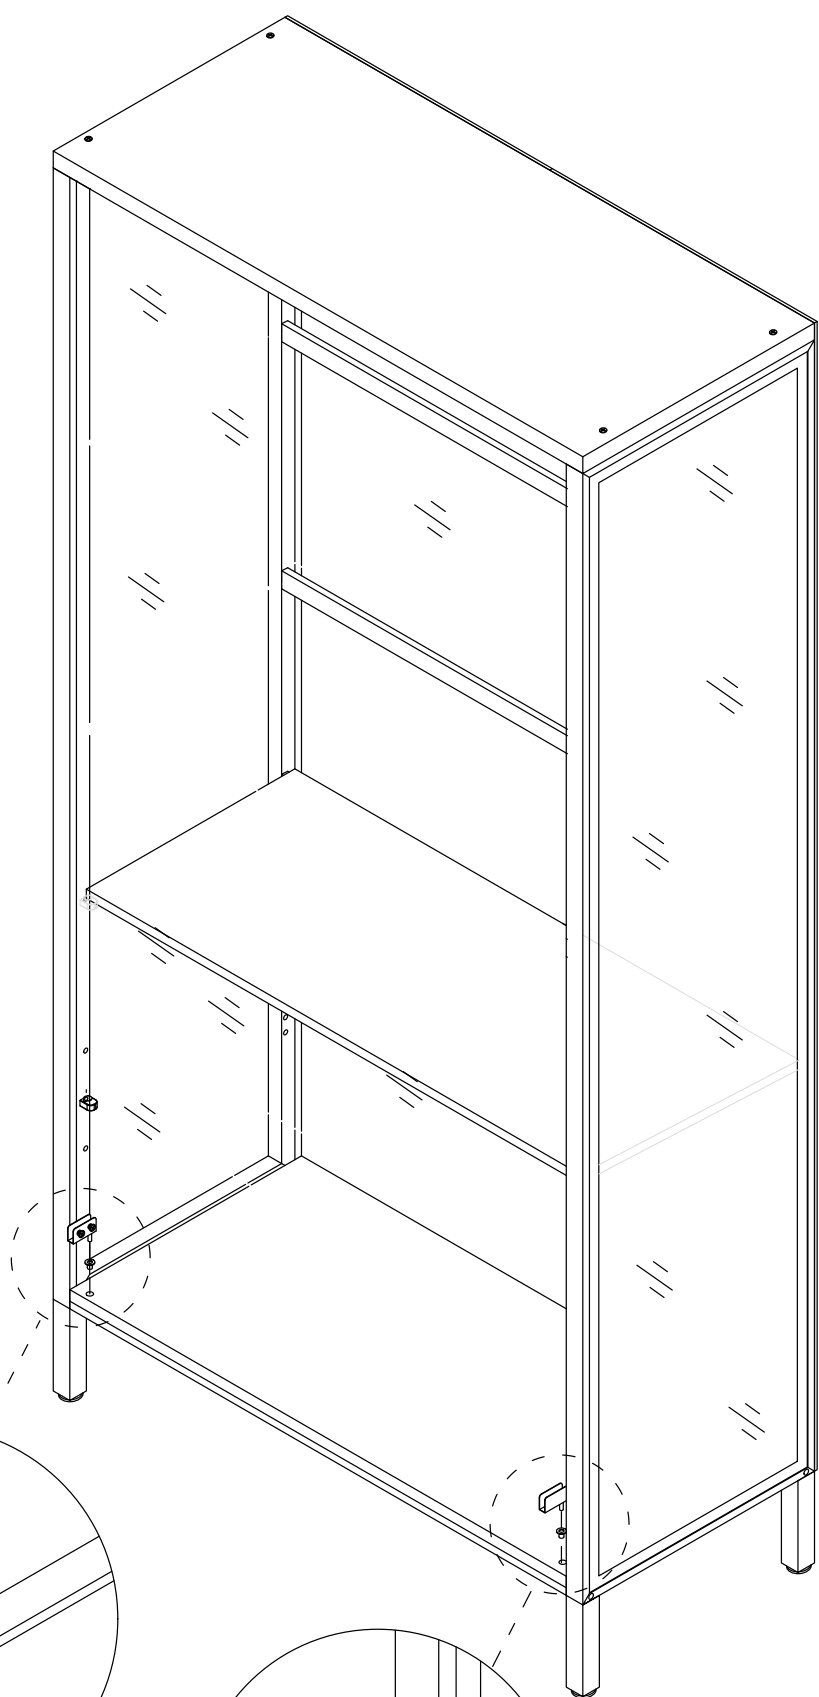


Step 15


First, completely unscrew the screws on the parts

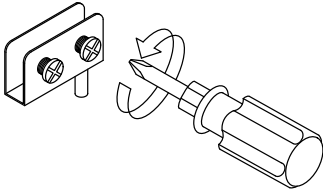


Then take out the black rubber pad from the inside of the part, and the white sponge remains unchanged inside the part.

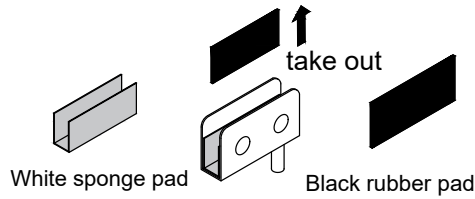

3

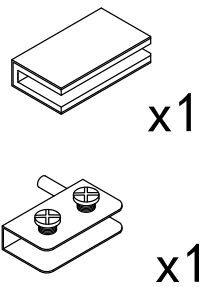

Left

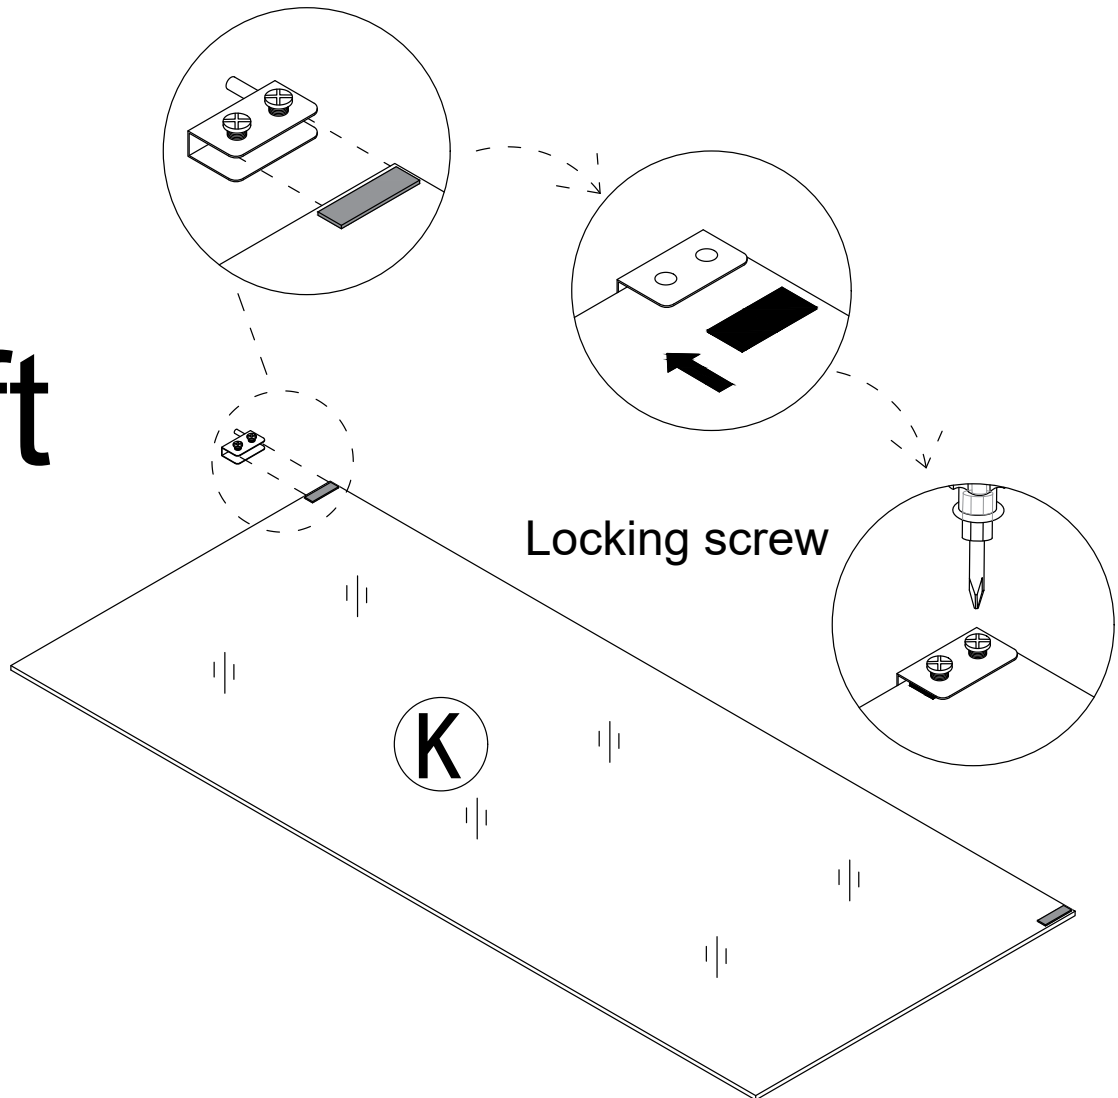


Pay attention to the direction of the door hinge, rotate the screws to compress the black gasket, and do not place it in the opposite direction


Place the black gasket on the side where the screws are installed

Step 16

3

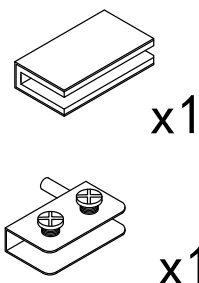

Locking screw

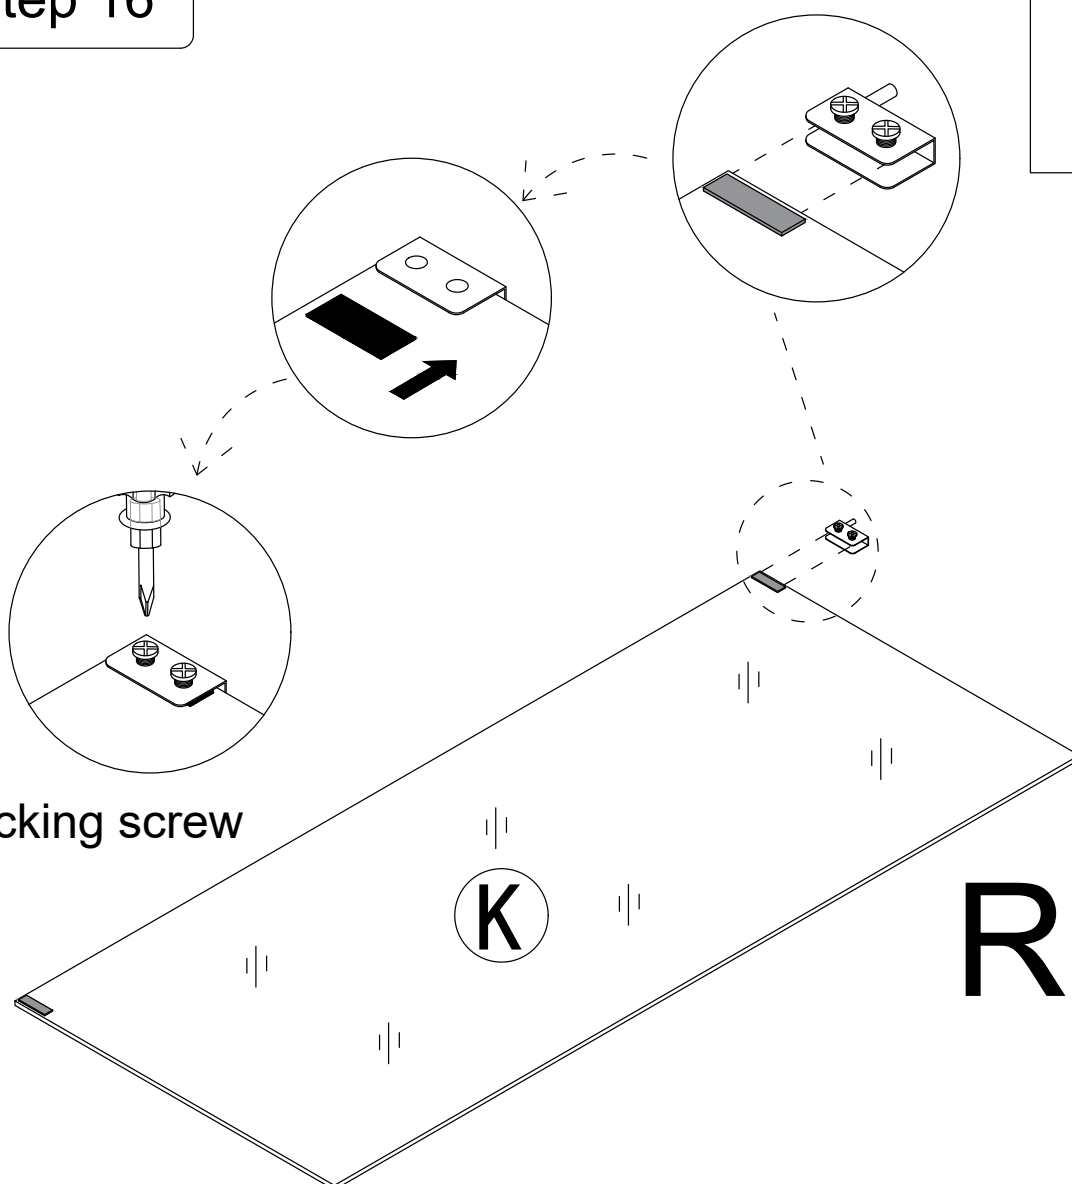

Right

Pay attention to the direction of the door hinge, rotate the screws to compress the black gasket, and do not place it in the opposite direction

Place the black gasket on the side where the screws are installed

Step 17


Pay attention to the direction of the door hinge during installation

3




x2

When installing a glass door, it is recommended to have two people install it to avoid the glass door colliding or hitting oneself.

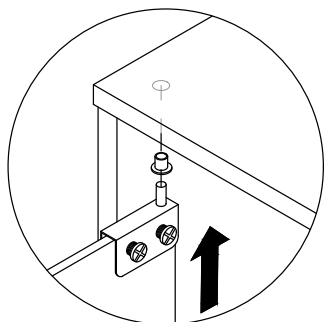


first

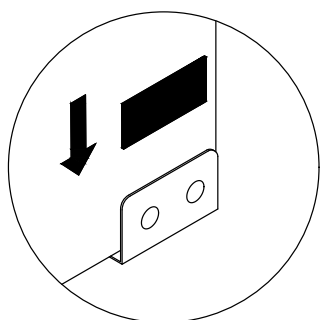


second

After installing the glass door, place the black gasket on the side where the screws are installed

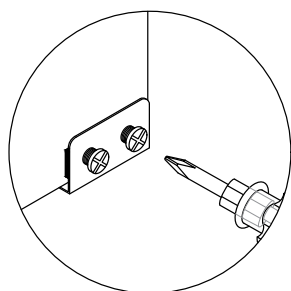



third

Locking screw

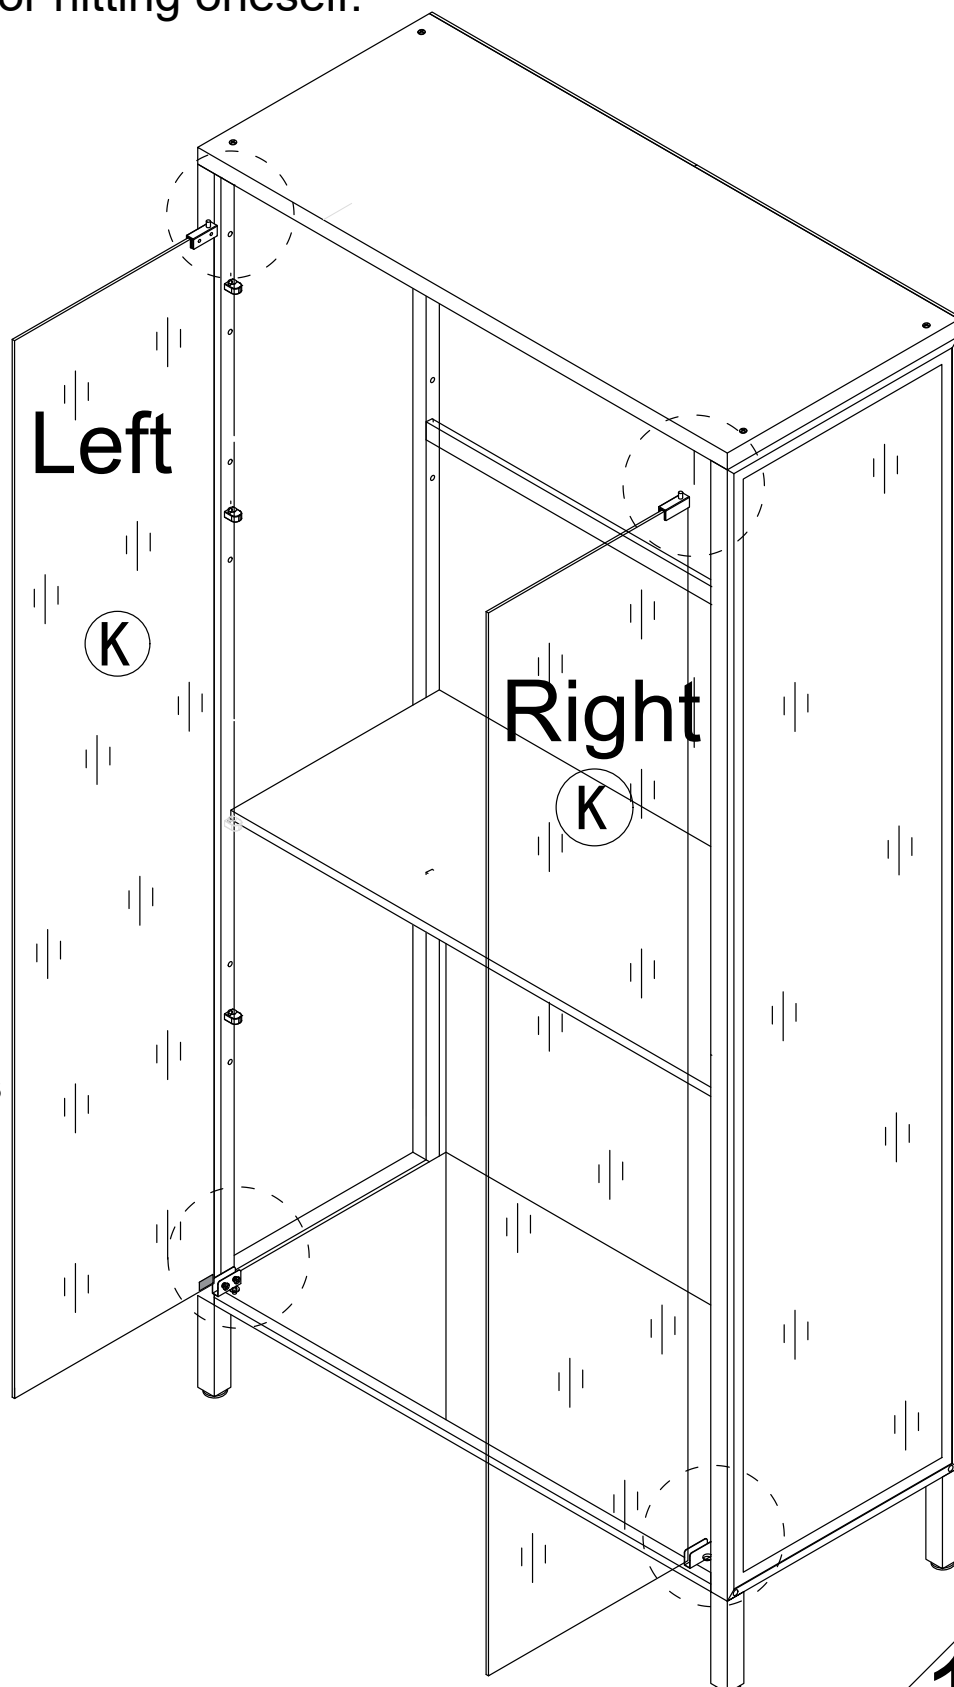


Step 18

3


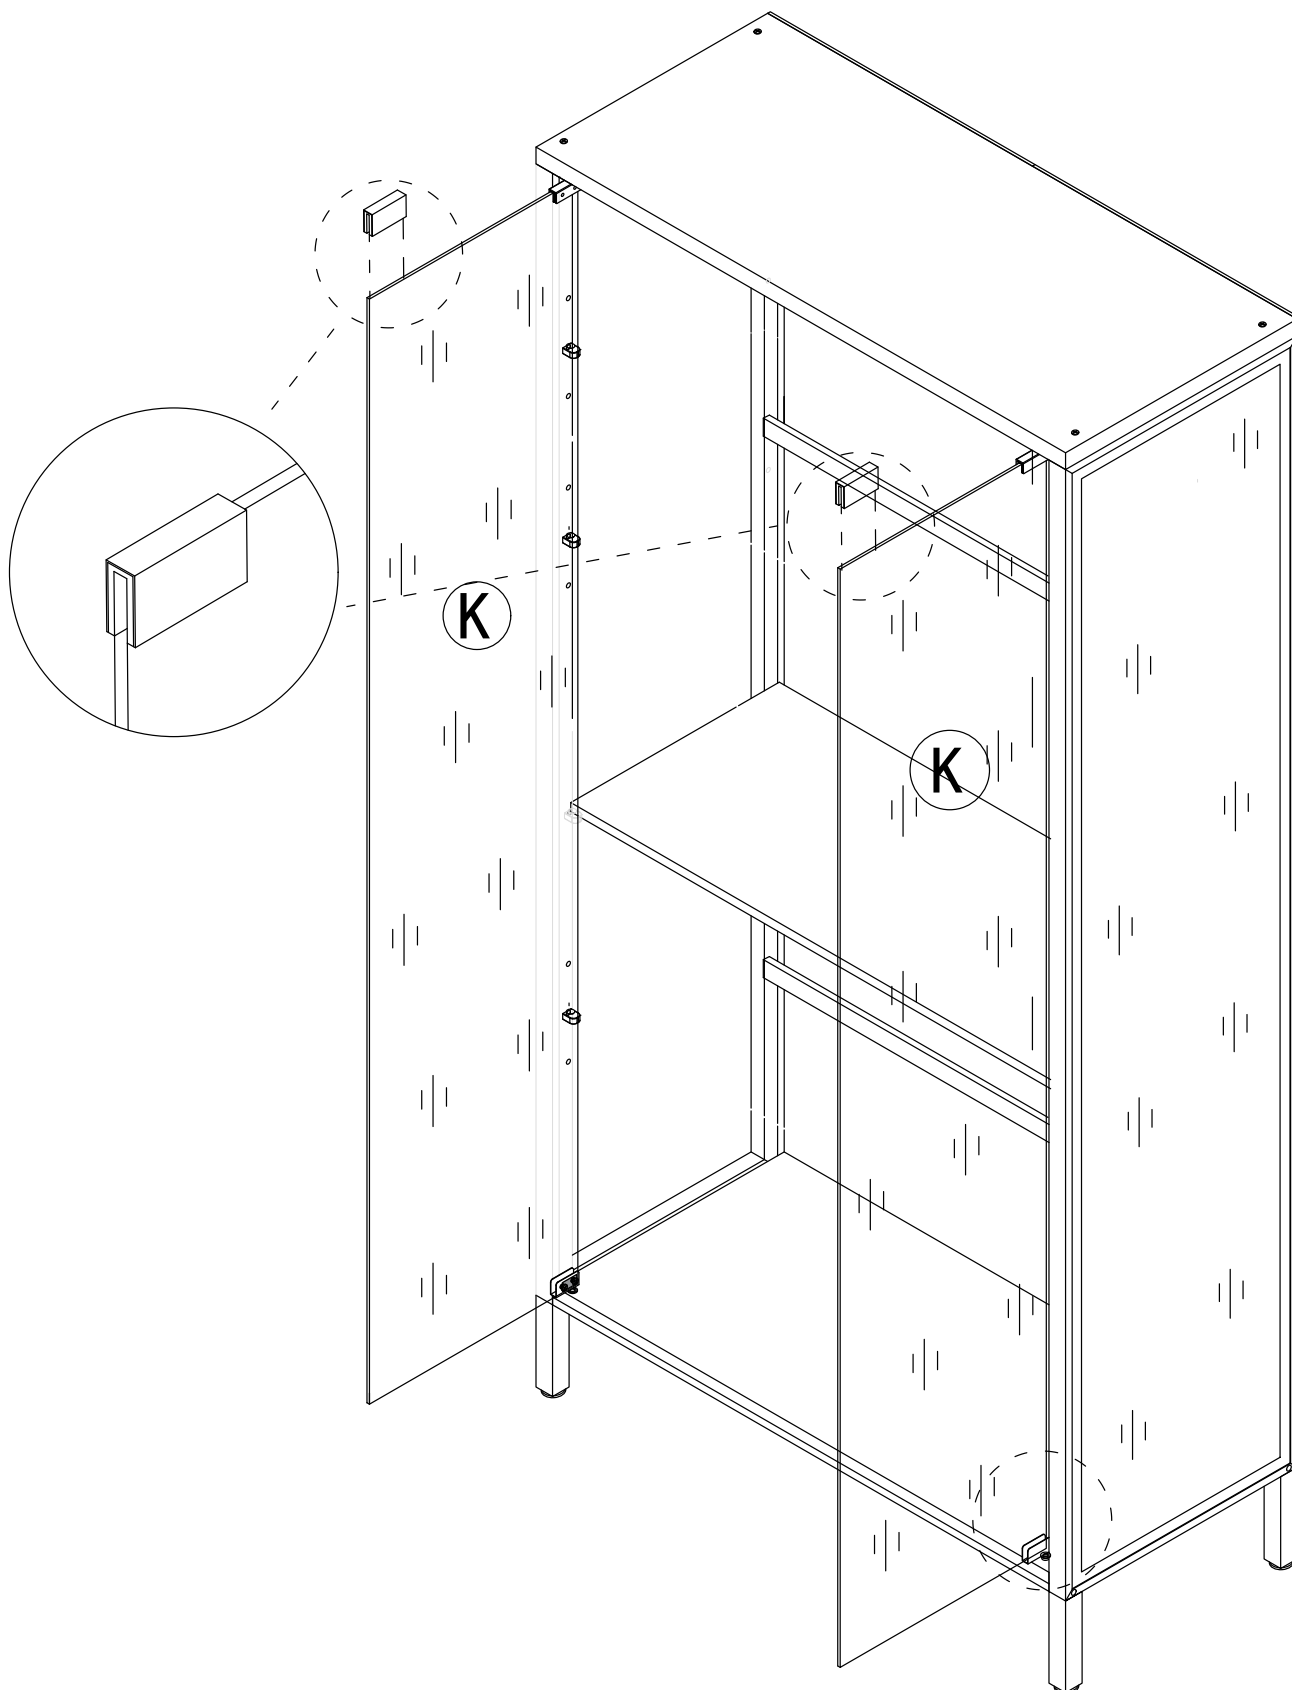
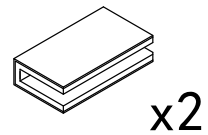


Step 19


9




x1

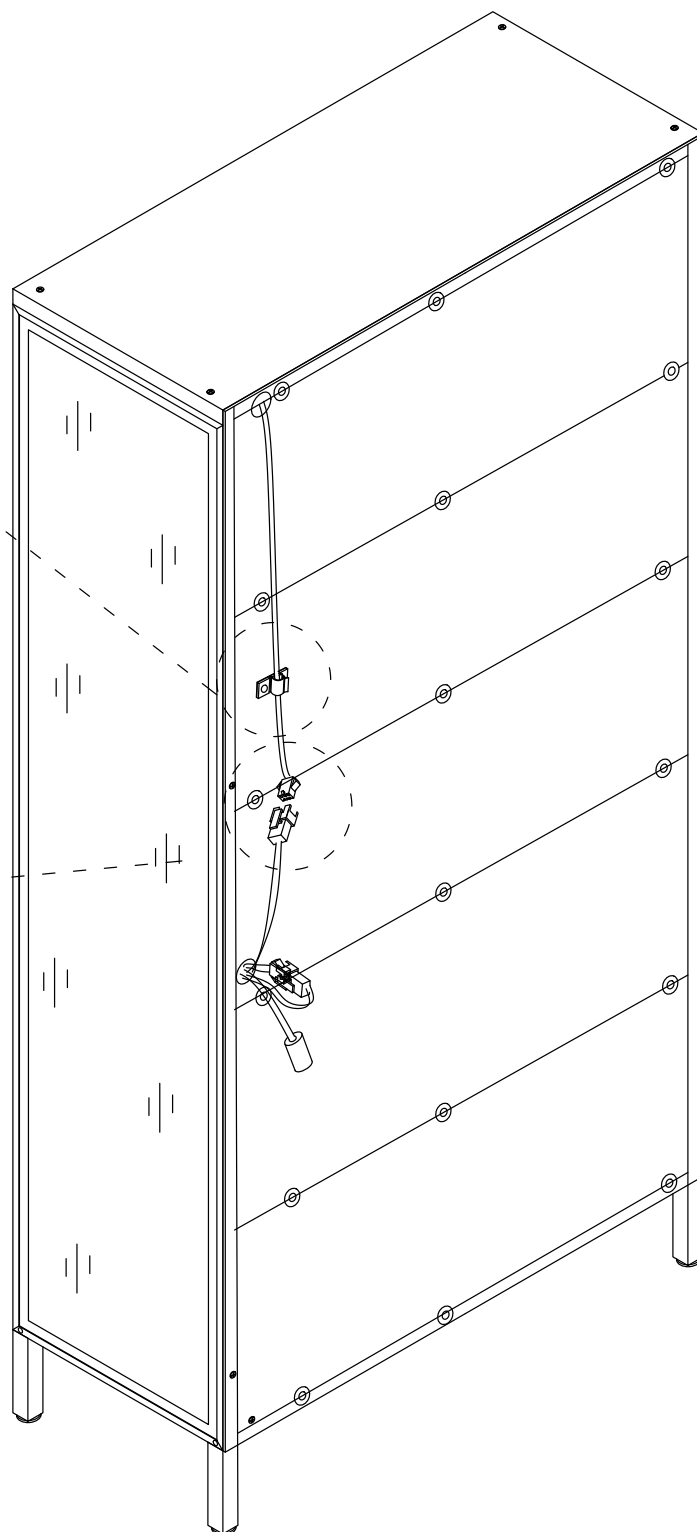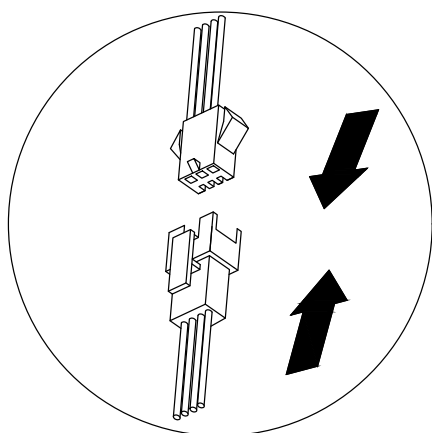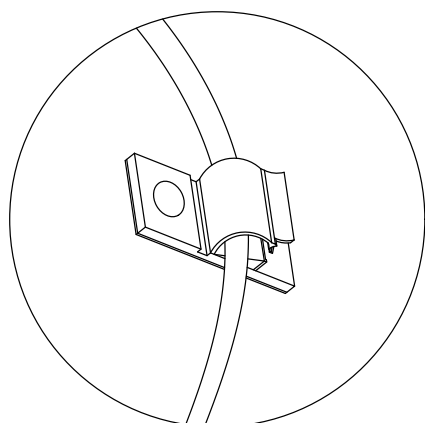

Step 20

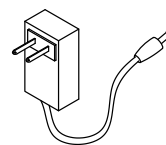


x1

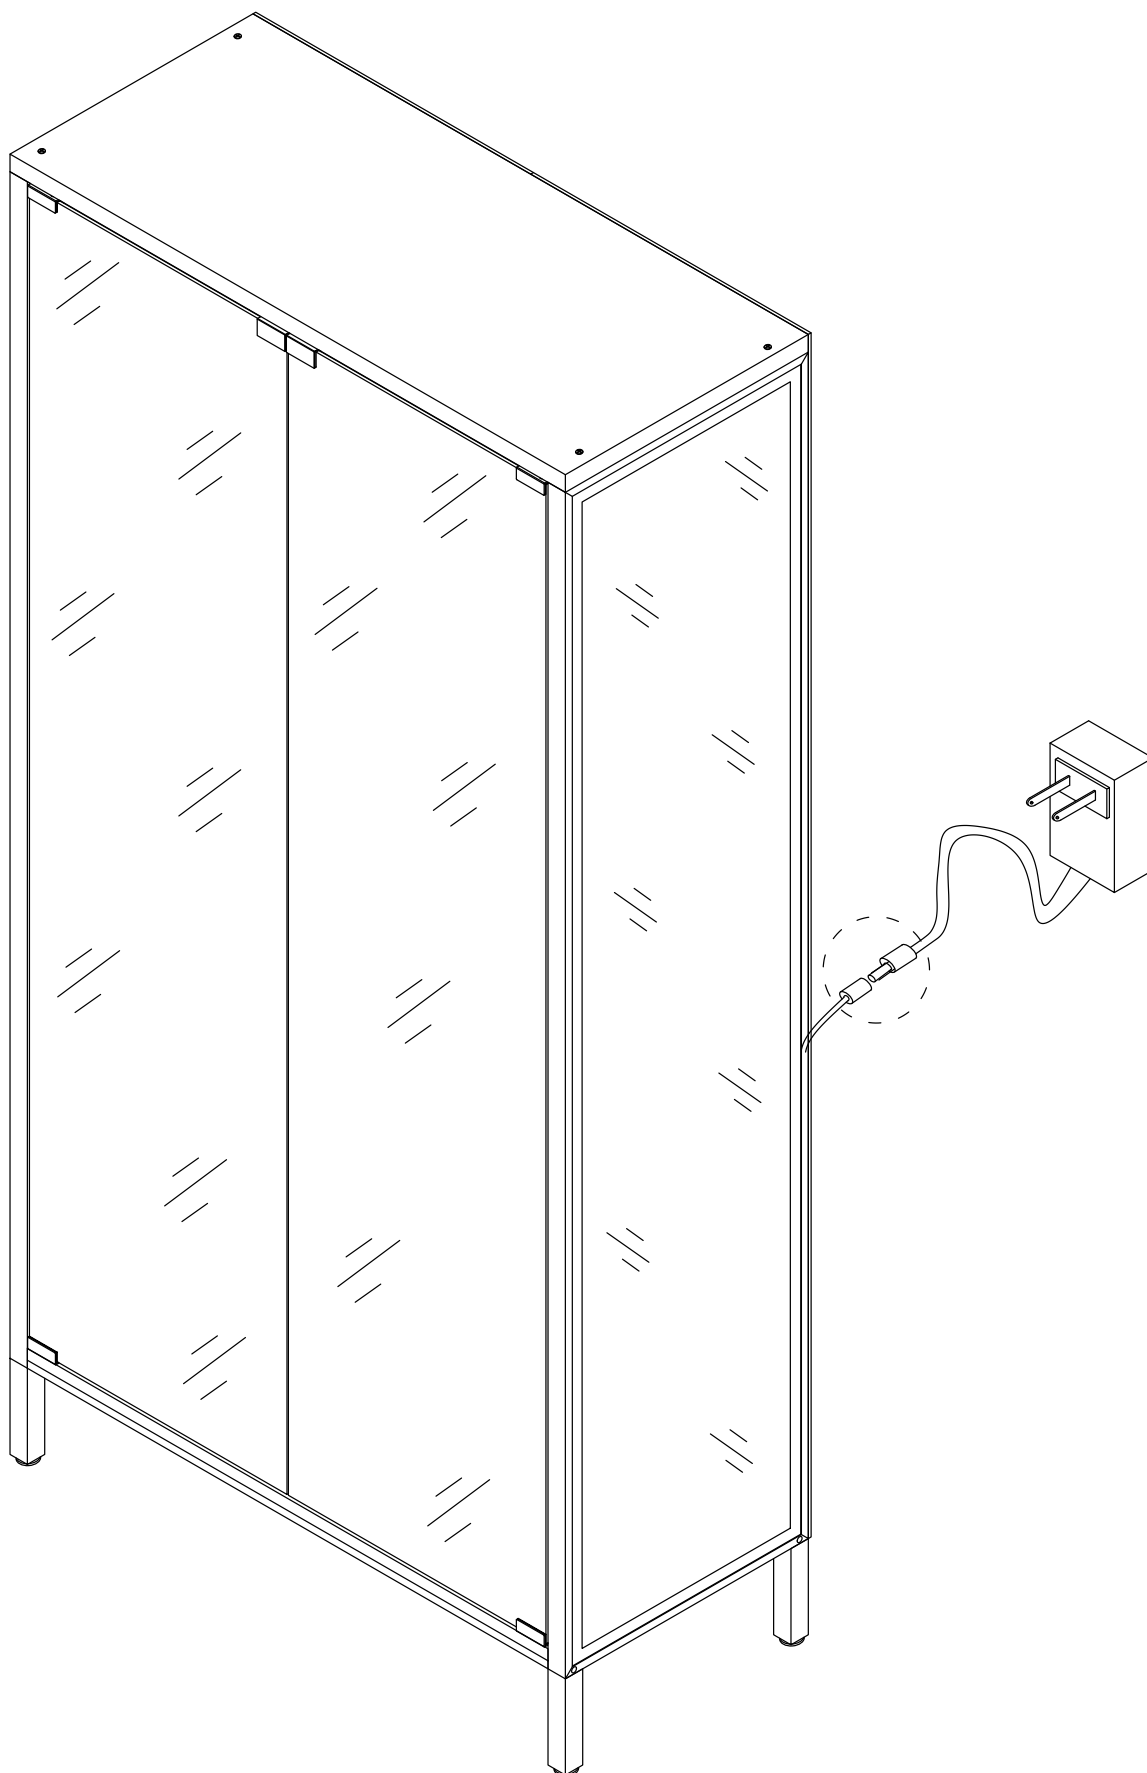


Balance can be adjusted by regulating the bottom adjustment feet.

Step 21

8



x2




x2




x2

Install as required

3.5x14mm

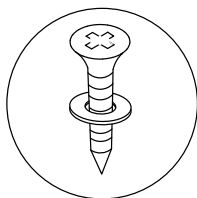


Install the anti fall hardware on the cabinet as shown in the picture first

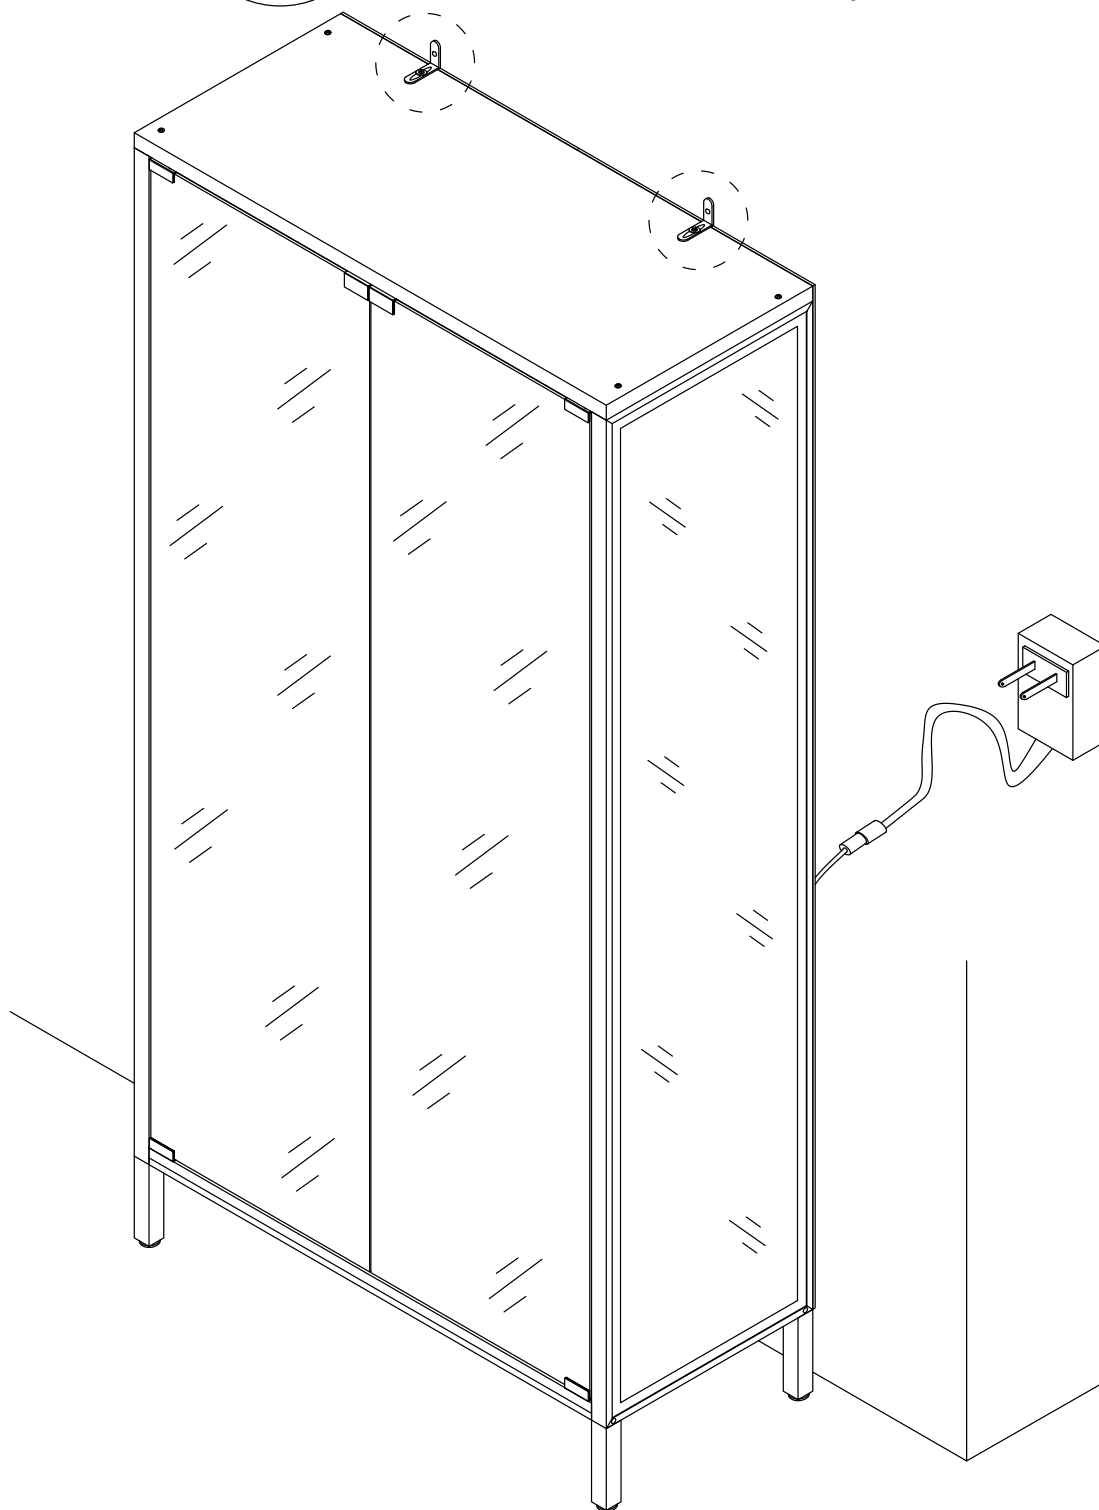

Step 22





8

 x2

 x2  x2

Drill the hole with an electric drill
and punch in the colloidal particles

Wall Mount

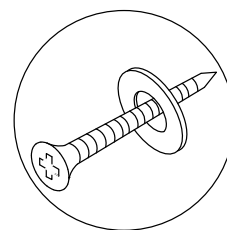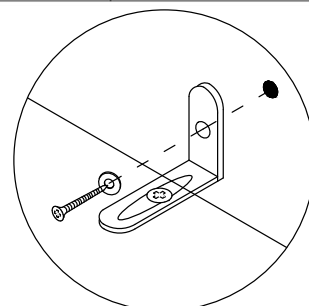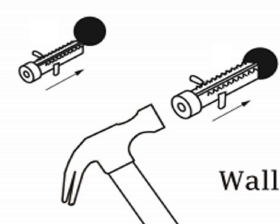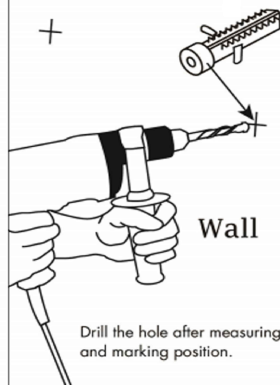


4x45mm

Fix the dressing
table to the wall

Step 23

Insert the glass shelf at an angle.

Insert the glass shelf at an angle.

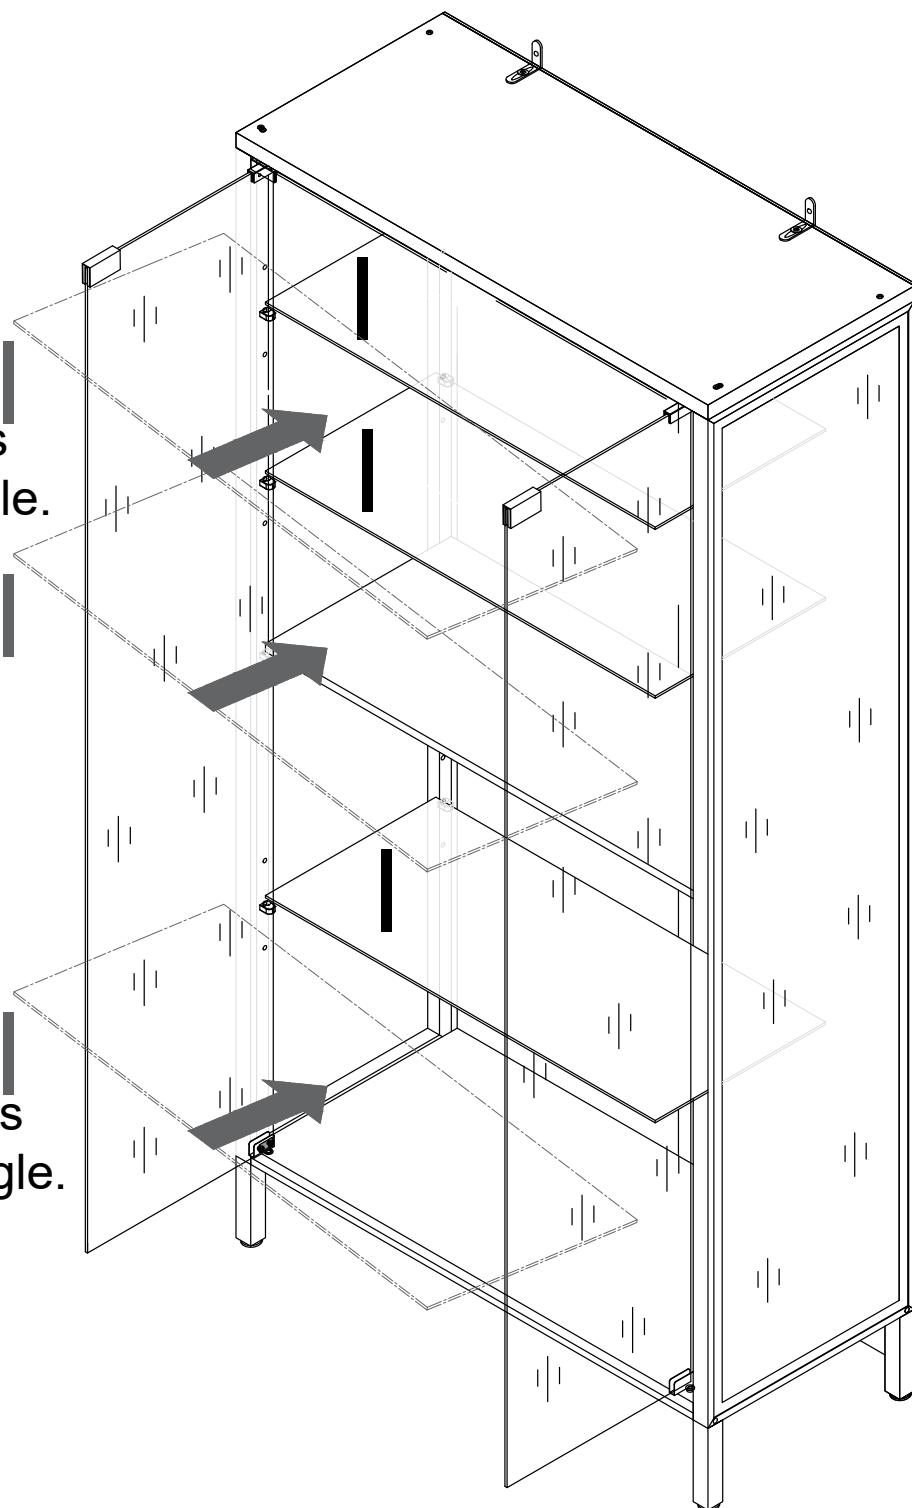


User's Guide

Thank you for purchasing this product. To use this product, please plug it into a 12V DC power supply. Please use if the product works normally after connecting to power.

Introduction

The box is an intelligent controller with 2 touch buttons. It can turn ON/OFF the light, change light colors, and adjust the light luminance.

Product Show

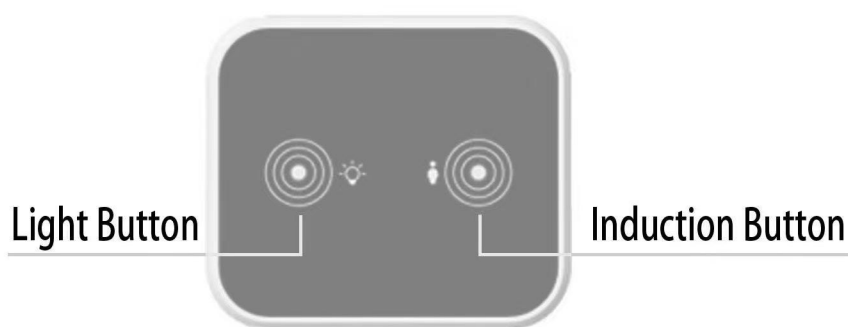

ATTENTION PLEASE

1. If there is no touch response suddenly, Re-plug the power to reset the touch static electricity.
2. If bubbles appear on the panel, remove the protective film.

Operation



This touch button is used to turn on/off, change colors, and adjust brightness.

A. Short touch -> lighting on -> short touch -> change light color -> short touch -> change light color -> short touch -> lighting off. B. Long touch -> adjust the luminance



This touch button is used to turn on/off the induction function.

A. Short touch to turn on the induction function. It can auto-turn on the light when people are close to the controller in 1 meters. It can auto power off the light when the body is far away from the controller after 30 seconds.

B. Long touch to turn off the induction function.

C. Note: When you touch the light button to change the light modes, the induction function will automatically turn off. It is best to turn on this function after selecting the light color and adjusting the brightness you want.