


Towel warmers




Size

Hidden Electric Towel Rack

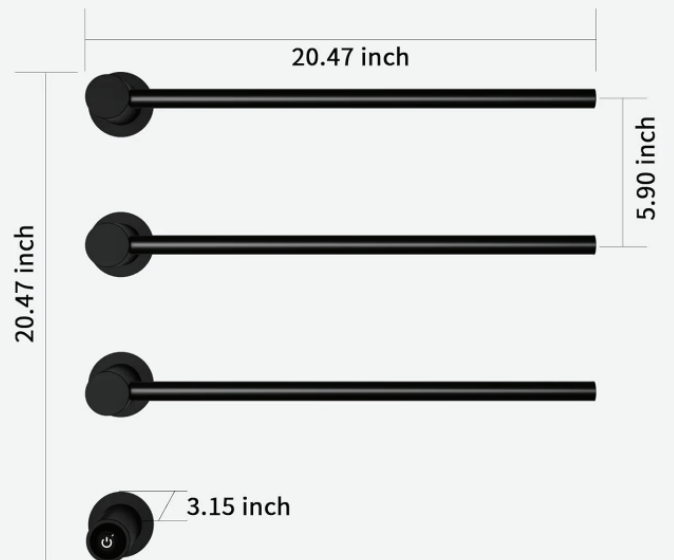

Product Dimension

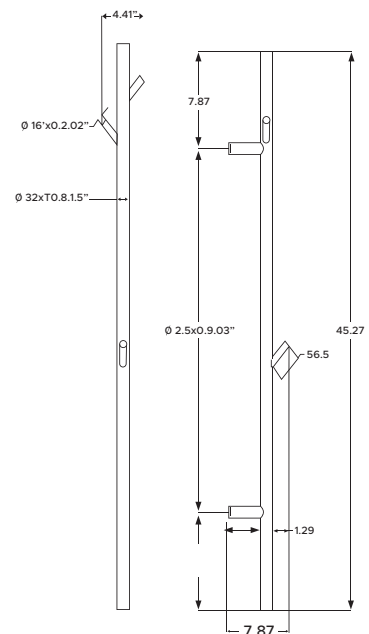

This authorizes the application of the Certification Mark(s) shown below to the models described in the Product(s) Covered section when made in accordance with the conditions set forth in the Certification Agreement and Listing Report. This authorization also applies to multiple listee model(s) identified on the correlation page of the Listing Report.

This document is the property of Intertek Testing Services and is not transferable. The certification mark(s) may be applied only at the location of the Party Authorized To Apply Mark.

Applicant:	FOSHAN SAI MEI TE SANITARY WARE CO., LTD	Manufacturer:	FOSHAN SAI MEI TE SANITARY WARE CO., LTD
Address:	Donglian shichen development area, Danzao Town Nanhai District, Foshan, Guangdong	Address:	Donglian shichen development area, Danzao Town Nanhai District, Foshan, Guangdong
Country:	China	Country:	China
Party Authorized To Apply Mark:	Same as Manufacturer		
Report Issuing Office:	Intertek Testing Services Zhejiang Ltd. Hangzhou Branch		

Control Number: 5022407

Authorized by: _____

for L. Matthew Snyder, Certification Manager



This document supersedes all previous Authorizations to Mark for the noted Report Number.

This Authorization to Mark is for the exclusive use of Intertek's Client and is provided pursuant to the Certification agreement between Intertek and its Client. Intertek's responsibility and liability are limited to the terms and conditions of this agreement. Intertek assumes no liability to any party, other than to the Client in accordance with the agreement, for any loss, expense or damage occasioned by the use of this Authorization to Mark. Only the Client is authorized to permit copying or distribution of this Authorization to Mark and then only in its entirety. Use of Intertek's Certification mark is restricted to the conditions laid out in the agreement and in this Authorization to Mark. Any further use of the Intertek name for the sale or advertisement of the tested material, product or service must first be approved in writing by Intertek. Initial Factory Assessments and Follow up Services are for the purpose of assuring appropriate usage of the Certification mark in accordance with the agreement, they are not for the purposes of production quality control and do not relieve the Client of their obligations in this respect.

Intertek Testing Services NA Inc.
545 East Algonquin Road, Arlington Heights, IL 60005
Telephone 800-345-3851 or 847-439-5667 Fax 312-283-1672

Standard(s):	Electric Heating Appliances [UL 499:2014 Ed.14+R:21May2021]
	Safety of Household and Similar Appliances - Part 1: General Requirements [CSA C22.2#60335-1:2016 Ed.2]
	Household and Similar Electrical Appliances - Safety - Part 2-43: Particular Requirements for Clothes Dryers and Towel Rails (R2018) [CSA E60335-2-43:2013 Ed.3]
Product:	Towel Warmer
Models:	9001, 9002, 9005, 9006, 9017, 9018, 9030, 9039, 9040, 9045, SC06

1, Plug-in




2, hard-wired



Accessory A: Wall plug

Accessory B: Self-tapping screws

Accessories C: Horseshoe

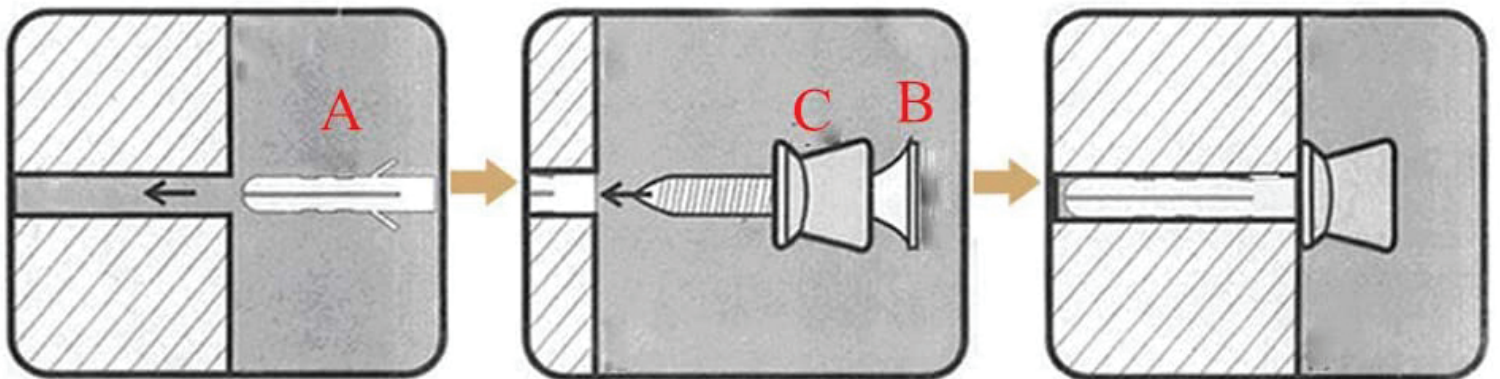

Installation process:

1. As shown in the figure, nail the wall plug (accessory A) into the hole in the direction indicated by the arrow, flush with the wall.
2. Pass the "self-tapping screws" (accessory B) through the center hole of the "horseshoe" (accessory C) and secure it to the wall plug in the direction of the arrow.
3. Install the towel holder support foot on the horseshoe and tighten the screws with the hex wrench to tighten it completely on the wall.

Introduction

Towel warmers were designed with simplicity in mind. They are constructed from high-quality 304 stainless steel and expertly welded in unique designs, making them safe and easy to use. Most of our models require hard-wiring to a power source, except for the plug-in models, and do not require a separate control. If your goal is to enjoy a warm towel after your bath or shower, we recommend wiring it to your light switch. By the time you finish, your towel will be beautifully warm. If your intention is to dry towels more quickly in a busy household or to prevent moldy towels in poorly ventilated spaces, consider wiring it to a separate switch that you can keep on independently from the lights or fan. When integrating a towel warmer with a floor heating system, you can conveniently connect the device to your 4iE® Smart WiFi thermostat. Be sure to double-check the amperage draw of your existing system before combining both devices on the same controller. If you are uncertain, please consult a professional installer or electrician. Mounting the towel warmer is straightforward with the included instructions. Make sure to read this manual for the dos and don'ts, and seek assistance from qualified tradespeople when necessary.

First and foremost

First and foremost, ensure that your installer conducts tests before installation. Carefully unpack your towel warmer and verify that all components are included for a successful installation. Before proceeding, use an ohmmeter or alligator tester to check the resistance of the heating cable coming from the towel warmer.



Make sure the towel warmer holder is bolted behind the wall studs and make a hole through the stud for the wire to go through as the photo attached demonstrates for reference.

Please note that this appliance must be installed in accordance with the relevant wiring rules and regulations, including those covering the installation of appliances and accessories in "wet areas" such as bathrooms, showers, and laundries. Installations should comply with the National and Local Electrical Codes applicable in both the US and Canada. In simple terms, ensure that all wiring connections are made safely and according to code. If you are unsure, it is advisable to consult a professional electrician. Some areas may require the use of rigid or flexible conduit, and most areas require all connections to be made in an approved electrical box. Always follow the provided instructions and hire licensed help when required to comply with your local regulations. Note: - This appliance requires a ground connection. - An accessible all-pole disconnection switch is necessary in the fixed wiring. - The heated towel warmer should be mounted vertically, with the cord exiting from the base, and it must be positioned at least 600 mm (2 feet) above the floor

Positioning Your Towel Warmer

1. Select a Suitable Location: Choose a position to mount the towel rail that is at least 600 mm (2 feet) above the floor and 300 mm (1 foot) away from any permanent fixtures in the surrounding area, such as the toilet or vanity.

2. Locate the Stud: The left side of your towel warmer must be anchored into a wall stud. Use a stud finder to locate the 2x4 behind your drywall and mark its position with a pencil.

3. Hold the Towel Warmer Level: Position the towel warmer at the desired height, ensuring it is level, and align it with the left-side stud.

4. Mark the Positions: Using a pencil, draw around the end of each tube to mark their positions on the wall. Ensure your marks are level and square, as these will guide where you secure the device to the wall.

5. Secure the Mounting Inserts: Screw the mounting inserts securely into the wall at the marked locations.

6. Attach the Towel Warmer: Gradually press the towel warmer onto the mounting inserts, checking that each leg is aligned with the inserts before applying any force. Finally, mount the towel warmer using a single grub screw on each of the four brackets.