















INSTRUCTION MANUAL



Please retain the packaging for a minimum of 30 days or until you are completely satisfied with your product. Charges may apply to replace the packaging if not retained for return purposes.


Instructions side 1

2 people recommended
for assembly

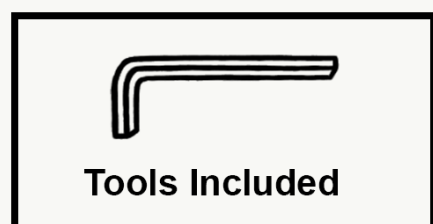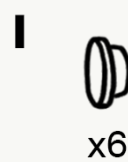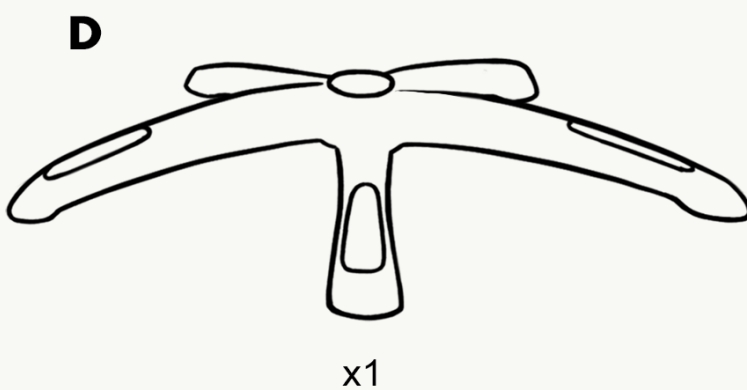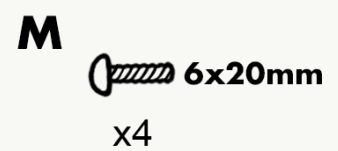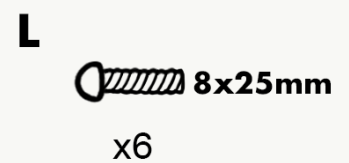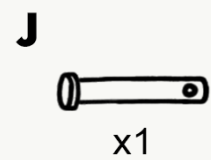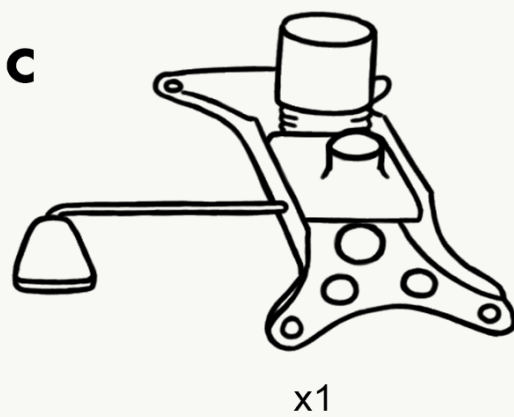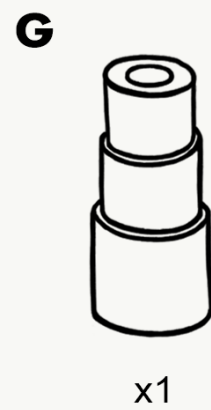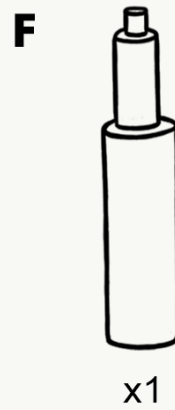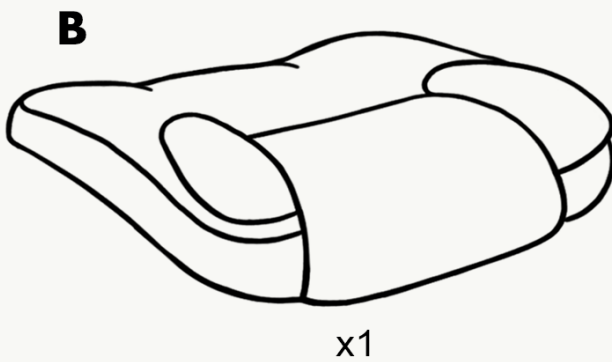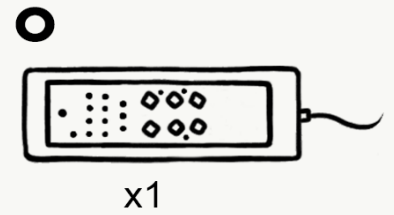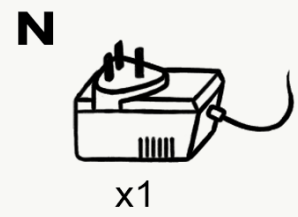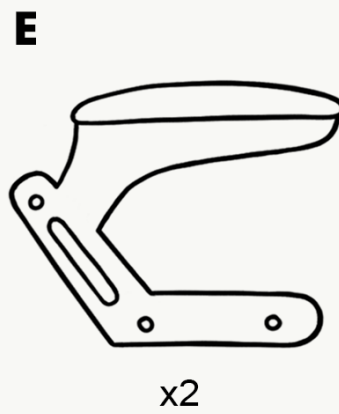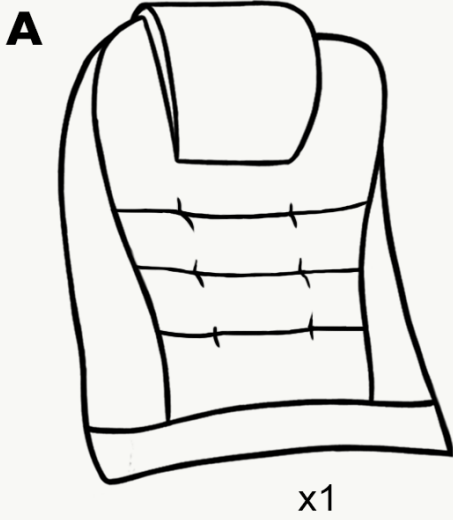


1

Insert gas lift (F) into star base (D) and cover with telescopic cover (G). Pop wheels (H) into sockets in D

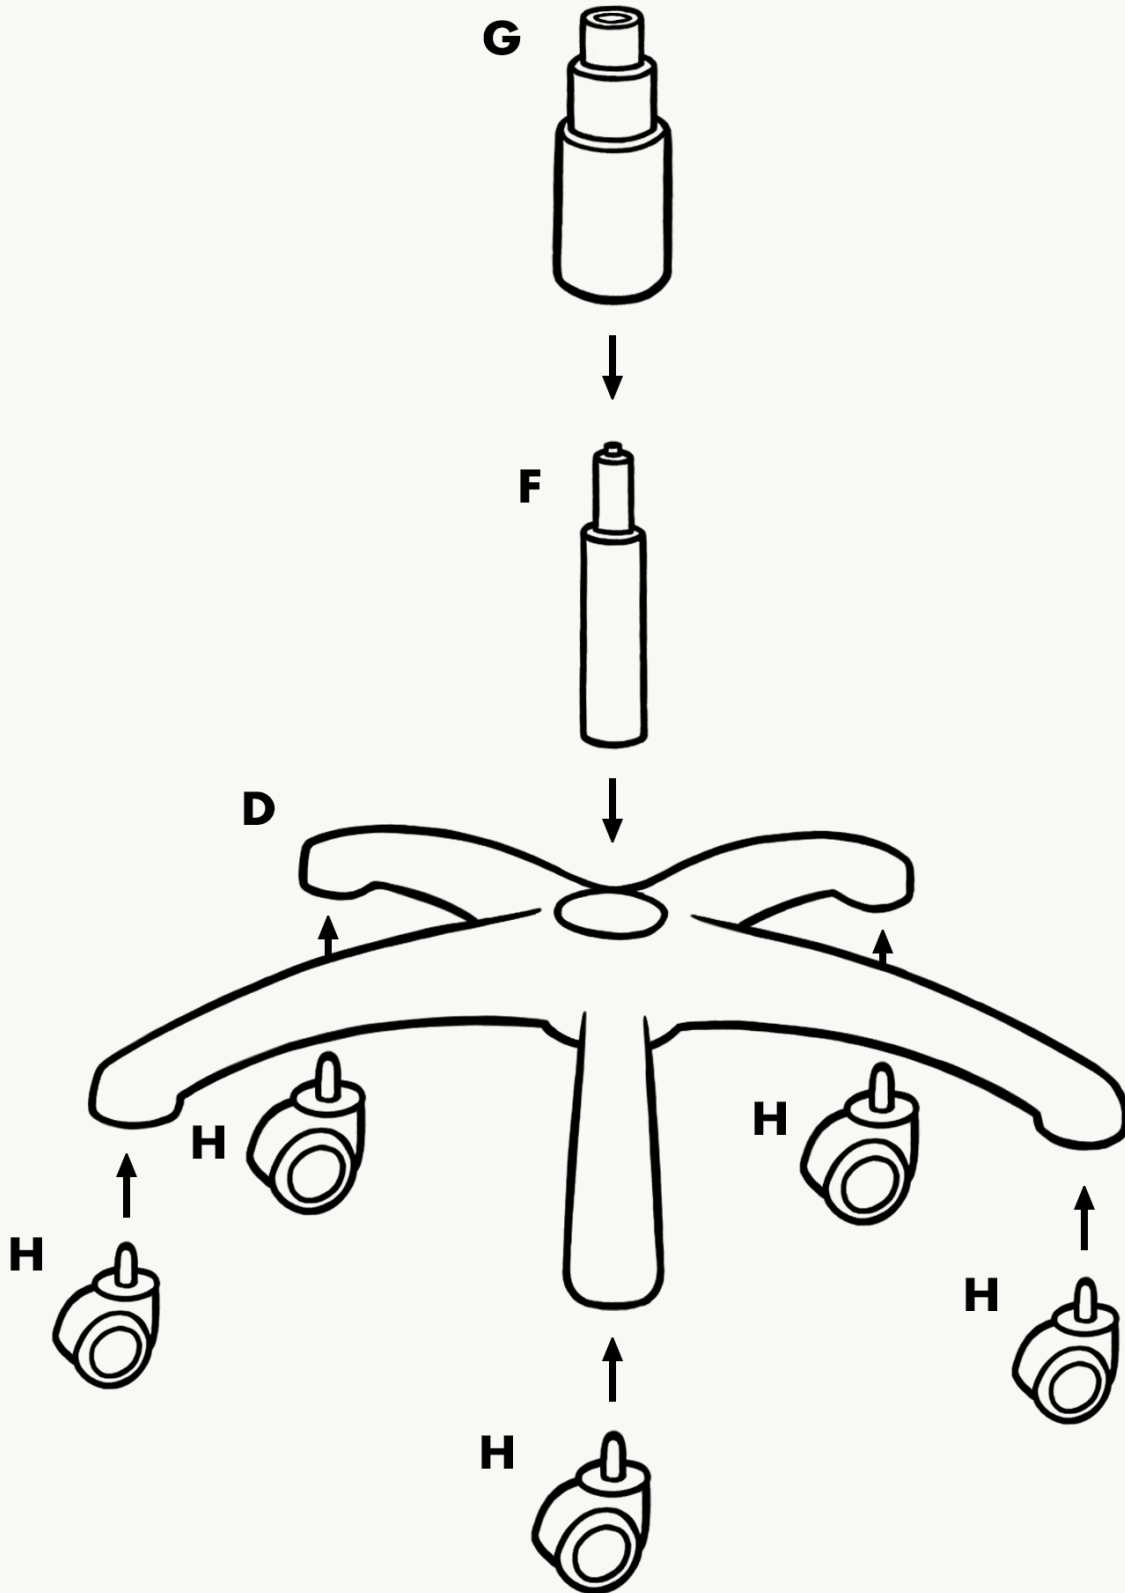


Instructions side 2


- 2** Screw armrests (E) halfway onto chair back (A) and seat (B). Tighten fully once all screws are in. Then attach screw covers (I)

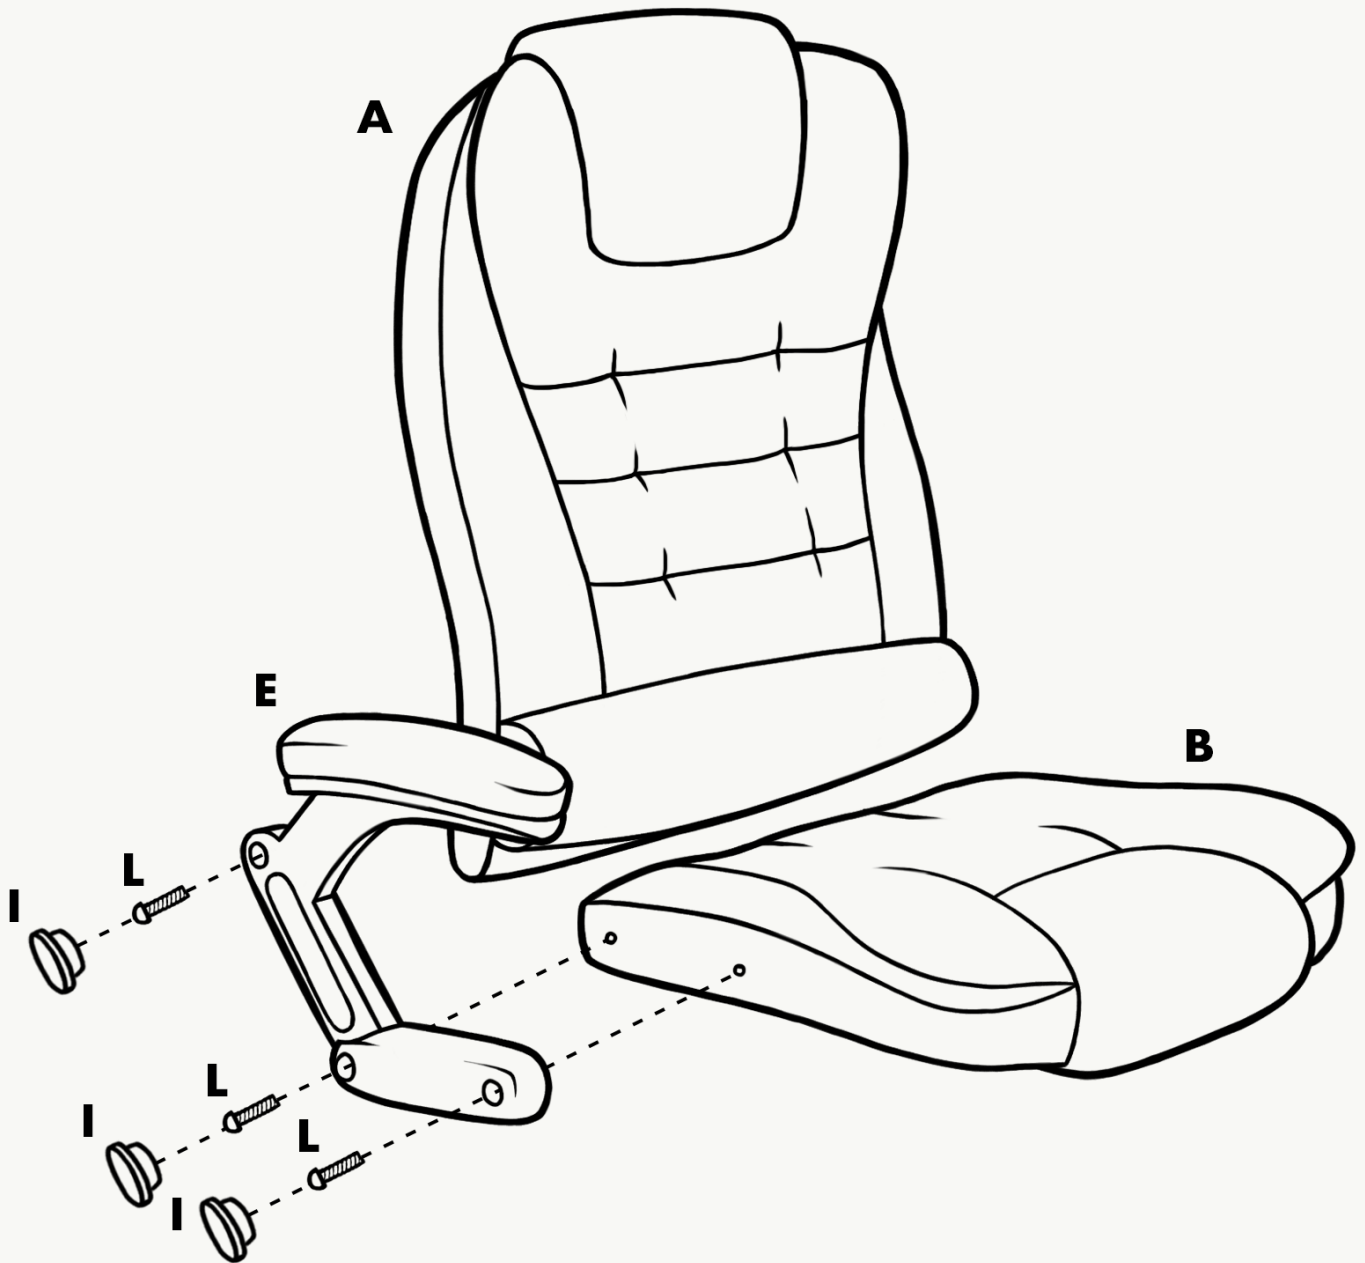

- 3** Screw metal plate (C) onto bottom of seat (B)

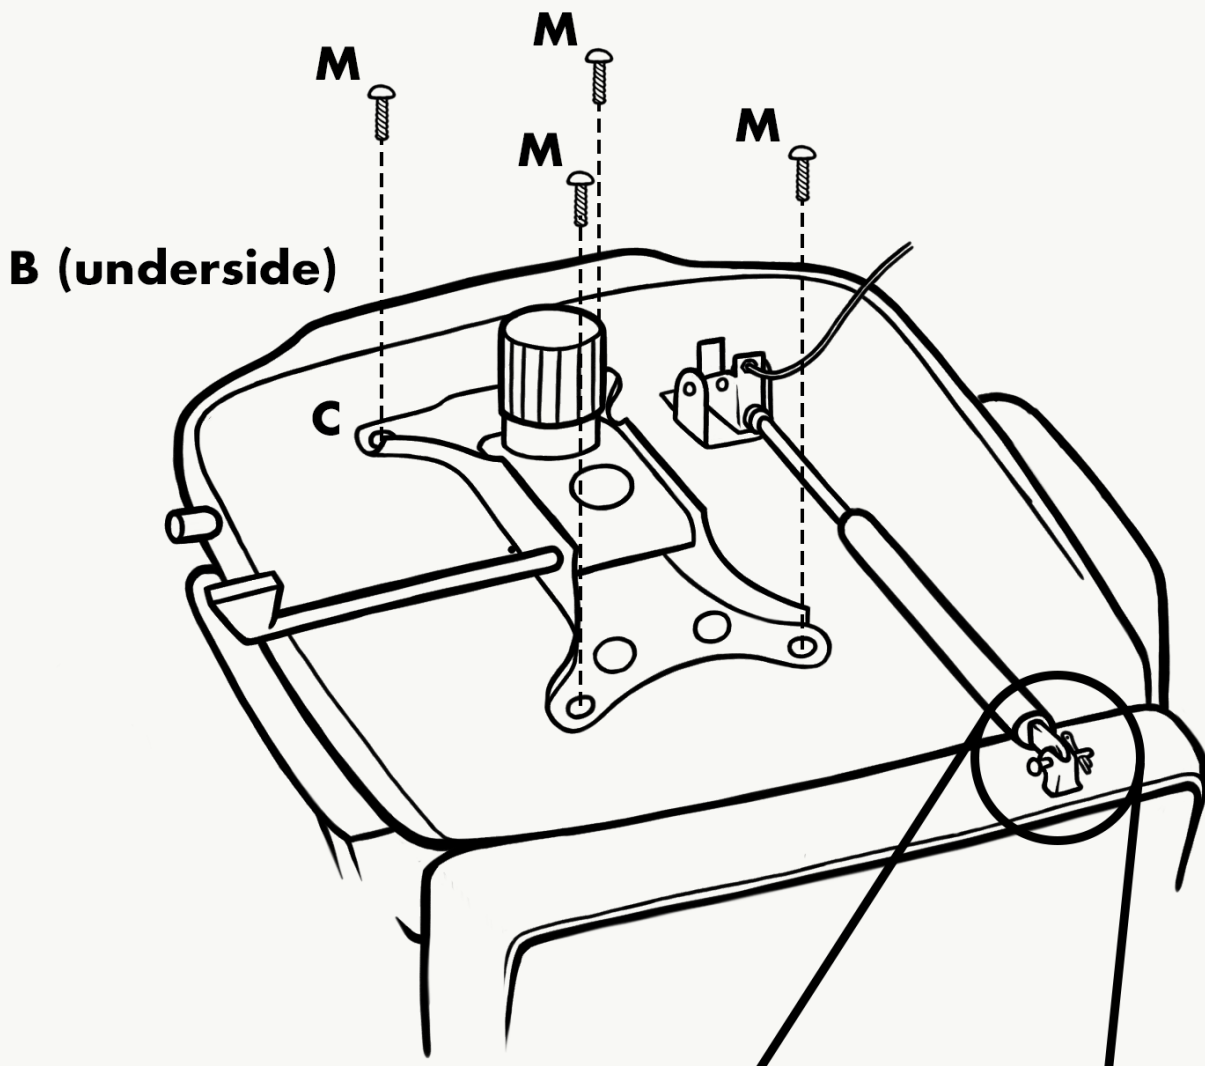

- 4** Insert J through the holes in recline piston and back support. Then insert split pin (K) through hole in J and open split pin

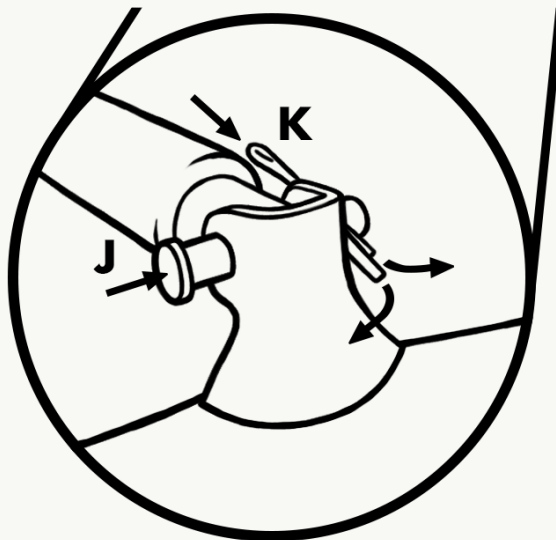


Instructions side 3


- 5** Plug white cables together. Plug small cable into charging cable (N) and large cable into remote (O)



WARNING: Cables must be attached properly or malfunctions may occur

- 6** Insert top of gas lift (F) into hole in metal plate (C)

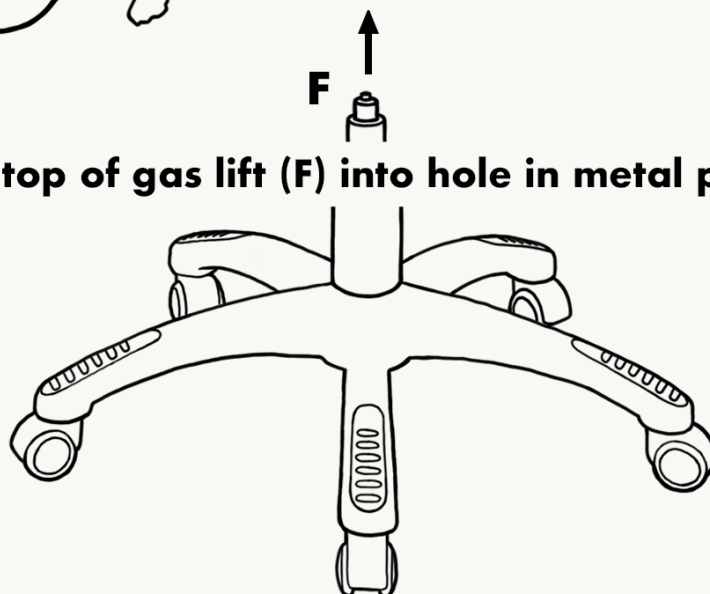

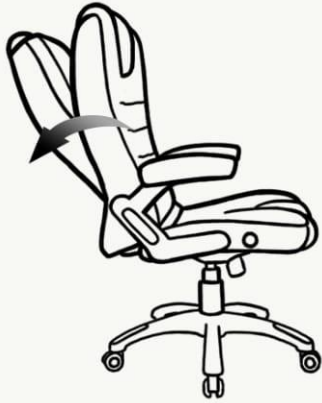

Recline function

Make sure the lever is pushed in.
Push the button in and lean back firmly



Height adjustment

To raise and lower the seat, lift the lever.



Tilt function

Pull the lever out and lean back

Massage functions

9 different massage modes: rapid, alternating, pulse, vertical, rocking, top massage, extended upward strokes, full body extended, and all-over

Massage strength: low, medium or high

Massage locations: neck, back, waist, and thighs

Massage duration: 15 or 30 minutes (30 by default)

Automatic power-off

CE certification

All the wires are standard power cables—easy to install and change.

Dimensions

Back height: 75cm

Seat width: 55cm

Seat depth: 53cm

Seat height: 45~55cm

Armrest height: 67~77cm

Armrest length: 27cm

Thank you for choosing us

If you are having difficulty with your product and you need support, please contact customerservice