


Assembly Instructions

Swivel counter stool

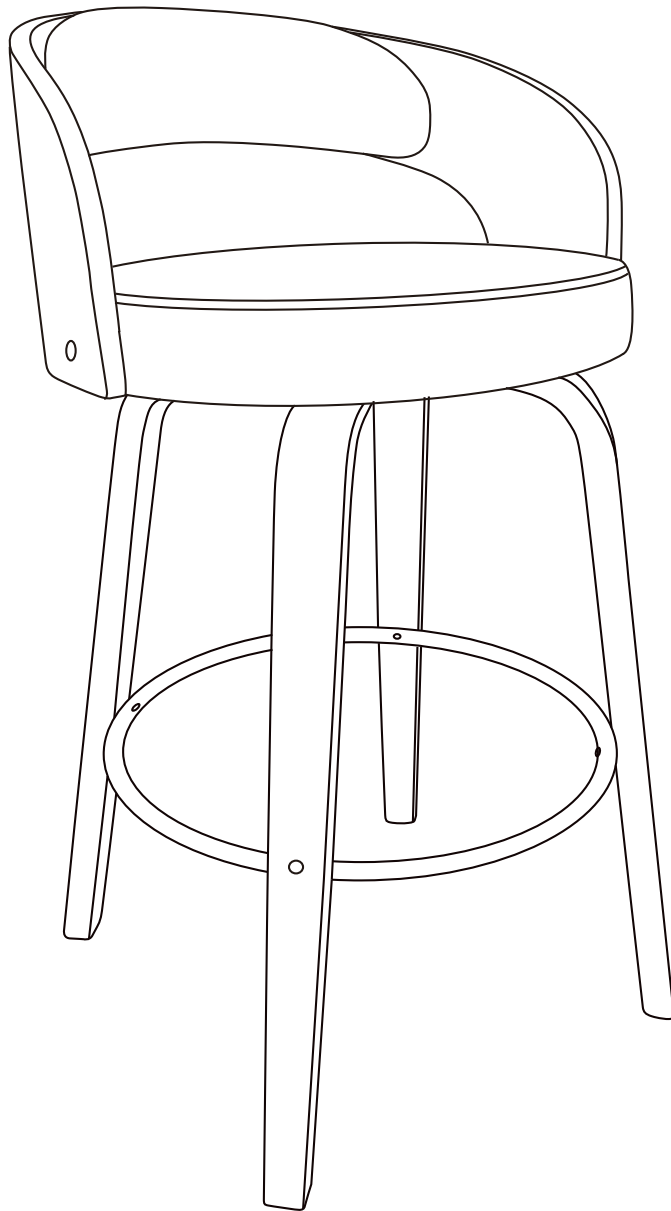

Before you begin

- 01** Check the parts and hardware before starting.
- 02** Use a clean, soft surface to protect the finish.
- 03** Keep short bolts F and long bolts G separate.
- 04** Start all bolts at each connection before tightening.
- 05** Use the supplied hex key. Do not overtighten.

ASSEMBLY OVERVIEW



Legs > Footrest > Swivel plate
Seat > Final tightening > Stability

ASSEMBLING A SET?




One stool is shown in the assembly steps. Repeat the steps for each stool in your set.

Check your parts


Match each part to its letter before you begin.

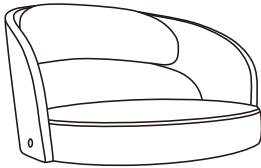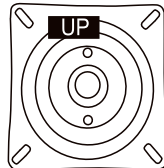A Seat assembly**x1****B Swivel plate**

UP marking shown

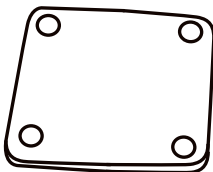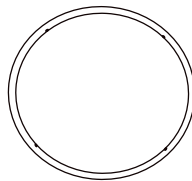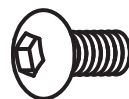x1**C Legs****x4****D Connecting plate****x1****E Footrest ring****x1****F Short bolts**


M6 x 20 mm

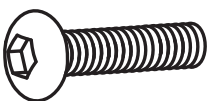x12**G Long bolts**

M6 x 30 mm

x4**H Hex key**

Assembly tool

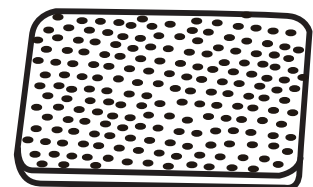x1**I Felt pads**

Use as needed

x10**BOLT REFERENCE**

F = short, 20 mm | G = long, 30 mm. The size label refers to bolt length, not the drawing scale.


1

Assemble the legs

Build the leg frame before attaching the footrest.

YOU WILL NEED

C x4 + D x1 | F x4 (M6 x 20 mm) | Tool: H

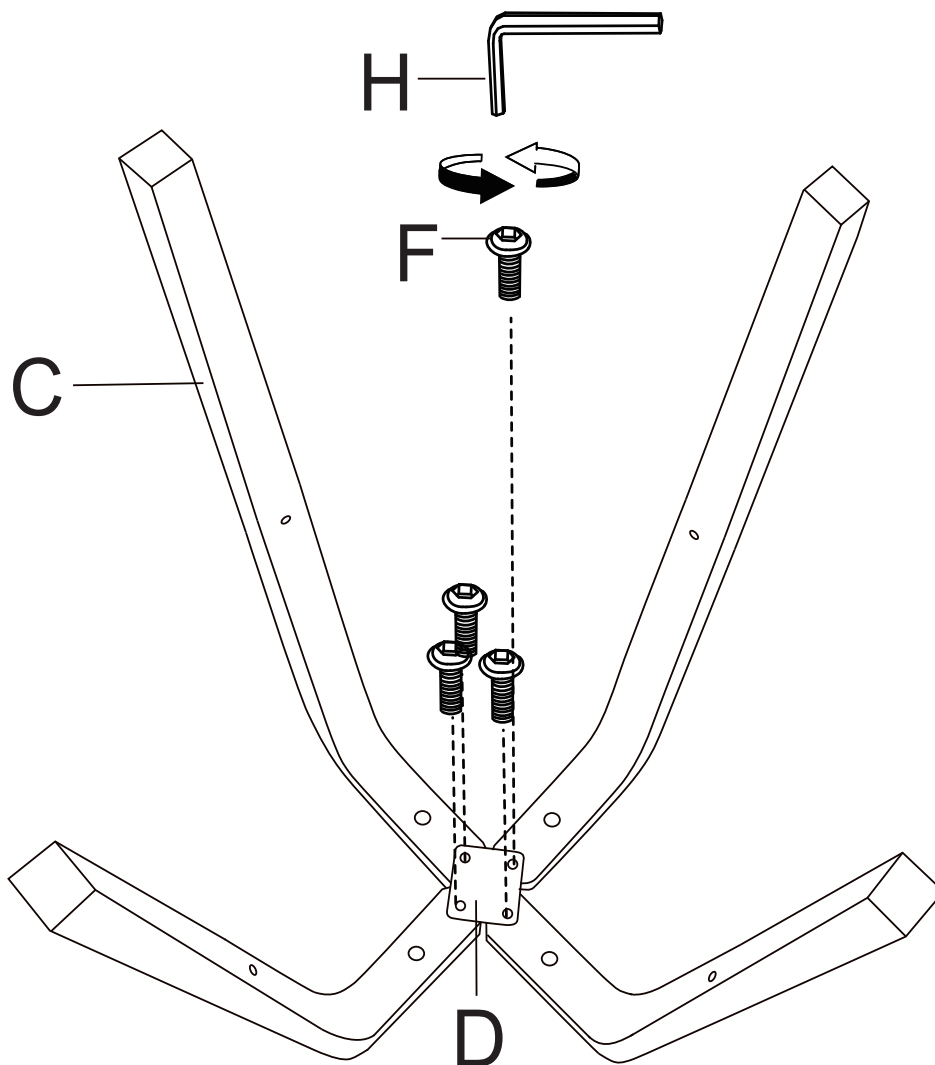

- 1 Arrange all four legs C as shown.
- 2 Position connecting plate D and start four short bolts F.
- 3 Leave these bolts loose enough to adjust the frame.

LEAVE LOOSE

These four bolts will be fully tightened in Step 5.

CHECK BEFORE YOU CONTINUE

All four legs are connected. Keep the frame adjustable; do not fully tighten yet.


2

Attach the footrest

Align the ring with all four legs.

YOU WILL NEED

E x1 | G x4 (M6 x 30 mm) | Tool: H

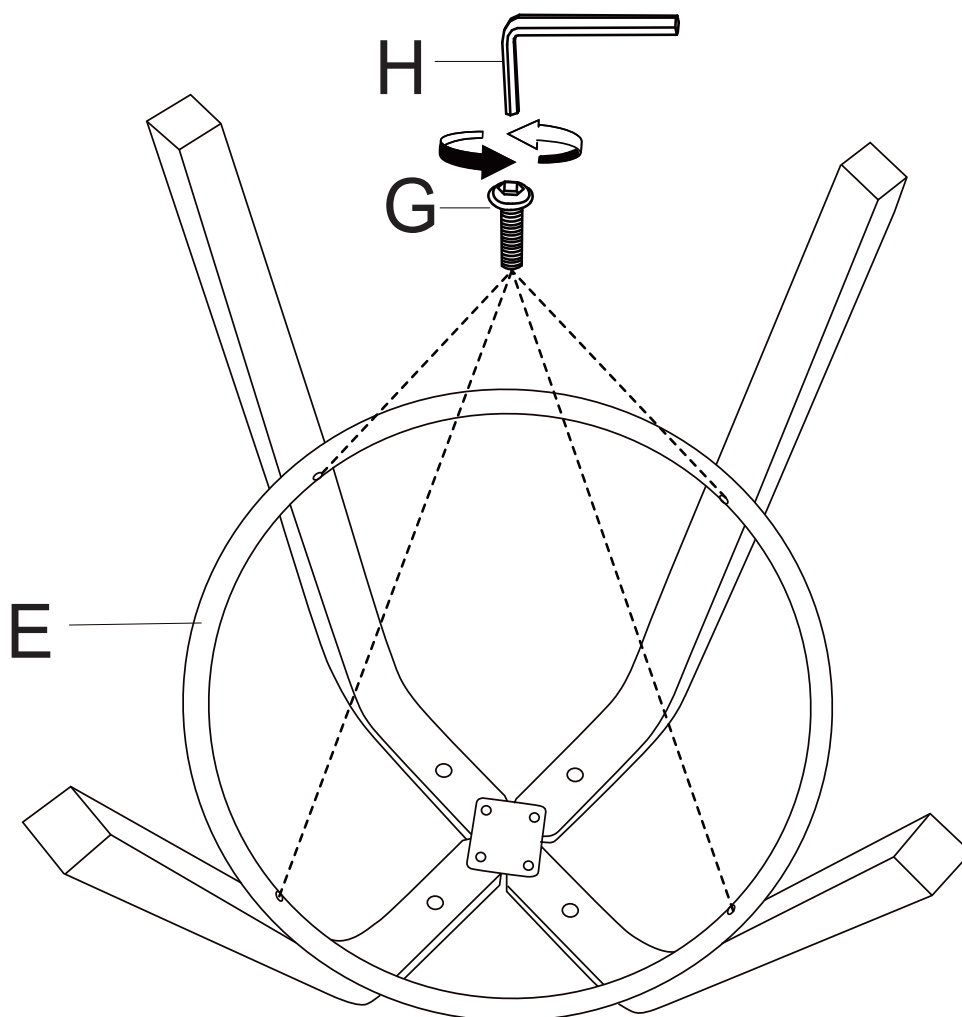

- 1 Align footrest ring E with the mounting holes in the legs.
- 2 Start one long bolt G at each of the four connections.
- 3 Keep all four bolts loose until Step 5.

LEAVE LOOSE

Use long bolts G here. Keep room to align all four connections.

CHECK BEFORE YOU CONTINUE

All four ring connections have a bolt started. If a hole does not align, adjust the loose frame.


3

Attach the swivel plate

Check the UP marking before fitting the plate.

YOU WILL NEED

B x1 | F x4 (M6 x 20 mm) | Tool: H

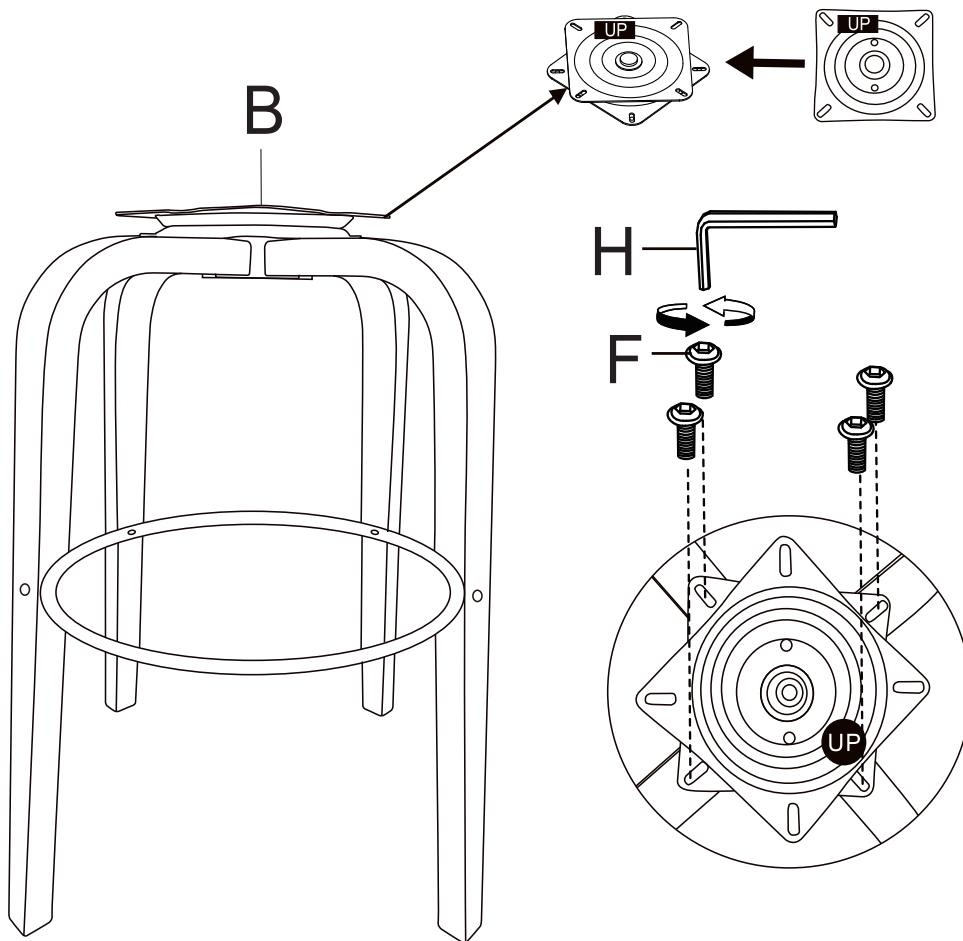

- 1 Place swivel plate B on the frame with UP facing the seat.
- 2 Rotate the two plates relative to each other to expose the mounting holes.
- 3 Start all four short bolts F, then tighten these four bolts securely.

UP FACES SEAT

The plate marked UP must face toward the seat assembly.

CHECK BEFORE YOU CONTINUE

The swivel plate is secured to the frame with four short bolts. Do not overtighten.


4

Attach the seat

Protect the seat and wood finish while the stool is upside down.

YOU WILL NEED

A x1 | F x4 (M6 x 20 mm) | Tool: H

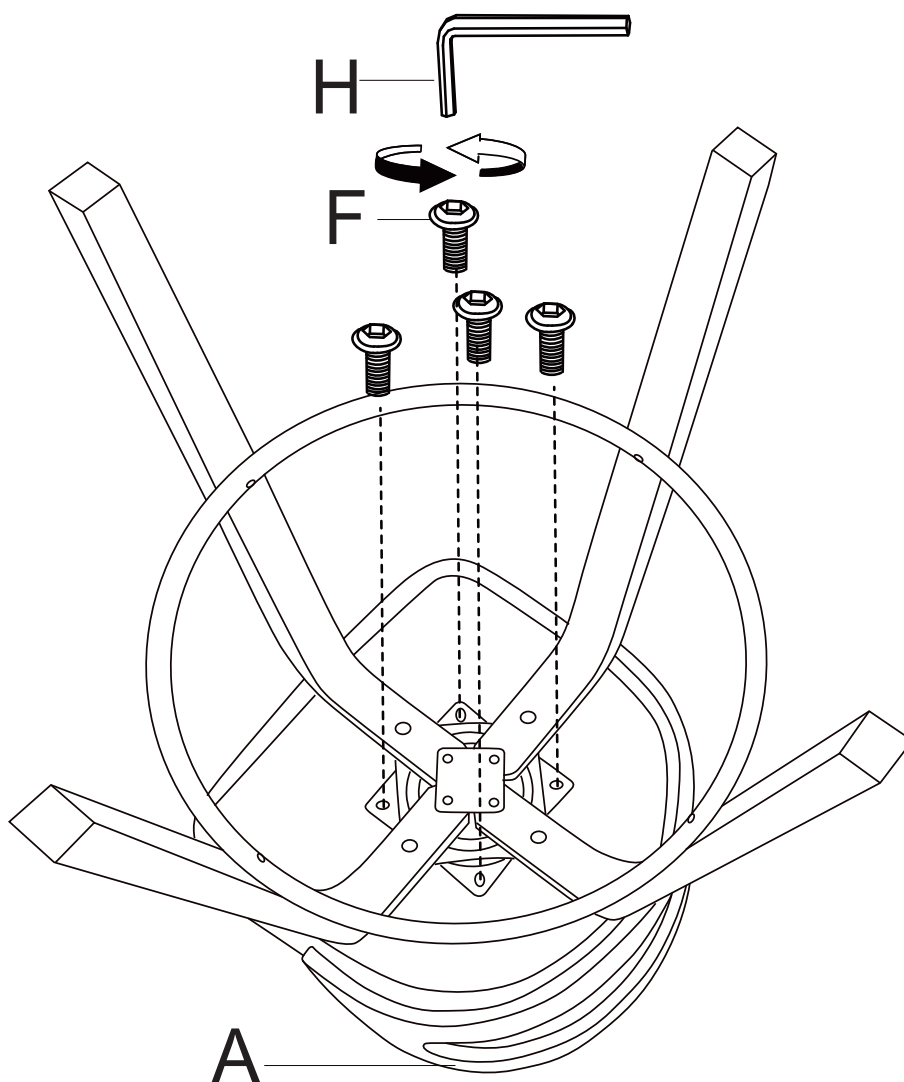

- 1 Place seat assembly A upside down on a clean, soft surface.
- 2 Turn the frame upside down and align the swivel plate with the seat mounting holes.
- 3 Start all four short bolts F, then tighten these four bolts securely.

TIGHTEN SECURELY

Tighten only after all four seat bolts are started correctly.

CHECK BEFORE YOU CONTINUE

The seat is attached with four short bolts. Keep the stool supported on the soft surface.


5

Secure the frame

Return to the connections left loose in Steps 1 and 2.

YOU WILL NEED

No new hardware | Tool: H

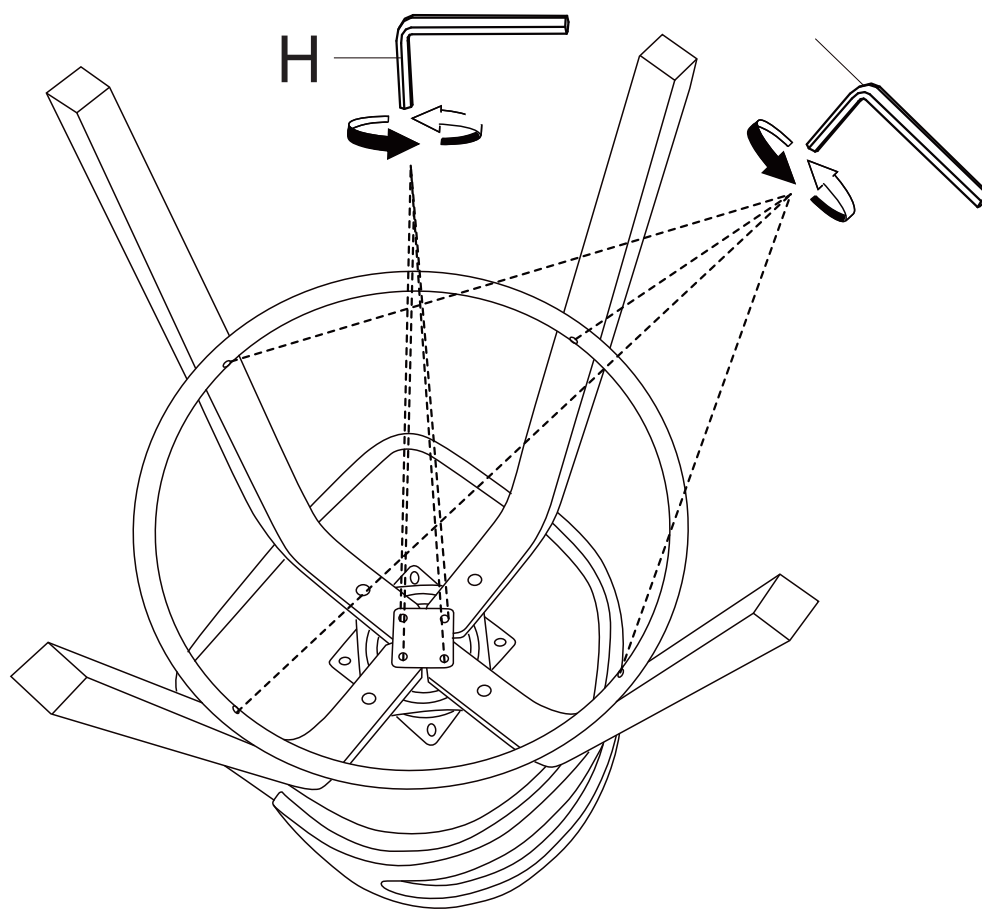

- 1 Tighten the four short bolts F at connecting plate D.
- 2 Tighten the four long bolts G securing footrest ring E.
- 3 Check that all fasteners are secure. Do not overtighten.

FINAL TIGHTENING

All leg-frame and footrest connections must now be secure.

CHECK BEFORE YOU CONTINUE

Check all 16 bolts: 12 short bolts F and 4 long bolts G. No connection should remain loose.


6

Check stability

Set the stool upright and complete the final checks.

YOU WILL NEED

Felt pads I, as needed | No new bolts

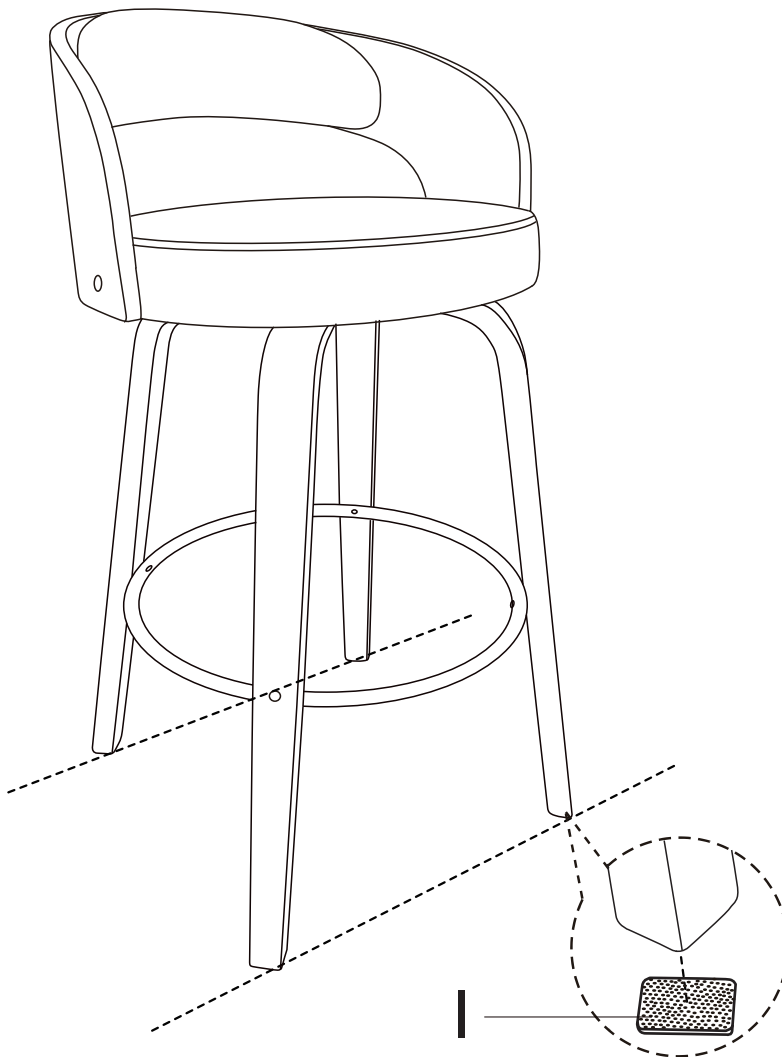

- 1 Place the stool upright on a flat surface and check for rocking.
- 2 If it rocks, check frame alignment and fasteners first.
- 3 For minor floor unevenness, use felt pads I at the affected feet as needed.

KEEP UNUSED PADS

Retain any unused felt pads for future adjustment.

READY TO USE

All fasteners secure. Stool stands firmly without rocking. Seat swivels freely.