
Assembly Instructions

Assemble the parts of the base in the shape of a cross and spread them evenly for weight distribution
Place the base boards on top of the base
Place the mattress cover on top of the base boards and remove the top part of the cover
Fit the foam wedges into the bottom part of the mattress cover, along the outer edges of the base boards
Place the heating elements - in the middle of the bed for the Mono-System, and on the right and left sides of the bed for the Dual-System, slightly towards the foot end of the bed ATTENTION! The heating elements may not touch the foam frame or the the thermo separation wedge!
Place the safety liner into the foam frame (the seams should be facing down)



- Place the thermo separation wedge into the middle (for Dual-System only) and place the water mattresses into the safety liner
- Open the fill valves, pour the conditioner into the mattresses and fill the mattresses with lukewarm water - once the first mattress is filled to 50% capacity change the sides and fill the second mattress to 50% as well. Then change sides again, continue to fill with water and align the mattresses
- Hold on to the incorporated fleece when pulling up the mattress
- Once the mattresses are filled with water, any excess air should be removed by brushing the air towards the fill valves. Use the ventilation pump to suck up any remaining air
- Close the fill valves

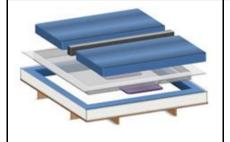

- Place the top part of the mattress cover on top of the mattresses and close the zipper
- Regulate the temperature (approximately 27 degrees)