CARE AND MAINTENANCE

Wipe clean with a soft, dry cloth. The seat board can be cleaned with a mild cleaner. Test the cleaning method on a hidden area before using them over the entire area.


NOTICE

- * Please make sure that you have all parts indicated before you begin assembly of this item
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly
- * This item may require periodic tightening

Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	LENGTH	QUANTITY
А	SEAT			1X
В	Base			1X
С	Gaslift			1X
D	Column			1X
H1	Allen bolt L (For base)	Вишишиша	M10*30mm	3X
H2	Allen bolt M (For column,Front)		M6*35mm	2X
H2.1	Allen bolt S (For column,Back)		M6*15mm	2X
НЗ	Allen key L	Control of the Contro		1X
H4	Allen key S	Monte of the second second	_	1X
	Spare black plastic cap	(8)		2X

Product Dimensions:17.52"W*16.93"D*29.13"-38.98"H

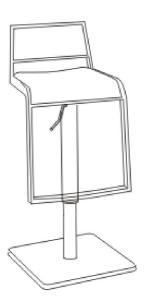

Weight Capacity: 300 lbs

WARNING: DO NOT STAND ON CHAIR

WARNING: DO NOT OVER TORQUE BOLTS/SCREWS








PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.


If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 10 minutes.


Tools Required for Assembly (included): Allen Key

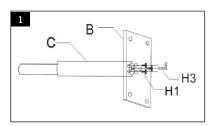


Step 1
Align the gas lift (C) onto the base as pictured.
Use allen key "H3" to lock the 3 screws "H1".

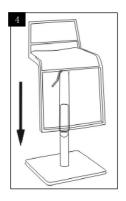

Step 4
Place the assembled seat onto the base and make sure it is placed vertically.

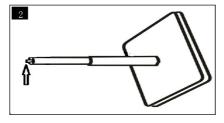

Step 2 Remove the black cap on the top of the gas lift.

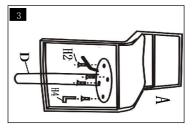

Step 3
Align the column (D) onto middle of the frame as pictured.
Use allen key "H4" to lock the 4 screws "H2".



Step 5
The height can be adjusted by holding the handle underneath the seat.