


# edishinē

## LED Table Lamp

[Instruction Manual]

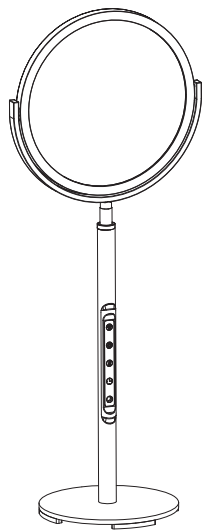

Please pay attention to the warning signs  
Read the instructions with caution before operating  
and keep it properly

### Product Care

1. Do not repair, disassemble or modify under any circumstances;
2. Do not place near any heat source or heat source or in direct sunlight;
3. Do not place on uneven, unsecured desk or table;
4. Use ONLY the supplied AC power adapter;
5. Do not use the appliance with frayed or damaged electrical cords;
6. Do not touch an electrical appliance with wet hands or when liquids are present;
7. Please keep the lamp and all appliances dry and clean;
8. Unplug the adapter when the lamp is not used;
9. Power off before cleaning;
10. Clean the lamp only with a soft dry cloth;
11. Never overload electrical circuits as it may cause electrical shock or fire;




### Package Contents

1x LED Table Lamp

1x Power Adapter

1x User Manual

### Product Assembly

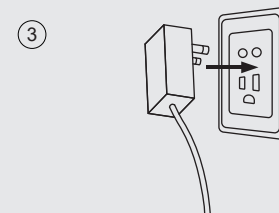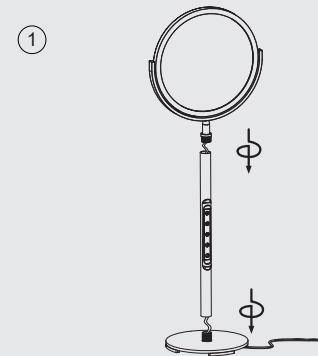

Control instructions



Turn ON/OFF

Tap the tapping stick to turn on the LED lamp after plugging in the power.  
Tap the again with your hand to turn off the LED lamp.



Adjusting the Brightness

When the LED is on, click this position to adjust the brightness to 5%/ 25%/ 50%/ 75%/ 100%.



Color Temperature Mode

Pressing the "Color Temperature Button" will switch between 2700K/4000K/5000K/6500K.



Timed Lights Off

When the LED lamp is on, Tap the button, when the "Clock Indicator" lights up the right half circle and a full circle, indicating the countdown 30 minutes / 60 minutes to turn off the light.



Turn ON / OFF night light

Tap the tapping stick to turn on the Warm colors with low brightness night light, tap the again with your hand to turn off.



Specifications

Input	AC 100–240V 50/ 60Hz
Output	DC 30V/ 0.4A
Power Consumption	10W
Luminous Flux	900lm
Color Temperature	2700K/ 4000K/ 5000K/ 6500K
Brightness Mode	5%/ 25%/ 50%/ 75%/ 100%
Material	Steel, PC, Pmma
Dimension	D218 x H556mm / 8.6"x 21.9"
Color Rendering Index	>80Ra

One Year Limited Warranty

Supported by our professional R&D team and QC team, we provide One Year Warranty for materials and workmanship from the purchase date. Please note that the warranty does not cover damage caused by personal misuse or improper installation.  
Please attach your Order ID and Name so that our dedicated customer service team can help you better.

