


To deodorize the leather
leave the chair in a shady
outside for 1-2 days.



For longer use

Re-tighten bolts every 6 months by using
the enclosed allen-key.
*Using an electric drill can damage the chair.
Please re-tighten bolts manually.

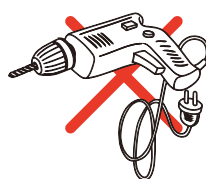

Safety Information



Sit in the center of the
chair, with your back to
the backrest



Do not sit at the front
edge of the chair



Do not stand on the
chair



Do not use the chair
with more than one
person




Do not push the chair
around when a person
is sitting in it



Do not push down on
the backrest when a
person is reclined

INSTRUCTION MANUAL

INSTRUCTION MANUAL

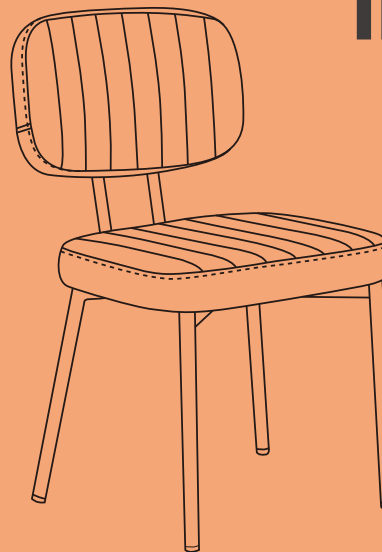

Package List




(A)*1 Backrest



(B)*1 Seat



(C)*1 Backrest Support Bar



(D)*2 Crossed Foot



M6x20mm
(E)*4 Bolts



M6x25mm
(F)*1 Bolts



M6x45mm
(J)*4 Bolts





M6x35mm
(H)*2 Bolts





(I)*1 Wrench



Assembly Instruction

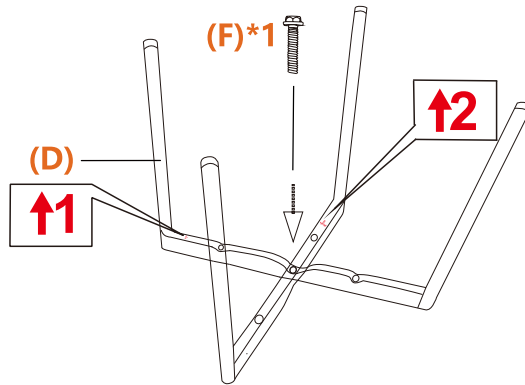



- 1** Invert the crossed foot (D) and insert bolts (F)*1 into the bolts hole in the middle of the crossed foot. Use wrench (I) and secure one with a bolt.

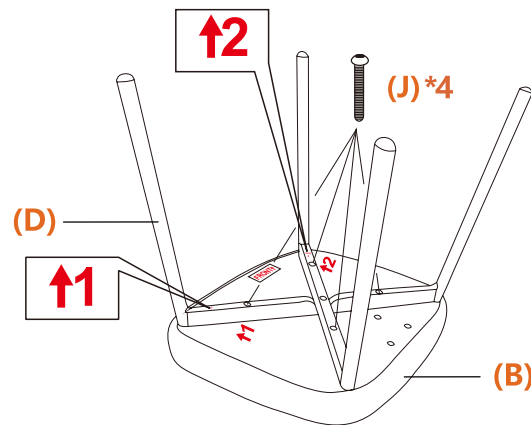

- 2** Attach the crossed foot (D) to the seat (B), make sure the arrows on the foot (D) are in the same direction as the arrow on the seat (B), then tighten with wrench (I) and bolt (J)*4.

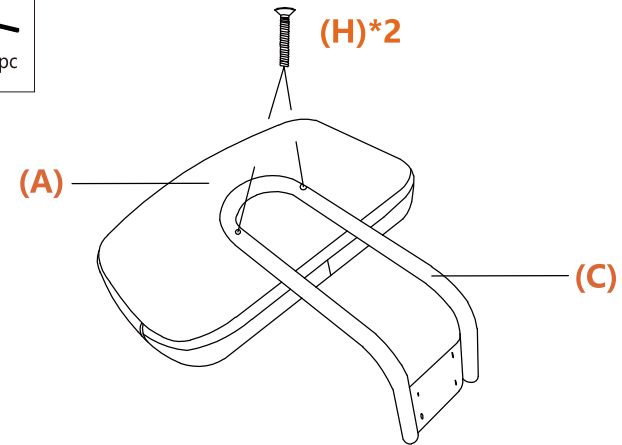

- 3** Use a wrench (I) and bolts (H)*2 to install the backrest support bar (C) onto the backrest (A).

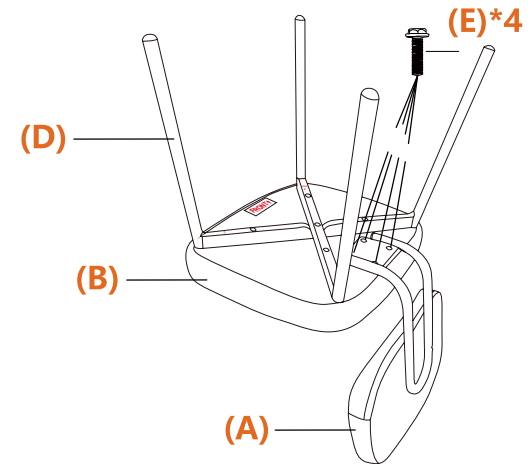

- 4** Using the wrench (I), connect the backrest support bar (C) with the backrest (A) to the seat (B) with the bolt (E)*4.

CAUTION:

- * Before using the chair, check to ensure that all bolts are fully tightened.
- * Lubricate all parts and tighten all bolts every 6 months or whenever needed.