

HTC7214W1

72" 14-DRAWER TOOL CHEST WITH UPPER CABINET AND PEGBOARD

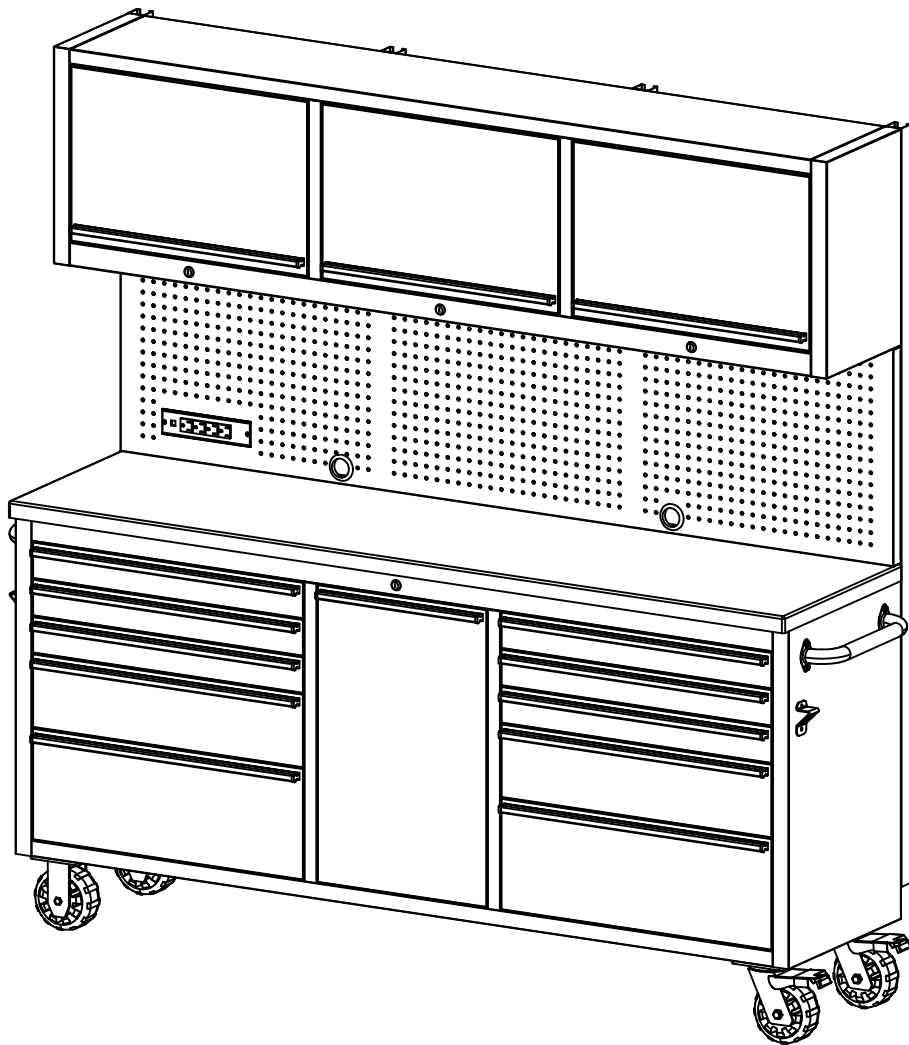


TABLE OF CONTENT

Safety Symbols.....	2
Safety Instructions.....	3
Parts List.....	4
Assembly and Operation.....	5
Maintenance and Safety.....	8

SAFETY SYMBOLS



1. Read and follow all safety and assembly instructions before using this product for the first time.
2. Fill in the following information and retain the manual for future reference:

	Do not open more than one drawer at a time.
	Do not step on drawers.
	Do not allow children near the unit.
	Set the brake on the locking casters unless you are moving the unit.
	Lock drawers and lid before moving the unit.
	Do not lift unit by yourself.

SAFETY INSTRUCTION

The purpose of safety symbols is to attract our attention to possible dangers. The safety symbols, and the explanations with them, deserve your careful attention and understanding. The symbol warnings do not by themselves eliminate any danger. The instructions and warnings they give are no substitute for proper accident prevention measures.

 **WARNING:** Be sure to read and understand all safety instructions in this manual, including all safety alert symbols such as “DANGER,” “WARNING,” and “CAUTION,” before using this product. Failure to follow all instructions listed below may result in electric shock, fire and/or serious personal injury.

SYMBOL MEANING




SAFETY ALERT SYMBOL: Indicates DANGER, WARNING, or CAUTION.
May be used in conjunction with other symbols or pictographs.

 **DANGER:** Failure to obey this warning May result in serious injury to yourself or to others. Always follow the safety precautions to reduce the risk of personal injury.

 **CAUTION:** Failure to obey this safety warning MAY result in serious injury to yourself or to others. Always follow the safety precautions to reduce the risk of personal injury.

 **CAUTION:** Failure to obey this safety warning MAY result in personal injury to yourself or others or property damage. Always follow the safety precautions to reduce the risk of personal injury.

Parts List

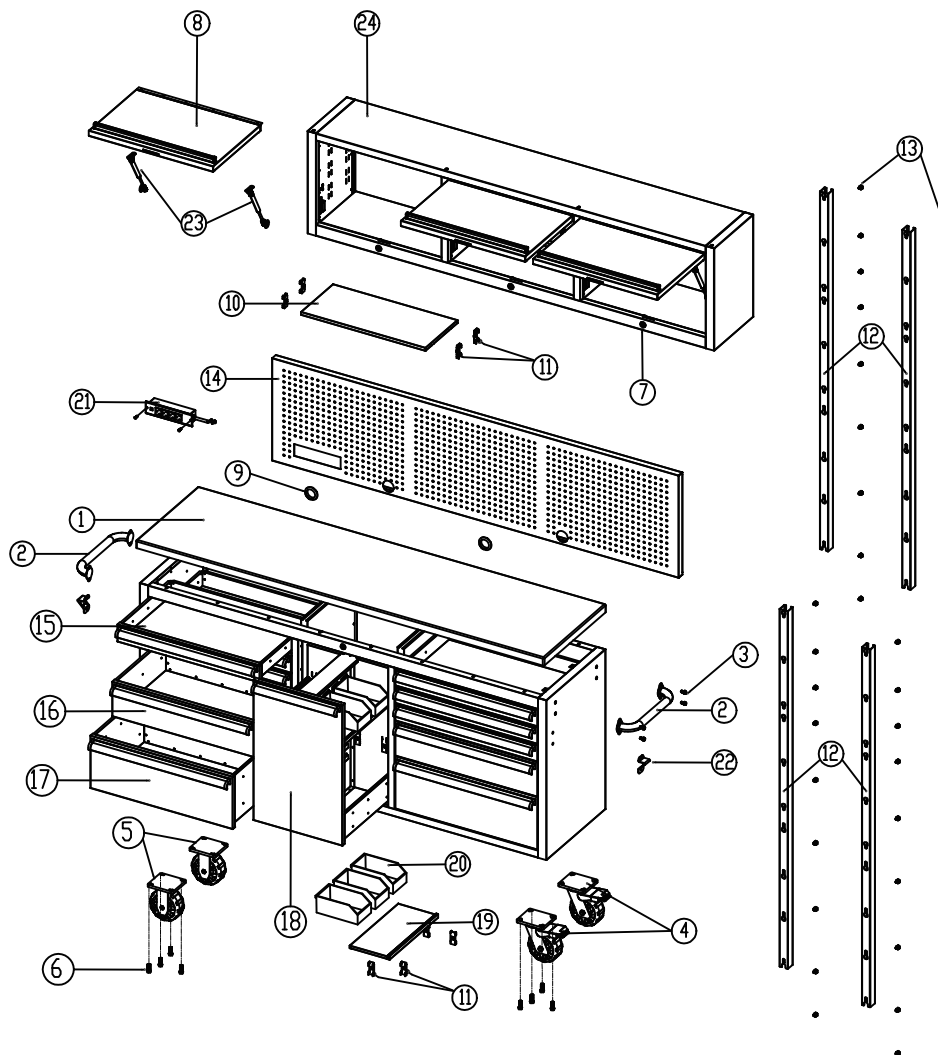

PART#	DESCRIPTION	QTY
1	Bench Top	1
2	Handle	2
3	1/4"x12mm Hex Bolt	8
4	Swivel caster(W/brake)	2
5	Rigid caster	2
6	3/8"x25 mm Hex Bolt	16
7	Lock and Key	4
8	Door	3
9	Grommet	2
10	Shelf for upper cabinet	3
11	Hook	24
12	Rails	4

PART#	DESCRIPTION	QTY
13	1/4"x14 mm Hex Bolt	40
14	Pegboard	1
15	Upper Drawer(L/R)	6
16	Middle Drawer(L/R)	2
17	Bottom Drawer(L/R)	2
18	Middle Drawer	1
19	Shelf for Drawer	2
20	Tool Boxes	6
21	Power Strip	1
22	Bottle opener	2
23	Pneumatic support rod	6
24	Top Cabinet	1

Installation

HANDLE (Fig.01)

1. Attach with $\frac{1}{4}$ in. x $\frac{1}{2}$ in. bolts, lock and flat washers.


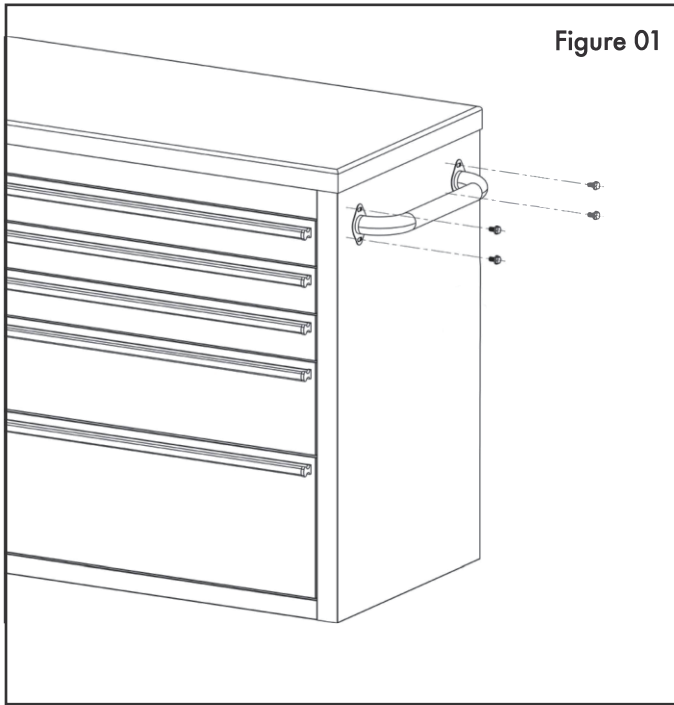


Figure 01

CASTERS (Fig.02)

1. **WARNING.** Two or more people are required to lay down or stand up the cabinet. Lock drawers before turning over.
2. Carefully lay the cabinet upside down on a soft mat to protect the finish.
3. Fit the swivel/locking casters on the handle side of the cabinet using $\frac{3}{8}$ in. x 1 in. bolts. Insert the bolts through each caster and into the bottom of the cabinet. Tighten securely.
4. Repeat steps for the two rigid casters on the other side of the cabinet.


Figure 02

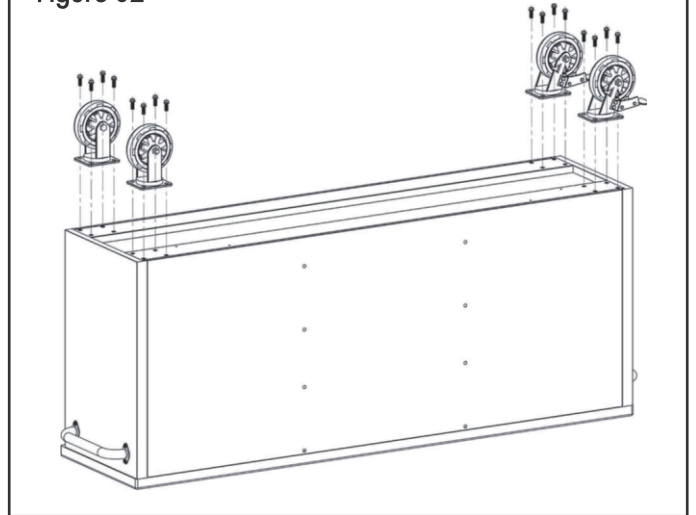

UPPER CABINET RAILS (Fig. 03)

1. With the cabinet in the upright position attach the four rails to the back using four $\frac{1}{4}$ in. x $\frac{1}{2}$ in. bolts per rail.

Figure 03

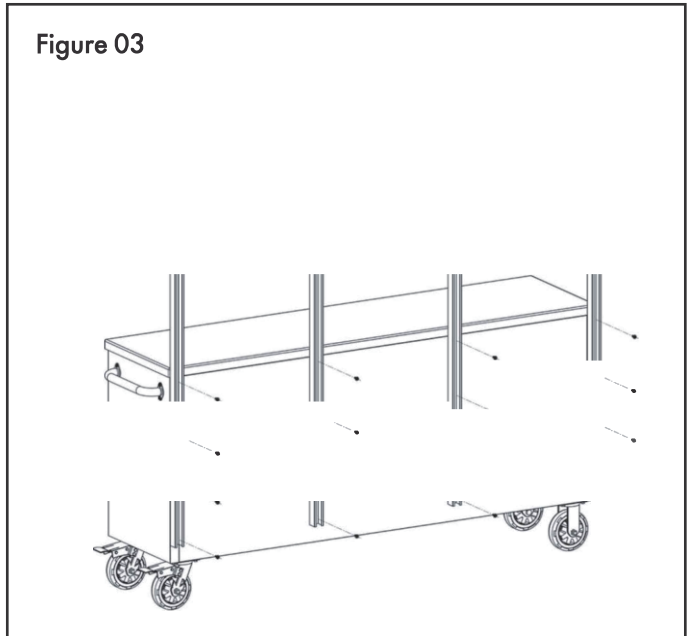


Installation

UPPER CABINET PEGBOARD (Fig. 04)

1. Attach the pegboard to the rails with three $\frac{1}{4}$ in. x $\frac{1}{2}$ in. bolts per rail.


Figure 04

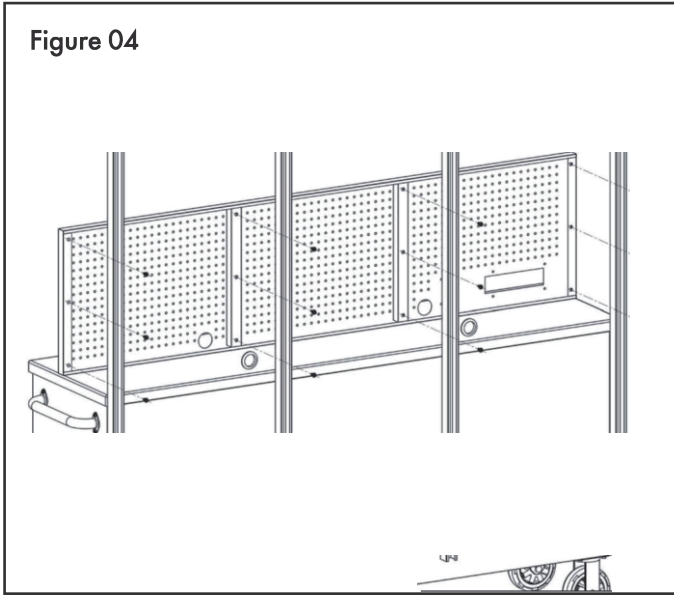

UPPER CABINET (Fig. 05)

2. Attach the upper cabinet to the rails with three $\frac{1}{4}$ in. x $\frac{1}{2}$ in. bolts per rail.


Figure 05

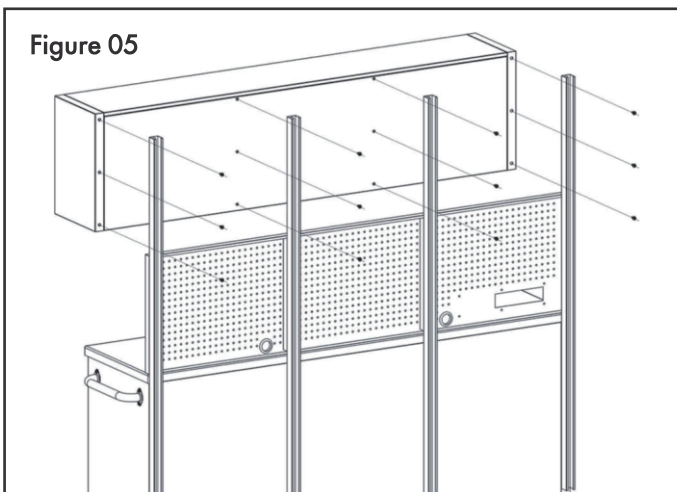

SHELF ASSEMBLY (Fig. 06)

1. Insert four hooks, per shelf, inside the upper cabinet at the desired height. Place the shelf on the shelf supports. Repeat for the other shelves.

Figure 06

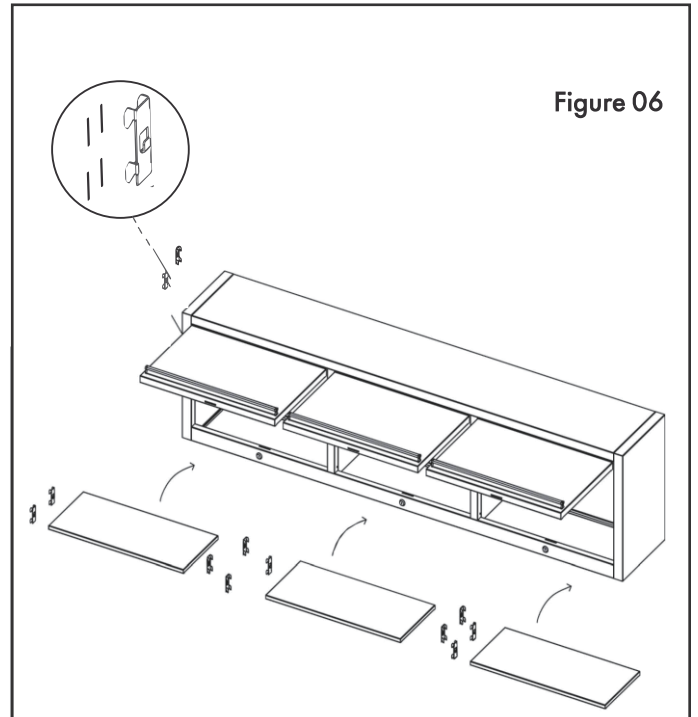

Electrical

POWER STRIP

This cabinet features a pre-installed power strip with (4) 5-15 outlets and (2) USB ports, conveniently located for easy access. The included power strip has the following ratings:

Maximum Amperage Load..... 12A
Maximum Voltage..... 125V
Cycle..... 60 Hz
Maximum Wattage..... 1500W
USB Output..... 5VDC, Max. 2.1A

Plug the provided power cord into the power strip socket.

110V CIRCUIT REQUIREMENTS

This tool chest is pre-wired to connect to a power supply circuit that has a verified ground and meets the following requirements.

Nominal Voltage..... 110V, 115V, 120V
Cycle..... 60Hz
Phase..... Single-Phase
Power Supply Circuit..... 15 Amps

A power supply circuit includes all electrical equipment between the breaker box or fuse panel in the building and the power strip. The power supply circuit used for this power strip must be sized to safely handle the full-load current drawn from the power strip for an extended period of time. (If this power strip is connected to a circuit protected by fuses, use a "D" time delay fuse.

GROUNDING & PLUG REQUIREMENTS

This power strip **MUST** be grounded. In the event of certain malfunctions or breakdowns, grounding reduces the risk of electric shock by providing a path of least resistance for electric current.

Operation



DRAWER REMOVAL (Fig .07)

1. Pull the drawer out so that it is almost fully extended. Push down on the LEFT hand black release lever while pulling up on the RIGHT hand black release lever. While holding the levers in these positions carefully pull the drawer outward until it is released from the drawer slide.

DRAWER REPLACEMENT

1. Extend the drawer slides from the tool chest. Insert the brackets on each cabinet slide being careful that they are correctly positioned. Once inserted, close the drawer to set the slides in their proper positions.

Figure 07

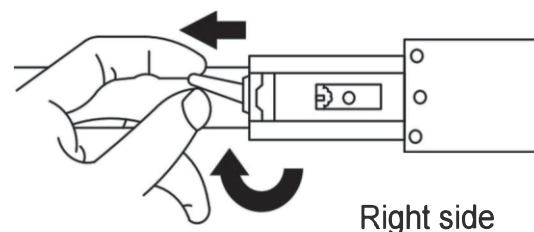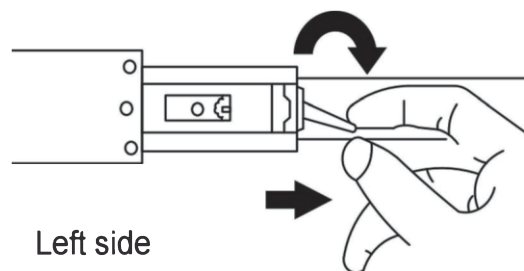

Anti-Tipping Hardware

It is strongly recommended that you anchor this cabinet. Toppling furniture can cause serious injury or death.

An Anti-Tipping kit has been provided with this cabinet to reduce the risk of injury. (Fig. 11)


This kit securely attaches the cabinet to a wall or other solid surface using the provided hardware.

It is important to regularly check that the anchors are securely mounted. The stability of cabinet may be effected by carpet and uneven flooring.

IMPORTANT

- Ensure there is no wiring or plumbing inside the wall before drilling.
- Determine the wall material (drywall, masonry, etc.) and use the appropriate hardware.

Figure 11

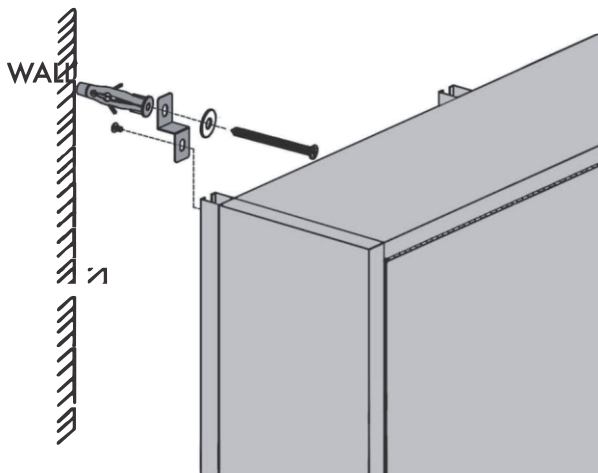

Maintenance

1. To clean use a soft cloth that will not scratch the surface.
2. DO NOT use solvents of any kind they may damage the surface.
3. Liquid spills should be removed immediately, use a soft clean cloth to blot the spill gently - avoid rubbing.
4. Grease the casters with good quality grease once a year.
5. Lubricate the drawer slides twice a year with light duty oil.

Warning

This power strip is equipped with a power cord that has an equipment-grounding wire and a grounding plug. Only insert plug into a matching receptacle (outlet) that is properly installed and grounded in accordance with all local codes and ordinances. DO NOT modify the provided plug!

Grounded 5-15 Receptacle

