



A		Seat	1
В		Back with Legs	1
С		Front Leg	2
Hardware			
Label	Picture	Description	QTY
1		Bolt (M8*60MM)	10
2		Spring Washer	10
3	6	Washer	10
4		Allen Key	1
Assembly Preparation			

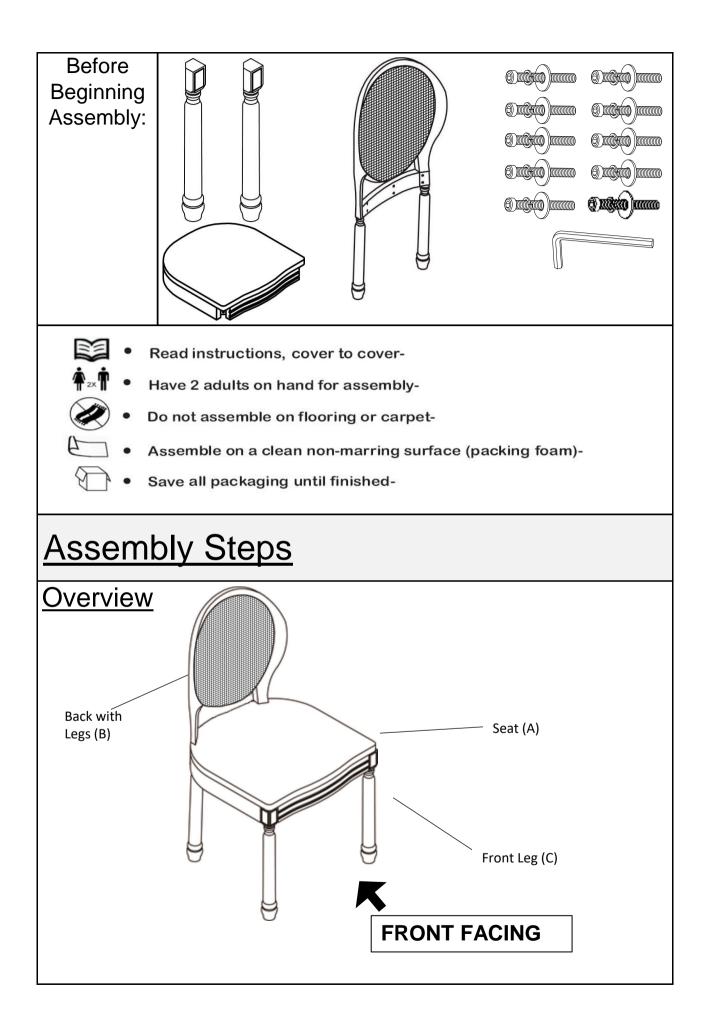

This Chair has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the Chair parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

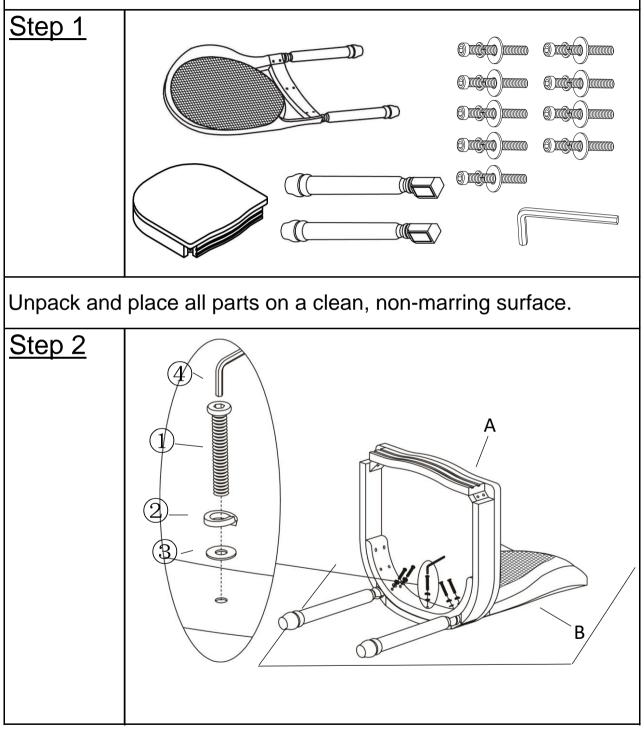

Place the Back with Legs(B) on a clean, non-marring surface. Align the mounting positions on the Seat(A) to the mountings on the Back with Legs(B).


Attach middle mountings of Seat(A) to Back with Legs(B) first, using Bolts(①), Spring Washers(②) and Washers(③) with Allen Key(④).

Then attach the corner mountings using Bolts(1), Spring Washers(2) and Washers(3) with Allen Key(4).

## Frendly note:


If the mouonting positions cannot be aligned well which hinders the installation, then sway the Seat(A) lightly when locking the Bolts, this action could help prevent the Bolts getting stuck and ensure smooth assembly.

## Do not fully tighten the Bolts.

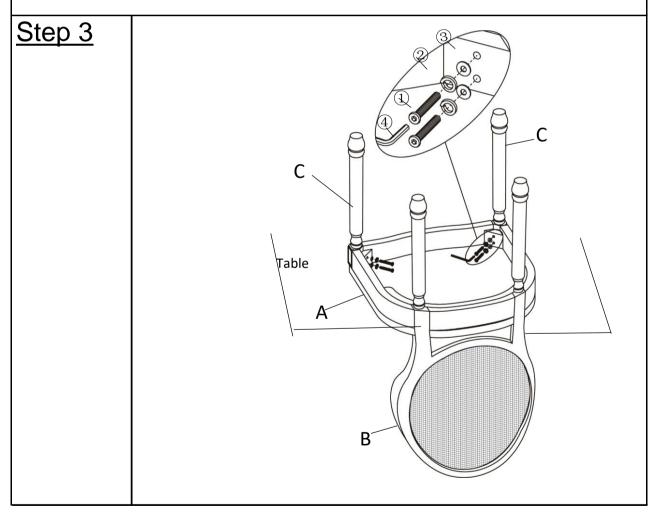

Place the Seat(A) and Back with Legs(B) on the side of a table with the Seat(A) facing down, as seen in the picture. Insert Front Legs(C) into the mounting positions of Seat(A) and attach using Bolts(①), Spring Washers(②) and Washers(③) with Allen Key(④).



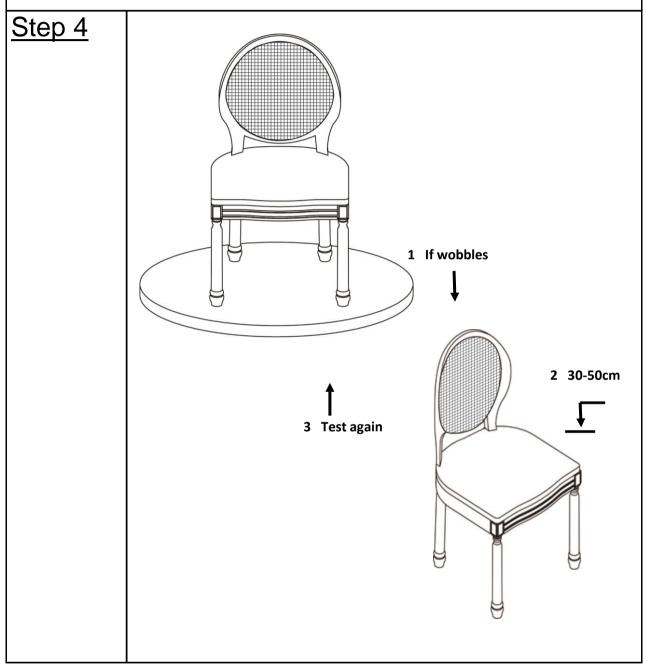

Place the Chair on a level Surface to check if it wobbles. If it wobbles, lift the Chair some 30cm to 50cm high from the ground.

Keep your feet and toes well away from the drop zone.

Drop chair freely and vertically, with the four legs hitting the ground at the same time.

This **Drop Test** will help to ensure that all the Bolts and gaps to all reach full alignment status.

Test again for evenness on a Level Surface.


If no wobbles are found, proceed to tighten all the Bolts.

When tightening the Bolts, tighten sequentially.

Do not fully tighten any screw fully and then towards the next one.

This may cause the frame to warp.

If there are still wobbles, loosen the Bolts and execute this same drop test.

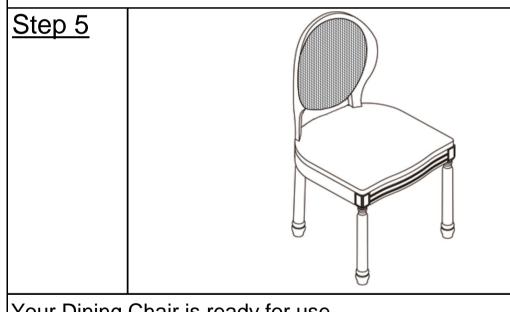

Your Dining Chair is ready for use. This Dining Chair can only be used on a flat, level surface.

