


Operation Instructions

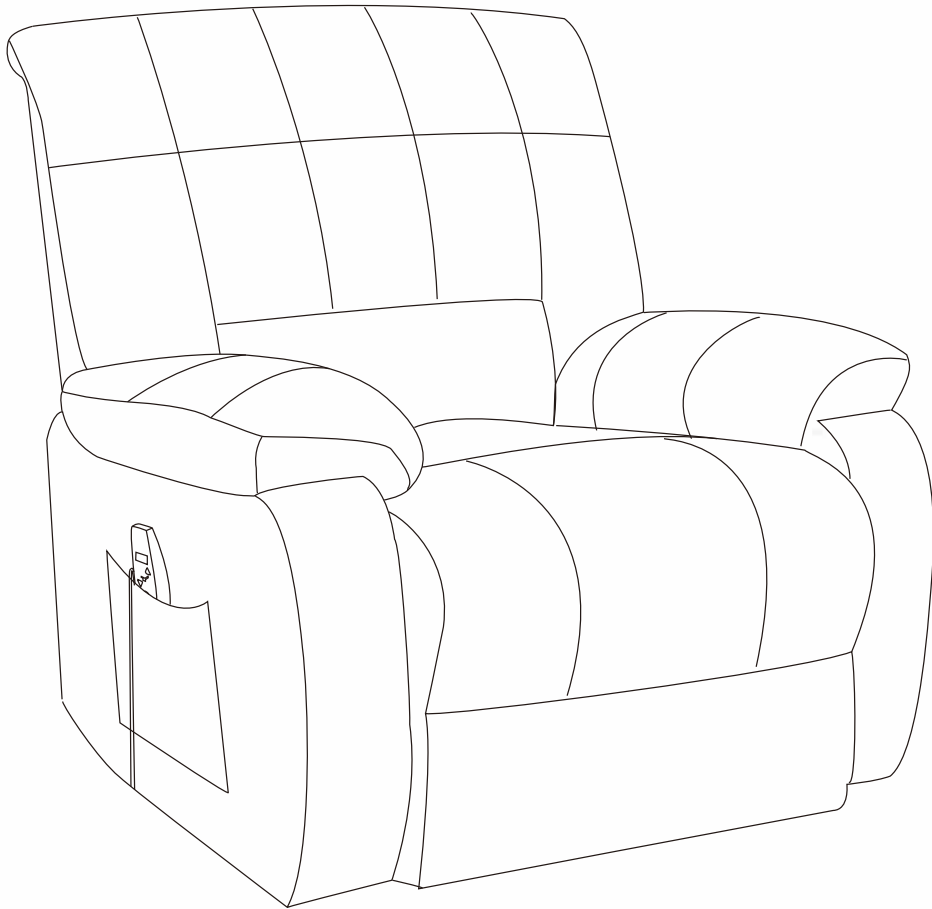

Massage Chair

The chair set is delivered with **2 boxes**. We recommend assembling the set after you receive all the boxes.

PRODUCT FEATURES

- **Power Reclining**

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including:

- Always unplug the power chair from the power source after use, and before cleaning.
- Do not touch power chair if large amounts of liquid have spilled on it. Unplug immediately.
- The chair should never be open unattended when plugged in. Unplug from the outlet when not in use or before putting on or taking off parts or attachments.
- Do not use outdoors.
- Do not carry this appliance by the attached power cord; do not use it as a handle.
- Keep the cord away from heated surfaces.
- Close supervision is necessary when this appliance is used by or near children, invalids or disabled persons.
- This unit is not a toy. Children should not use or play with it.
- Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use near eyes or other highly sensitive areas.
- To disconnect, press the OFF button, make sure all functions are stopped, then remove the plug from the outlet.
- Use this appliance only for its intended use as described in this manual. Do not use attachments that haven't been provided with the unit. This appliance is not intended for use for persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of appliance by a person responsible for their safety, children should be supervised to ensure that they do not play with the appliance.

HEALTH CAUTION

- If you have any concerns regarding to your health, consult your doctor before using this product.
- Individuals with pacemakers should not use this product.
- If you have pain in muscle or joint after using for a prolonged period of time, discontinue using and consult your doctor. Persist pain could be a symptom of a more serious condition.

MAINTAINANCE INSTRUCTIONS


TO STORE:

Place unit in its box or safety dry and cool place. Avoid putting chair in contact with sharp edges or pointed objects which might cut or puncture the fabric. Do not wrap attached power cord around the unit. DO NOT pull the unit by power cord.

TO CLEAN:





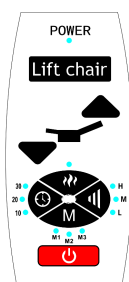


- Ensure the unit is unplugged from the power source, and allow the unit to cool down before cleaning.
- Do not use any liquid to clean. Clean fabric cover by wiping with a damp sponge, using a mild detergent or suds. Pat with clean, dry cloth.

Operation Instructions




First of all, check if local voltage is consistent with the transformer power supply. If available, then plug in, to set up an electric circuit.

The top of the hand controller comes with a USB port to facilitate charging of electronic products such as mobile phones.

- Product requires DC 29V Power, Boot indicator light up after electrify;
- LIFT: Automatic lift function button. Just one click, the chair will lift up to top position;
- RECLINER: Automatic recline function button. Just one click, the chair will recline to max unfold position;
- LIFT/RECLINE the 2 buttons can be changed at any time. For safety, when you click new button, the last function will stop, and execute new function.
-  Up arrow button: should keep pressing to work, the chair will get down, then unfold to max recliner position.
-  Down arrow button: should keep pressing to work, the back & footrest will remove, then lift up to top position.
-  "Heat" key: Individual control switch, if users want the product to have the spontaneous heat, they can press heating switch key for heating. The maximum heating value is 65°C and it takes about 15 minutes to reach the maximum heating value. There is built-in protective chip in the product, and the continuous heating will not make the heat value exceed the maximum peak value.
-  "Time" key: timing regulation key. Press "10-20-30" to regulate the time and the corresponding mode indication lamp will be on.
-  "Intensity" key: it has three-gear strength regulation key H-M-L. Press the key, the strength indication lamp will flicker and the strength will change as per the sequence: M-L-H cycling.
-  "Mode" key: it has three-modes switchover key. When the vibrating motor is in a start state, the key can realize vibrating mode switchover, such as M1→M2→M3→M4.....and the corresponding indication lamp will be on in certain mode.
-  Power On /Off, vibration massage power.



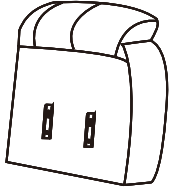
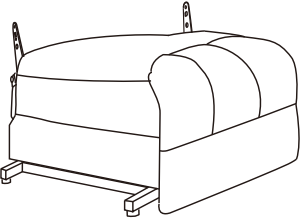
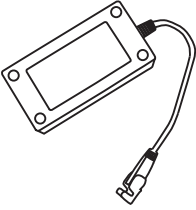
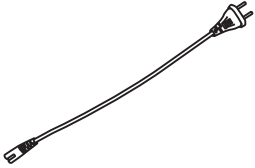
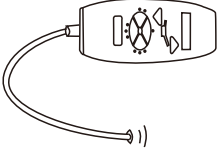
Assembly Instructions

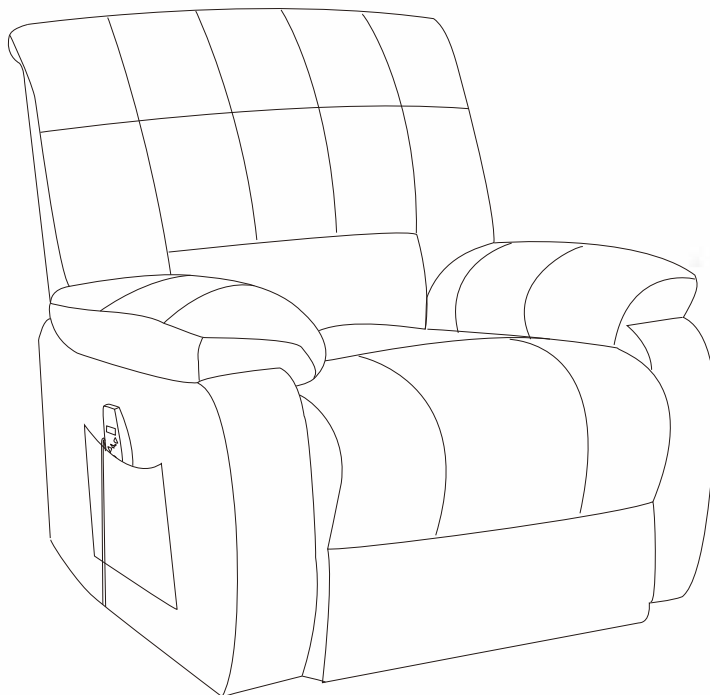

Please read the following instructions prior to assembling this product:

1. To avoid damage, assemble this product on a not-abrasive surface such as carpet.
2. Make sure all bolts are tightly fastened before use.
3. For home use or light commercial use only.
4. Please make sure you have all parts before assembly.

GENERAL ASSEMBLY INFORMATION GUIDE
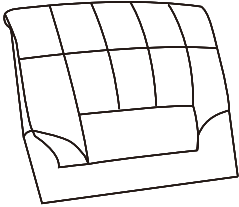
<p>A*1 Back</p> 	<p>B*1 Right Arm</p> 	<p>C*1 Left Arm</p> 
<p>QTY 1pc</p>	<p>QTY 1pc</p>	<p>QTY 1pc</p>
<p>D*1 Seat</p> 	<p>E*1 Transformer</p> 	<p>F*1 Wire</p> 
<p>QTY 1pc</p>	<p>QTY 1pc</p>	<p>QTY 1pc</p>
<p>G*1 Remote</p> 		
<p>QTY 1pc</p>		



Step 1

① Place the Seat (D) on its back on a flat smooth surface.

Take out the bag which holds a rectangle box.

② Take out the transformer (E) & wire (F) & Remote (G) from the top of the seat.


D

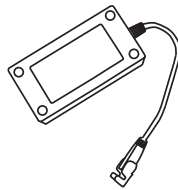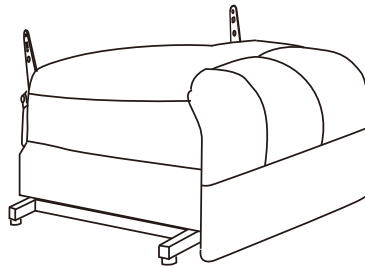

QTY 1pc E




QTY 1pc F

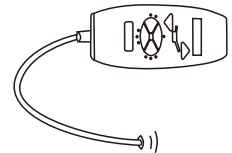

QTY 1pc G


Step 2

- ① Attach handrest (B&C) to seat (D) by aligning the metal grooves on handrest to brackets on sides of the seat (D) as shown.
- ② Ensure the handrest (B&C) slides down fully over the brackets on the right side and left side of the seat (D) respectively.

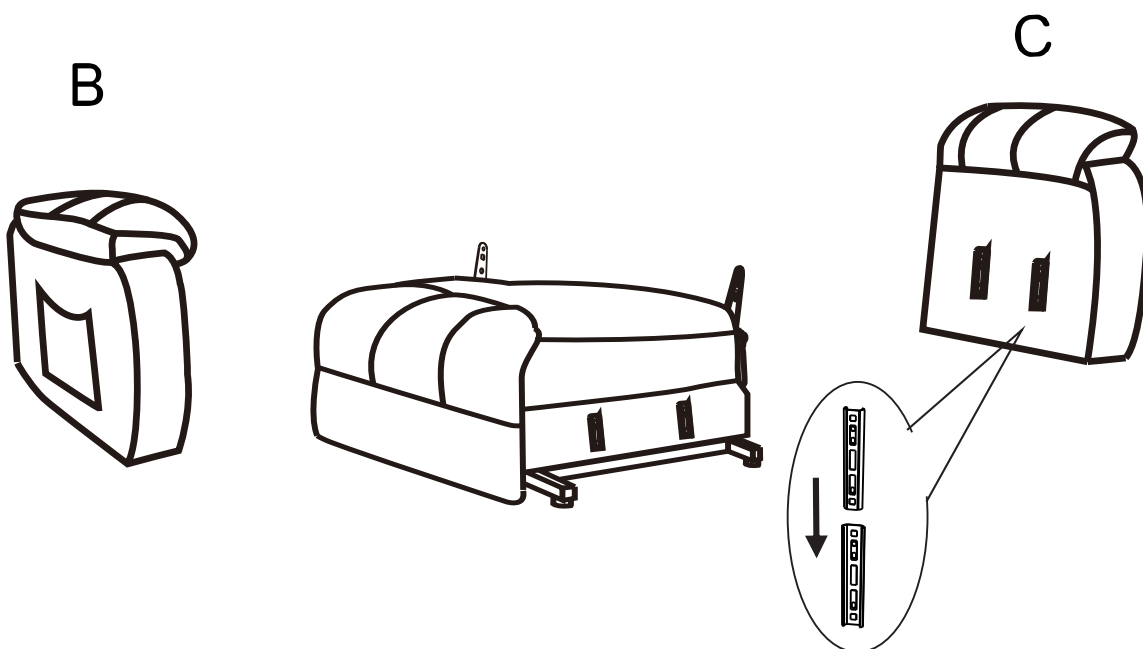


Step 3

Ensure the backrest (A) slides down fully over the brackets on the seat(D).

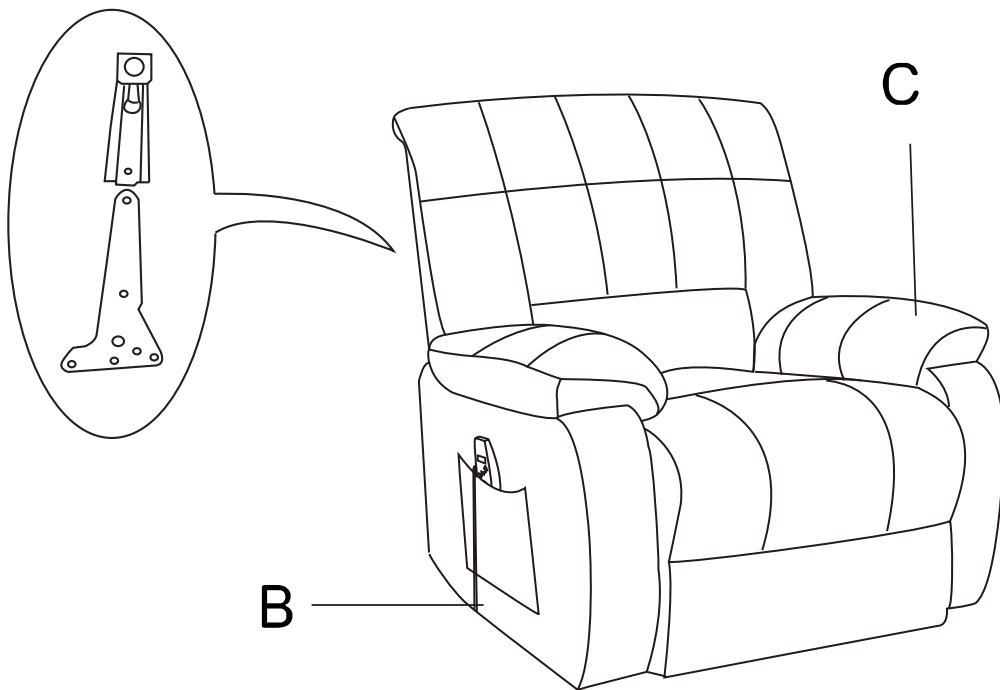

Step 4

- ① Attach the transformer(E) to the plug on the back of seat (D).
- ② Connect the transformer(E) with the wire plug (F) and insert the wire plug into a wall outlet for power.

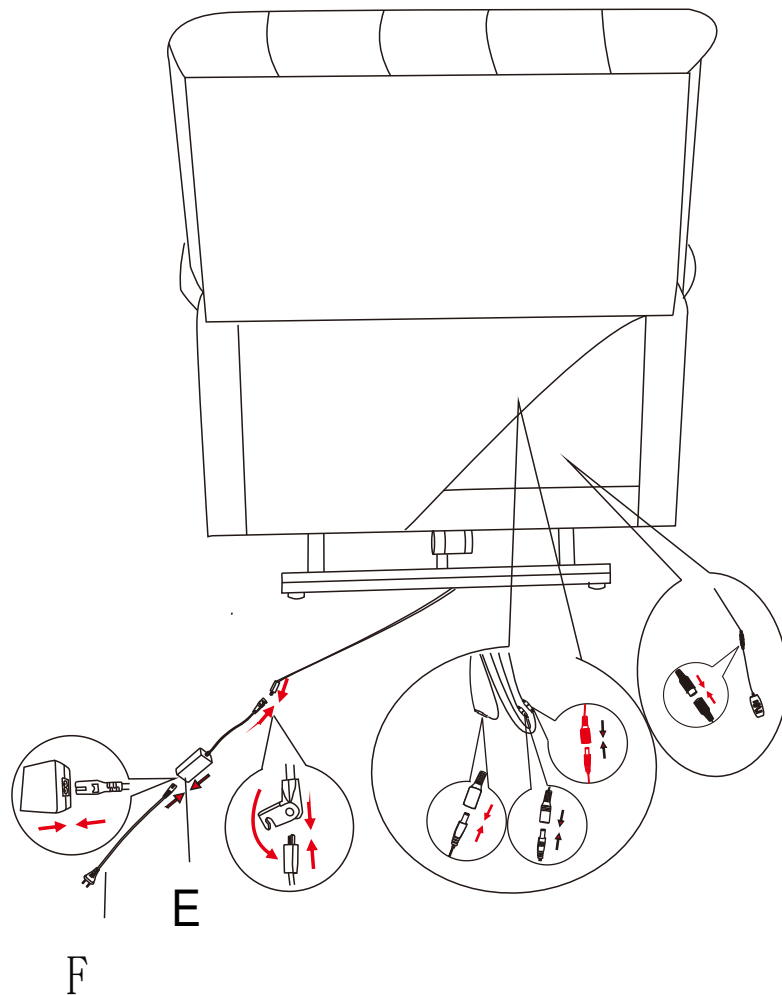

Warnings

- Sit down in the chair gently. To avoid tipping over, do not throw yourself into the chair. Move the chair into the reclining position slowly, making sure that no children or pets are in close proximity. Do not allow children to play on or around the chair, particularly when it is in an open position.
- Close the recliner completely before getting out of it.
- Never sit on the footrest when it is open, even if it is a child.
- To eliminate the risk of tipping over, do not sit on the arms or footrest of the chair.
- This chair is designed to be used by 1 adult at a time.
- Maximum weight capacity is 330LBS, Do not allow any person who over 330LBS to sit on the recliner.
- Please forbid people with the following ailments from using this sofa: Those people with severe symptoms of heart disease, high blood pressure, cerebral thrombosis and others who are sensitive to heat or completely insensitive to heat, those with brittle bones or have issues with waist support pregnant women, children and others where it has been determined they are not suitable to use this product under the guidance of doctors.
- To fully recline the sofa, ensure the sofa well, you need to put the sofa at least 100cm away from the wall or any other obstacle.
- Product cannot touch water, fire, etc. Product can also not come in contact with sharp objects (knives, nails, etc.)

Maintenance Manual Instructions

- To avoid dropping, you should carry the sofa carefully.
- If you find dirt and or stains on the chair, spray the sofa with a sofa specific cleaner then use a sponge or cloth to wipe the dirt away. Do not use water, soapy water or cleaner with waxed wooden areas. Take care to wipe the sofa carefully and gently.
- Do not put the sofa in an area with direct sunlight and do not put the sofa directly in front of an air conditioner, this will fade the upholstery and make it brittle.

How to Disassemble

Please find a strong tool to prod the small piece of metal grooves, then the backrest will be pulled out. The tool is not included.

