
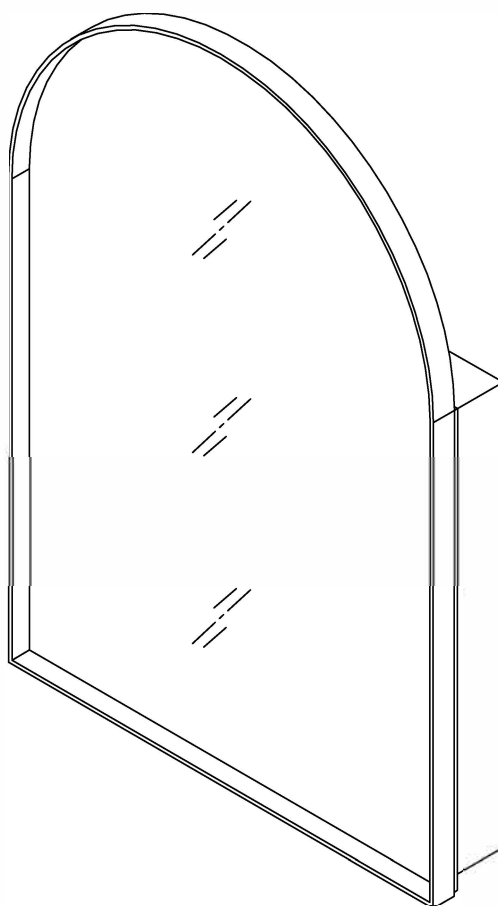
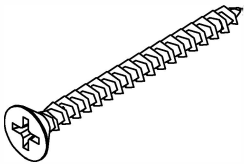
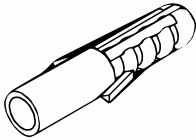
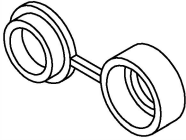




MEDICINE CABINET

Installation Guide

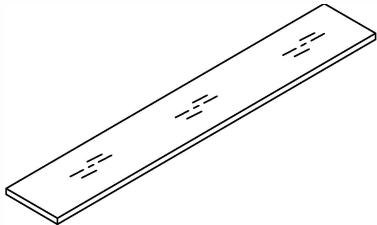


List of Parts

A	8pcs	B	8pcs	C	8pcs
					
Screws		Rubber plug screws		Screw cover	
D	8pcs	E	12pcs	F	2pcs
					
Screw washers		Rubber mat		Glass shelf	


Please make sure all the parts are included.
Missing parts? Reach out to us for free replacement

Additional Tools Required

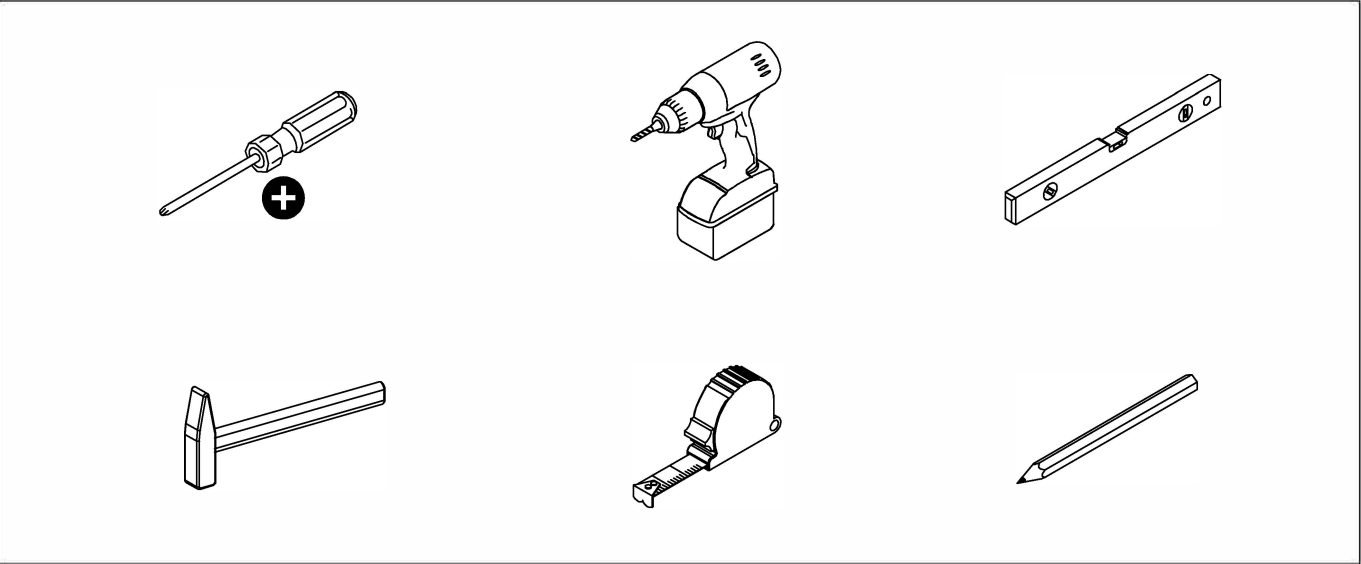



Rough Wall Opening

Overall Size	Rough Wall Opening
24 in.(W) X 36 in.(H) X 4.5 in.(D)	22.8 in.(W) X 23.6 in.(H) X 3.3 in.(D)

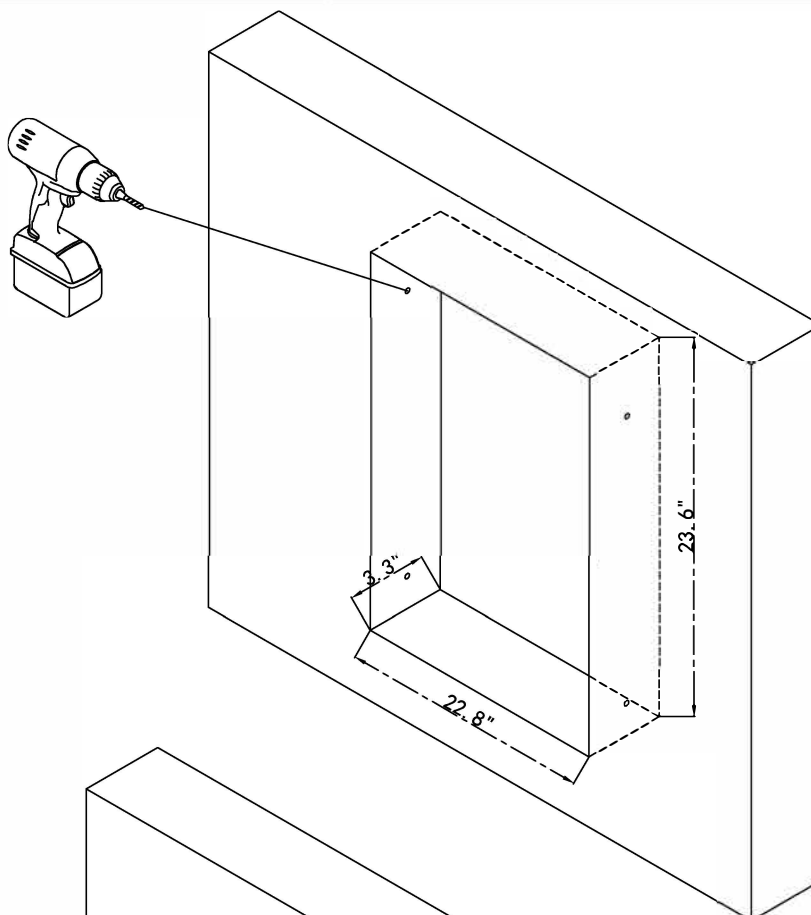

Mark four (4) mounting holes on the wall corresponding to the pre-drilled hole locations in the mounting bars on the inside back panel of the cabinet.

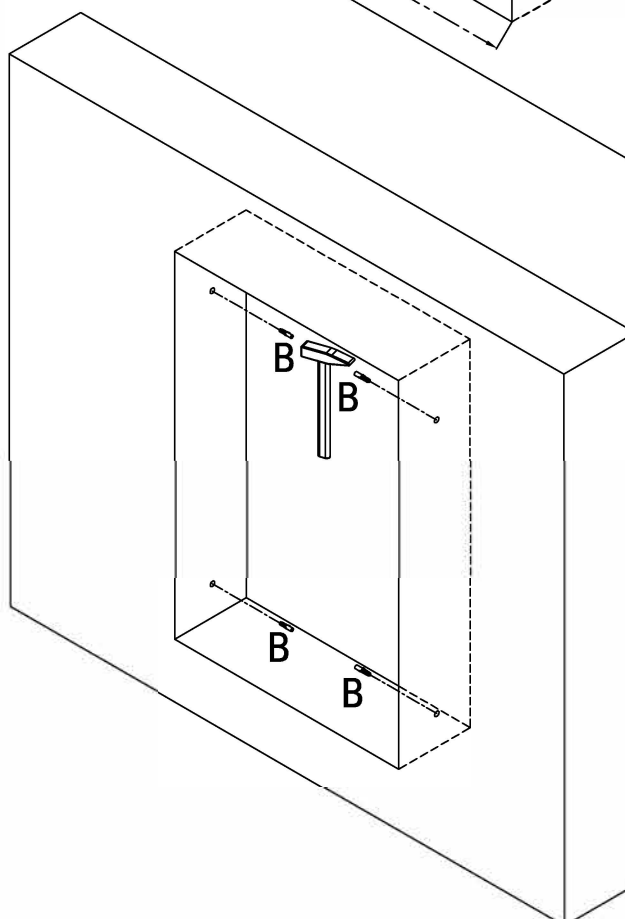

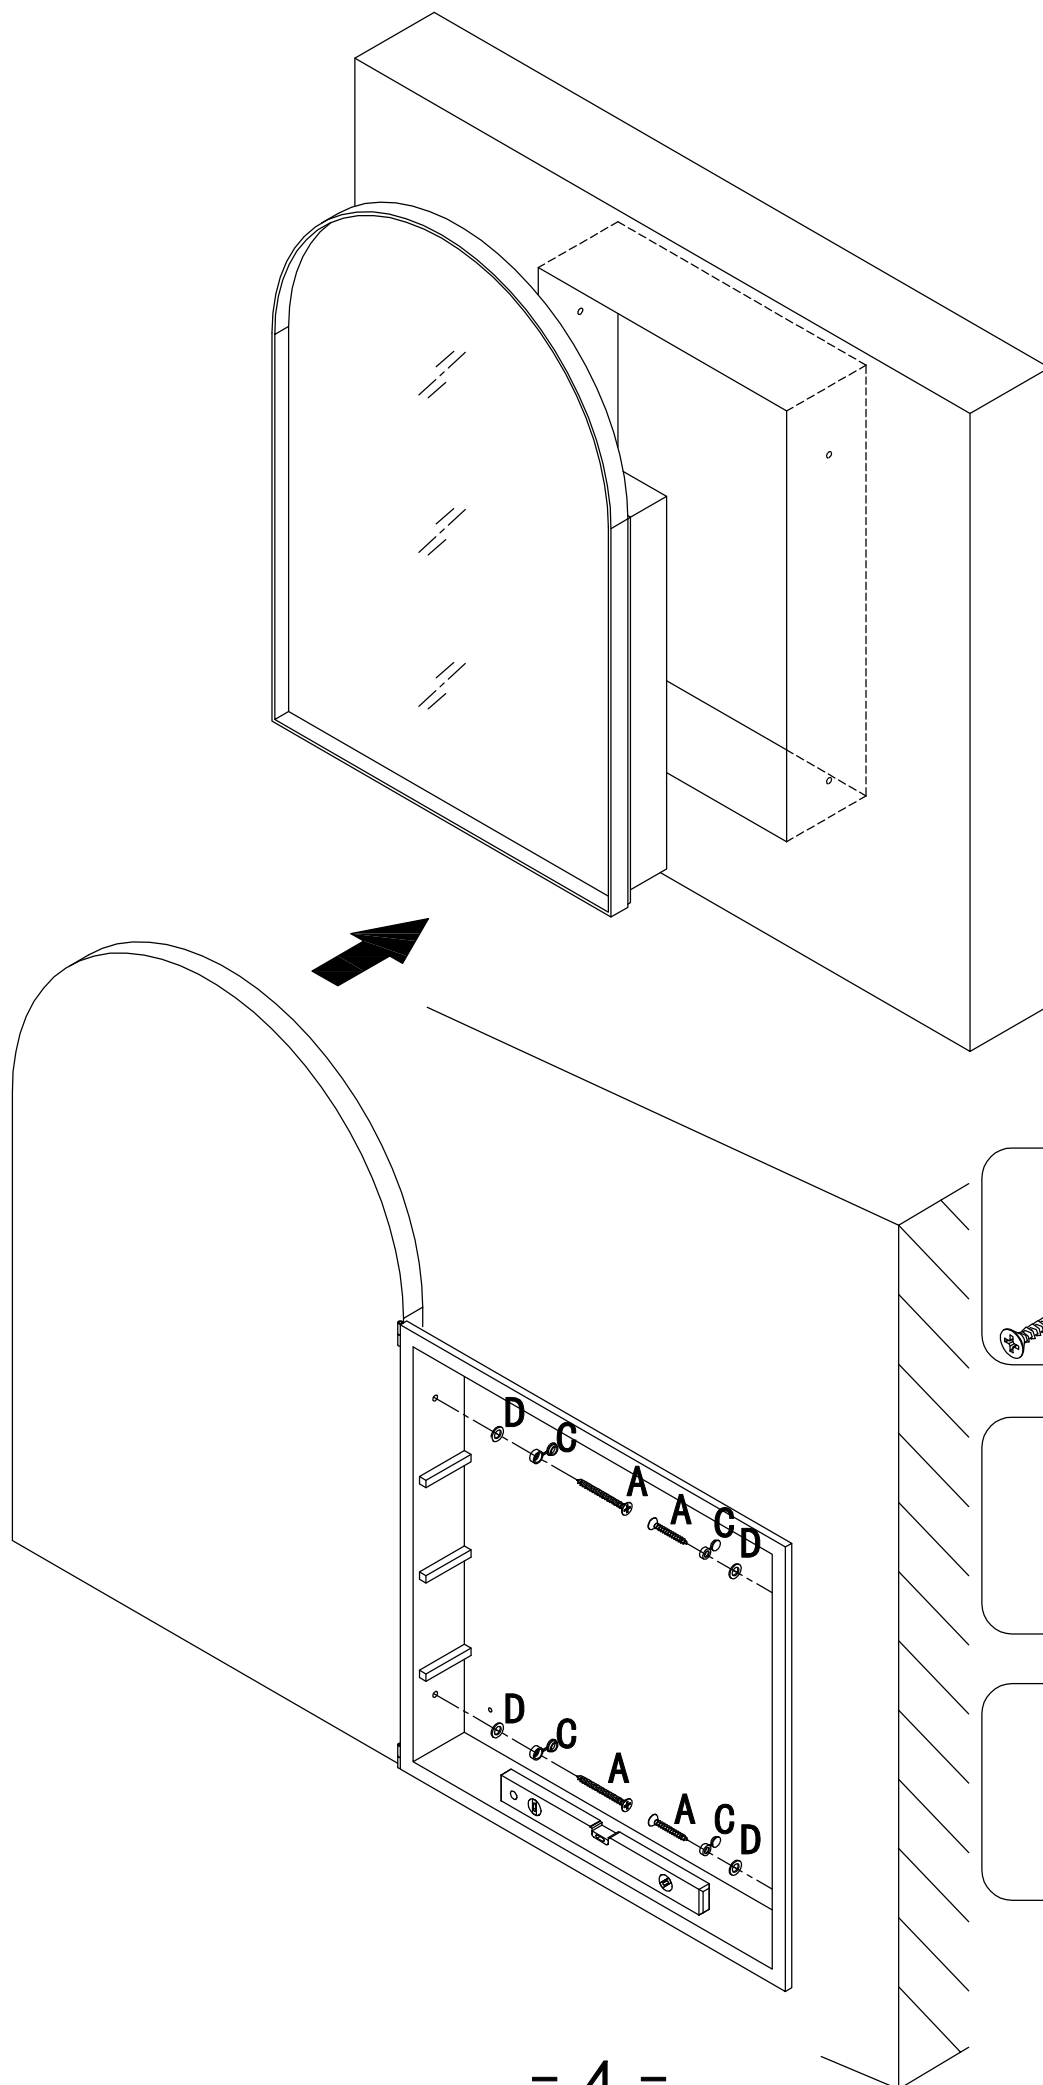

Surface installation

Mark four (4) mounting holes on the wall corresponding to the pre-drilled hole locations in the mounting bars on the inside back panel of the cabinet.

