

INSTRUCTION



Thank you for choosing this 2 use trolley

In order to ensure that you can better use this product, please read these safety and operating instructions。



For your safety, please pay special attention to the part of this specification with this symbol.

内容

specific	-----	2
safety	-----	3
parts recognize	-----	4
as trolley use	-----	5
as ladder use	-----	6
storage & maintainance	-----	7

specific

model	2321F
size:	43*47*112cm
folded	47*6.5*115cm
extended:	67*47*106cm
plateform	27.5*42cm
wheel dia	15cm
capacity as trolley	80 kg
capacity as ladder	150kg

SAFETY



Note: use this cart, the following basic preventive measures should be paid attention to in order to avoid danger or personal injury. Be sure you've seen all of these security instructions before use. Put the book in a safe place so that it will be needed in the future.

Keep away from children - do not let children use this cart, it is not a toy.

Storage - when not in use, put the cart in a safe place where children can't reach

Keep balance - always keep balance when using a cart. Especially on the uneven ground.

Sloping ground - when carrying heavy carts in the slope of the ground, ensures that the hand grip hand lest the trolley from your hand slip away.

The groove and the steps towards the stop - always pull carefully over the groove and the steps

Injury - don't make yourself injured. You can only carry the weight you have enough strength to deal with. Carrying too heavy objects will cause harm to you.


Hold handles when loading weight, so as not to hand cart to over hit you in the head.

Support :Using the trolley should be on a solid, not slippery ground



**Note: the maximum load of the cart design is kg.
Do not overload the use of carts. Overload use will damage the cart and cause damage to the user.**

Component identification

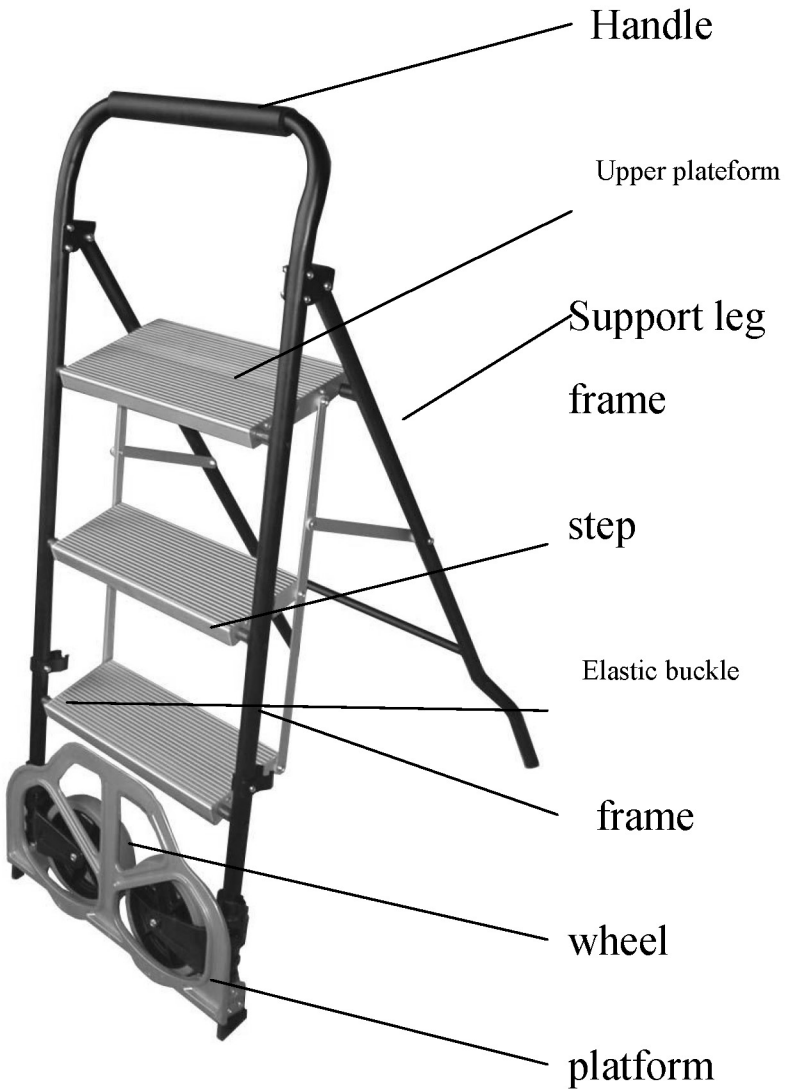

1 as trolley use

The correct way to open

KEEP the trolley slanty towards the palteform side and open the plateform first,then push the frame back,the wheels will open automaticly



图 1



图 2



图 3

The way to close is oppositely。

ps: do not slant towards the wheel side to open the plateform, that will cause damages。 See picture4



图 4

2 as ladder use

The correct way to open

Open the support leg out of buckle, see pic6, open to maximum。Now the step will be parallel with ground, see pic7, as ladder use。



图 5

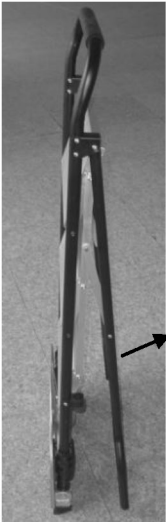


图 6



图 7

To close, close the support leg until it get in to the buckle, see pic8



图 8

storage

2close the trolley completely and storage in a safe and dry place,avoid striking or dropping.



图 9

maintainance

if some parts is broken,pls use the original parts to replace