

Assembly Instructions

CHAISE LOUNGER

CAUTION: You must read this before you proceed




SAFETY WARNING

Never adjust chaise lounge or recliner backrest while seated.

Always make sure the backrest is flat before moving the chaise lounge.

Keep all limbs clear from under the backrest when it is in a raised position.

Serious finger, hand, or other bodily injuries may result from adjusting the chaise lounge backrest position while seated.

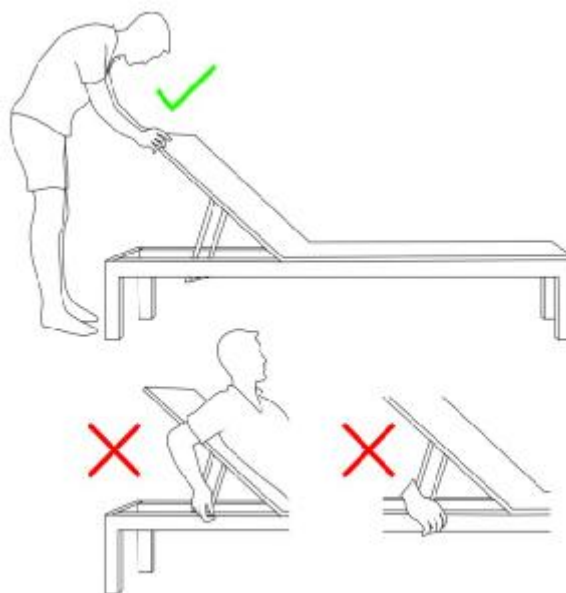


The examples pictured above are non exhaustive and are for your reference only

Care & Maintenance

-   • Not for commercial use. For residential use only
-   • Prolonged exposure to rain may cause rusting which can stain floors.
-   • Do not put hot items directly on furniture surface.
-   • Do not clean furniture with harsh cleansers or polish.
-   • To obtain the longest lifespan of your outdoor products, minimizing exposure to direct sunlight is recommended.
-   • Children should not climb or jump on the furniture.
-   • Do not write on furniture without a padded barrier to protect the surface.
-   • To obtain the longest lifespan of your outdoor products, avoid extended and lengthy exposure to rain, snow, and direct sunshine. Whenever possible cover the product and /or place under patio or awnings.
-   • Stains may be removed with mild soap solution and damp cloth.
-   • Dust and pick-up spills using a clean, non-colored, lint-free cloth.














Please look underneath the **Front Right Side Panel** for all hardware.

CHAISE LOUNGER


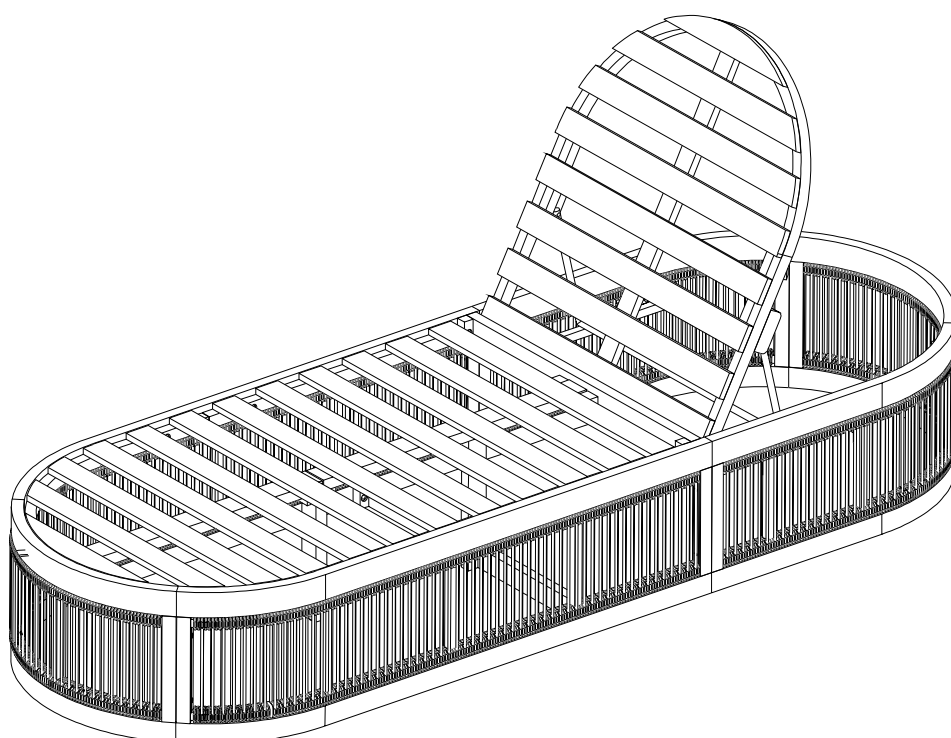


Caution: This Chaise Lounger is NOT a TOY.
Keep your child/children at bay during the assembly process.
Whenever moving/lifting the Chaise Lounger and to prevent damage to the Chaise Lounger, two adult partners may be needed to execute these actions.

Part List:

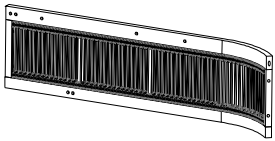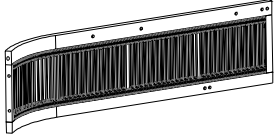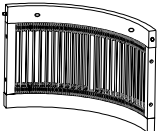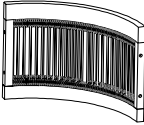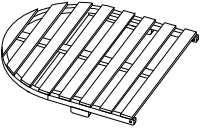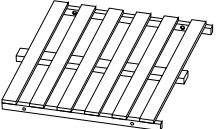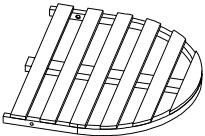

Label	Picture	Description	QTY
A		Front Right Side Panel	1
B		Front Left Side Panel	1
C		Back Right Side Panel	1
D		Back Left Side Panel	1
E		Front Curved Panel	1
F		Back Curved Panel	1
G		Backrest Panel	1
H		Seat Panel	1
I		Front Seat Panel	1
J		Top Support Bar	1
K		Bottom Support Bar	1
L		Support Arm	1
M		Support Leg	1

Hardware:

Label	Picture	Description	QTY
①		Bolt (M6x32mm)	13
②		Bolt (M6x38mm)	3
③		Bolt (M6x45mm)	13
④		Screws (M6x35mm)	4
⑤		Washer (M6/16x5mm)	3
⑥		Allen Wrench	1

Assembly Preparation :

Before Beginning Assembly:

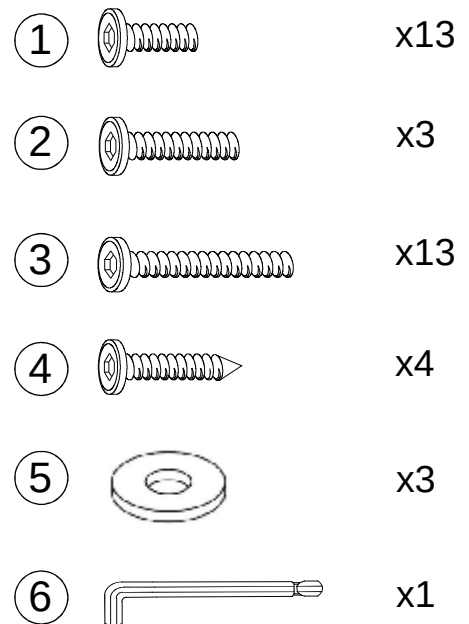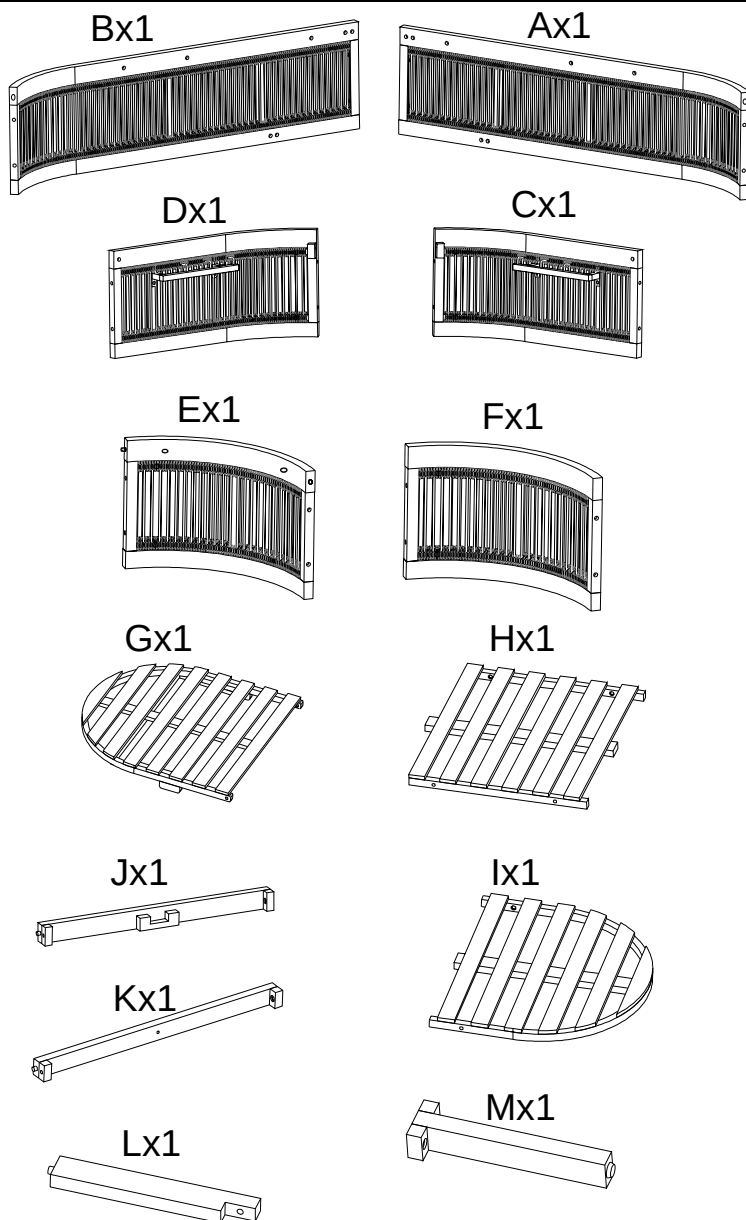

- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-




- Assemble on a clean non-marring surface (packing foam)-



- Save all packaging until finished-

Assembly Steps:


Overview

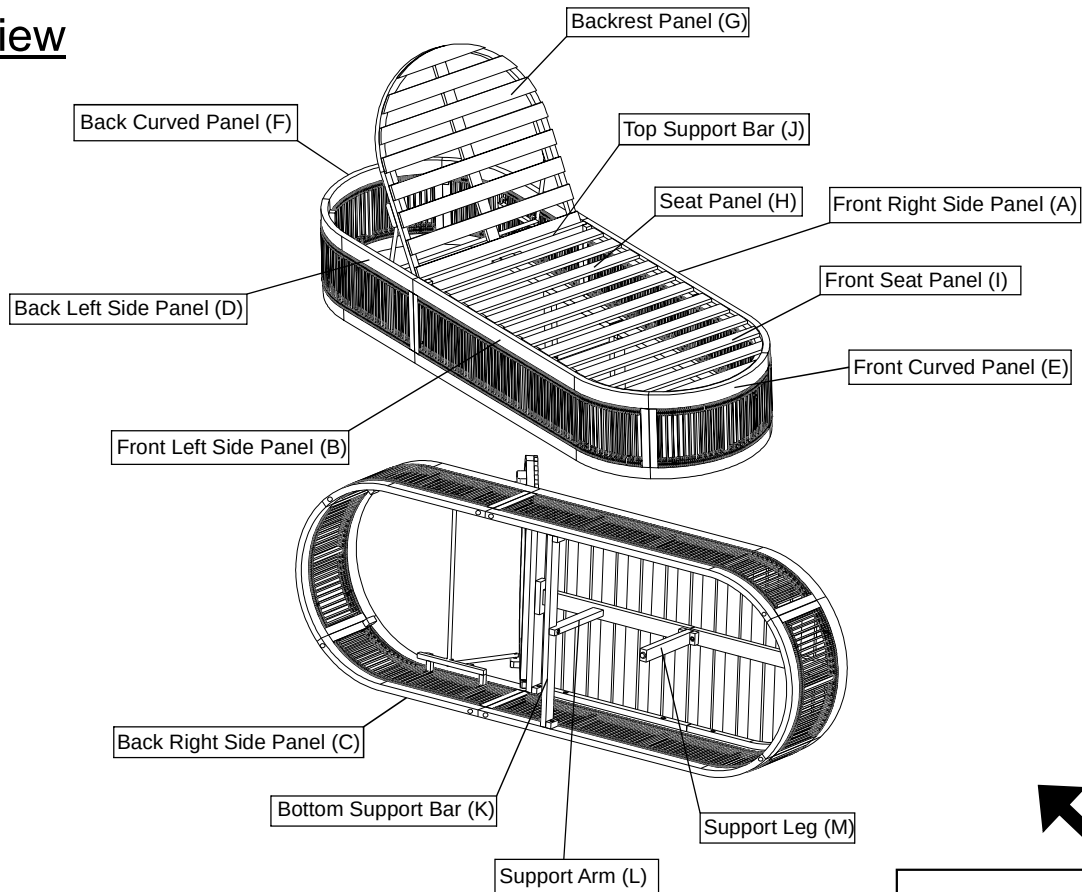

FRONT FACING


This Chaise Lounger has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the Chaise Lounger parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

Step 1

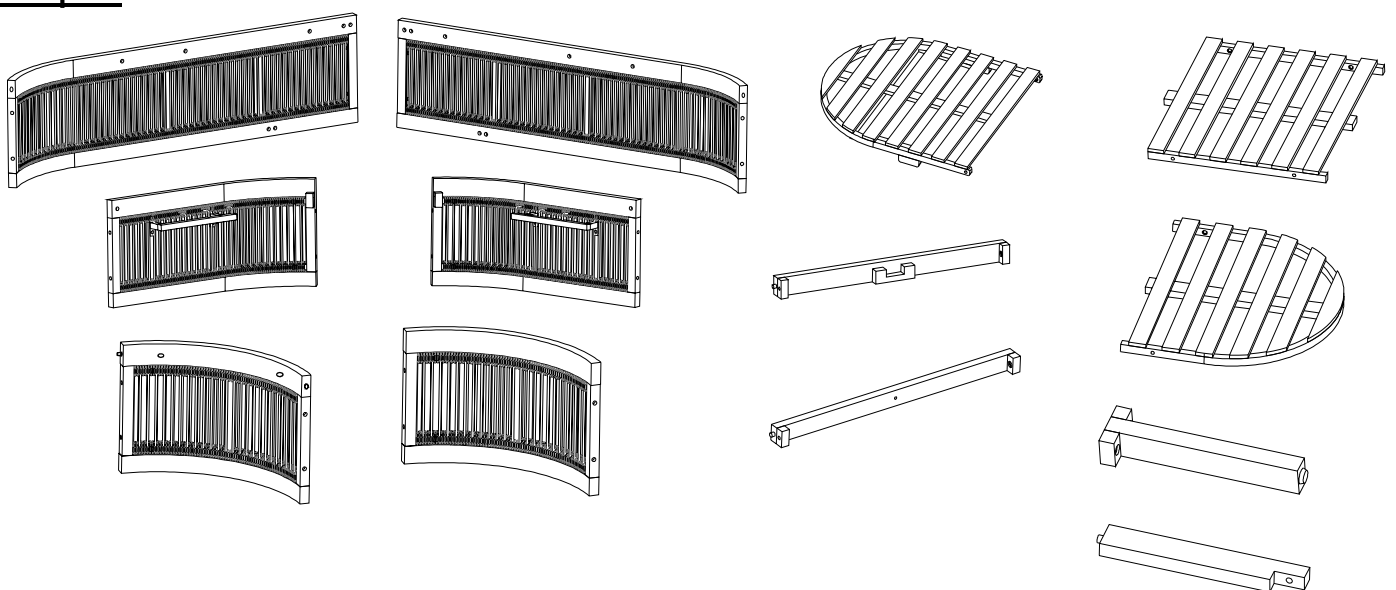

Unpack and place all parts on a clean, non-marring surface.


Step 2

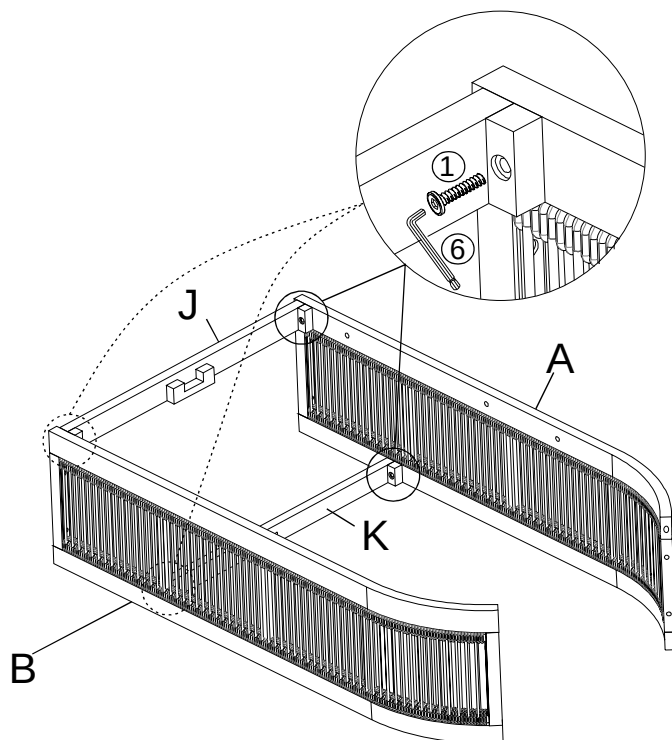

Place the Front Right Side Panel (A), Front Left Side Panel (B), Top Support Bar (J) and Bottom Support Bar (K) on a clean, non-marring surface. Attach the Top Support Bar (J) and Bottom Support Bar (K) to the Front Right Side Panel (A) and Front Left Side Panel (B) by using Bolt (1) with Allen Wrench (6) as shown above.

Do not fully tighten the bolts at this time.


Step 3

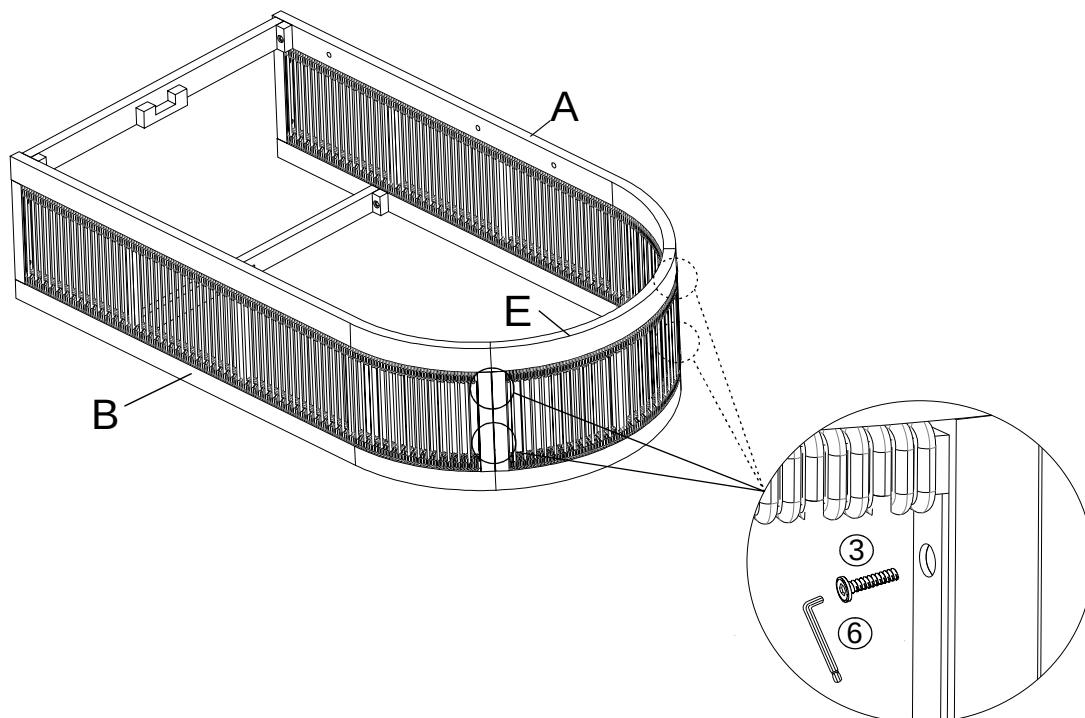

With the help of your adult partner, attach the Front Curved Panel (E) to the Front Right Side Panel (A) and Front Left Side Panel (B) by using Bolt (3) with the Allen Wrench (6), as shown in the picture above.

Do not fully tighten the bolts at this time.


Step 4

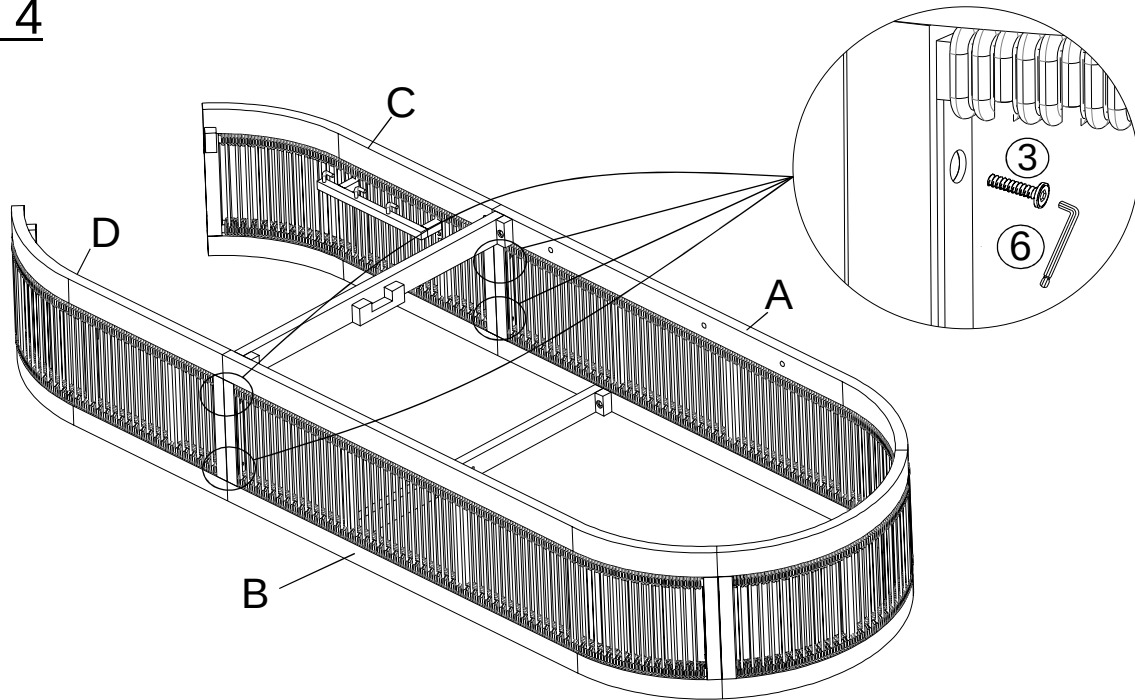

With the help of your adult partner, attach the Back Right Side Panel (C) and Back Left Side Panel (D) to the Front Right Side Panel (A) and Front Left Side Panel (B) using by Bolt (3) with Allen Wrench (6) as shown in the picture above.

Do not fully tighten the bolts at this time.


Step 5

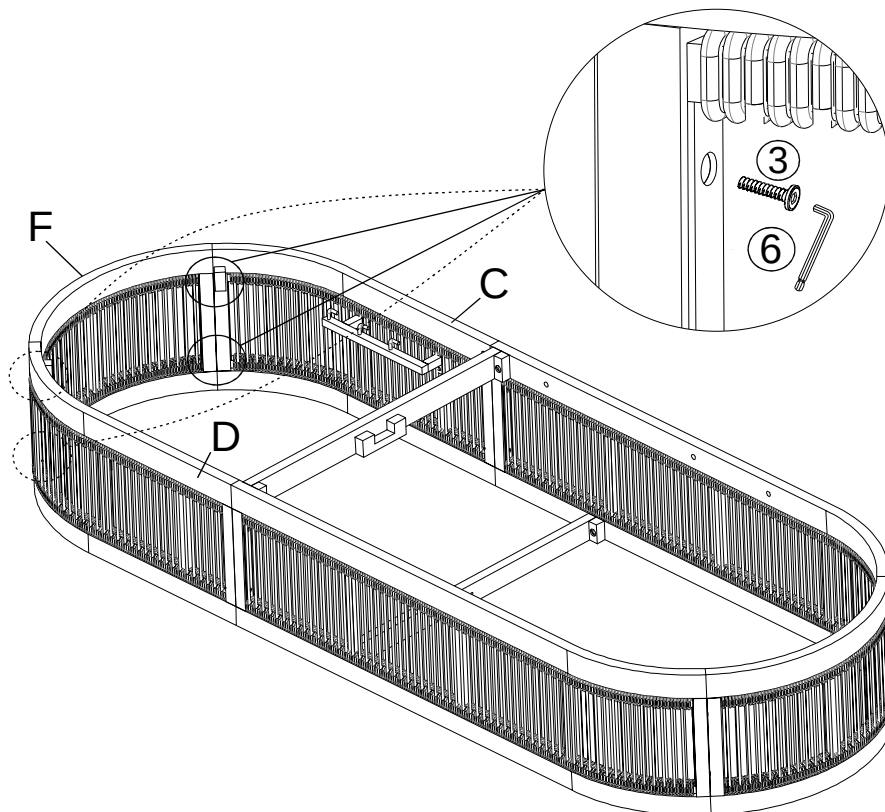

With the help of your adult partner, attach the Back Curved Panel (F) to the Back Right Side Panel (C) and Back Left Side Panel (D) using by Bolt (3) with the Allen Wrench (6) as shown in the picture above.


Do not fully tighten the bolts at this time.

Step 6

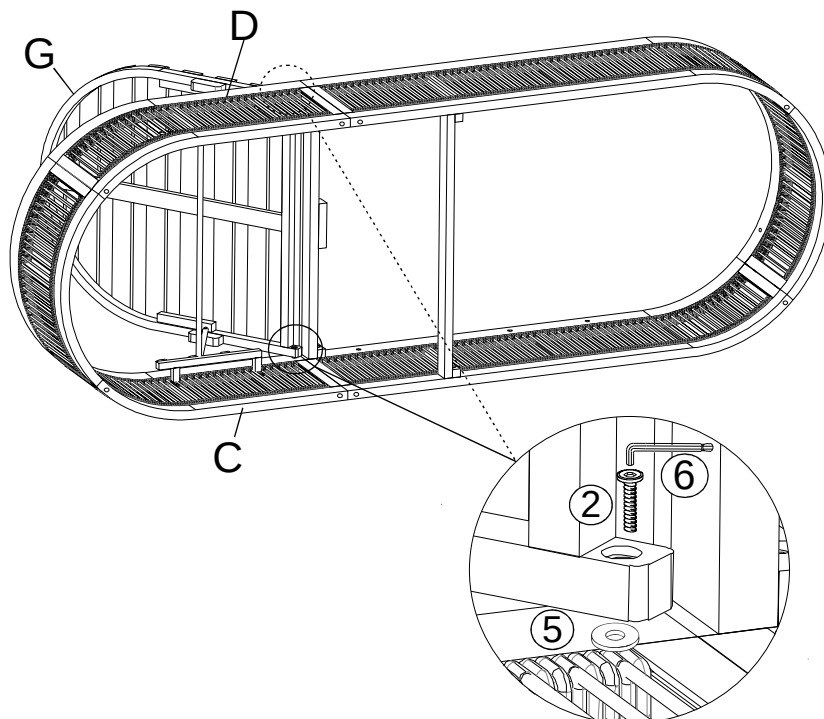


With the help of your adult partner, carefully flip the the assembled part in step 5 to the side as shown in the picture. Attach the Backrest Panel (G) to the Back Right Side Panel (C) and Back Left Side Panel (D) by using Bolt (②) and Washer (⑤) with Allen Wrench (⑥), as shown in the picture above.
Do not fully tighten the bolts at this time.

Step 7

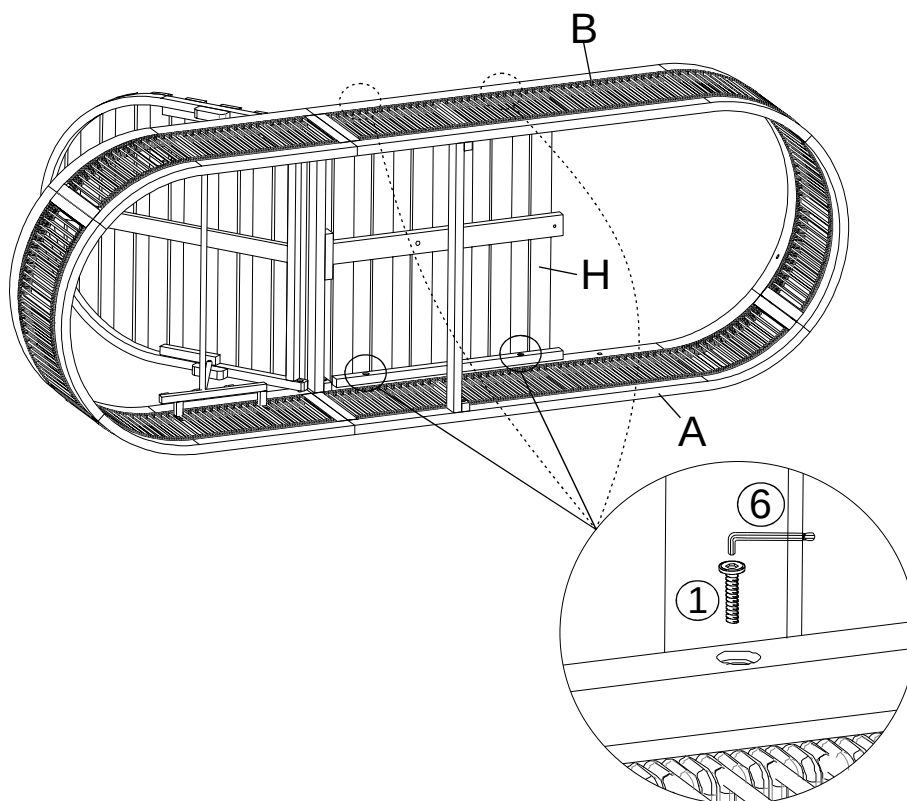

With the help of your adult partner, attach the Seat Panel (H) to the Front Right Side Panel (A) and Front Left Side Panel (B) using by Bolt (①) with Allen Wrench (⑥), as shown in the picture above.
Do not fully tighten the bolts at this time.


Step 8

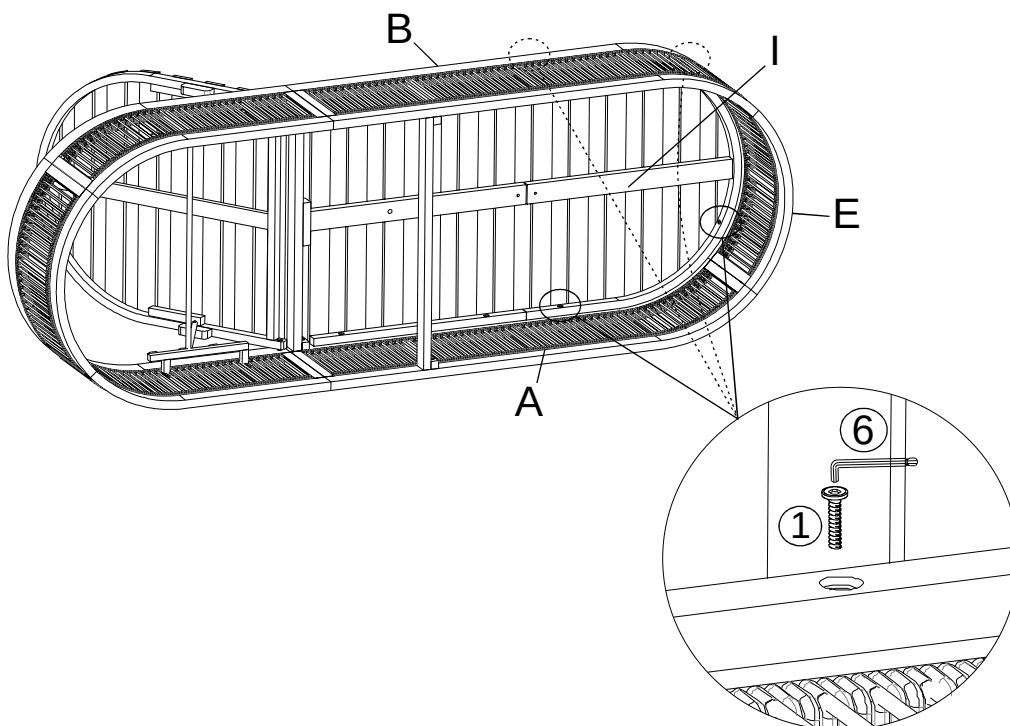

With the help of your adult partner, attach the Front Seat Panel (I) to the Front Right Side Panel (A), Front Left Side Panel (B) and Front Curved Panel (E) using by Bolt (①) with Allen Wrench (⑥), as shown in the picture above.

Do not fully tighten the bolts at this time.


Step 9

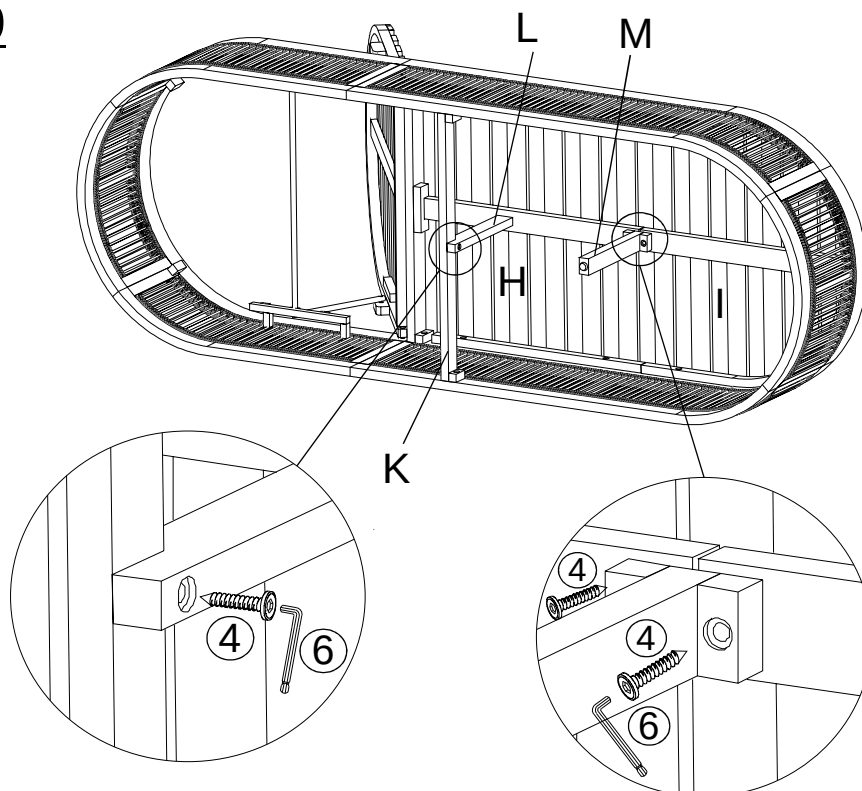

With the help of your adult partner, Attach the Support Arm (L) and Support Leg (M) to the Seat Panel (H) Front Seat Panel (I) and Bottom Support Bar (K) using by Screws (④) with Allen Wrench (⑥), as shown in the picture above.

Do not fully tighten the screws at this time.

Step 10

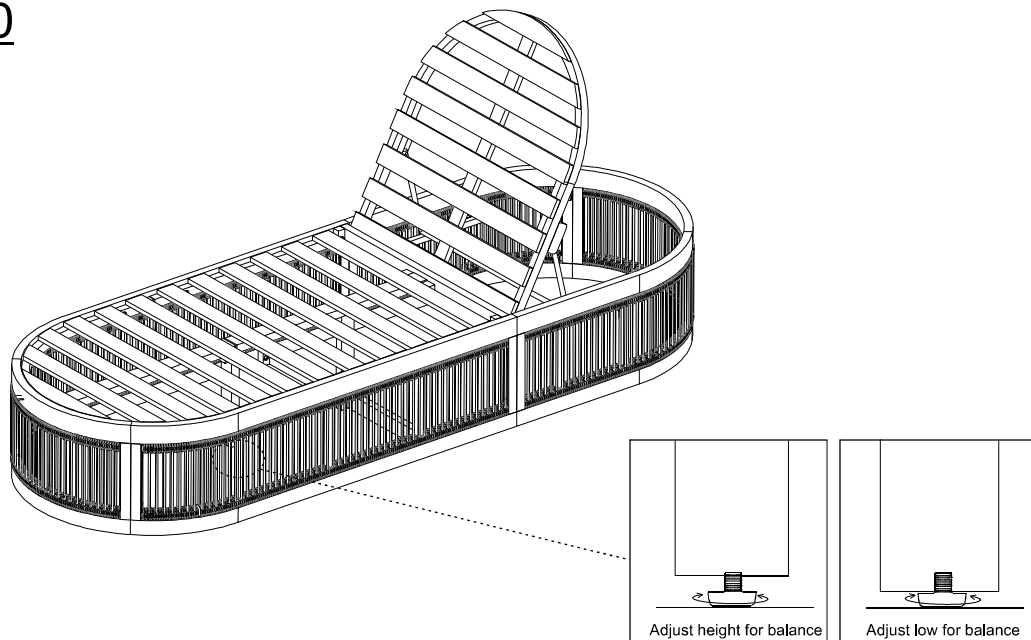

Adjust Pre-installed Levellers height for balance

EXPERT pressure, forwards, onto the Seat Panel.


This pressure will help the Legs and Seat Panel reach alignment at all joints.

In a sequence manner, gradually tighten all Bolts at all joints until evenly secured.

With assistance from your adult partners, turn the Chaise Lounger right side up.

Adjust the Pre-installed Levelers in Support Leg (M) to desired height to avoid wobbles.

Step 11

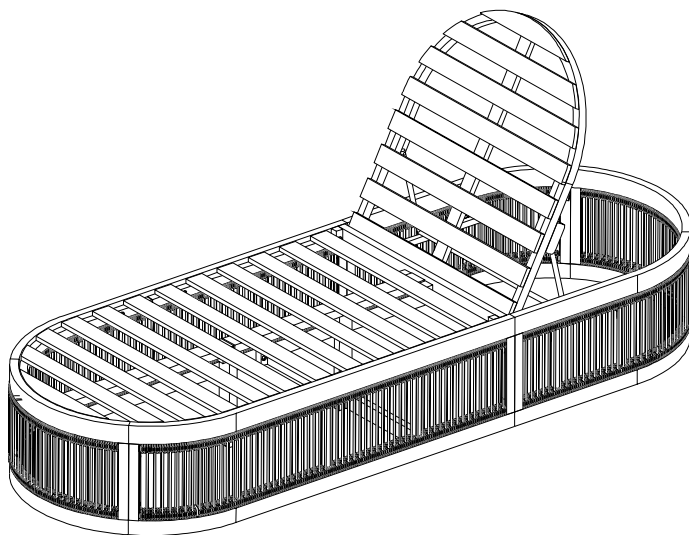

Align the Backrest of the Chaise Lounger in position you want as picture above.

Your Chaise Lounger is ready for use.

This Chaise Lounger can only be used on a flat, level surface.

Questions & Answers about Proposition 65

- What is Proposition 65?

Proposition 65 requires businesses to provide warnings to Californians about significant exposures to chemicals that cause cancer, birth defects or other reproductive harm. These chemicals can be in the products that Californians purchase, in their homes or workplaces, or that are released into the environment. By requiring that this information be provided, Proposition 65 enables Californians to make informed decisions about their exposures to these chemicals.

Proposition 65 also prohibits California businesses from knowingly discharging significant amounts of listed chemicals into sources of drinking water.

Proposition 65 requires California to publish a list of chemicals known to cause cancer, birth defects or other reproductive harm. This list, which must be updated at least once a year, has grown to include approximately 900 chemicals since it was first published in 1987.

- What types of chemicals are on the Proposition 65 list?

The list contains a wide range of naturally occurring and synthetic chemicals that include additives or ingredients in pesticides, common household products, food, drugs, dyes, or solvents. Listed chemicals may also be used in manufacturing and construction, or they may be byproducts of chemical processes, such as motor vehicle exhaust.

- What does a warning mean?

If a warning is placed on a product label or posted or distributed at a workplace, a business, or in rental housing, the business issuing the warning is aware or believes that it is exposing individuals to one or more listed chemicals.

By law, a warning must be given for listed chemicals unless the exposure is low enough to pose no significant risk of cancer or is significantly below levels observed to cause birth defects or other reproductive harm.

- Where can I get more information on Proposition 65?

If you have specific questions on the administration or implementation of Proposition 65, you can contact OEHHA's Proposition 65 program at P65.Questions@oehha.ca.gov, or by phone at (916) 445-6900.