



Affordable. Reliable. Home Improvement.

CART SPREADERS

Model: 2034

VEVOR Support Center




2034

VEVOR

Affordable. Reliable. Home Improvement.

CART SPREADER

MODEL:2034

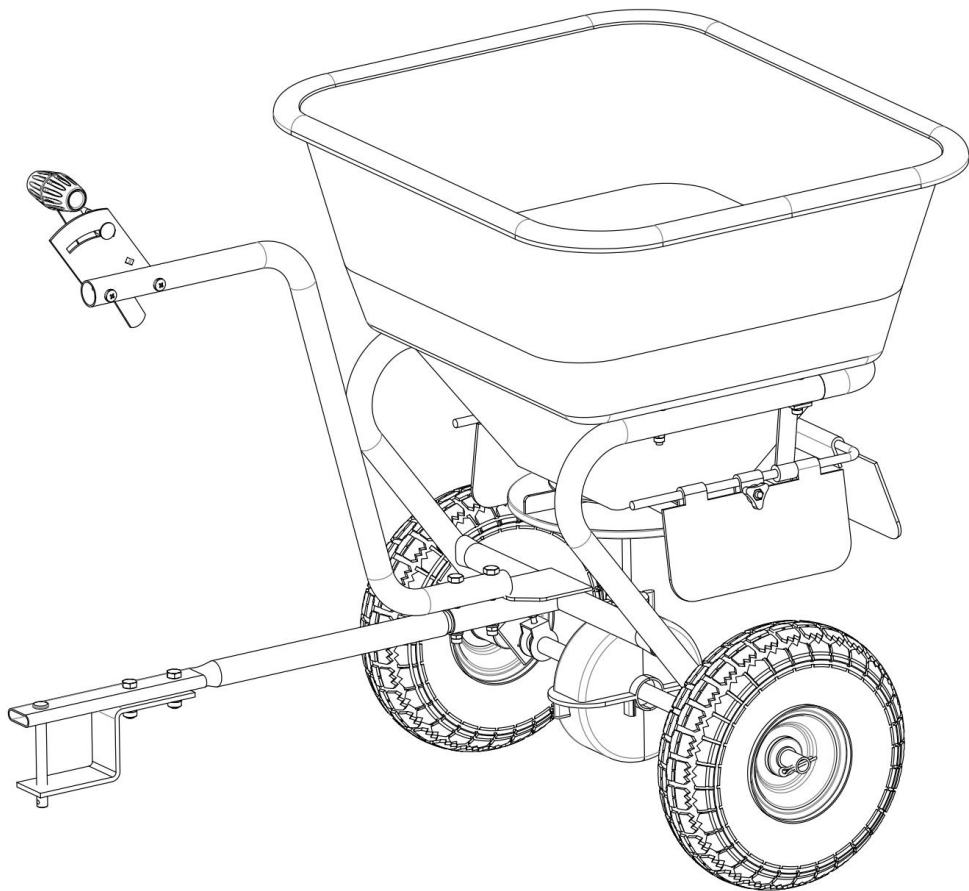

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

WARNING:

Read this material before using this product. Failure to do so can result in serious injury.

Assembly precautions





1. Assemble only according to these instructions. Improper assembly can create hazards.
2. Wear ANSI-approved safety goggles and heavy-duty work gloves during assembly.
3. Keep the assembly area clean and well-lit.
4. Keep bystanders out of the area during assembly.
5. Do not assemble if tired or when under the influence of alcohol, drugs or medication.
6. The product capabilities apply to properly and completely assembled products only.
7. Assemble on a flat, level, hard and smooth surface capable of safely supporting the Cart Spreader.
8. For additional information regarding the parts listed in the following pages, please refer to the Assembly Diagram of this manual. Unwrap and separate all parts in a clean work area.


Use precautions

1. DO NOT SIT OR STAND ON THIS ITEM.
2. This product is not a toy. Do not allow children to play with or near this item.
3. Do not exceed specified weight capacities.
4. Use as intended only.
5. Inspect before every use; do not use if parts are loose or damaged.

SAVE THIS MANUAL


PARTS LIST

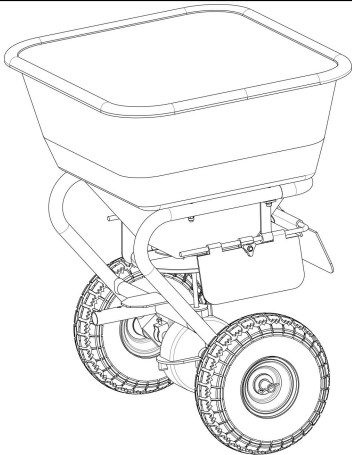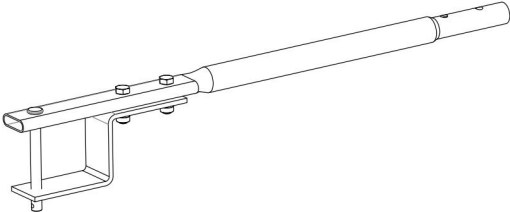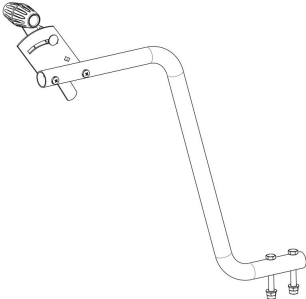No.	Qty.	Part picture	Name
A	x1		Cart Spreader
B	x1		Traction Rod
C	x1		Tow Bar
D	x1		Transparent cover
E	x1		Screen mesh

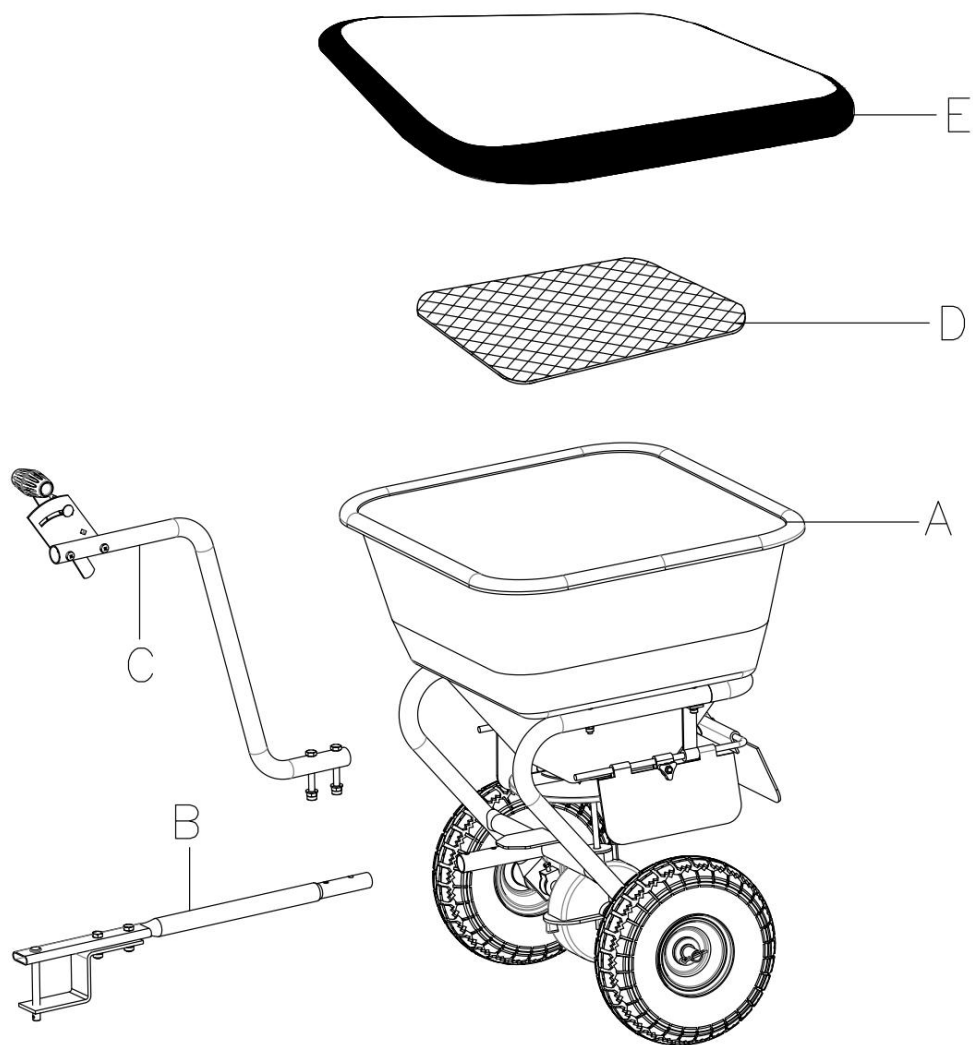



ASSEMBLY STEP

Step 1

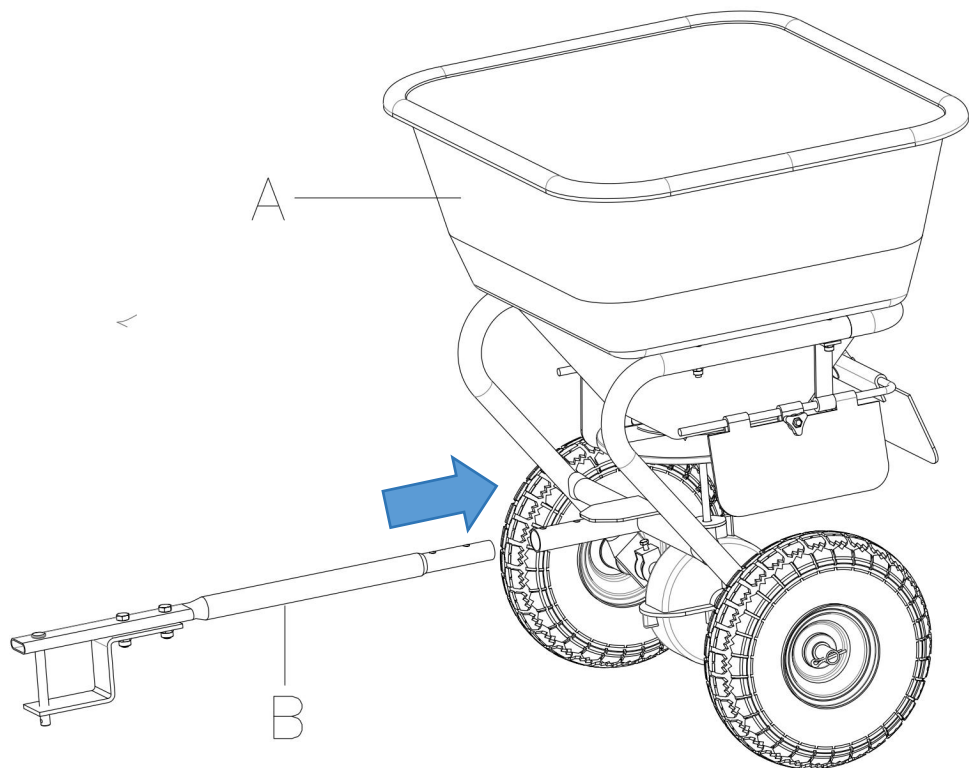


Insert the traction rod (B) into the fixed mounting position of the cart spreader (A). During operation, ensure that the rod is accurately aligned with the mounting holes.

Step 2

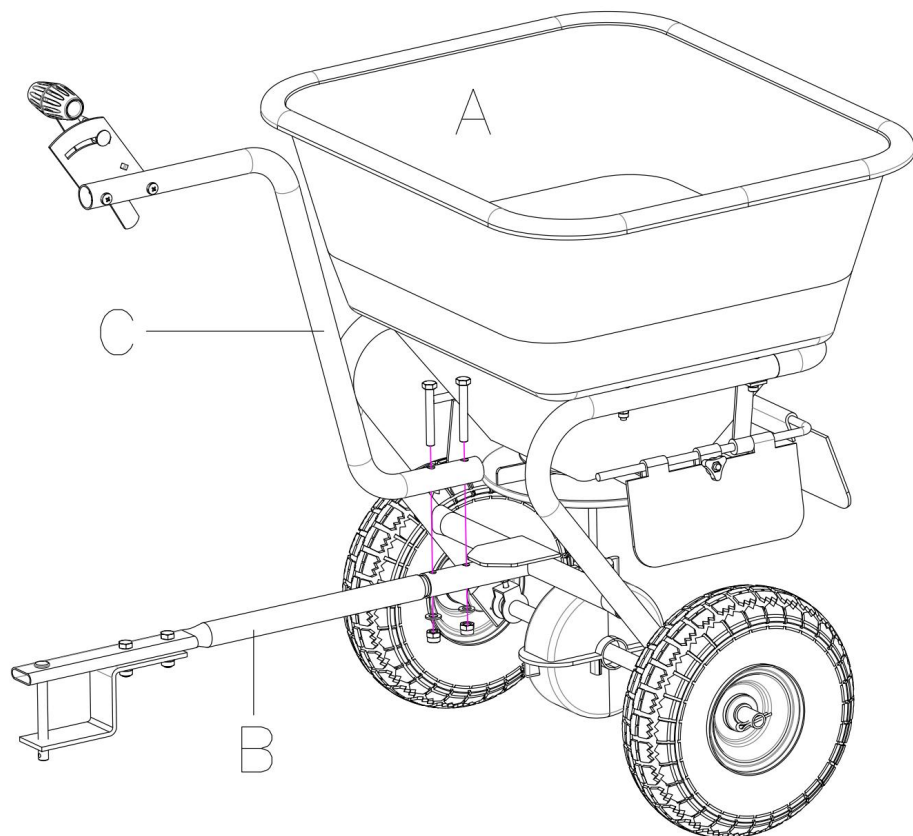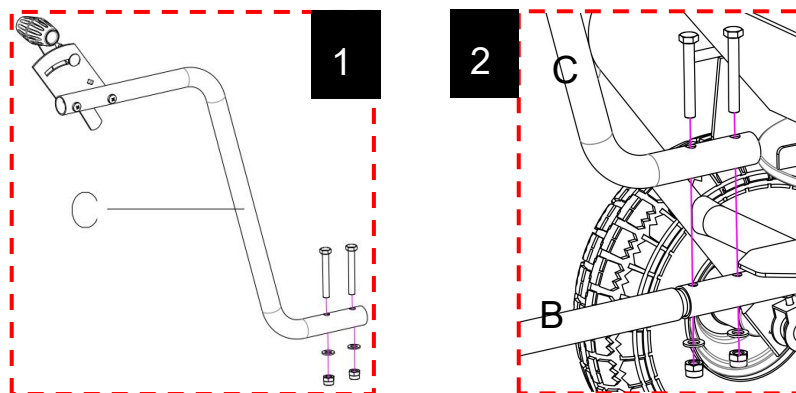


1. Remove the screws and keep them for the next installation step.
2. Use the screws removed earlier to install the tow bar (C) at the traction rod (B).

Step 3

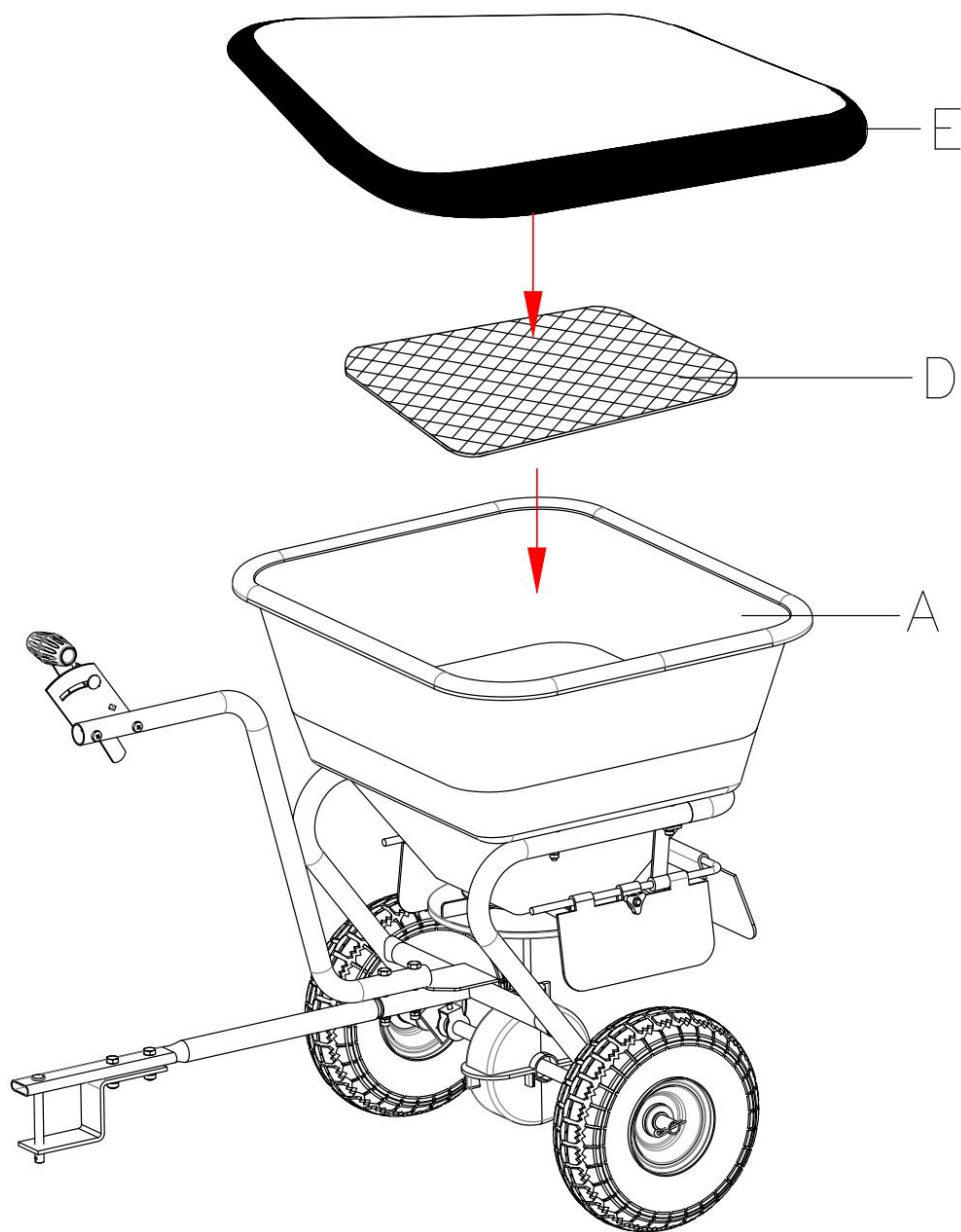

Place the screen mesh(E) in position and cover it with the transparent cover(D).

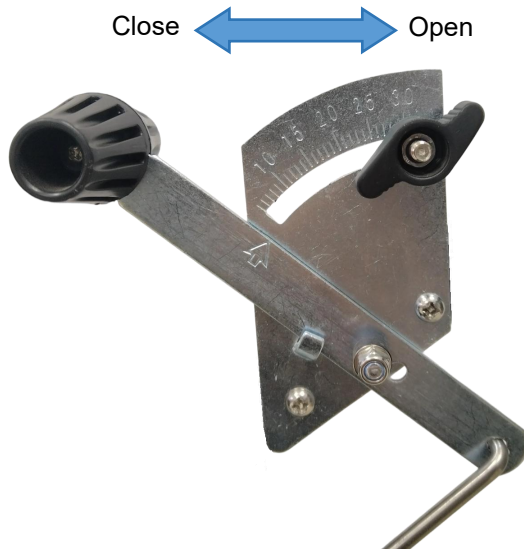

HOW TO USE THE SPREADER TROLLEY

TO OPEN- Push the Control Lever forward until it stops against button.

TO CLOSE- Pull the control Lever fully back toward Operator.

Follow the instructions provided by the manufacturer of the spreading material.

NOTE: Make sure that the spreading material is evenly distributed. The spreading material must be dry.

1. Before feeding in the spreading material, set the dispensing lever to the OFF position (dispensing flap closed).
2. Fill the spreader trolley hopper.
3. To adjust the volume of spread, set the dispensing lever to the desired position.
4. In order to spread or scatter the material, drive the spreader trolley at an even speed (the higher the speed, the greater the scattering distance).
5. Close the dispensing flap as soon as you stop the spreader trolley (dispensing lever in OFF position).

Manufacturer: Shanghaimuxinmuyeyouxiangongsi

Address: Shuangchenglu 803nong11hao1602A-1609shi, baoshanqu, shanghai 200000 CN.

Imported to AUS: SIHAO PTY LTD. 1 ROKEVA STREETEASTWOOD NSW 2122 Australia

Imported to USA: Sanven Technology Ltd. Suite 250, 9166 Anaheim Place, Rancho Cucamonga, CA 91730

UK	REP
-----------	------------

YH CONSULTING LIMITED. C/O YH Consulting
Limited Office 147, Centurion House, London
Road, Staines-upon-Thames, Surrey, TW18 4AX

EC	REP
-----------	------------

E-CrossStu GmbH
Mainzer Landstr.69,
60329 Frankfurt am Main.

