

USER GUIDE

RECESSED MEDICINE CABINET DOUBLE DOOR WITH LED LIGHTING



IMPORTANT SAFETY INFORMATION

Please read through this installation instruction so you will know how to install and operate your model properly. Keep this document in a safe place for future reference after use.

 WARNING


This product must be installed in accordance with the installation instruction by qualified technician. Failure to follow instruction could result in death or serious bodily injury.

 CAUTION

This product must be serviced by qualified personnel. ALWAYS unplug the power cord or turn off the circuit breaker before service.

PACKAGE CONTENTS

Cabinet

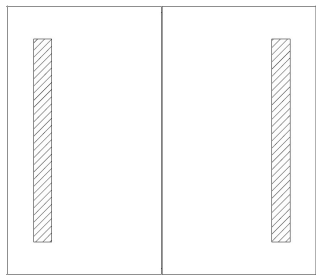

(x1)

Glass Shelf




(x2)

Shelf Support Pin




(x8)

Wood Screw




(x4)


INSTALLATION

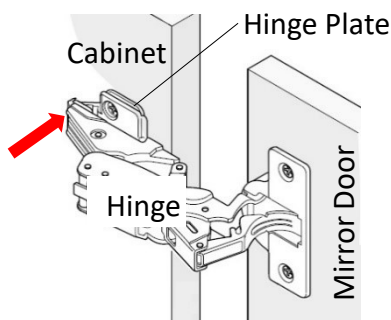


1. Unplug the cable from the Mirror Door to electrical enclosure. Remove the Mirror Door by pulling on the tab behind the Hinge to detach the hinge from the Hinge Plate. Remove the TOP hinge plate.

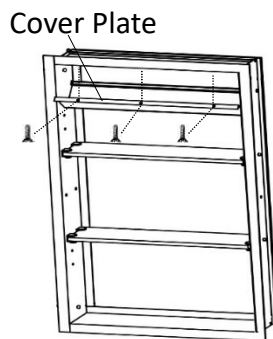


2. Loosen the electrical enclosure Cover Plate by removing the 3 screws and pivot down the Cover Plate.

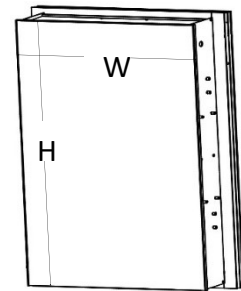


3. Measure the W (width) and the H (height) of the back of the cabinet

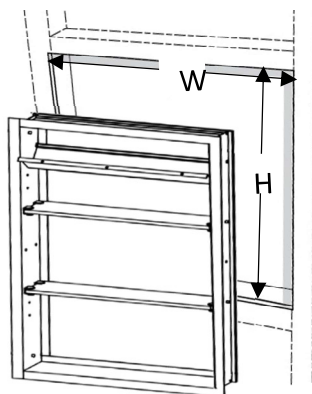


4. Frame out the wall cavity so the cabinet fits tightly into the recess.

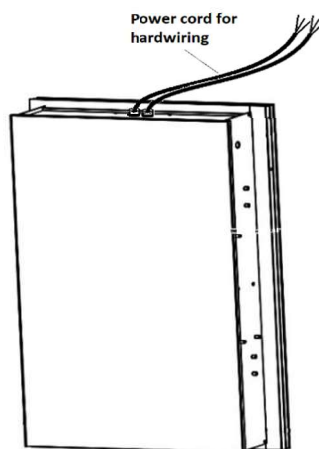

5. Power cord for hardwiring

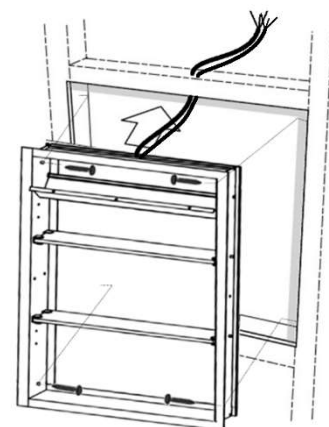

6. Insert and secure the cabinet; hardwire the power cord according to local electrical codes. Connect the load (black) wire of the Light cable (white) to wall switch if used. Connect the load wire of the Outlet cable (black) to hot wire.

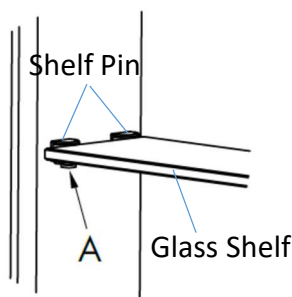


7. Insert Shelf Pins to desired height. Slide the Glass Shelf into position and tighten the plastic set screw (A)

8. Reinstall the Cover Plate and the Mirror Door(s)



- This mirror is NOT designed to work with dimmable wall switch.

INSTALLATION DIMENSIONS

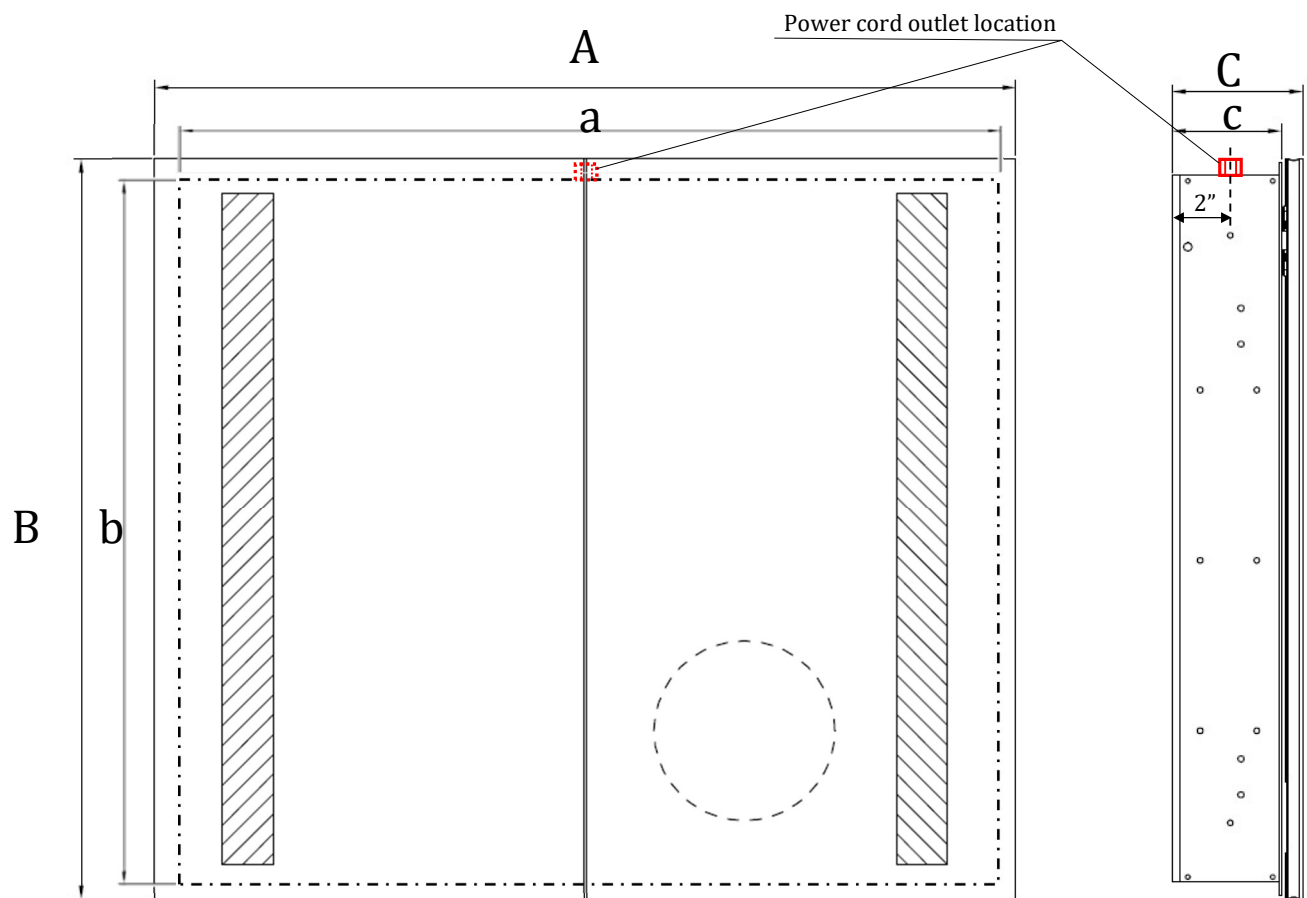

Overall Dimensions			Rough in Dimensions			Brightness (Lumen)	Power Consumption (Watt)
A	B	C	a	b	c		
30	26	4-1/2	29	25	4	1065	17
40	26	4-1/2	39	25	4	1410	23

CARE AND MAINTENANCE

Clean the mirror with a soft, damp cloth and dry thoroughly with a soft towel. Do NOT allow the edges of the mirror to get or remain wet over a period of time. Please do NOT use glass cleaner that contains ammonia or vinegar. Never spray any cleaner directly onto a mirror. Instead apply the cleaner to a soft cloth and then wipe the mirror. Make sure no commercial cleaner comes in contact with the edge or backing.


WARRANTY

5 years Limited Warranty

LED mirrors have been manufactured under the highest standards of quality and workmanship. We warrant to the original purchaser that our LED mirrors are free from any defects in material and workmanship by normal use for 5 years from date of purchase. A replacement for any defective part will be supplied FREE OF CHARGE for installation by you. This warranty is valid to the original purchaser only and does not cover product damage due to installation error, product abuse, product misuse, etc. whether or not performed by professionals. We will not be responsible for labor charges and/or damage incurred in installation, repair or replacement nor for any incidental or consequential damages. All warranty claims should be sent to us or call our customer service representative will contact you promptly to help you go through the process until you are completely satisfied with our products.

SHORTAGE OR DAMAGED PRODUCTS All shipments are carefully inspected and counted before leaving our distribution centers. Please inspect carefully on receipt of merchandise, noting any discrepancy or damage on the carrier's freight bill at that time, and file a claim with the carrier within 10 days from receipt of order. Then contact our office. Deductions from invoices for shortages or damage claims will not be allowed.

Exploded view

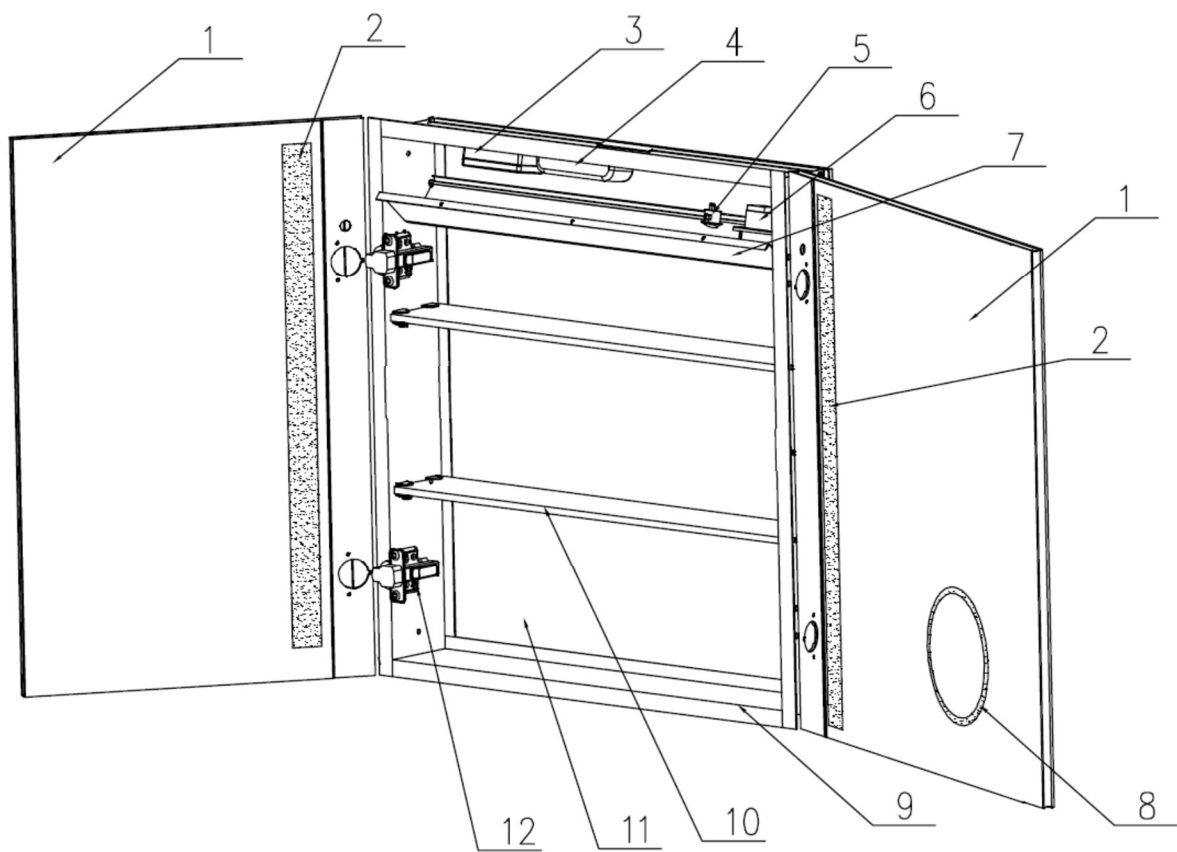

Part	Description
1	Mirror Door
2	LED Light
3	Connection Box
4	LED Driver
5	Rocker Switch
6	110V Outlet
7	Cover Plate
8	Cosmetic Mirror
9	Aluminum Frame
10	Glass Shelf
11	Mirror Back Board
12	Hinge