


Brondell®

LumaWarm Heated Toilet Seat with Nightlight

Model: L60-EW, L60-EB, L60-RW, L60-RB

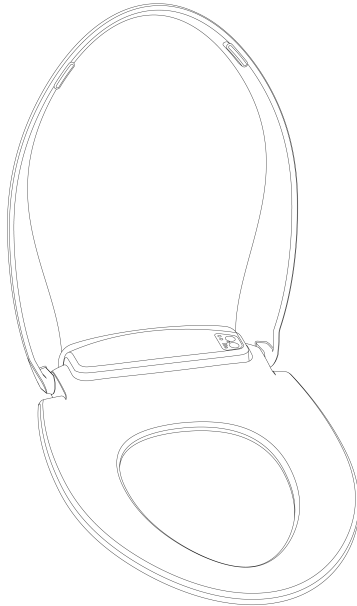

PLEASE DO NOT RETURN THIS PRODUCT TO THE STORE BEFORE CONTACTING BRONDELL



IMPORTANT SAFEGUARDS




GROUNDING INSTRUCTIONS

This product should be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This product is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into a 120V GFCI outlet that is properly installed and grounded.

DANGER – Improper use of the grounding plug can result in the risk of electric shock. If repair or replacement of the cord or plug is necessary, do not connect the grounding wire to either flat blade terminal. The wire with insulation having an outer surface that is green with or without yellow stripes is the grounding wire.

Check with a qualified electrician or serviceman if the grounding instructions are not completely understood, or if in doubt as to whether the product is properly grounded.

If it is necessary to use an extension cord, use only a three wire extension cord that has a three-blade grounding plug, and a three-slot receptacle that will accept the plug on the product. Replace or repair a damaged cord.

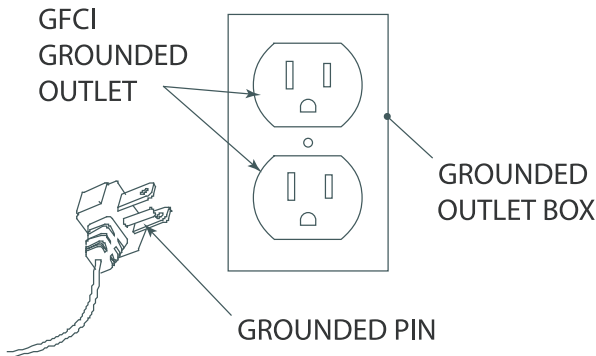

IMPORTANT SAFETY INSTRUCTIONS

When using electrical products, especially when children are present, basic safety precautions should always be followed, including the following:



IMPORTANT SAFEGUARDS



READ ALL INSTRUCTIONS BEFORE USING

DANGER – To reduce the risk of electrocution:

1. Do not use while bathing.
2. Do not place or store product where it can fall or be pulled into a tub or tank.
3. Do not place in or drop into water or other liquid.
4. Do not reach for a product that has fallen into water. Unplug immediately.

WARNING – To reduce the risk of burns, electrocution, fire, or injury to persons:

1. Close supervision is necessary when this product is used by, on, or near children or invalids.
2. Use this product only for its intended use as described in the owner's manual. Do not use attachments not recommended by the manufacturer.
3. Never operate this product if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the product to a service center for examination and repair.
4. Keep the cord away from heated surfaces.
5. Never use while sleepy, drowsy, intoxicated, or under the influence of medication that may affect your judgement.
6. Never drop or insert any object into any opening or hose.
7. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
8. Connect this product to a properly grounded GFCI outlet only. See Grounding Instructions.

SAVE THESE INSTRUCTIONS

INFORMATION TO THE USERS

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy. If not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING

Any changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment and void warranty.



IMPORTANT SAFEGUARDS




For safety reasons, please read this entire manual before use.

Danger - Possibility of Electric Shock!

Use the correct voltage according to the Specifications and connect to a three prong GFCI grounded outlet.




Do not use harsh brushes or abrasive detergents to clean the LumaWarm. Use only mild soap and a soft cloth for cleaning.



Please use caution not to spray water directly on the LumaWarm. This could cause serious damage to the product, and may result in electric shock or fire.



Do not disassemble or modify the LumaWarm. Only an authorized service representative should perform repairs.



When not in use for a long period of time, plug out and keep the power cord in good condition not to cause any damage.

Specifications

Model	L60-EW/L60-EB	L60-RW/L60-RB
Rated Power Source	AC 120V 60Hz	
Rated Power Consumption	55 W	
Seat & Lid	Soft Closing	
Seat Heat Temperature	off (room temp) / Low (36 / 97) / Mid (38 / 100) / High (40 / 104) (°C / °F)	
Product Dimensions	14.3W x 20L x 2.8H (in) 364W x 509L x 72H (mm)	14.3W x 18.5L x 2.8H (in) 364W x 470L x 72H (mm)
Product Weight	2.1 (kg) / 4.6 (lbs)	2.0 (kg) / 4.4 (lbs)
Power Cord Length	1.2 meter / 4 feet	

Parts List



LumaWarm
Seat



Mounting
Hardware

Before Installation

Items required but NOT included: Screwdriver, wrench.

Be sure that all parts are on hand before proceeding with the installation.

Under normal circumstances, tools are not required for the installation process.

However, some toilet bowls may be designed with hard to reach areas, in which case, a screwdriver and wrench may be required.



Installation




Please read these instructions carefully before installing the LumaWarm.
Failure to do so may result in damage to the product.

1) Removing Existing Toilet Seat


- Lift hinge covers and use a screwdriver to remove the mounting bolts.
- Remove the toilet seat.

Steps may vary by type of seat.

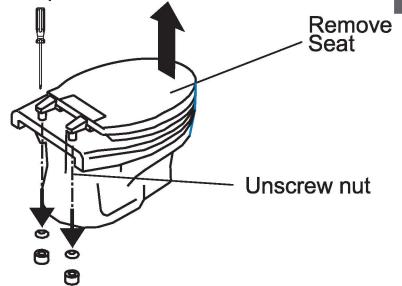

2) Installing the LumaWarm

- Insert the adjustable Mounting Bolts into appropriate grooves on the bottom of the LumaWarm (US for United States & EU for European).
- Insert the Mounting Bolts through the toilet mounting holes.
- Adjust the seat by sliding it forward or backward along the track to obtain optimum position over the toilet bowl.
- Insert Rubber Washer, Plastic Washer and Plastic Wing-nut, from under the toilet, onto each Mounting Bolt and fasten until snug (repeat process on the other side).
- Use the Wrench to assist with tightening the Plastic Wing-nut if necessary.

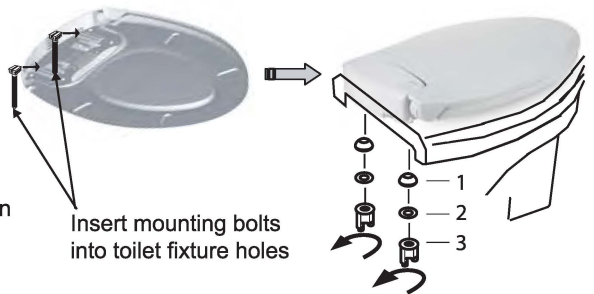

3) Installing the LumaWarm (alternate)

Some toilet fixtures are designed with only top-side access. To install the LumaWarm onto these types of fixtures, an Alternate Mounting Kit is required.

To get a set of the Alternate Hardware, order online at www.brondell.com or call 1-888-542-3355




Installation



Plugging In the LumaWarm

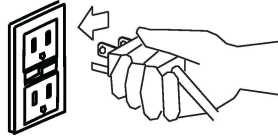

a) Plug into a grounded GFCI outlet.



CAUTION:
Only use a grounded
GFCI outlet


Operation

Seat Temperature Setting


To adjust seat temperature, gently press the  button. Each time the  button is pressed, a red LED will be lit, representing a higher level of temperature.
Temp. adjustment cycle: off / Low / Mid / High

Red LED indicates
Seat Heat temperature
setting


Press the button
to go through
the Seat Heat
adjustment cycle

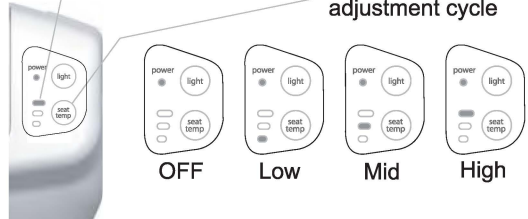

Nightlight Setting

Turn the nightlight on/off by pressing the "light" button. 

Turn the nightlight
on/off by pressing
the "light" button.

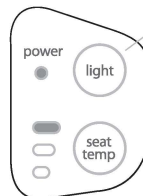



Maintenance



Always unplug the LumaWarm before cleaning!

Seat Cleaning

Use a soft, damp cloth and mild cleanser (such as dish soap) to wipe down the seat and lid. NEVER scrub or use harsh, abrasive products to clean the LumaWarm.

For more thorough cleaning, you may remove the LumaWarm. To release, unscrew and remove the Plastic Wing-nut, Plastic Washer and Rubber Washer that are against the bottom of the toilet mounting holes.

Perform the reverse operation when re-installing the LumaWarm back onto the toilet

Troubleshooting

	Issue	Possible Causes	Solution
1	No power	1) GFI not working	1) Reset GFI outlet
2	Seat not warm	1) Power plug not installed into socket 2) Seat temp set to off	1) Insert power plug into socket 2) Set seat temp
3	Nightlight not working	1) Nightlight off 2) Power plug not installed into socket	1) Turn nightlight power on 2) Insert power plug into socket
4	Seat is loose	1) Mounting hardware is loose	1) Tighten bolts under seat

For other issues or questions please visit our website: www.brondell.com or contact Brondell Customer Service: 1-888-542-3355

Contact Information

Brondell, Inc.
P.O.Box 470085
San Francisco CA 94147-0085

Phone : 1-888-542-3355
E-mail : support@brondell.com
WEB : www.brondell.com

Warranty

1 Year Limited Warranty

Brondell warrants that all products (excluding consumable items) shall be free from defects in material and workmanship under normal use and service.

Warranties do not apply to products that are used for commercial, hospital or other non-residential application.

Residential Warranties for LumaWarm Toilet Seat Products:

- 100% Coverage of all parts and labor for the first year from original date of purchase.

Exclusions and Limitations

1. BRONDELL warrants its products to be free from manufacturing defects under normal use and service. This warranty is extended only to the ORIGINAL PURCHASER. This warranty does not apply to the Swash line of products.
2. BRONDELL's obligations under this warranty are limited to repairs or replacement, at BRONDELL's option, of products or parts found to be defective, provided that such products were properly installed and used in accordance with instructions. BRONDELL reserves the right to make such inspections as may be necessary in order to determine the cause of the defect. BRONDELL will not charge labor or parts in connection with warranty repairs for the first full year from date of purchase.
3. BRONDELL is not responsible for the cost of removal, return and/or reinstallation of products. This warranty does NOT apply to:
 - a) Damage or loss which occurs during shipment.
 - b) Damage or loss sustained through any natural or manmade causes beyond the control of BRONDELL, including but not limited to fire, earthquake, floods, etc.
 - c) Damage or loss resulting from sediments or foreign matter contained in a water system.
 - d) Damage or loss resulting from negligent or improper installation including installation of a unit in a harsh or hazardous environment.
 - e) Damage or loss resulting from removal, improper repair, modification of the product, or improper maintenance including damage caused by chlorine or chlorine related products.
4. This warranty gives you specific legal rights. You may have other rights which vary from state to state.

THIS WRITTEN WARRANTY IS THE ONLY WARRANTY MADE BY BRONDELL. REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY SHALL BE THE EXCLUSIVE REMEDY AVAILABLE TO THE PURCHASER. BRONDELL SHALL NOT BE RESPONSIBLE FOR LOSS OF USE OF THE PRODUCT OR FOR OTHER INCIDENTAL, SPECIAL, FOR CONSEQUENTIAL DAMAGES OR EXPENSES INCURRED BY THE PURCHASER OR FOR LABOR OR OTHER COSTS DUE TO INSTALLATION OR REMOVAL OR COSTS OF REPAIRS BY OTHERS, OR FOR ANY OTHER EXPENSE NOT SPECIFICALLY STATED ABOVE. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTIES, INCLUDING THAT OF MERCHANTABILITY, ARE EXPRESSLY LIMITED TO THE DURATION OF THIS WARRANTY. SOME STATES DO NOT ALLOW LIMITATIONS, SO THE ABOVE LIMITATION AND EXCLUSION MAY NOT APPLY TO YOU.

How to Obtain Service

To obtain repair service under this warranty, you must contact an authorized BRONDELL Service Center to obtain an RMA (Return Merchandise Authorization) number. Proof of purchase in the form of a copy of your original receipt must accompany the returned unit for the warranty to be valid. Take or ship the unit pre-paid to the closest Brondell authorized service center along with your RMA number and proof of purchase.

To obtain your RMA number and locate the BRONDELL Service Center location nearest you, call 1-888-542-3355.

Product Registration

To ensure you receive important warranty and product information, please register on-line at: <http://www.brondell.com/warranty>, within 10 days of purchase.

Brondell

Feels better already.

Brondell, Inc.
PO Box 470085
San Francisco, CA
94147-0085

Brondell.com/support
www.brondell.com

For Questions, Contact:

Brondell Customer Service: 1-888-542-3355
Monday–Friday, 8 a.m.–2 p.m. PT

Manufactured By

Brondell, Inc.
PO Box 470085
San Francisco, CA
94147-0085

Made in Korea

**Please retain receipt records
for any warranty claims.**

Brondell
Feels better already.

#23L60_UM_0406