

# **TP5856 Master Equipment PolyPro Lift Grooming Tub Assembly Instructions**

## **Parts List**

- (A) Tub
- (B) Major Grooming Arm (1)
- (C) Subsidiary Grooming Arm (1)
- (D) Support Grooming Arms (3)
- (E) Hose (1)
- (F) Drain (1)
- (G) Strainer (1)
- (H) Drain plug (1)
- (I) Washer (1)
- (J) Locking Ring (1)
- (K) Door (1)

## Tools Requried:

Phillips head screwdriver











1). Place the Drain (F) into the hole in the floor of the tub.



2). Screw in the Drain (F) to secure it to the tub.



3). Underneath the base of the tub, place the Washer (I) over the bottom of the Drain (F).



4). Screw the Locking Ring (J) overtop to secure.



5). Place the Strainer (G) into the Drain (F) on the floor of the tub.




6). Place the Drain Plug (H) into the Drain (F) on the floor of the tub.



7). Attach the Hose (E) to the bottom of the Drain (F) (underneath the tub base) and screw it to secure.



# **TP5856 Master Equipment PolyPro Lift Grooming Tub Assembly Instructions (Cont.)**

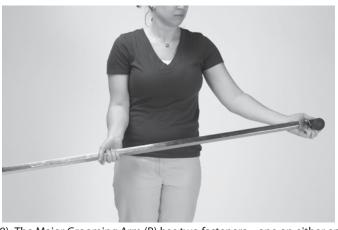





8). The Major Grooming Arm (B) has two fasteners – one on either enca). Find the Subsidiary Grooming Arm (C) and slidate) the Fe-attach the fastener you took off Loosen one of the fasteners then slide it completely off.

onto the Major Grooming Arm (B). Slide it to the of the Major Grooming Arm (B) and

Find the Subsidiary Grooming Arm (C) and slide the Fastener you took off onto the Major Grooming Arm (B). Slide it to the of the Major Grooming Arm (B) and then middle of the Major Grooming Arm (B) and then tighten it to secure it to the end of secure it by tightening the fastener.

of the Major Grooming Arm (B) and tighten it to secure it to the end of the arm. Ensure that the grooming loop holders have the loop holders pointing downwards for easy loop attachment.



11). Attach the three Support Grooming Arms (D) to the Major Grooming Arm (B) and Subsidiary Grooming Arm (C).







12). Lift the grooming arm structure and fit the base of each of the Support Grooming Arms (D) into the three arm holes on the top of the tub base.

Slide the Door (K) into the groove on the 14). Fully assembled. Base (A) to secure it.



# **TP5856 Master Equipment PolyPro Lift Grooming Tub Operating Instructions**

- · Lifts up to 220 lbs
- · Height Adjusts from 31¾" to 49½"
- · Base is durable, powder-coated, rust-resistant finish
- · Hands-free foot operated lift
- · Heavy Duty H-style base

Read all instructions before using. Designed for animal use only.

Basic safety instructions should be followed when using electrical appliances, including the following:

### **CAUTION:**

Do not leave an animal in the tub unattended. Use a grooming loop to properly restrain animal. Quick-release loops or clips are recommended to prevent injury. Do not use a choke-type lead or collar.

#### **WARNING:**

To reduce the risk of burns, fire, electrical shock, or injury to persons or pets:

- 1. Do not leave grooming tub plugged in when unattended.
- 2. Do not allow unsupervised children to play near or operate the tub.
- 3. Do not immerse motor in water or other liquids.
- Unplug tub before cleaning or servicing.
- 5. Use tub only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- 6. Never operate this grooming tub if it has a damaged cord or plug, or if it is not working properly. If tub is not working or is damaged, contact PetEdge Customer Service at 1-800-638-5754.
- 7. Keep cord away from heated surfaces.
- 8. Do not place or store this appliance where cord may be damaged by an animal or exposed to weather.
- 9. Do not pull, twist or wrap cord around tub base. Continuous stress on cord can cause damage and result in a shock hazard.
- 10. While operating grooming tub, keep cord awayfrom moving parts. If cord becomes kinked or tangled, straighten cord and inspect for damage before resuming use.

## **OPERATING INSTRUCTIONS:**

This tub is designed for use with standard 120V outlet. This grooming tub also has a polarized plug (one blade is wider that the other). As an important safety feature, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not attempt to modify the plug in any way. This tun is also designed with an automatic shut-off. Motor, transformer, and cord are all UL Approved. We recommend that this table be used with a surge protector at all times.

### **TUB OPERATION:**

- Tub is fully assembled. Before use, make sure table is level by turning leveling feet under each base leg. Plug in cord into any standard 110/120V wall outlet.
- 2. This grooming tub is equipped with identical up and down control pedals located on each side of the table base. The pedal on your right as you are facing the tub moves the tub up; the pedal on your left moves the tub down.
- 3. To reduce strain and unnecessary lifting of large animals, it is recommended to lower the tub to minimum height and let animal step up onto table before positioning table to desired height for grooming.
- 4. Once animal is positioned on table, place the grooming loop that is attached to grooming arm around animal's neck and adjust to fit comfortably.

## **CARE & MAINTENANCE:**

Rinse thoroughly after bathing pet. Make sure tub is clean and dry after use. Do not use harsh or abrasive cleaners, bleach, or tools with metal or textured parts. These can scratch or damage the tub. Check electric cord and plug for signs of damage or wear.

# **LIMITED WARRANTY**

This Master Equipment™ PolyPro Lift Grooming Tub is warranted against defective material or workmanship for one year from the date of purchase. Any Master EquipmentT™ product that is determined to be defective in material or workmanship during the warranty period will be replaced without cost to the purchaser for parts or labor. Please contact PetEdge Customer Service at 1-800-638-5754 regarding any defective product. PetEdge will not be liable under this warranty for any defect, failure or malfunction of this product caused by normal wear, abuse, misuse, unauthorized adjustments or repairs. PetEdge will not be liable for any incidental or consequential damages of any type. Any implied warranty is limited to the one-year period provided in this express warranty. Some states do not allow limitations on how long an implied warranty lasts or exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. Warranty is void if product has been modified in any manner, repaired by anyone other than PetEdge or has been subject to unreasonable use. Warranty is valid in the United States.

