



Model: Slim Zero

## Slim Zero With Night Light


**Owner's Manual & Installation Guide**



# INDEX

Thank you for purchasing BioBidet, please read through the manual carefully for appropriate use of the product.

After you read through the manual, keep it in a convenient place for future reference.

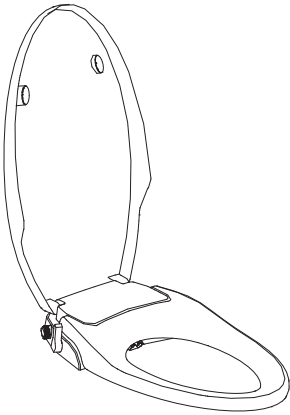

1	Configuration/Parts List-----	1/2
---	-------------------------------	-----


2	Installation -----	3
	• Precautions -----	3
	• Installation -----	3
	Pre-installation -----	3
	Installation procedure -----	4
	Connecting water hose -----	5
3	Operation -----	6
	Stop-----	6
	Bidet -----	6
	Wash -----	6
	Night Light-----	7
4	Cleaning and Maintenance -----	8

5	Self diagnosis and specifications -----	9
	Self diagnosis and trouble shooting -----	9
	Specifications -----	9
	Warranty -----	10

# BIO BIDET® SLIM ZERO

## 1 Configuration


### Product

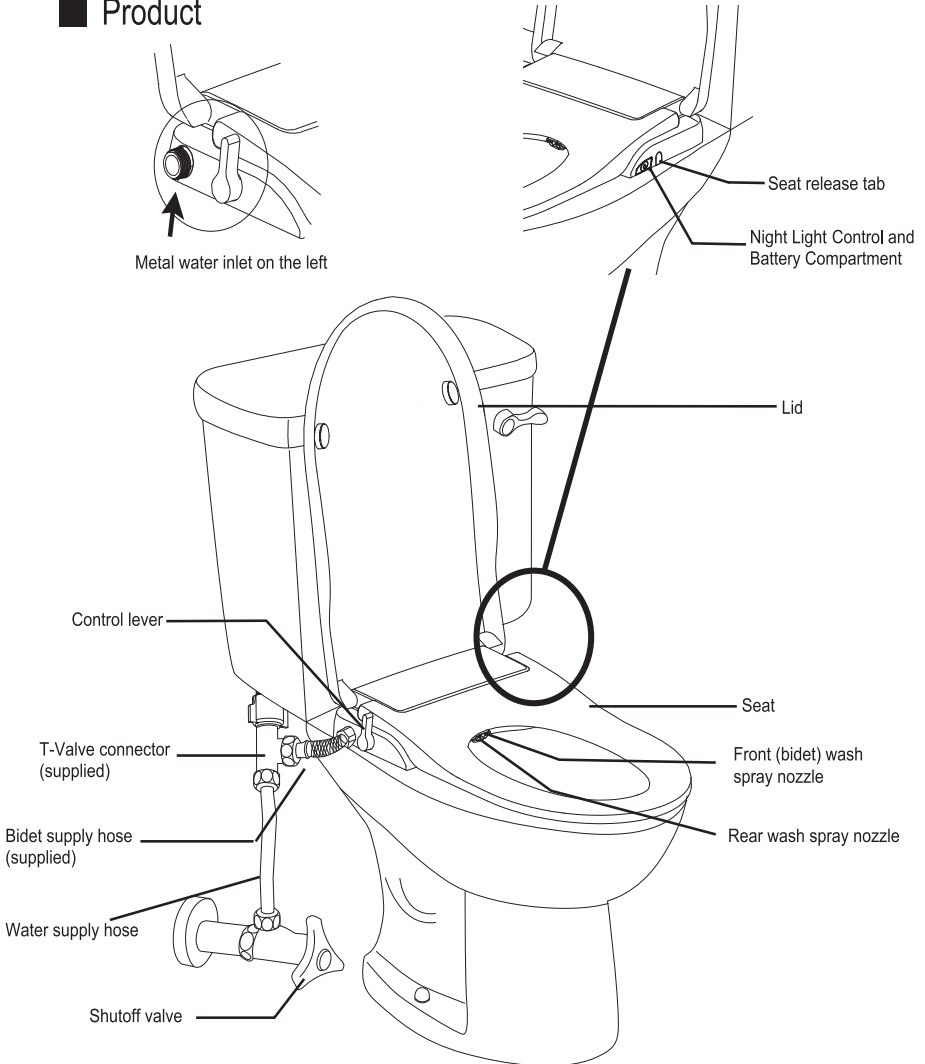

# BIO BIDET® SLIM ZERO

## Parts List

### 1. Main body

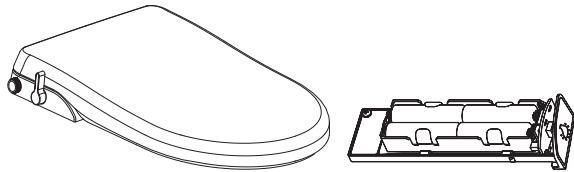

Battery Pack

### 2. Installation components

#### Method 1




Metal mounting bolts (2)



Rubber expansion nuts (2)



Mounting brackets (2)



Catch plate

#### Method 2




Plastic mounting bolts (2)



Butterfly Nut (2)



Mounting brackets (2)




Catch plate


#### Note:

There are two methods for installation. The recommended way is using the rubber expansive nuts. The second option is using the butterfly nuts. Please select the option best suited for your specific installation needs.


### 3. T-Valve adapter



### 4. Bidet supply hose



### 5. User manual



# BIO BIDET® SLIM ZERO

## 2 Installation

Please make sure you read the instructions carefully and install it properly.


### ■ Caution

1. The water pressure limit is from 10 to 110 PSI. Please use as instructed.
2. The water shutoff valve should be near where the product is installed.


### ■ Product Installation Procedure

#### ■ Pre-installation


1. Insert the mounting bolts into the rectangular steel mounting brackets.

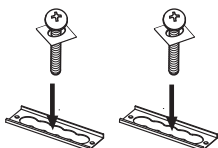

2. Insert the mounting bolts with the brackets into the catch plate.

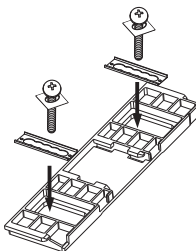

3. Example of how the bolts fit through the mounting brackets and how they are placed onto the catch plate and secured to the toilet.

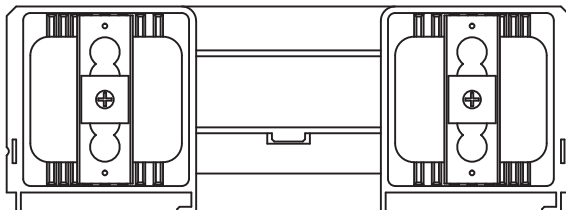

# BIO BIDET® SLIM ZERO

## Installation Procedure

### • First installation method (recommended)

1. Completely remove the old toilet seat & lid



2. Install expansion nuts. Be sure to firmly press down so the top of the expansion nut is flush with the ceramic toilet surface.




3. Attach the catch plate

- Attach the catch plate in the toilet seat holes. Adjust the position of mounting bolts and adjusting pieces to line up the mounting bolts to the expansion nuts. Then tighten to secure the catch plate.



4. Install the bidet seat

- Line up the bidet with the catch plate then push the bidet seat onto the catch plate. You will hear the bidet seat click into the place.

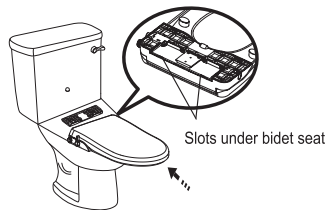


### • Second installation method

1. Remove the old toilet seat.  
Refer to first installation method step 1.
2. Put the catch plate over the toilet seat mounting holes in the ceramic of the connecting bolts with adjusting pieces. Screw on the nuts from underneath the toilet. Then tighten to secure the catch plate. Refer to the first installation step 3.
3. Install the bidet seat, Line up the bidet with the catch plate, you will hear the seat click into place


# BIO BIDET® SLIM ZERO

## Connecting Water Supply


1. Close the water supply valve. Flush toilet.

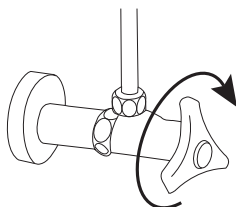


2. Unscrew water supply hose from water tank. Place towel below tank to catch any dripping water.

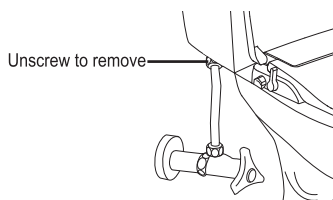


3. Using finger nut, attach T-Valve to water tank where you removed the water supply hose.

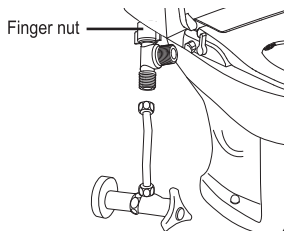


4. Re-attach water supply hose to bottom of T-Valve.

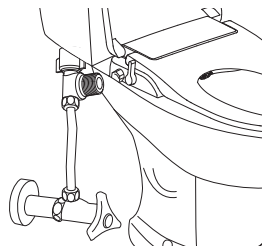

5. Connect the bidet supply hose to the metal inlet on the side of the bidet seat. Connect the other end of the hose to the T-Valve and tighten snugly. Be careful not to over-tighten.

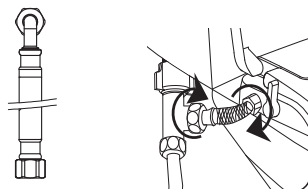

6. Slowly open the water valve to check if there is any water leakage.

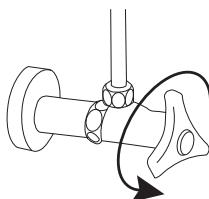


7. Wipe the hoses and connectors thoroughly with a towel and carefully observe for any leaks for at least 10 minutes. Tighten any connectors gently until leakage stops. If any leaks continue, turn off water supply and check older hoses for damaged rubber o-rings. Teflon tape may be used on connections to help seal.

# BIO BIDET® SLIM ZERO

## 3 Operation


### ■ STOP

- Return the lever to the upright position to turn it off.

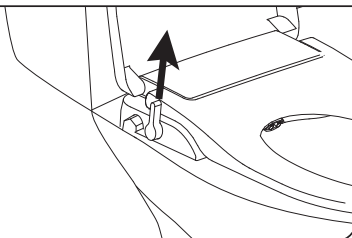


### 🚿 BIDET (FRONT FEMININE WASH)

- Gradually push control lever forward until preferred pressure is reached.

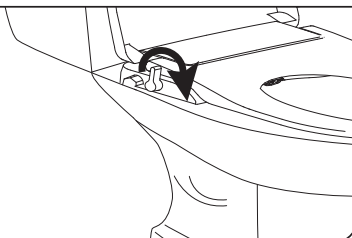

### 🚿 REAR WASH

- Gradually push control lever back until preferred pressure is reached.



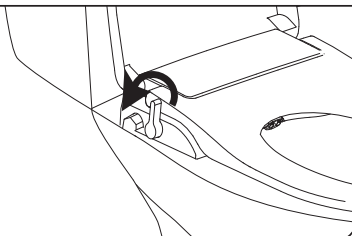




# BIO BIDET® SLIM ZERO


## Night-Light Instructions

### 1. Installing the Battery

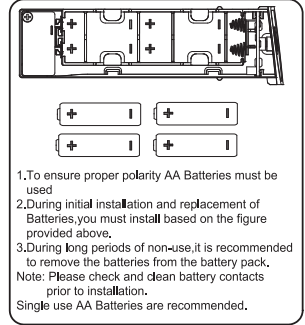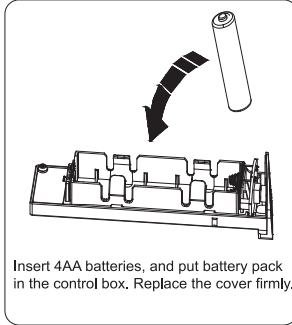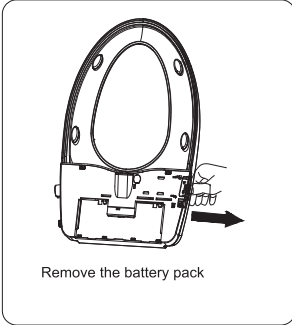

### 2. Instructions

Install the bidet onto the toilet.

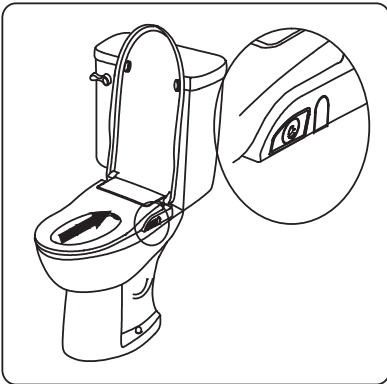

#### Operation

1. Press,the high light is on
2. Press again,the low light is on
3. 3rd Press,light is off

### 3. Replacing the battery

When the light turns red please replace the battery.



#### Important


1. To prolong battery life,night light turns off after 7 hours
2. Pressing the power button will reset the 7 hour timer

# BIO BIDET<sup>®</sup> SLIM ZERO

## 4 Cleaning and maintenance


### 1. Cleaning the exterior of the bidet seat

Use a smooth sponge/cloth with water and/or mild soap to clean the product. Do not use the following types of cleaning products: hydrogen chloride detergent, paint thinner, benzene abrasive paper, polishing agent, bleach, or chlorine.

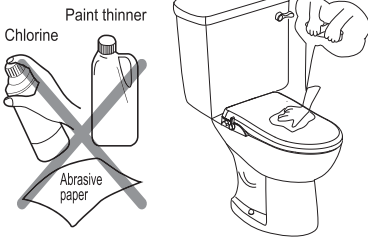

### 2. Cleaning the spray nozzles


Pull out the nozzle softly and use a smooth cloth/sponge or soft toothbrush to clean the nozzle

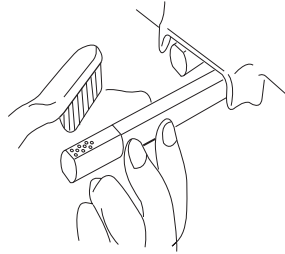

### 3. Clean the filter and regulator


(If the water flow is less than usual)

1. Turn off water supply, remove the white water hose and clean the filter screen.
2. Clean the regulator o-ring

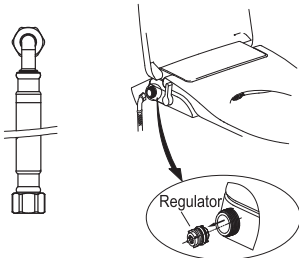

### 4. Remove the main body

Close the cover. Push and hold the release button and pull the bidet seat forward as shown.

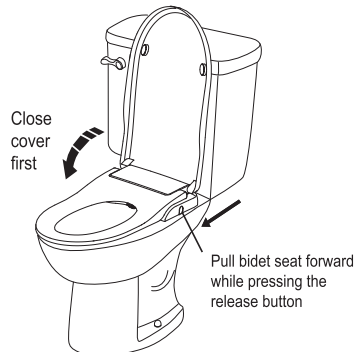

# BIO BIDET® SLIM ZERO

## 5 Self Diagnosis and Specifications

### Self Diagnosis and Troubleshooting

Status	Cause	Solution
Water is too low during WASH/BIDET	1. Low water pressure of the unit	During use, turn the lever forward or backward to highest setting
	2. Low water pressure of water supply	If the water supply pressure is too low, contact your local water utility.
No water comes out during WASH/BIDET	1. Water shut-off valve is turned off	Turn on the water shut-off valve
	2. Filter of T-shaped connector is clogged	Clean the filter of T-shaped connector
	3. Filter of water inlet hose is clogged	Clean the filter of water inlet hose
	4. Nozzle head is stuck	Take off and clean the nozzle head
	5. External water pressure is low	Increase external water pressure
Water dropping from bowl when using the unit	External water pressure is too high	The maximum water pressure of the unit is 110 PSI. If the water supply pressure is above this, contact your local water utility.
Night light doesn't work	Low batteries	Change batteries with brand new ones

If any failure still occurs after above troubleshooting, please contact support @Biobidet.com.



Do not disassemble, repair, or remodel the unit, as this will void warranty.

### Specifications

Classification	Description
Model No.	Slim Zero
WASH water flow	0.35-1.8L/min
Feminine water flow	0.35-1.8L/min
Backflow Prevention	Check valve
Water Supply	Direct from water pipes
Water Pressure Range	10-110 PSI
Dimensions	19.68" (l) X 14.30" (w) X 2.25" (h)
Weight	4.85 lbs

# BIO BIDET® SLIM ZERO

---

## Warranty

Your BIO BIDET Slim Zero is warranted against defects in materials or workmanship for one (1) year from the date of original purchase. Defective parts or a defective product returned to BIO BIDET will be repaired with new or comparable rebuilt parts by BIO BIDET at their sole discretion.

This limited warranty given by BBC innovation covers all defects encountered in normal use of Bio-Bidet Slim Zero , and does not apply in the following cases:

1. Loss of or damage to Bio Bidet Slim Zero due to abuse, misuse, tampering, mishandling,improper packaging by you, alteration, and failure to follow operating instructions.
2. Use of parts or supplies (other than those by BBC innovation's dealers) that cause damage to Bio Bidet Slim Zero .
3. Replacement of discolored or stained parts caused by chlorine, bleach, ammonia and other chemicals, cleaning supplies, oxidation, normal wear and tear.
4. Damage to or malfunction of the unit as a result of improper and negligent installation.
5. Any and all damages to plumbing, walls, floors, ceiling and personal properties resulting from water leaks or breakage. The product must be used at the user's own risk. Therefore, the owner hereby releases the manufacturer and distributor from any and all claims for damages where the above condition exists.

No implied warranty, including any implied warranty of merchantability or fitness or a particular purpose, applies to BIO BIDET after the applicable period of the express limited warranty stated above, and no other express warranty or guarantee, except as mentioned above, given by any person or entity with respect to BIO BIDET shall bind BIO BIDET, (some states and provinces do not allow limitations on the length of an implied warranty) so the above limitation may not apply to you. BIO BIDET shall not be liable for revenues or spacings, inconvenience, expense for substitute equipment or service, or any other special, incidental or consequential damages caused by the use or misuse of or inability to use, BIO BIDET, regardless of the possibility and foresee ability of such damages. In no event shall recovery of any kind against BIO BIDET be greater in amount than the purchase price of the product and causing the alleged damage. Without limiting the foregoing, you assume all risk and liability for loss, damage or injury to you and your property and to others and their property arising out of use or misuse of or inability to use the BIO BIDET not caused directly by the negligence of BIO BIDET. This limited warranty shall not extend to anyone other than the original purchaser of the BIO BIDET

Thank you for purchasing BioBidet, please read the manual carefully for appropriate use of the product.

After you read through the manual, keep it in a convenient place for future reference.

Technical Support / Customer Service

Head Office U.S.  
7900 S Route 31, Crystal Lake IL 60014  
T. 877.339.5214  
[support@biobidet.com](mailto:support@biobidet.com)

Office in Canada  
201-669 Ridley Place, Delta BC V3M6Y9  
T. 800.511.6049 | 604.525.5410

[support@biobidet.com](mailto:support@biobidet.com)  
[www.biobidet.com](http://www.biobidet.com)

