
Massage Sofa

Operating instruction

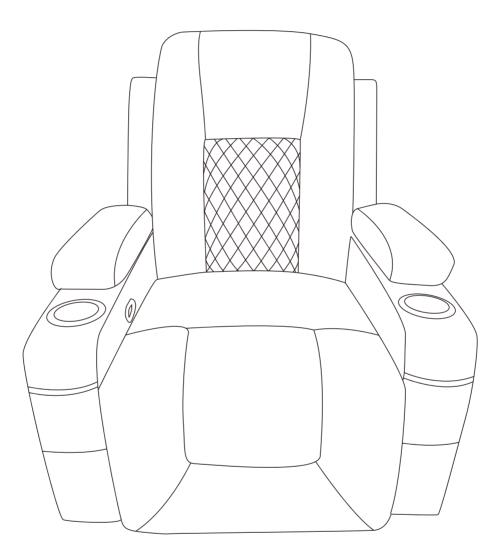

NOTE 1: This sofa is shipped in 1 box . All accessories included. If you have any questions after receiving the recliner.Please contact us in time and provide pictures. We will try our best to help you solve it.

NOTE2: Please do not rotate 360 degrees when plugged in!

WARRANTY

So glad you have completed the assembly and can enjoy it. If you are satisfied with our products, thank you for showing your favored massage recliner to your around.

The quality of our furnitures has been strictly controlled. Each stage of the product upgrading has condensed the efforts of employees in various departments. We strive to minimize the probability of failure of new products and insist on providing customers with worthless after-sales service.

AFTER-SALE POLICY

For return reason:

Wrong purchase, bought by mistake, no longer needed, doesn't meet expectation, a size smaller than expectation, customer need to cover the return shipping fee.

For cancel order:

Customer needs to pay for shipping fee and carrier handle fee if the item has been shipped out.

For change address:

Customer needs to pay for extra shipping fee and carrier handle fee if the item has been shipped out.

Customer Service: Any problem with the product or shipping issue, please feel free to contact us, we will try our best to serve and help.



Enjoyable time on recliner is coming after 15 minutes of installation!

1. Please check the manual carefully and make sure you have received all the parts.

2. If there is any missing parts, please let us know the letter of the parts you need.


3. If there is any damage parts, please send clear photos to us, we will check and offer you best solution soon.

Please check if the accessories parts are completely received according to the letter labels and quantity below

Part	Qty	Part		Qty
Α	1PC	Н		Left:H1 Right:H2
В	1PC	I		Left:11 Right:12
С	Left:C1 Right:C2	J	\bigcirc	2PCS
D	Left:D1 Right:D2	K		1PC
Е	2PCS	L		1PC
F	2PCS	Μ	() Dennementer	24PCS
G	2PCS			

Step 1. Assemble Chair Arm Frames

Let's start to assemble the Left Chair Arm Frame first, we named it N1 group Please find and prepared those pieces with Labels: C1,D1,E1,F1,G1 and M

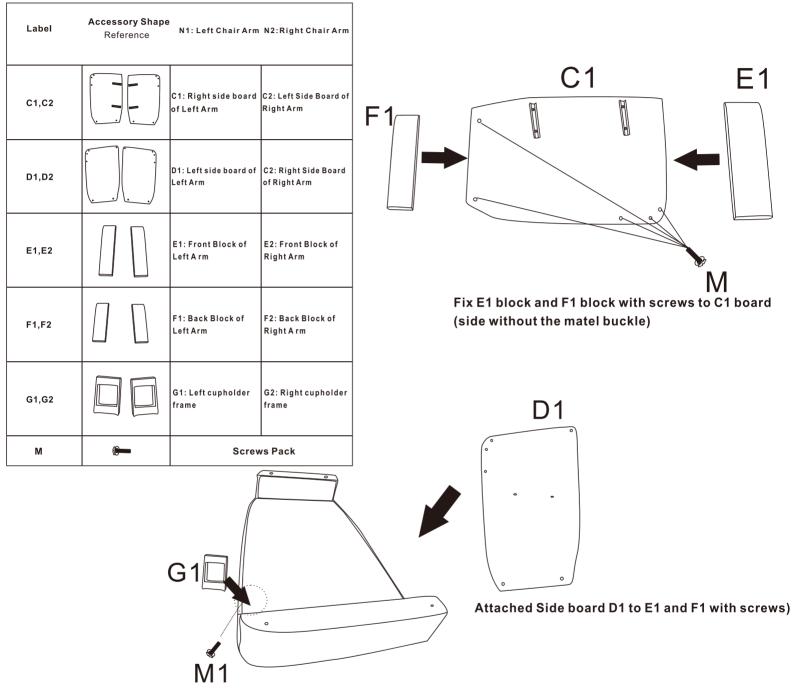

Fix cupholder G1 with screws to the border position(as picture) by attaching to C1 and D1)


Please find and prepared those pieces with Labels: C2,D2,E2,F2,G2 and M to assemble the Right Chair Arm with the same way.We named the Right Arm as N2 group


Step 2. finish Chair Arms

Put the Left cover pillow (H1) to the Left chair arm frame(Assembled in step1);

Note: the cupholder place should aim at the cupholder frame, make sure the cover is tension and smooth.

Label	Accessory Shape Reference	Name
H1 , H2		H1: Left Chair Am Cover Pillow H2: Right Chair Am Cover Pillow
М	{j@uuuuu	Screws Pack

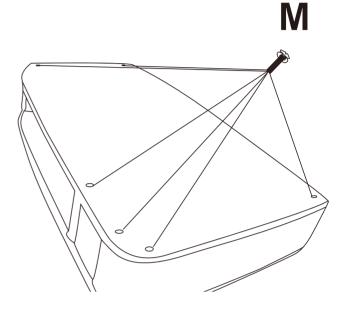

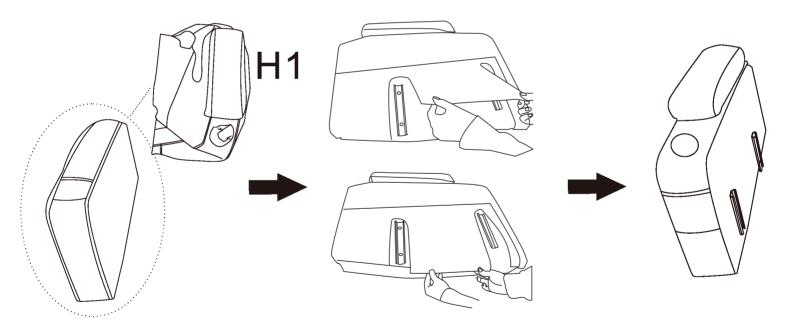


Then do the same as to right side(H2)


Step 3. Attached the Chair Arm

2 or More adults would be easier to assemble the chair.


①Put the seat pad (A) on the ground, attaching N1(Left Arm) to seat pad, by inserting the 2 metal pegs of seat pad into the clips of the Left Arms.

N2

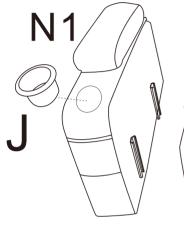

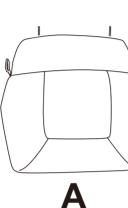

2 or More adults would be easier to assemble the chair.

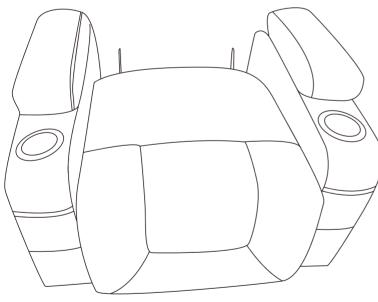


Please do the same to assemble the Right Arm.

Step 4. Assemble the backrest

① Attaching the Part B (Backrest) to the seat pad,

by inserting the metal pegs of seat pad into the slots of the Backrest.

②Attach the 2 backrest wings(I1 and I2 as picture) to the backrest B with the same way.

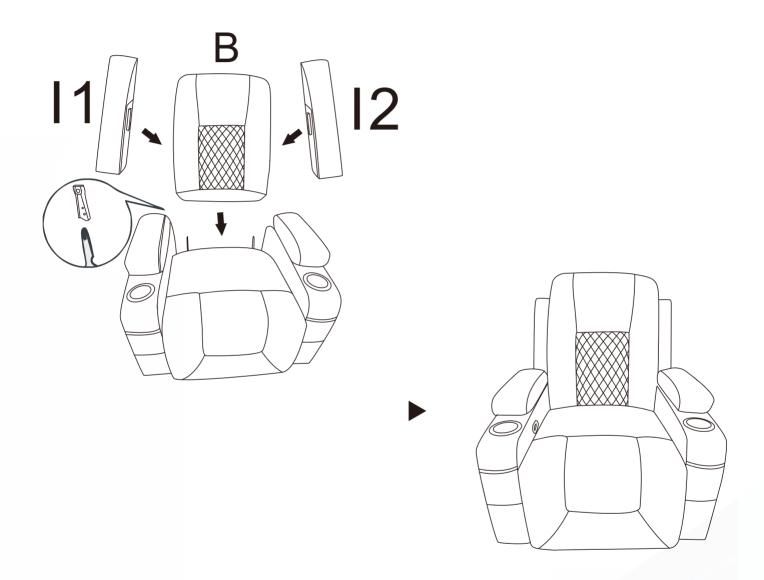


Accessories:

- **I1: Left backrest wings**
- I2: Right backrest wings

Step 5

Join the wires from the backrest to the corresponding wires on the seat.

Make sure that the corresponding sizes and colors match (white with white & red with red). locate the part L remote control and attch to its corresponding receiver on hte backrest locate the part K power cord-1 to its corresponding receiver on the backrest

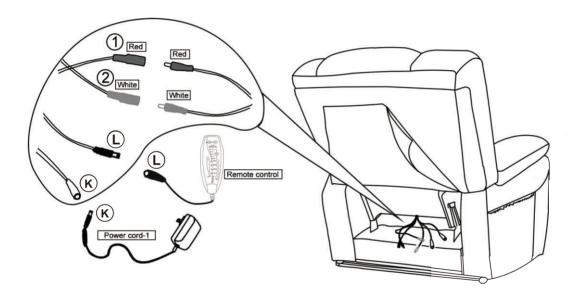

A NOTE:

Make sure all bolts and screws are fully tightened before using chair. Lubricate all moving parts and tighten all bolts/screws every 6 month or whenever needed


AWARNING:

To ensure proper assembly, follow all steps and use all part.

Failure to follow this warning can result in serious injury to yourself or others


-6-

Step 6. Enjoy the comfortable

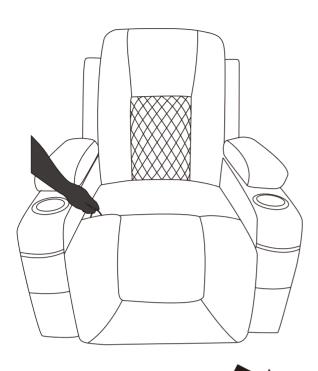

Sit down and pull the handle on right side, then the footrest raise up; move body backwards a little bit and with your own gravity to recline, enjoy the comfortable.

Functional instruction

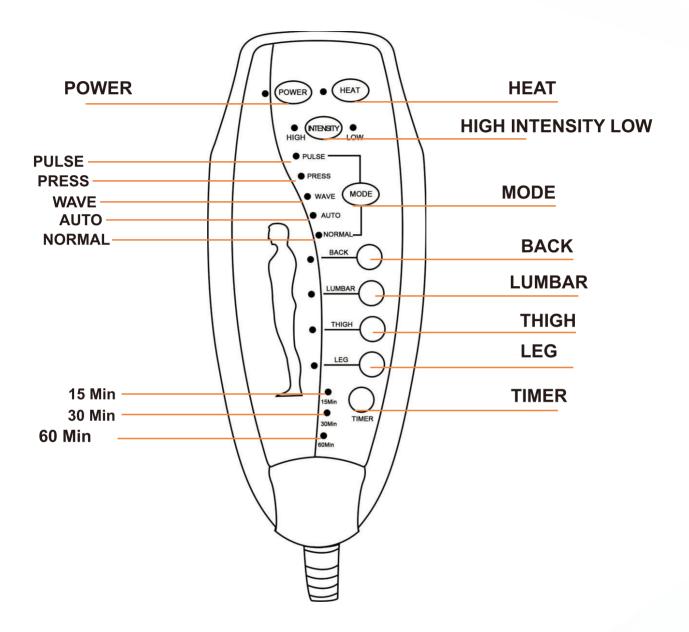

- **INTENSITY:** Switch between HIGH/LOW intensity massage.
- **MODE:** Select 5 types of massages, PULSE, PRESS, WAVE, AUTO or NORMAL.
- BACK, LUMBAR, THIGHS, and LEGS: Target massages to specific areas.
- **TIMER:** The default timing is 15-30-60 min selection,

Product Feature

- Heating massage
- 8 Vibration Motors
- 5 Massaging modes
- 2 Massaging intensity
- 4 massage zones, each zone can be operated individually
- The default timing is 15-30-60 min the selection

How to use


 Insert adapter jack into the socket found on back of the massage chair, then plug the adapter into a wall outlet.
 Figure A

(see Figure A)



- 3 Turn on the massage in each zone by pressing the BACK, LUMBAR, THINGS or LEGS buttons. LEDS will illuminate when each zone is activated. To turn off a zone, press the button again.
- 4. To choose a desired massage mode, press the MODE button. To change modes, press MODE button until LED for desired mode illuminates.
 PULSE-for deep tapping massage
 PRESS-provides rapid tapping massage
 WAVE-for a gradual, side-to-side vibrating massage
 AUTO-automatic selection of different massages
 NORMAL-gentle percussive massage
- 5 To change the massage intensity press the INTENSITY button. The LED for HIGH or LOW intensities will illuminate when chosen.
 NOTE: Discontinue use immediately if you feel any discomfort or pain.
- 6 **NOTE:** for your benefit, the massage chair is equipped with an auto shut-off feature
- 7 DO NOT use for more than 60 minutes of continuous use.

Warning

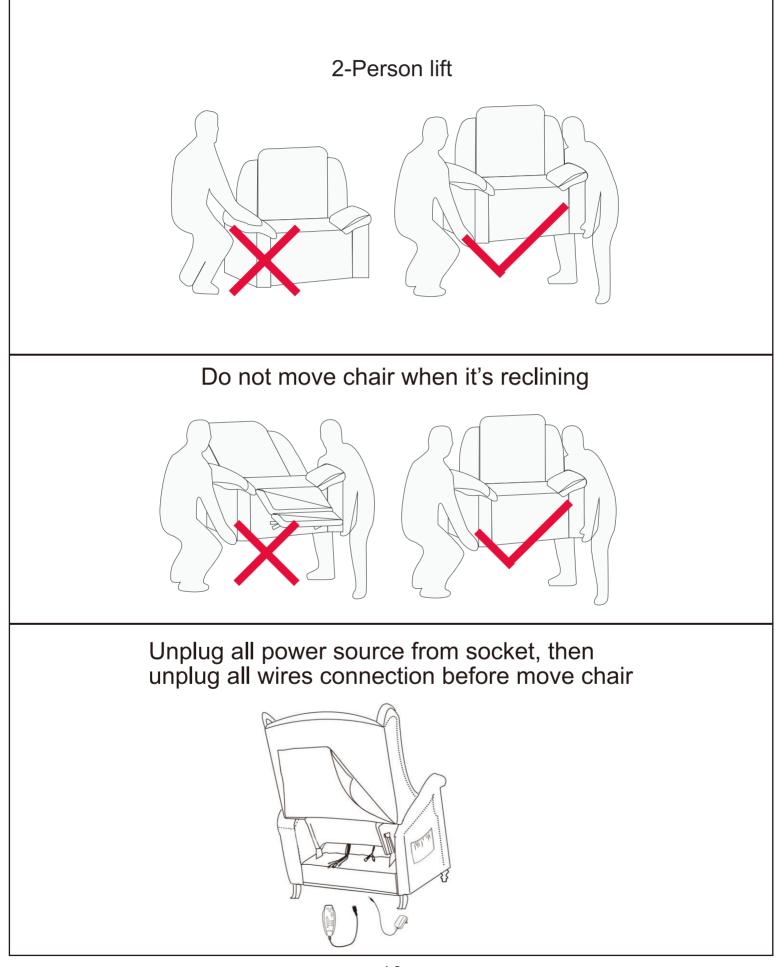

Warning

