Steam Sauna Box

INSTRUCTION

MD-101 MD-102

ENJOY SAUNA AT HOME
IMPORTANT SAFEGUARDS
BENEFIT OF SAUNA
CAUTION
PART NAME
ASSENMBLY SEQUENCE OF STEAM BOX
CONTROL PANEL INSTRUCTIONS
CLEARANCE & STORAGE
ADDITIVE RAYIO
SPECIFICATION



CONTENTS



| Enjoy sauna at home | | | | 1 |
|----------------------|-------------|----------|------|------|
| Important safeguards | | | | 2 |
| Benefits of sauna | | | | 3 |
| Parts names | | | | 4 |
| Caution | | | | 5-7 |
| Assembly sequence o | f steamer b | OOX ···· | | 8-13 |
| Clearance & Storage | | | | 14 |
| Additive ratio | | | | 15 |
| Specification | | | | 16 |

ENJOY SAUNA AT HOME

Something wonderful and healthy you can do for your body that requires no willpower. Just use the home sauna, and let the all-enveloping moist heat work its magic. Feel it easetension, unlink tight muscles, soothe nerves, flush out your pores, and leave you relaxed and invigorated. The warm steam also stimulates circulation, helps ease muscular discomfort, flushes out toxins, makes your skin bloom, and can help relieve congestion when you\'re feeling under the weather. Best of all, this ingenious spa requires no plumbing, rewiring, or time-consuming maintenance. It sets up in minutes without tools. Simply pour in water, plug into a standard outlet, and in minutesyou're basking in your own private negative lon home therapy.

Here's your private refuge from stress, busy schedules, the kids, and the cares of the day. Especially pleasurable after a workout or heavy exertion. Full disclosure:some willpower may be required in bringing your negative lon home therapy session to a close.

Can be used with beauty products such as bath lotion, figure-shaping salt, aroma essence, herbal products etc.

Thoughtful vent design leaves hands free for reading etc.

Sit down inside to rapidly clean out grease and dirt from your pores. Your skin will glow and look beautiful all the time.

Accelerates blood circulation.Remove fatigue, relieves stress and helps with figure shaping and fat reduction

Special waterproof cloth in the outer case retains heat, making it safe and convenient to use.

IMPORTANT SAFEGUARDS

ATTENTION:

When using an electrical appliance, basic precautions should always be followed, including

THE FOLLOWING:

Read all instructions before using this appliance.

DANGER:

To reduce the risk of electric shock:

Always unplug this appliance from the electrical outlet immediately after using and before cleaning.

WARNING:

To reduce the risk of burns, fire, electric shock, or injury to persons:

- An appliance should never be left unattended when plugged in. Unplug from outlet when not in use, and before putting on or taking off parts.
- 2. Do not operate under blanket or pillow. Excessive heating can occur and cause fire, electric shock, or injury to persons.
- Close supervision is necessary when this appliance is used by, on, or near children, invalids, or disabled persons.
- 4. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacture.
- 5. Never operate this appliance, if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water; return the appliance to a service center for examination and repair.
- 6. Do not carry this appliance by supply cord or use cord as a handle.
- 7. Keep the cord away from heated surfaces.

BENEFIT OF SAUNA

- 1. Improve sleep quality
- 2. Adjusting Blood Pressure
- 3. Smooth Breathing
- 4. Eliminate Becteria
- 5. Remove Static Electricity
- 6.Blood Puritication (PH Balancing)
- 7. Strengthen immune System




PARTS NAMES





Whole Body (MD-102)

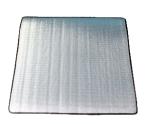

Bottom Waterproof Pad



Foldable Chair


Steam

Generator

CAUTION



Keep out of reach of children, to prevent shock or burns, always keep the steam pot out of reach of children



Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.





Do not open the lid while the steamer pot is in operation.



Put on the heat retardant glove when loading and unloading the pipe,the connecting parts, opening . the outer lid,glass lid.





Do not immerse the steamer pot in water.




DANGER



Do not attempt to repair or modify the product by yourself. It may cause shock.





CAUTION



Never move the steamer pot while it contains hot liquids. Place the negative Ion home therapy box on flat surface.



Do not put any animal in the negative lon home therapy box.



It is advisable not to use or store the negative lon home therapy box close to a bathroom or a sink.





Pour water over LOW line before every using.

Do not add alcoholic liquid and/or toxic material





Allow the steamer to cool before cleaning or touching. After use, make sure to clean the inner pot if adding some herb, essencial oil into the steamer pot while using.







CAUTION





DANGER (DO READ CAREFULLY BEFORE USE)

Put on cloth when using the negative Ion home therapy box, lest injury of your skin



Do not put your hands and feet close to steam outlet to avoid burned while steamer is running.



ATTENTION



Make sure TIMER SWITCH is on OFF after usage. Unplug while not using the steamer.







Make sure the water level is below MID before you adding some milk, herb, shaping salt, etc. Avoid in water overload. It will cause the machine







- 1. If you feel too hot in the negative lon home therapy box, please set the "TURBO SWITCH" on "OFF" or pull the zipper down to open the negative lon home therapy box for a while.
- 2. Please use the appliance for negative lon home therapy usage only. Do not use for any other purpose.
- 3. If it is not working properly, please stop using immediately. Return the appliance to a service center for examination and repair.
- 4.If adding some additives into the steamer pot, the ratio for additives and water should not more than below mentioned to avoid the additive immerse and cause damage to the machine or effect the using life of the machine.



HALF BODY MD-101



A tube 6pieces



H type pipe interface 2 pieces



B tube 4pieces




C tube 2pieces D tube 2pieces E tube 2pieces




F type pipe interface 6 pieces




G type pipe interface 4 pieces

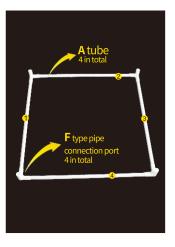

①. First connect the 4 A tubes and 4 F-shaped pipe connection ports as the picture shows

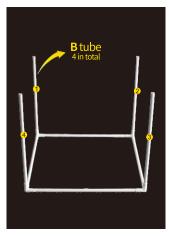


②.Insert 4 B tubes into F tubes connect the port, as shown in the figure picture above

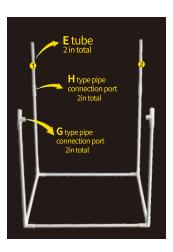


③.Insert 2 H-shaped pipe joints port and 2 H-shaped pipe connections the port on the B pipe, and then connect the 2 E pipes connect to the 2 H-shaped pipe connections, as shown in the figure above


MD-101

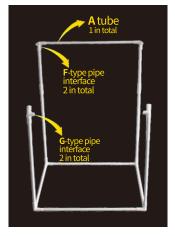


②.Insert the two F-type pipe sockets into the E pipe, connect the A pipe with the two F-type pipe sockets, and then insert the two G-type pipe sockets into the B pipe as shown in the figure

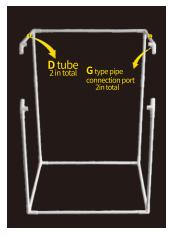

S.Then connect the 2 D tubes with the F tube sockets, and then connect the G tube sockets to the D tube. as shown in the figure

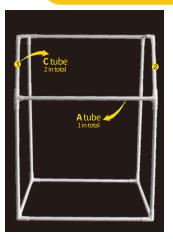

⑤. Finally, connect the two C-tubes with the G-tube sockets, and then connect the last A-tube with the remaining G-tube sockets The frame installation is complete, as shown in the figure.



The inside of the jacket is connected to the pipe through the connection port, just connect it to the round box, as shown in the figure



The outside of the jacket is connected to the pipe through the connection port and the other end is connected to the steam meter as shown in the figure

MD-101 CONTROL PANEL INSTRUCTIONS

- 1.Add the appropriate amount of water and press ON/OFF
- 2.Press the Timer/Heating button to adjust the time and heat to an appropriate value
- 3. Time and heat can be adjusted at any time by+/-key
- 4. The maximum adjustable time is 60 minutes
- 5. The maximum temperature can be adjusted to nine gears



6. After the water boils, it can be adjusted to proper temperature



WHOLE BODY MD-102



A tube 14 pieces



B tube 12 pieces




E type connecting pipe 4 pieces




D type connecting pipe 4 pieces




C type connecting pipe 8 pieces

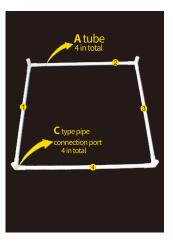

①.First connect the four A pipes and the four C-shaped pipe connection ports as shown in the figure

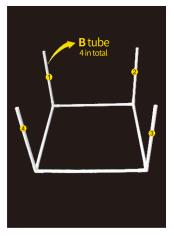


②. Insert 4 B-tubes into the C-tube connection port, as shown in the figure above

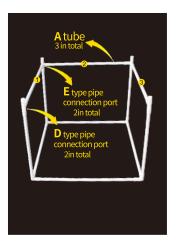


③.Insert the 2 E-shaped pipe connection ports and the 2 D-shaped pipe connection ports on the B pipe, and then connect the A pipe, as shown in the figure above


WHOLE BODY MD-102

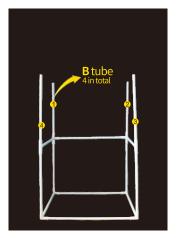


Then insert 4 B tubes into the connection port, as shown in the figure

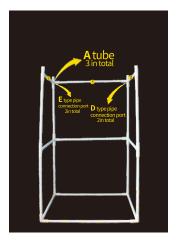

⑤.Then, insert the 2 E-tube connectors and 2 D-tube connectors on the B tube and finally connect the 3 A tubes with the connectors, as shown in the figure

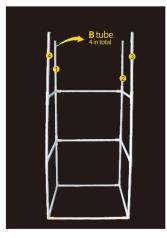


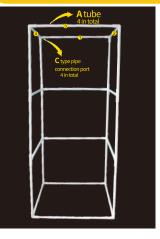

 Then insert 4 B tubes on the 4 connection ports, as shown in the figure
 Tenally, connect the 4 C-shaped tube interfaces with the B tube, and then connect the 4 A-tubes with the C-shaped tube interface. The frameinstallation is completed, as shown in the figure.



Connect to the internal socket connected by hose, then connect to the round box

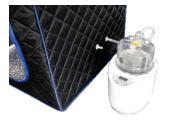

Connect to external socket via hose Ready to use when connected to the steam meter



MD-102 CONTROL PANEL INSTRUCTIONS

- 1. Add the appropriate amount of water and press ON/OFF
- 2.Rotate the lid to cover, screw the safety valve into the corr esponding small hole, so that the lid will not be opened
- 3. Press the Timer/Heating button to adjust the time and heat to an appropriate value
- 4. Time and heat can be adjusted at any time by+/-key
- 5. The maximum adjustable time is 95 minutes
- 6. The maximum temperature can be adjusted to sixteen gears (1-16 gears are automatically adjusted)
- 7. After the water boils, it can be adjusted to proper temperature



CLEARANCE & STORAGE

1.STFAM TENT

- (1) Please wipe the water in the tent away after usage.
- (2) Open the steam tent by pulling down the zipper, make sure the steam tent dry. After that, you can store the tent.
- (3) You can clean the sauna tent with wet cloth.

2.STEAM GENERATOR

- Allow the steam generator to be cool before cleaning the inner generator.
- (2) Make sure to clean the inner generator every usage in order to keep the appliance in good condition.
- (3) Do not immerse the steam generator in water to reduce the risk of electric shock.
- (4) Please wipe the steam generator with wet doth in order to keep it clean.

ADDITIVE RAYIO

Please refer to additive ratio in the following table when additive is added to prevent burns ,trouble of line or the unit

| Additive Types | Water Level | Amount of Additive | Harmful Effects by Excessive amount | | |
|------------------------|-----------------------------|--------------------|---------------------------------------------------------------------------------------|--|--|
| Milk | Middle level (about 1300cc) | Not more than 80g | Burned black surface or bottom of th | | |
| Various herb bag | ditto | Not more than 50g | pot and damage to the function of | | |
| Lotion for sauna | ditto | Not more than 5g | leading to unsafety. Bubble or liquid is overrunnig, the | | |
| Essential oil, perfume | ditto | Not more than 10g | cause burns or damage to the unit. | | |
| Salt, shaping salt | ditto | Not more than 30g | Be bad for health. | | |
| Lemon, grape, pomelo | ditto | 5-10 pieces | Too heavy smell. | | |
| Others | ditto | Proper amout | | | |

Keep the water below MID when additive is put in.

Do not add alcohlic liquid and/or toxic material into the steamer pot.

To avoid excessive bubble or overrunning of liquid, add moderate additive.

Always remember to put herb in a cloth bay when herb is used instead of putting herb or herb powder directly into the pot.



SPECIFICATION

| Product Name | Steam Sauna Box Half Body Style | Steam Sauna Box Whole Body Style |
|----------------------|------------------------------------|-------------------------------------|
| Item No. | MD-101 | MD-102 |
| Using Size | 72.5*72.5*99cm | 72.5*72.5*165cm |
| Packing Size | 70*23*33cm | 70*25*37cm |
| Weight | 6.2kg | 8.2kg |
| Power Consumption | 1000W | 2000W |
| Power Supply | 110-120V | 110-120V |
| Timer | 60 minutes | 95 minutes |

Specific parameters are based on actual products

Tips:

(After use, wipe the mist clean, it is more convenient to use next time!)

ONLY USE THE BEST QUALITY TO REST ASSURED











Steam Sauna Box INSTRUCTION

MD-101 **MD-102**