

User Manual

Beam Floor Lamp

Introduction

Thank you for purchasing our floor lamp. Please read the following instructions carefully before use.

Product Features

- 1.Full Range Beam - Adjustable wide beam, medium beam, and focused beam. Suitable for various usage scenarios.
- 2.Dimmable - Long press the power button to adjust brightness, achieving variations in light intensity.
- 3.Flexible Gooseneck - Durable metal gooseneck supports 360° adjustment of the lamp head direction.
- 4.Stable - The 5-pound weighted base keeps the lamp balanced at all times.
- 5.Modern Design - A perfect blend of modern minimalist style and functionality.


Parameter

Input Voltage	AC120V 60HZ
Material	Iron
Switch	Button Switch
Power	5W
Brightness	450lm
CCT	4000K
Dimension	ø25*175cm

Cautions


- 1.Please make sure that the voltage is 100-120V, which is standard for US. This product can only be used between 100-120V.
- 2.Unplug before cleaning.
- 3.The head of the lamp will maintain 30-35°C under normal light condition, so please feel free to use it.
- 4.If case of doubts, please contact our Customer Support Team immediately.

Package List

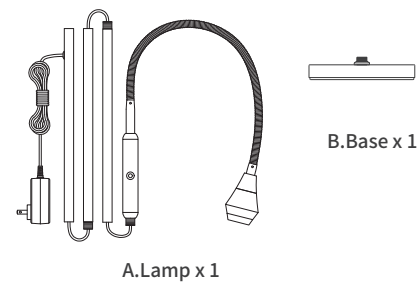

Assembling

- Step 1: Connect the tube to the lamp head by clockwise.
 - Step 2: Connect the tube to the other tubes by clockwise.
 - Step 3: Finally connect the tube to the lamp base by clockwise.
- After the installation is finished.

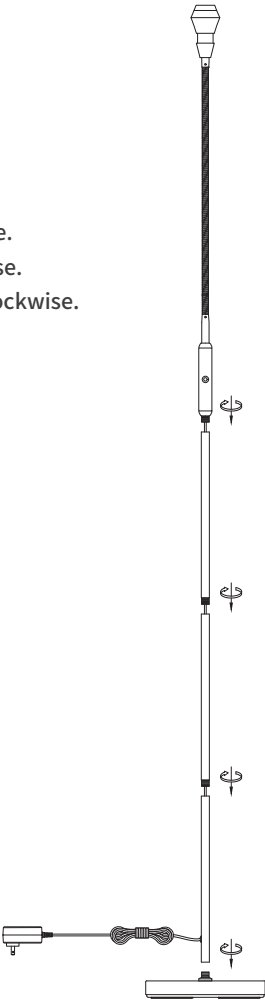

Usage

On/Off: ① Press the push button switch.

Brightness: ② Long press the button switch to adjust the brightness.

Beam Adjustment: ③ Adjust the beam size by extending the lamp head. Close the lamp head for a wide beam and extend the lamp head for a focused beam.

30-Day Return Policy

If you're not completely satisfied with your purchase, you can return or exchange it. We offer free returns and exchanges on eligible items within 30 days of the original purchase date.

12-Month Warranty

We provide you with a 12-month warranty. If your unit fails during the limited warranty period, we will arrange for a free replacement and cover all shipping costs.

Fast Response Customer Service

If you have any questions or suggestions, please contact us as soon as possible, our customer service is online 12 hours for you and help you quickly and efficiently. The most effective way to articulate your problem to us is to attach a video or picture that illustrates the problem with your product.