


5ft. Porch Swing

Tools Needed: #2 Philips or Robertson screwdriver, wood glue and a ½ wrench.

Package Contents:

- (A) Arms... 2
- (B) Arm Post... 2
- (C) Back Support... 4
- (D) Seat Supports... 4
- (E) Front Rail... 1
- (F) Seat Slats... 10
- (G) Narrow Top Slat... 1

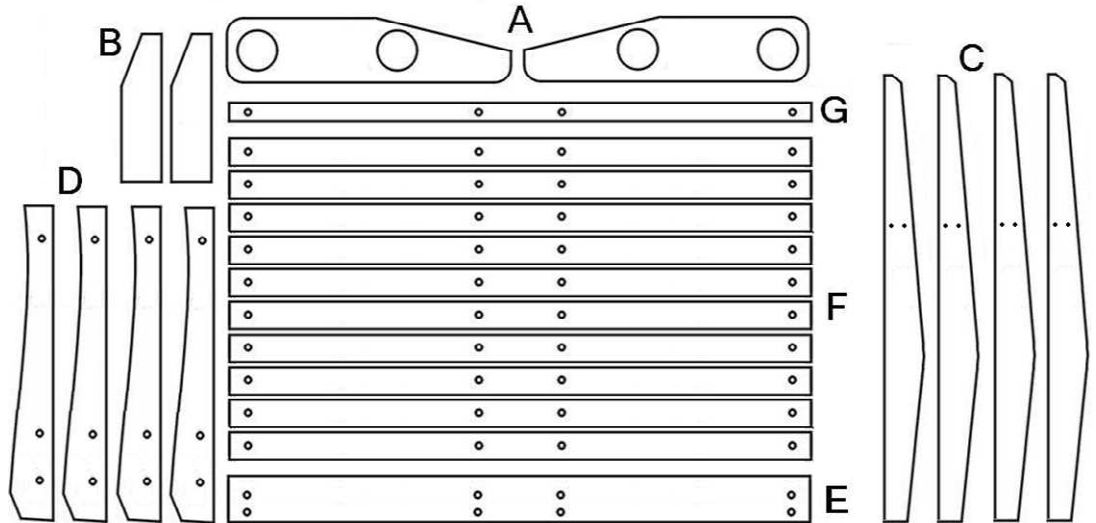


Hardware

- 2 ½" screw... 8
- 1 ¾" screw... 52
- Carriage bolt... 2
- Lag Screw... 4
- J-Bolt... 4
- Washer... 10
- Hex Nut... 6
- Chain... (4 pcs)


STEP 1. Build Frame

- Align 4 Seat Supports (D) to be even with bottom of front rail (E) as shown, Attach using 1-3/4 inch screws. (keep screw holes offset to bottom of rail)

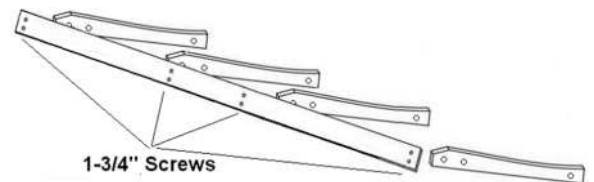


STEP 2. Attach Seat Slats

- Beginning from front of seat evenly space 5 Seat Slats across the seat supports and attach using 1 ¾ inch screws.

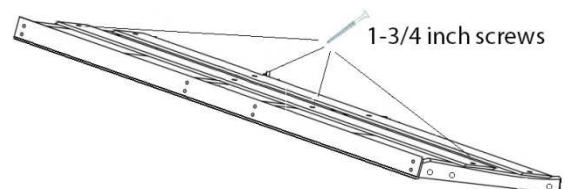


STEP 3. Attach Posts

- Attach 4 Back Supports (C) to the seat supports using lag screws and washers.

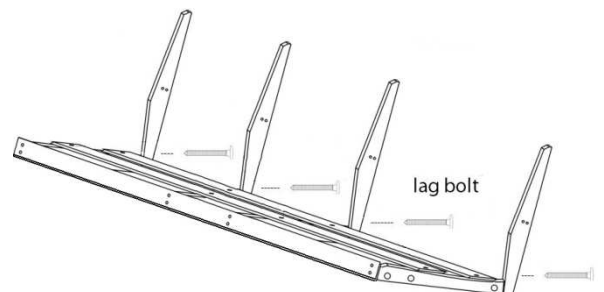


STEP 4. Attach Back Slats

- Tip the swing so it is resting on the 4 Back Supports and attach **narrow top slat (G)** along top of the swing.
- Evenly space and attach the remaining 5 slats to the back supports starting from top slat down.

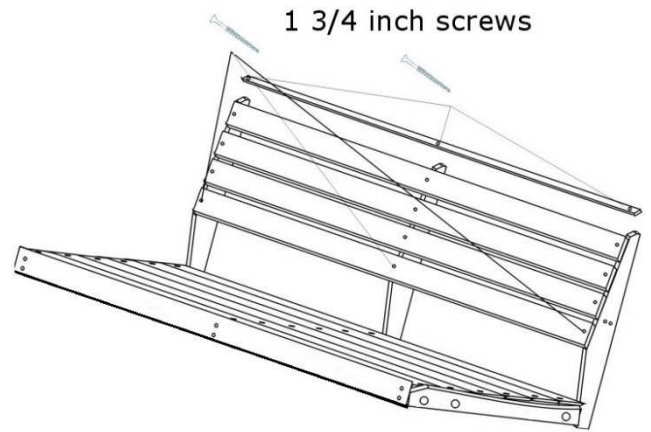

STEP 5. Attach Arms


- Mount Arm Post to side of the Swing using Carriage Bolts.
- Set front of arm over arm post and align rear arm with pre-drilled holes in back support - make arm flush with back support and attach arm using 2-1/2 inch screws.
- Make inside of arm flush with arm post and attach arm to arm post using 2-1/2 inch screws. (glue is optional here)

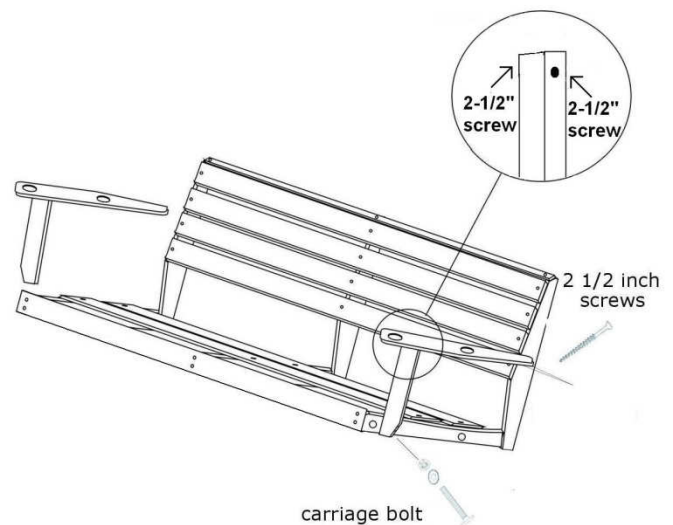

STEP 6. Hardware Placement

NOTE: If you hanging distance is higher than 8 ft. you may require additional chain.

- Attach 2 pieces of chain to each side of your roof beam or A-Frame. (space 60 inches apart)
- Use washers and hex nuts to install J-Bolts to the pre-drilled holes located on each side of the swing - leave loose.
- Insert the free ends of each chain through the guide holes on the arm and loop chain onto open end of J-Bolt.
- Tighten J-Bolt until open end of hook is depressed into the wood by about 1/4 inch and until nut is good and tight.
- To create a gentle incline raise the front of the swing by a link or two.
- Your swing is ready for use.

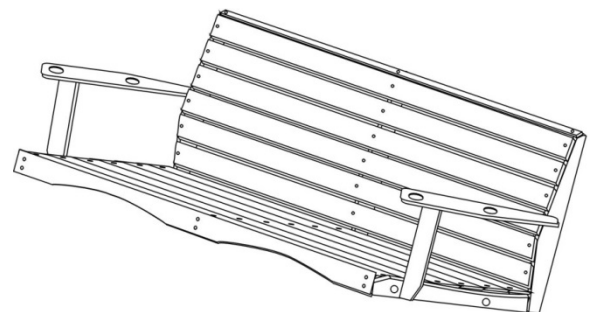

As with all outdoor furniture it is good practice to periodically check tightness of all hardware on your swing.