


Assembly Instructions

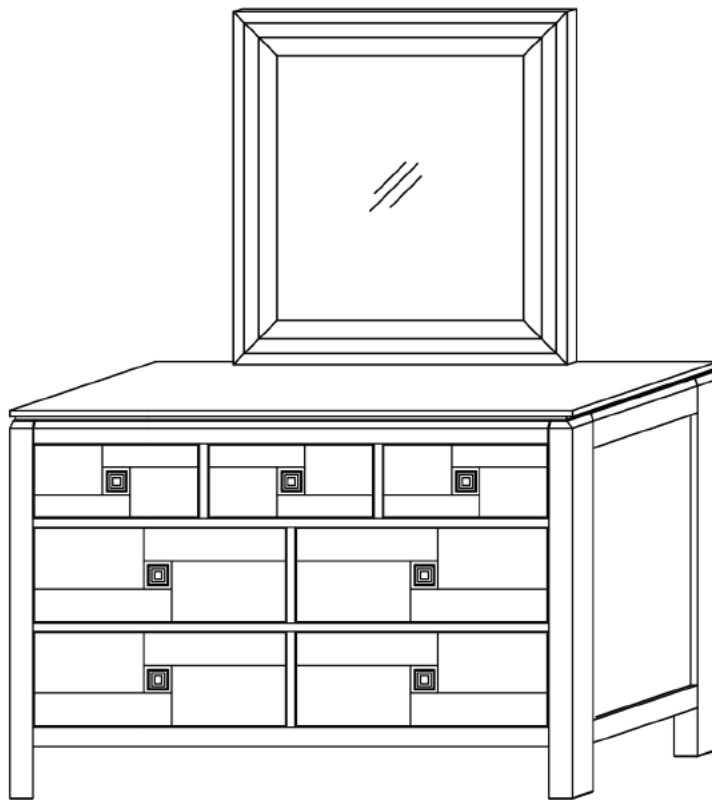


ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.

EASY  DIFFICULT

Tools Required For Assembly:

Allen Wrench



(Included)

Phillips Screwdriver



(Not Included)




2 PERSONS RECOMMENDED


ASSEMBLY & CARE ADVICE

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.


BASIC ASSEMBLY TECHNIQUES

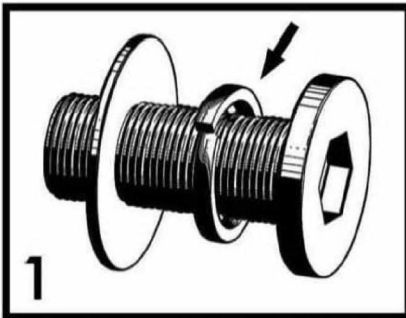


When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.

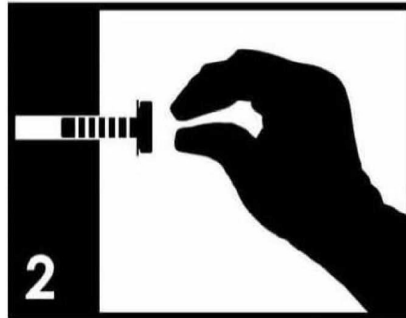


Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.

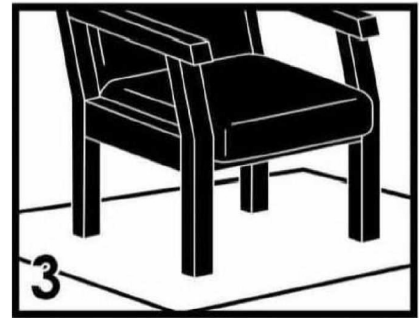


Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

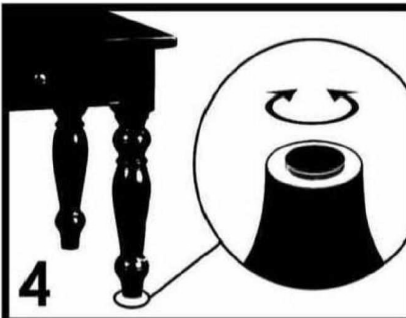

Some furniture comes with height adjustment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

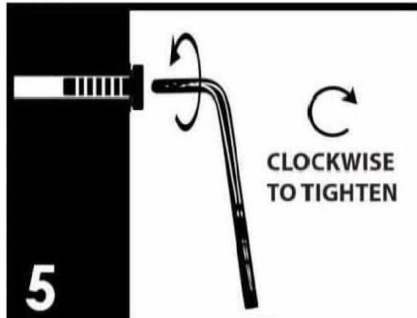

Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.

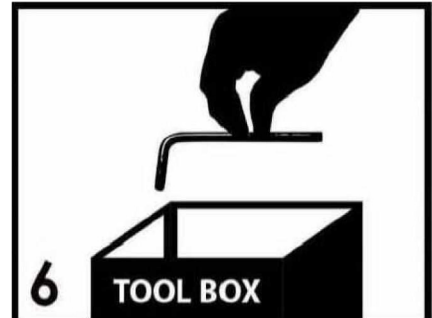


Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.




FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.

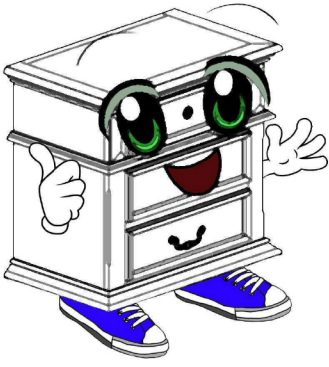


Before you begin, please read Page 2 of "Assembly and Care Advice".

And remember, do not tighten until each step is completed or instructed.

Parts List




#1 x 1pc
Dresser




#2 x 1pc
Mirror



#3 x 2pcs
Support Rail

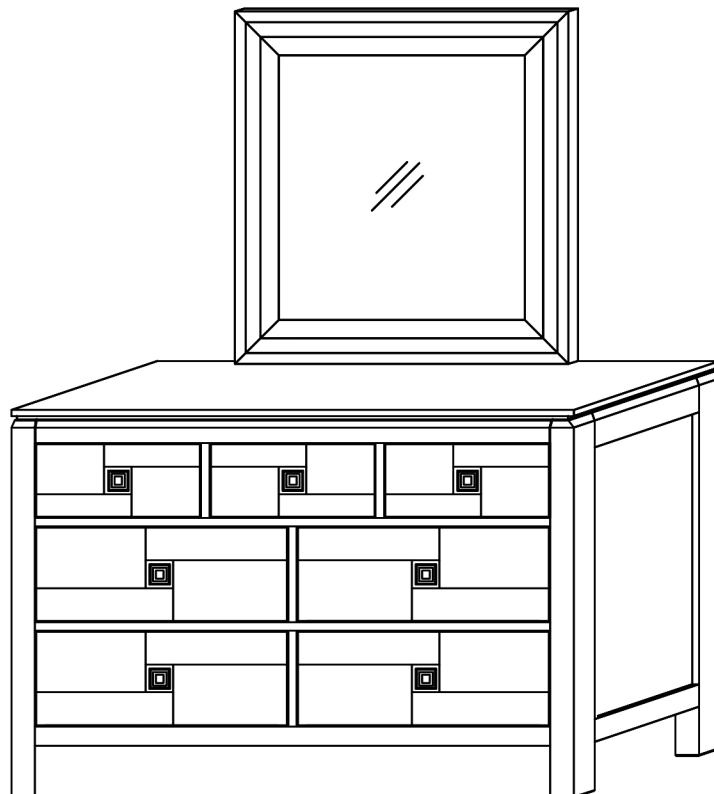

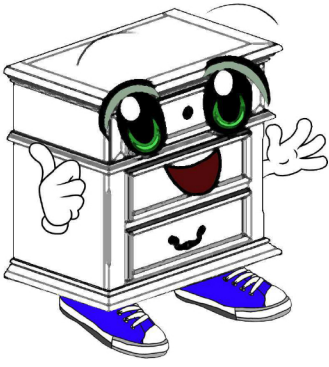

Before you begin, please read Page 2 of "Assembly and Care Advice".

And remember, do not tighten until each step is completed or instructed.

Hardware List



#A x 8pcs
Bolt 1/4" X1-3/8"



#B x 8pcs
Flat Washer 1/4"



#C x 8pcs
Lock Washer 1/4"



#D x 1pc
Allen Wrench



#E x 2pcs
L-Bracket



#F x 1pc
Cable Tie



#G x 1pc
Long Screw



#H x 1pc
Short Screw






#J x 1pc
Plastic Anchor



#A x 8pcs
#B x 8pcs
#C x 8pcs

- I. Align the mirror with the holes on the mirror support rails (#3).
- II. Prepare 8 bolt assemblies by FIRST inserting lock washer (#B) onto bolt (#A) then flat washer (#C) onto that SAME bolt (#A). Secure using the Allen wrench (#D).

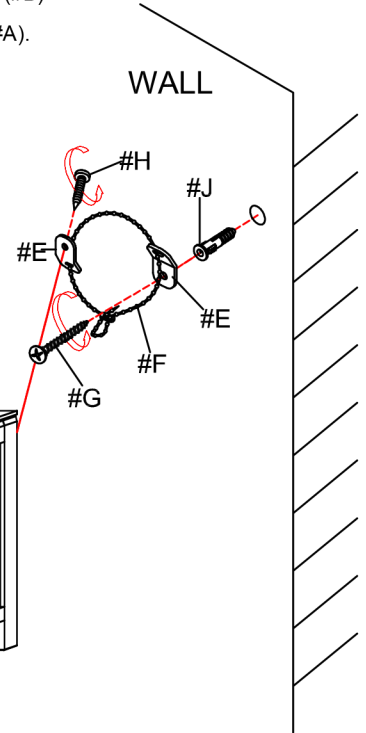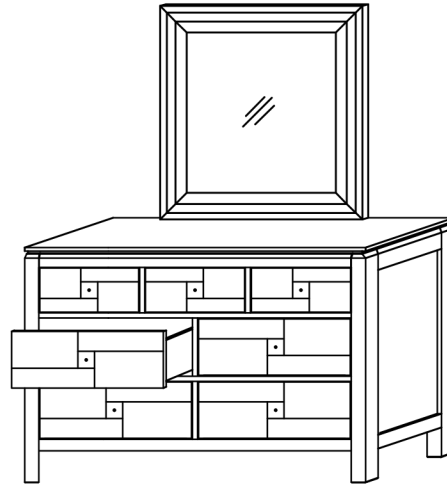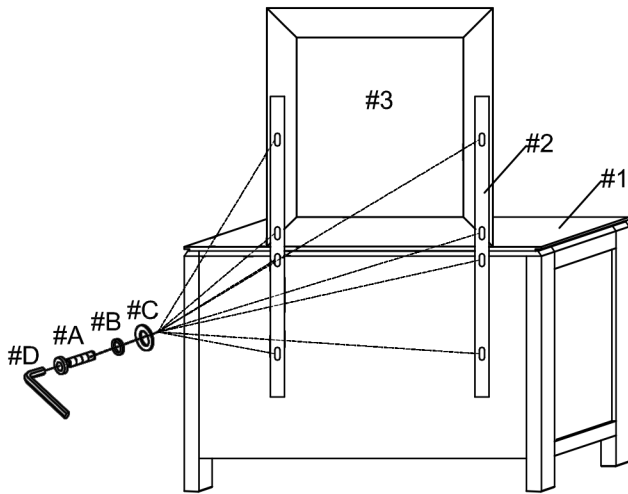

- I. Determine exactly where you want to drill a hole and mark the spot(s). Be sure that you hold the drill perpendicular to the wall so that the anchor will sit parallel. You should drill a hole that is approximately the same size as the plastic anchor (#J) itself. Insert anchor.
- II. Insert the cable tie (#F) into the L-brackets (#E). Align one to the pre-drilled hole on the plastic anchor (#J) and the other one to the pre-drilled hole on the chest.
- III. Insert long screw (#G) into the anchor in the wall and secure using the Phillips screwdriver. Then insert the short screw (#H) into the L-bracket to lock it with the chest. Secure using the Phillips screwdriver.



Align the handle to the pre-drilled hole on the front of the drawers and insert the screw on the inner part of the drawer. Secure using the Phillips screwdriver.

