



97052 Product Installation Instructions

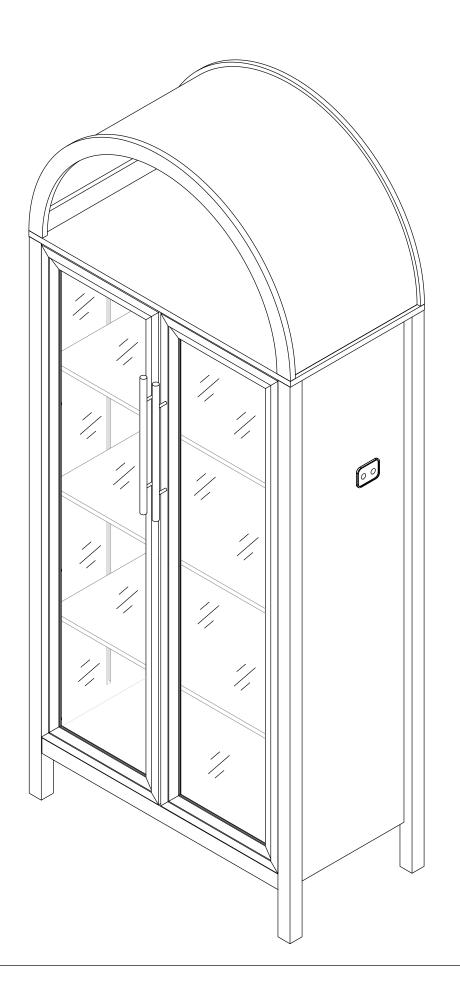


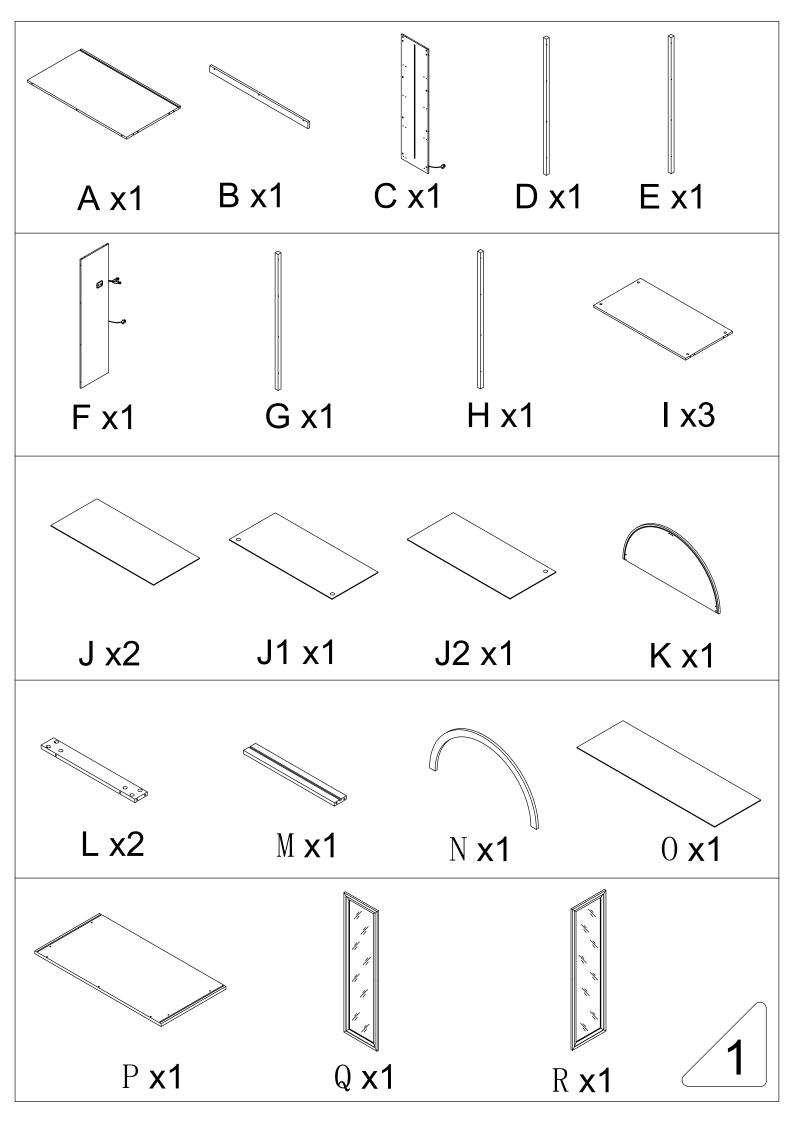



| Accessories list | | | |
|------------------|--------------------------|--|--------------------------------|
| 1 | | Two In One Screw (6x28mm) | 58pcs +4pcs |
| 2 | | Two In One Nut (10x12mm) | 58pcs +4pcs |
| 3 | | Wood Chipping (6x30mm) | 20pcs |
| 4 | | Non-slip pads (35x35x2mm) | 4pcs |
| 5 | | Magnetic Attraction & Screw (3x12mm) | 4pcs +1pcs 2pcs |
| 6 | | Sticker (L=371mm Ø20mm) | 4pcs 1pcs +2pcs |
| 7 | | Wire | 1pcs |
| 8 | | Hinge & Screw (3.5x12mm) | 36pcs 6pcs +4pcs |
| 9 | | Handle & screw (4x22mm) | 4pcs 2pcs +2pcs |
| 10 | Opposition of the second | Fixing clip & screw (3x16mm) | 8pcs +2pcs |
| 11 | | Forked line | 1pcs |
| 12 | Marian Carata | anti-tipping tape Screw & gasket (3.5x12mm) Screw (4x45mm) | 1pcs 1pcs 2pcs 1pcs 1pcs |
| | | Magnetic Attraction & Screw | 4pcs |
| (13) | | (3x12mm) | 4pcs +2pcs |
| 13) | | (3x12mm) Wire Clamp | 3pcs |
| 11 | | | 3pcs |
| 14) | | Wire Clamp | 3pcs +1pcs 6pcs |

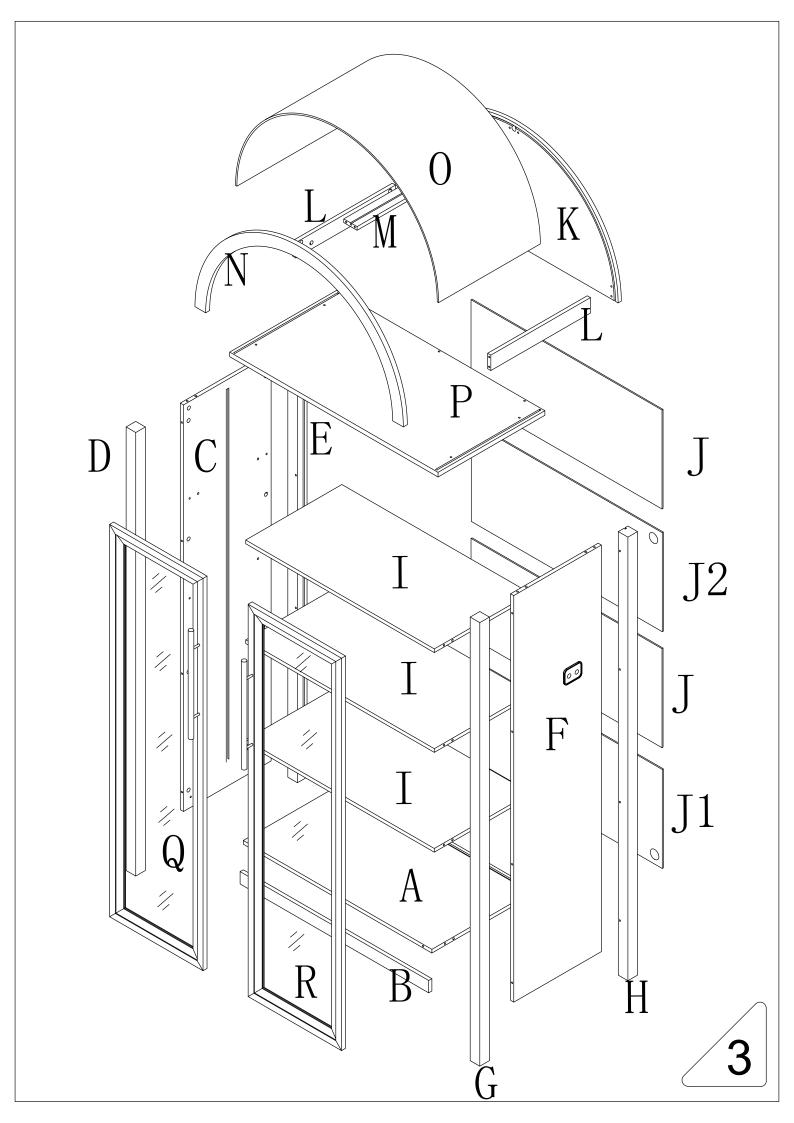


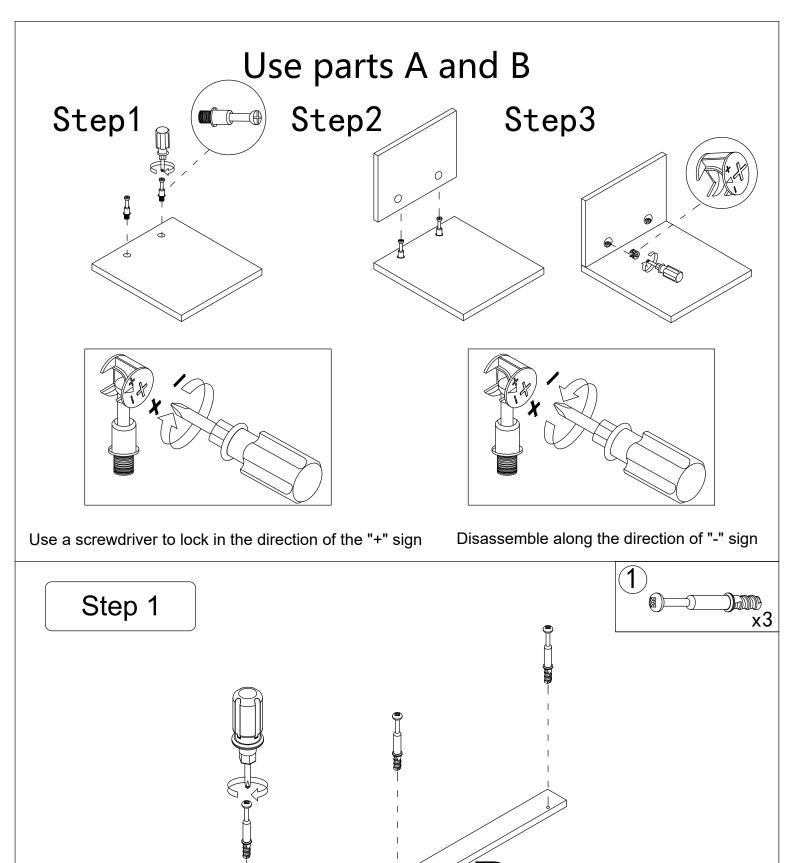


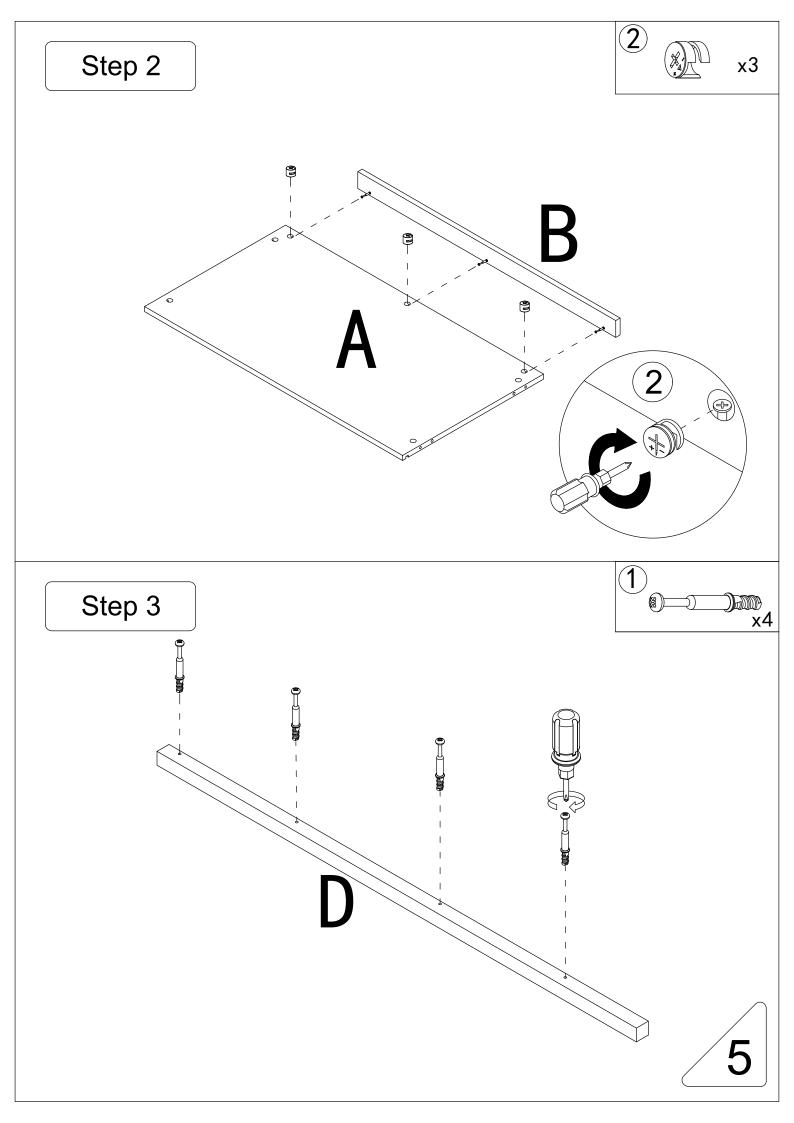


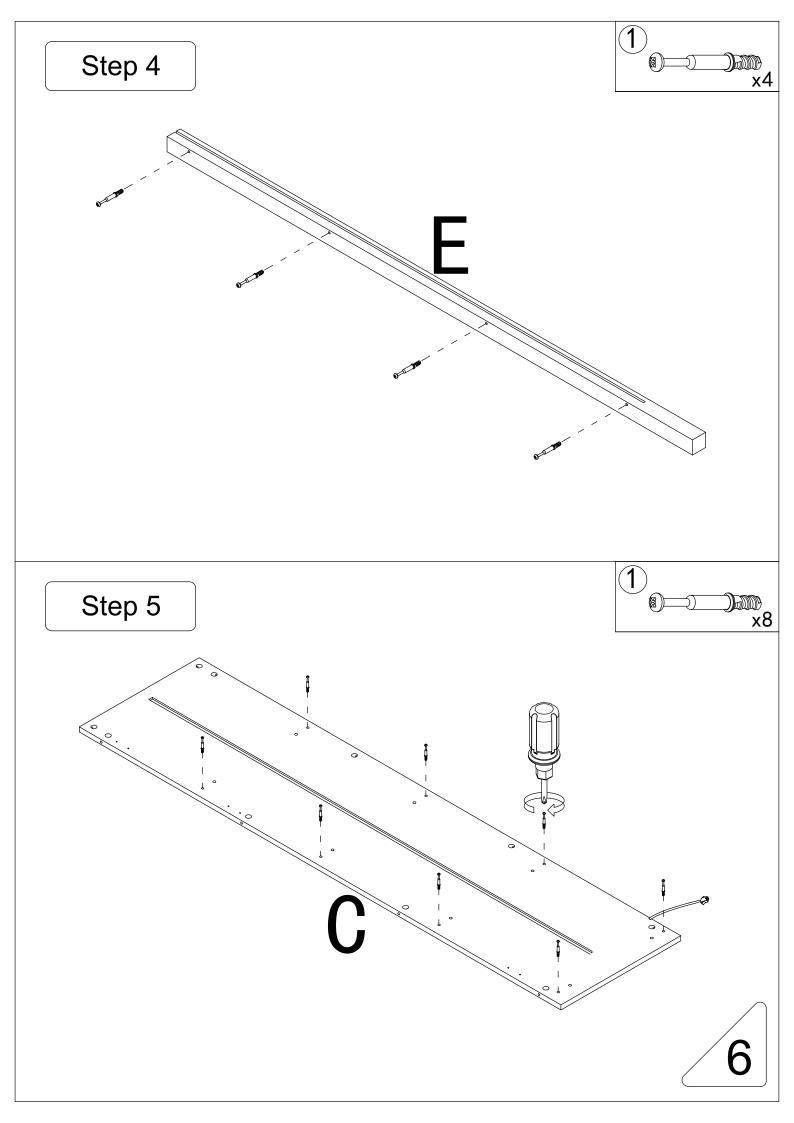


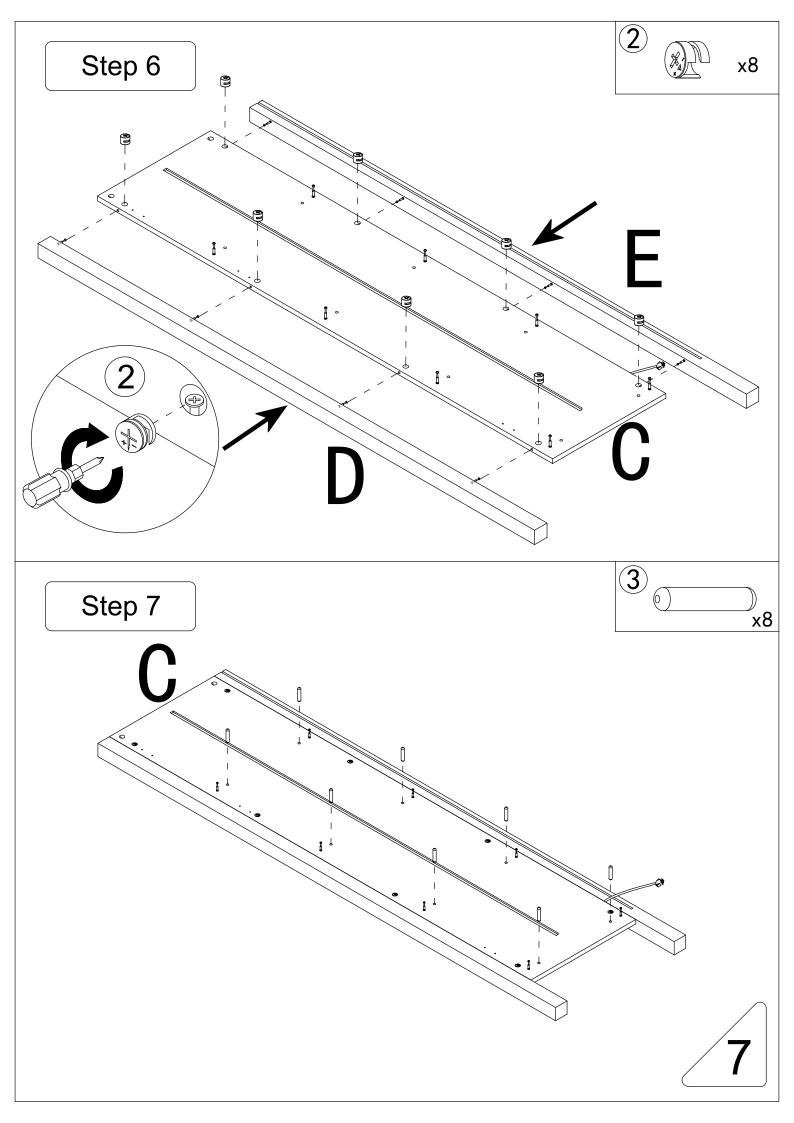


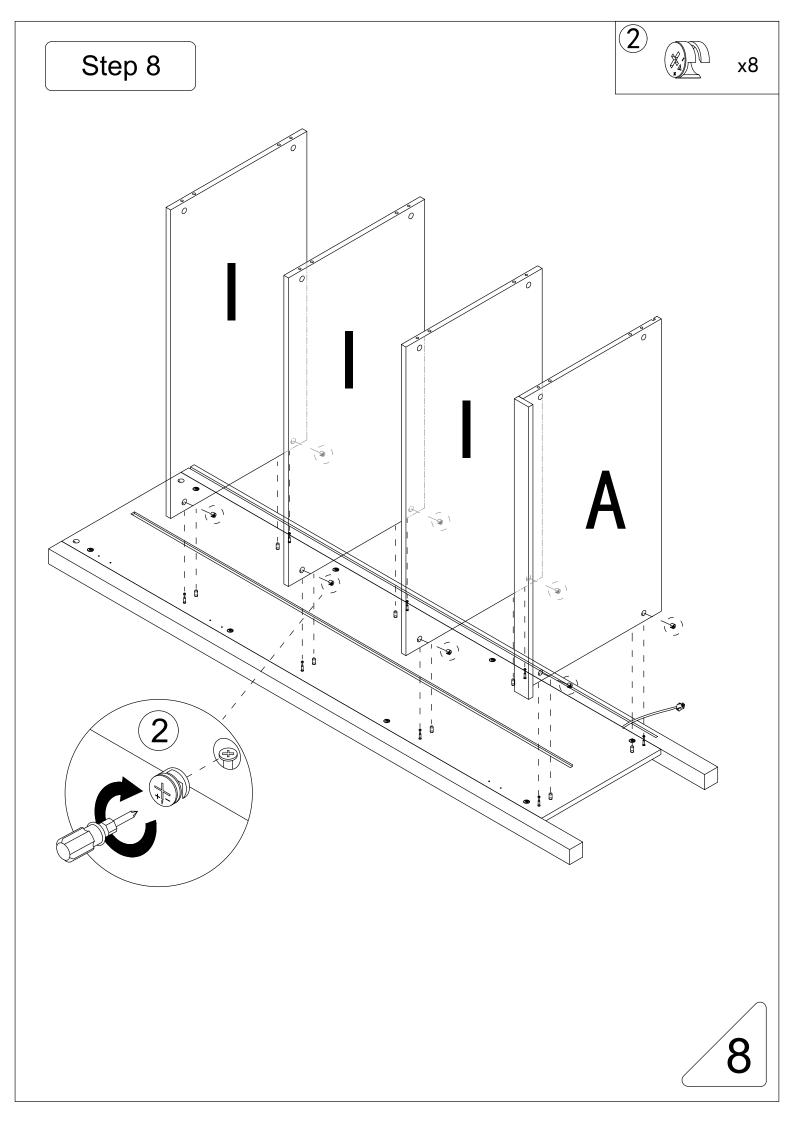


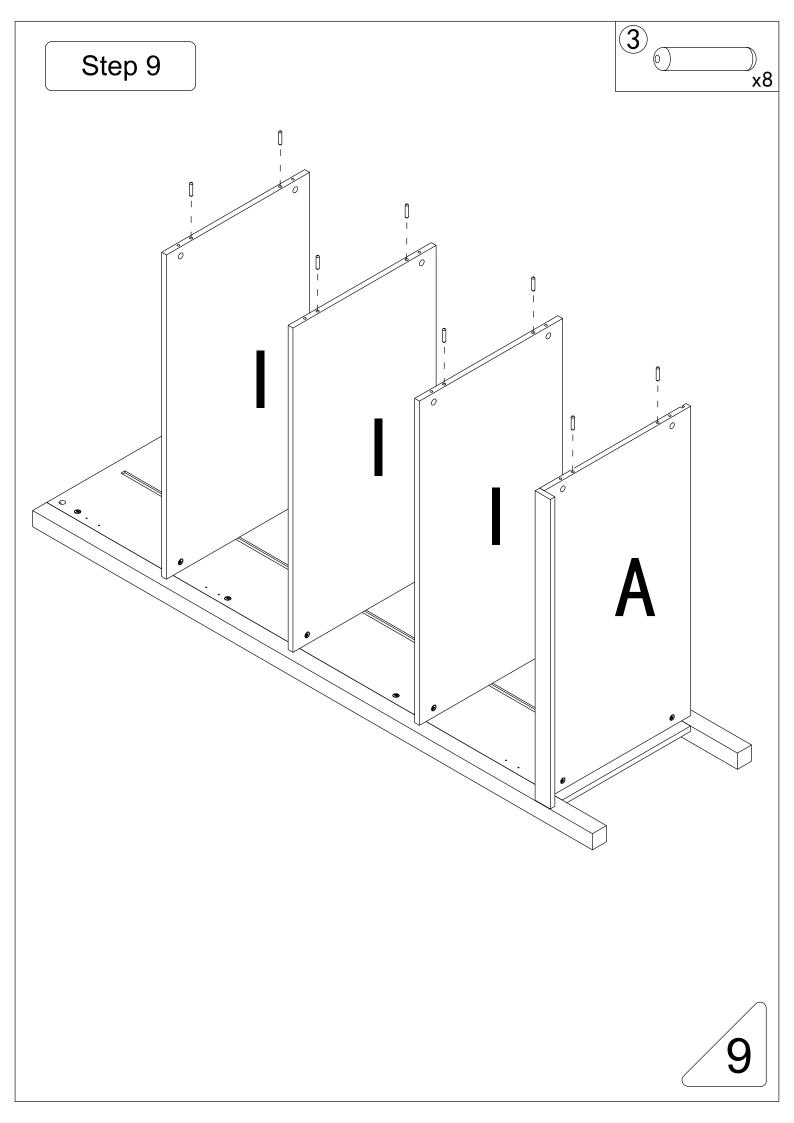


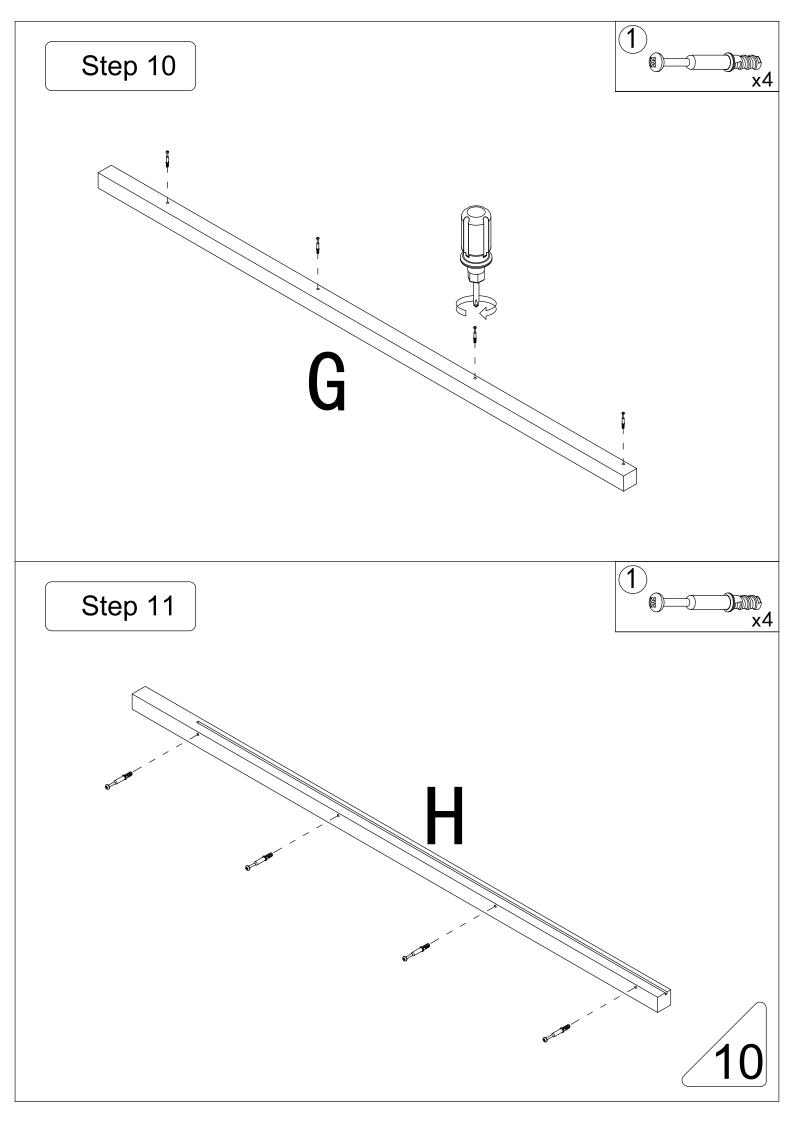


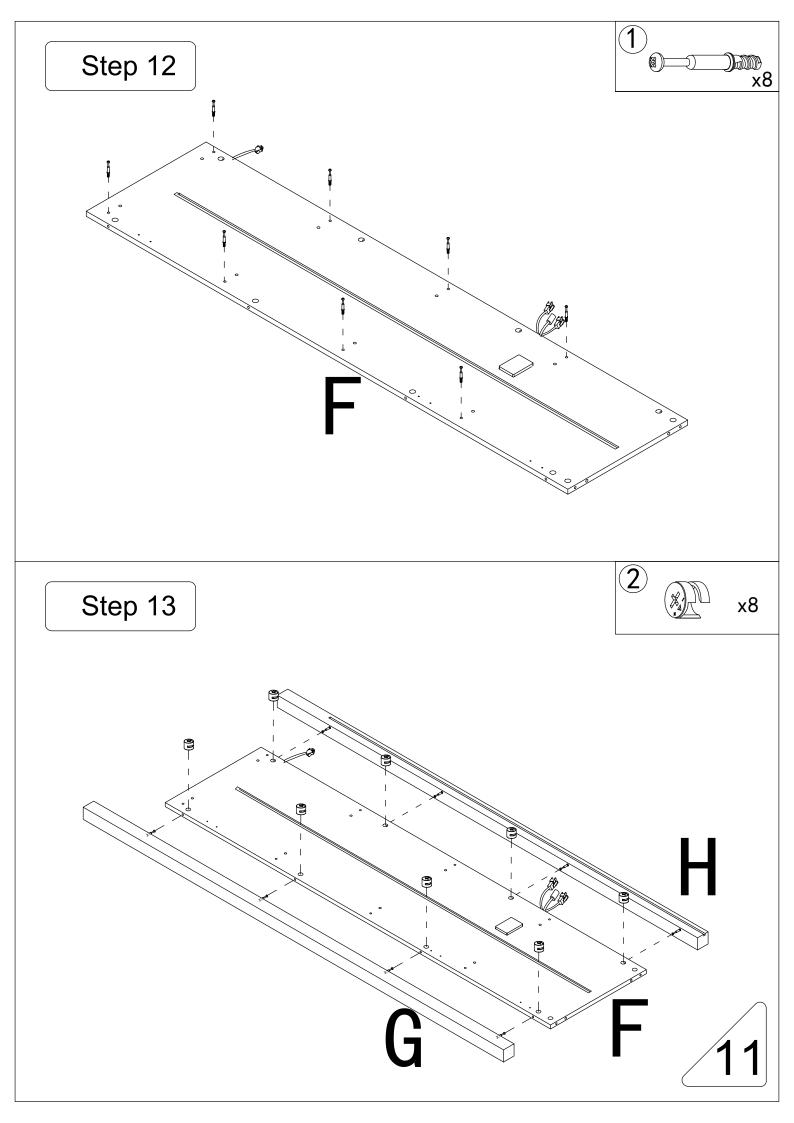

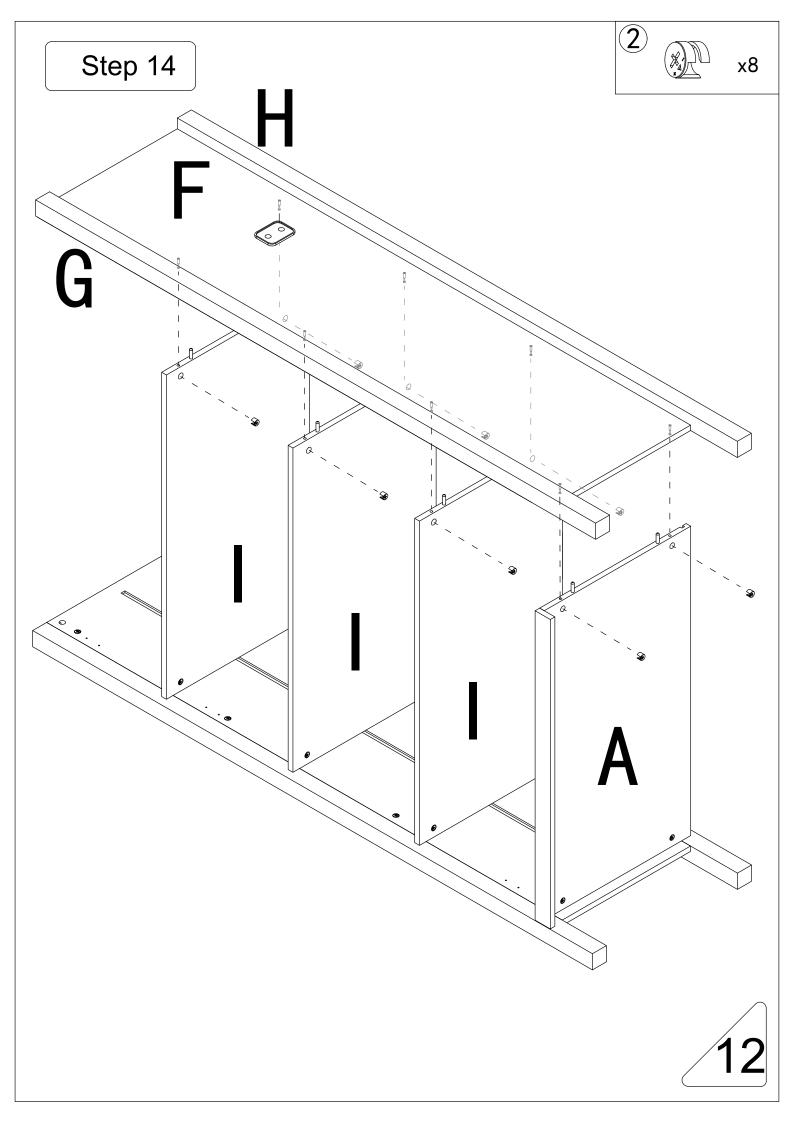


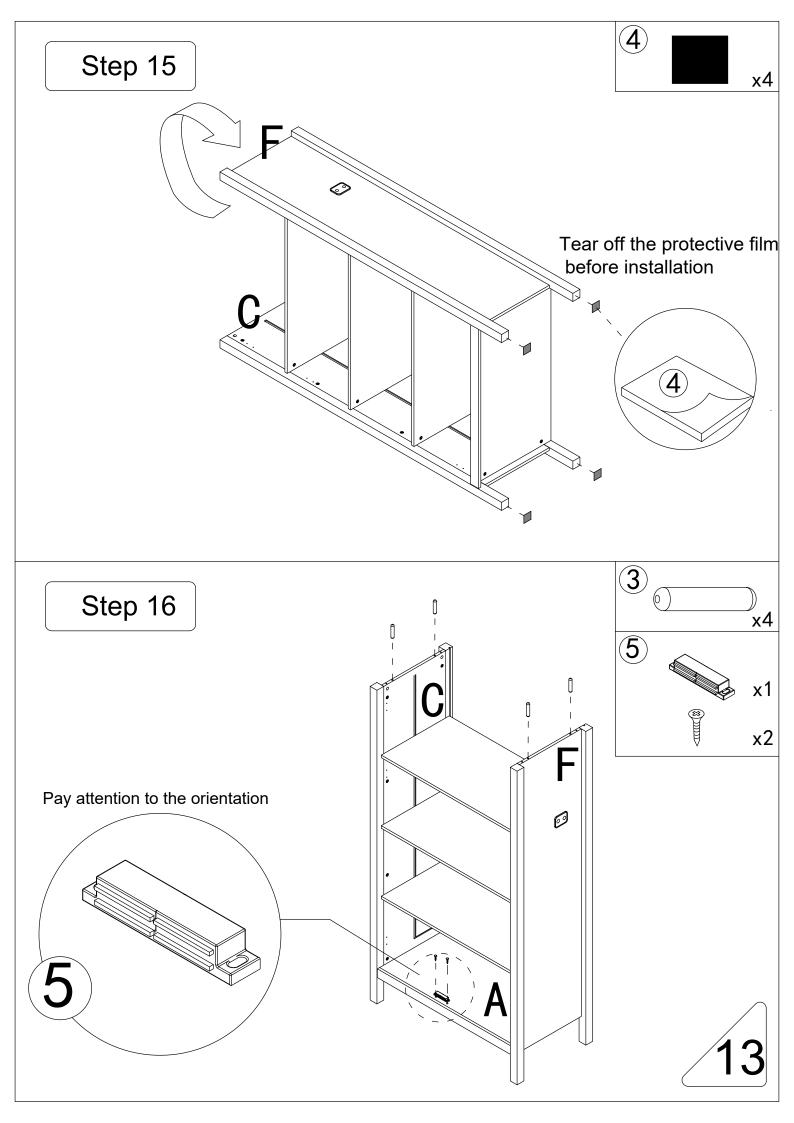


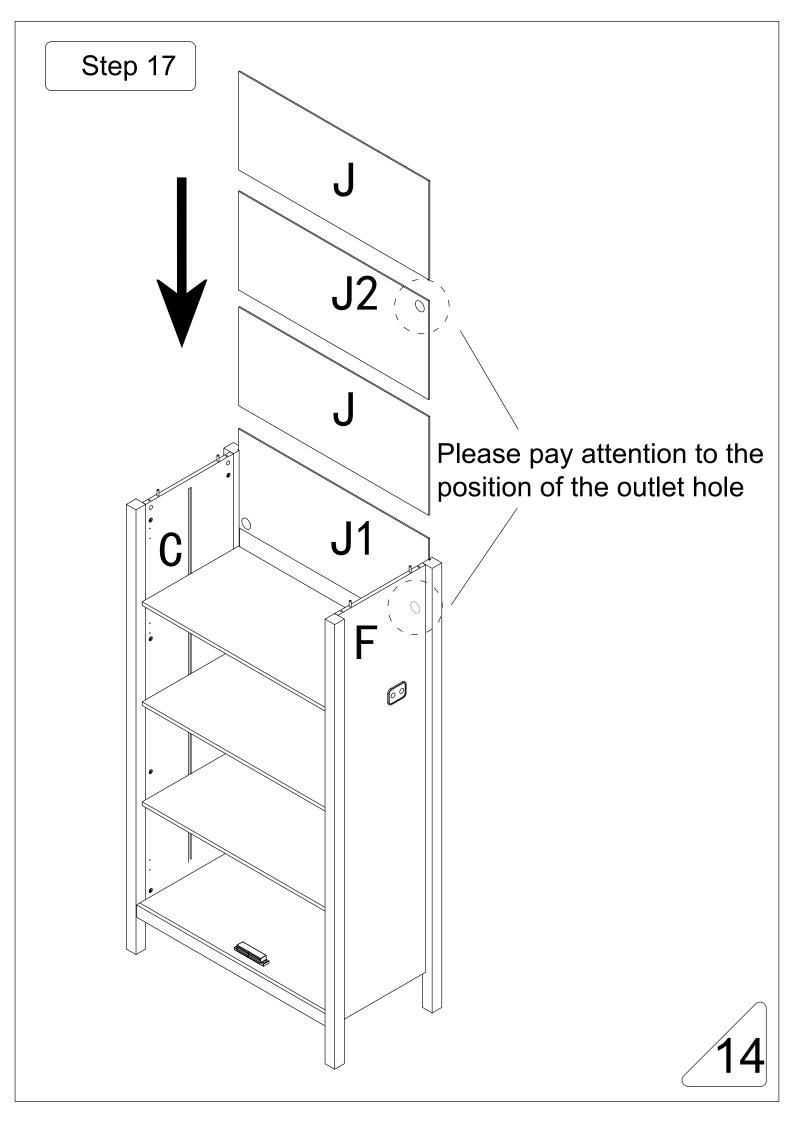


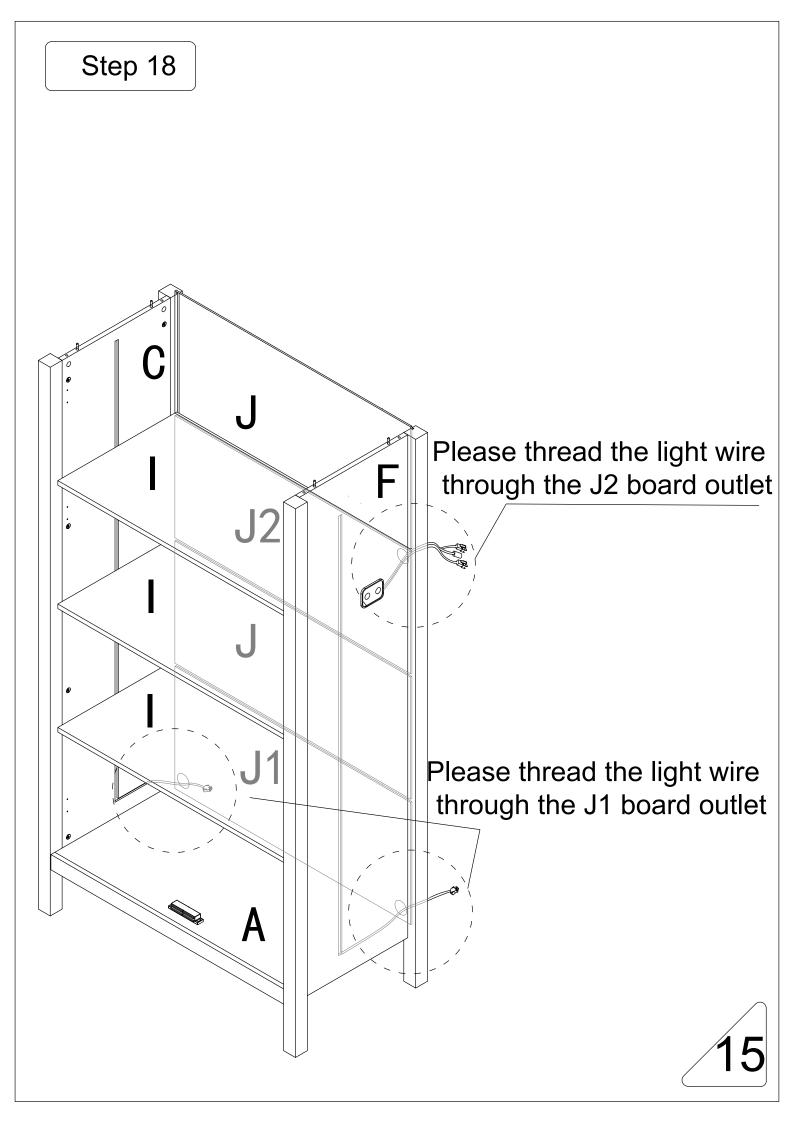





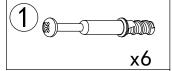

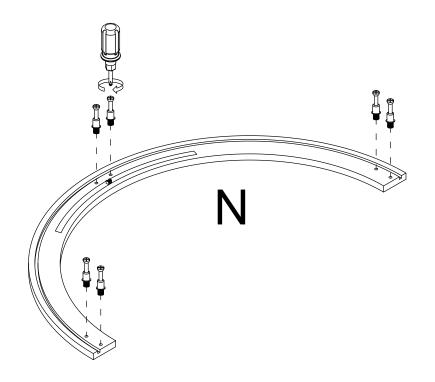


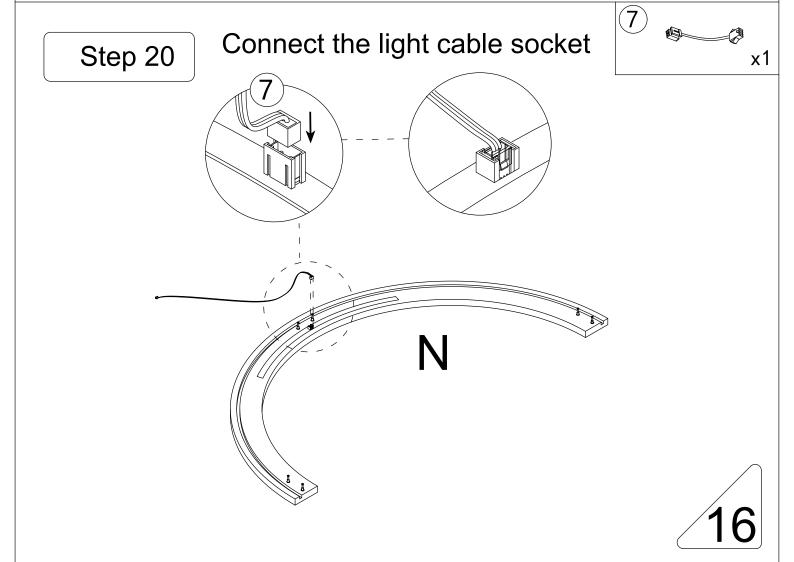

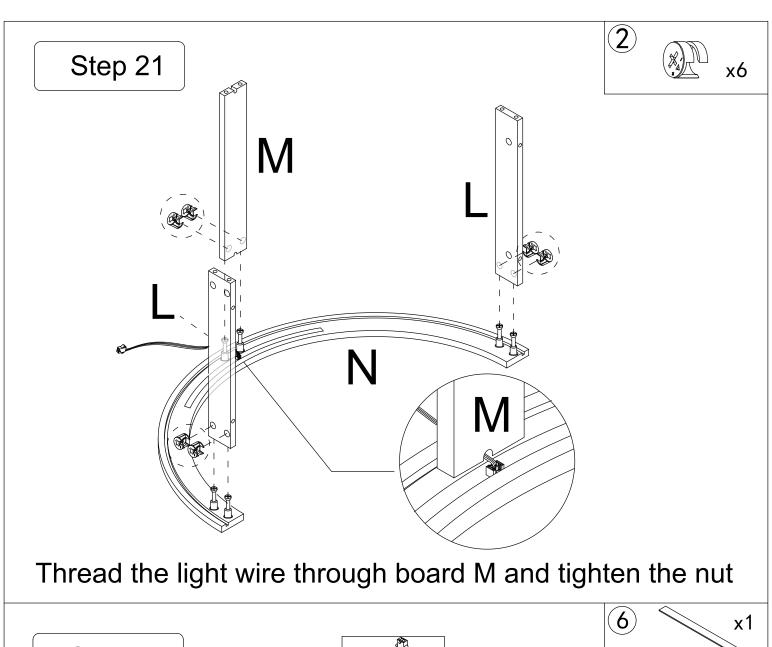

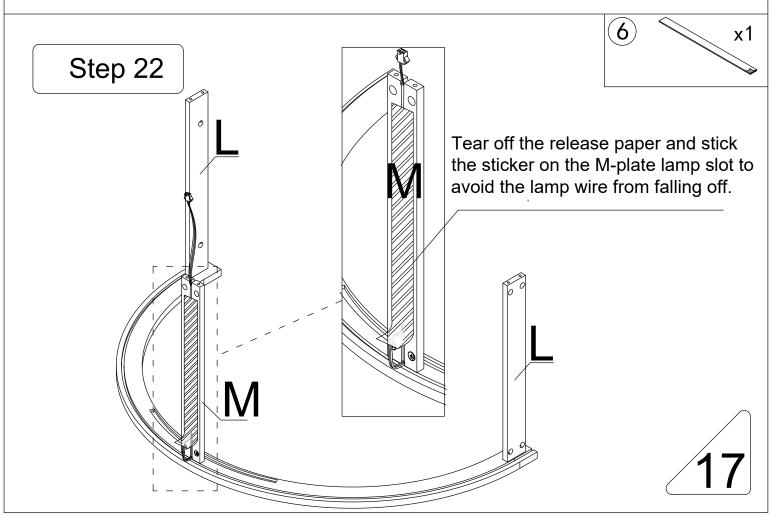


Step 23

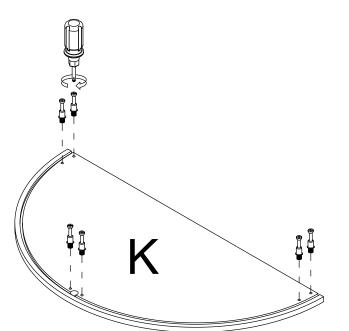


1 (x) (x6)


Step 24

Passing through the hole of plate K

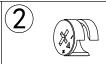



х6

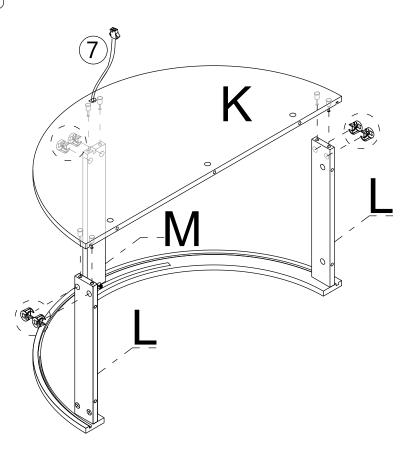


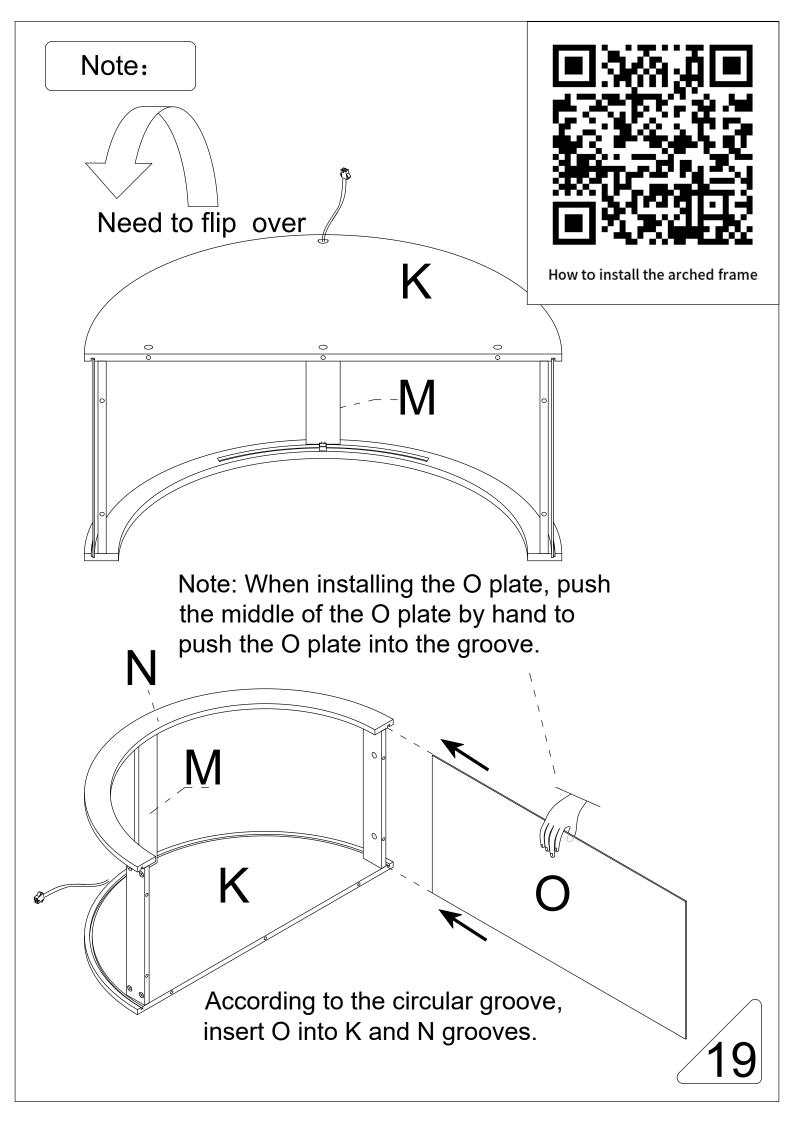



Note:

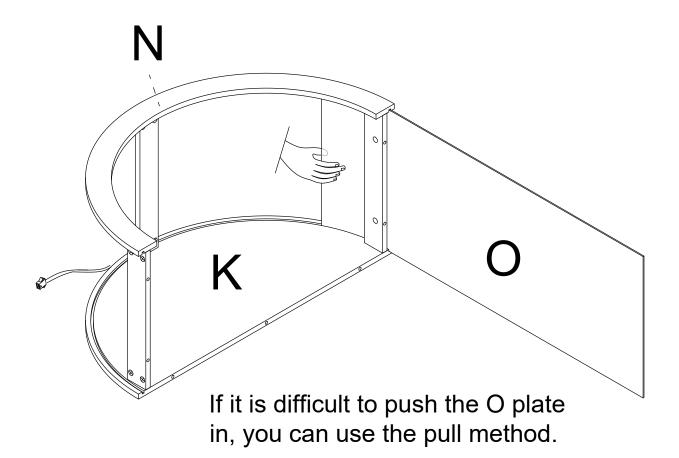

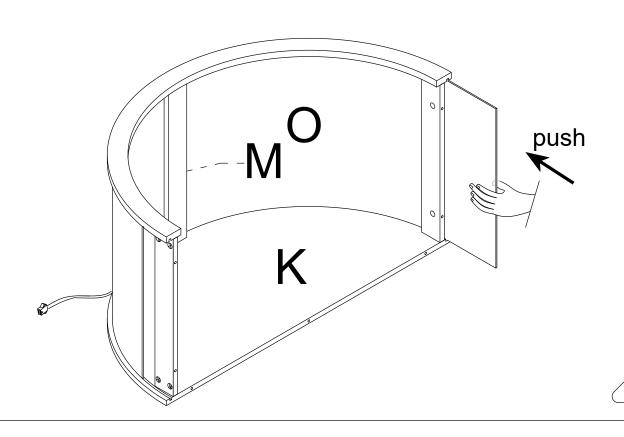

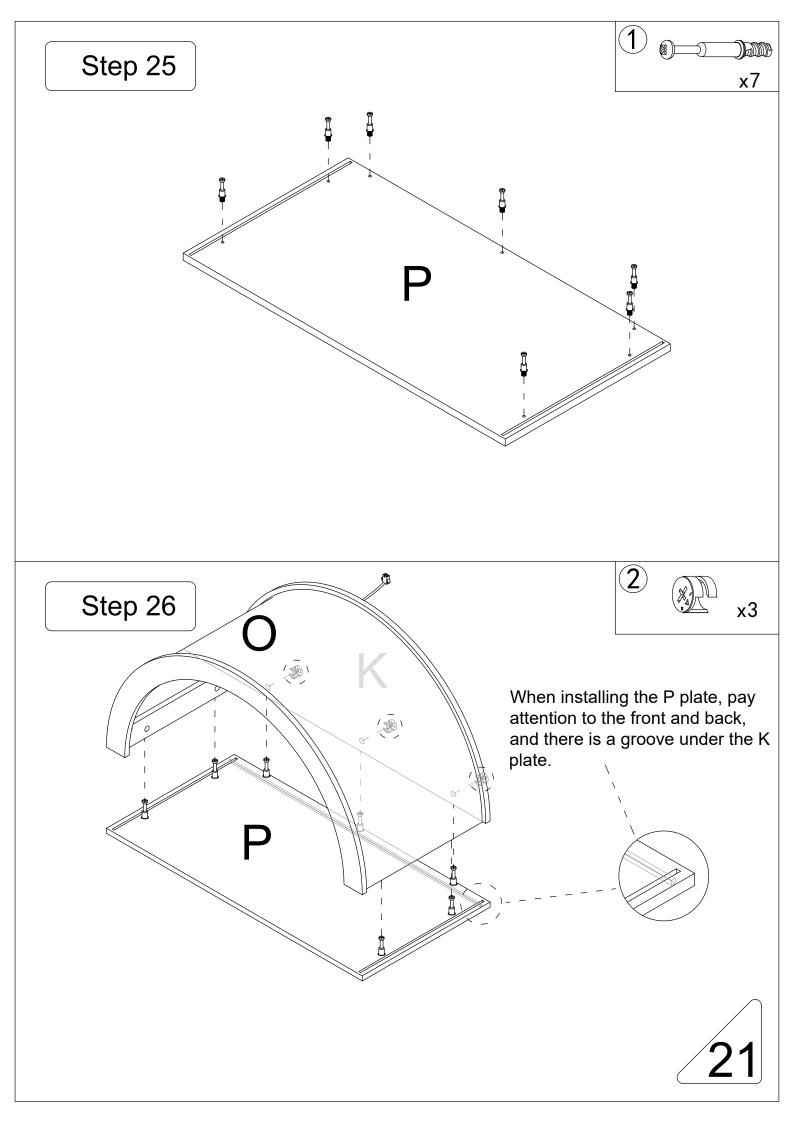


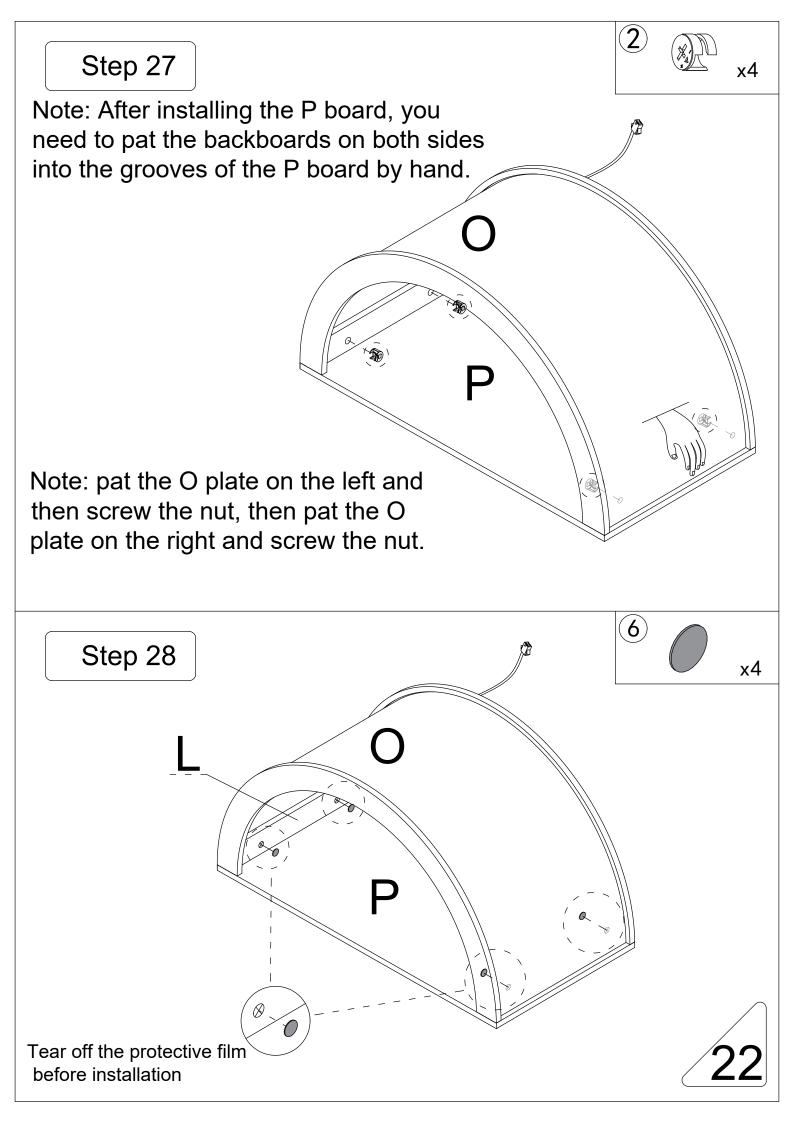


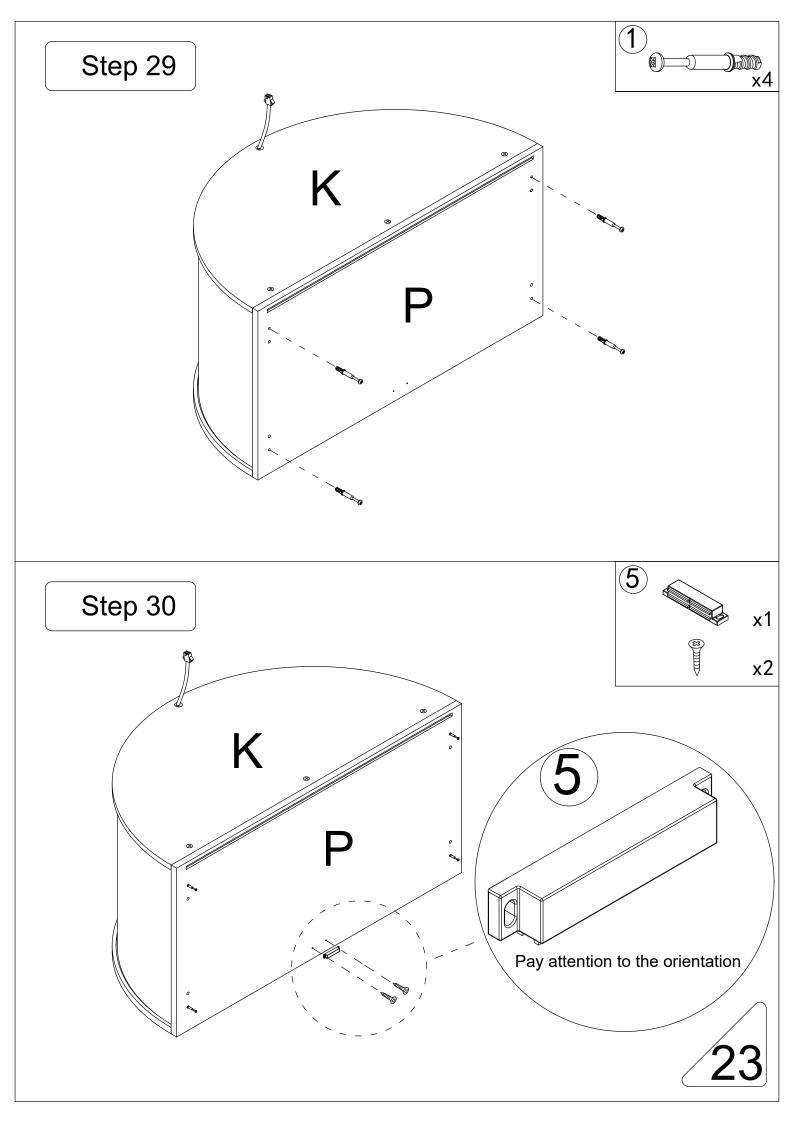






x4

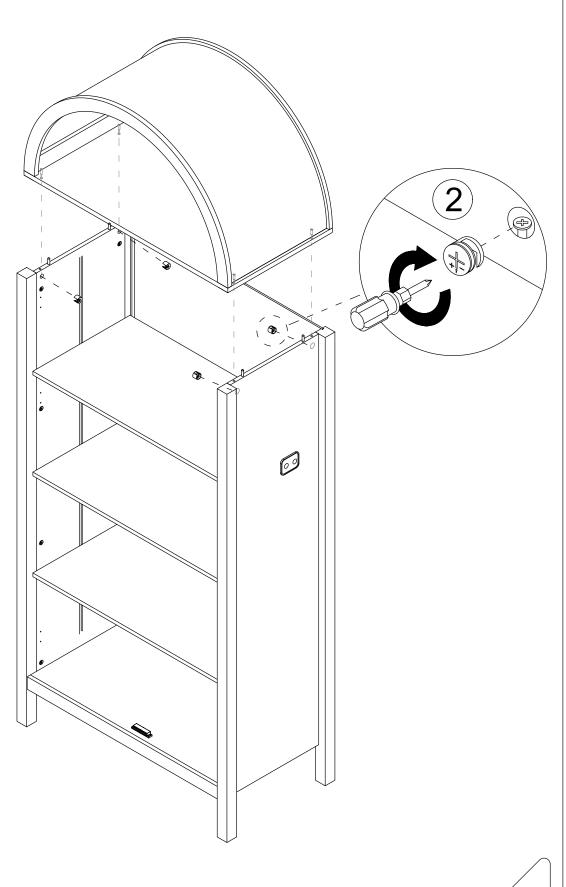


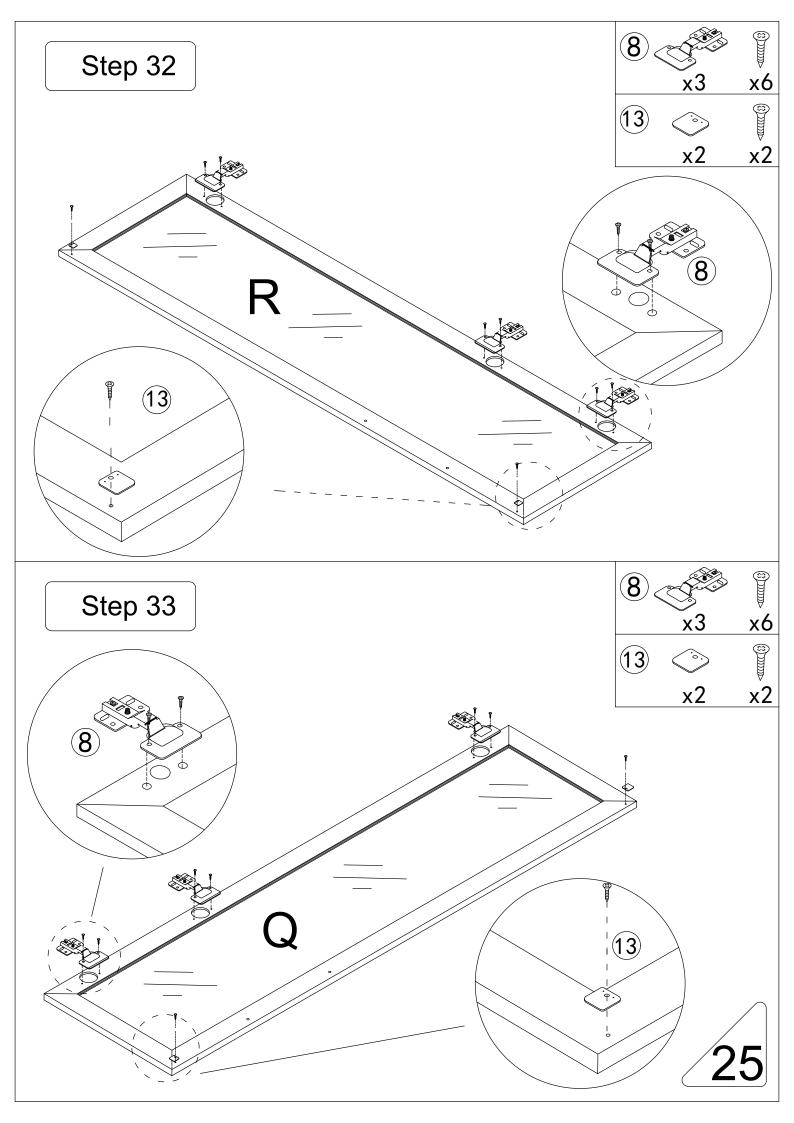


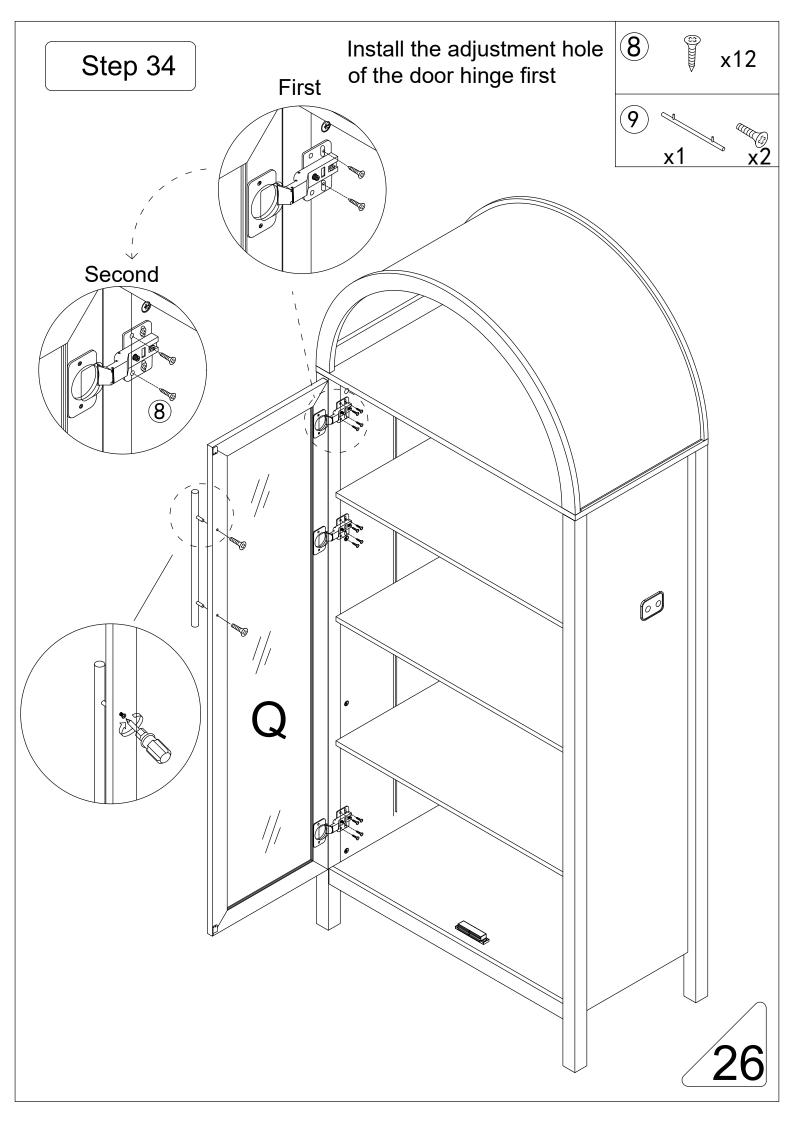


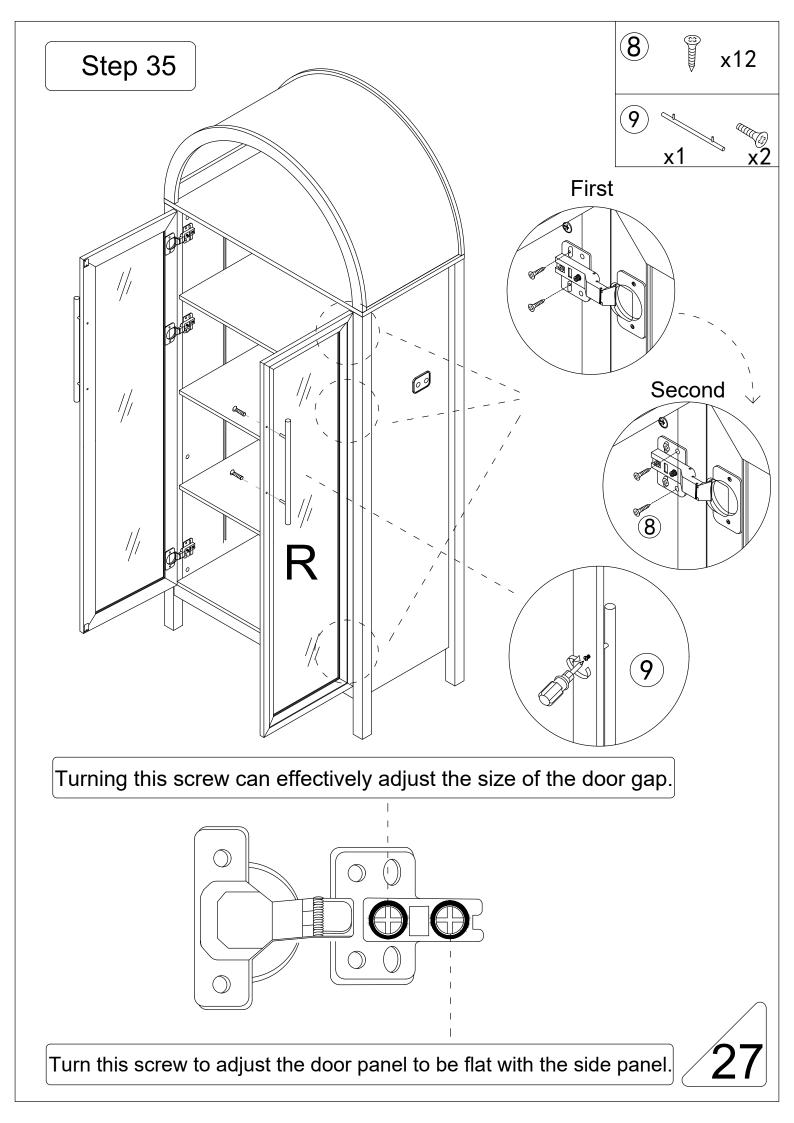


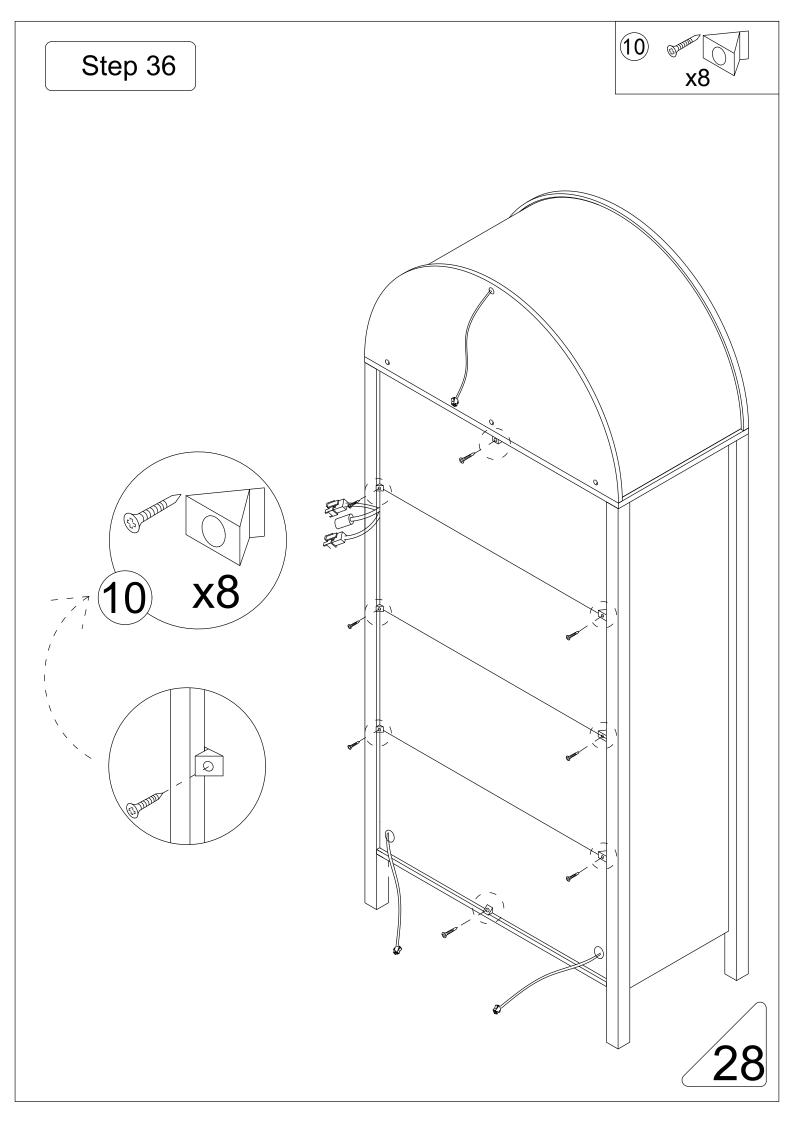

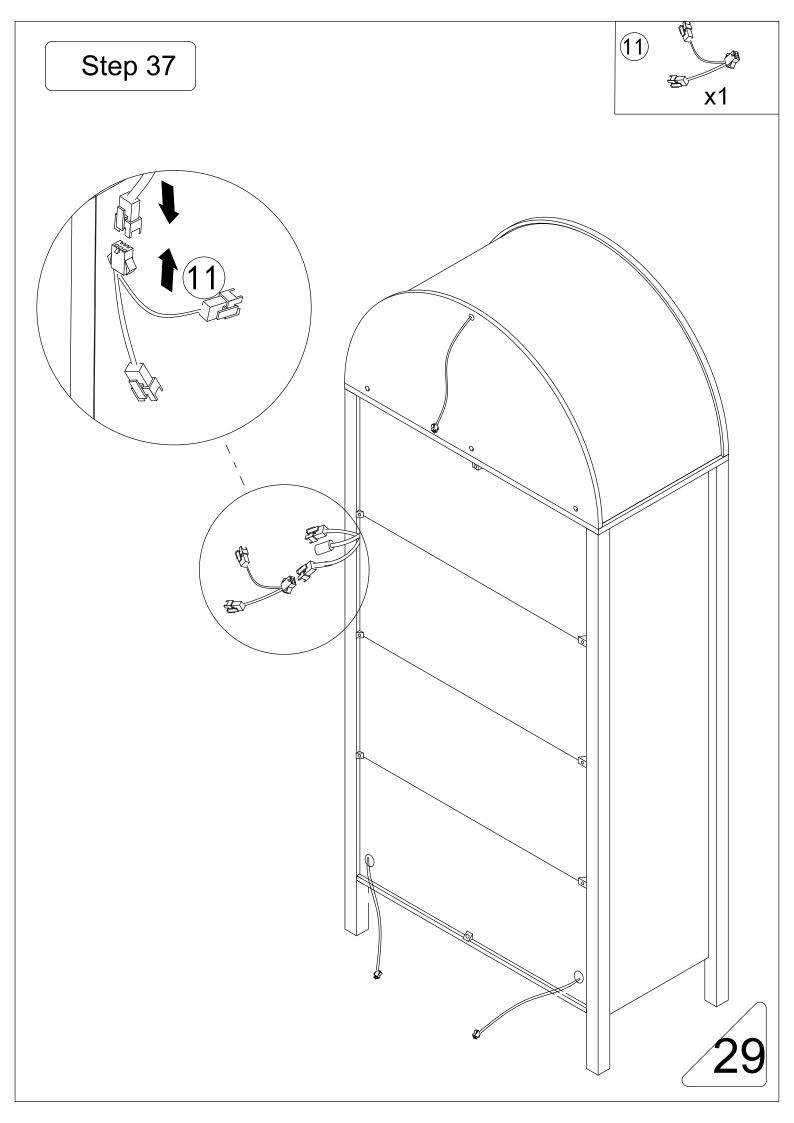


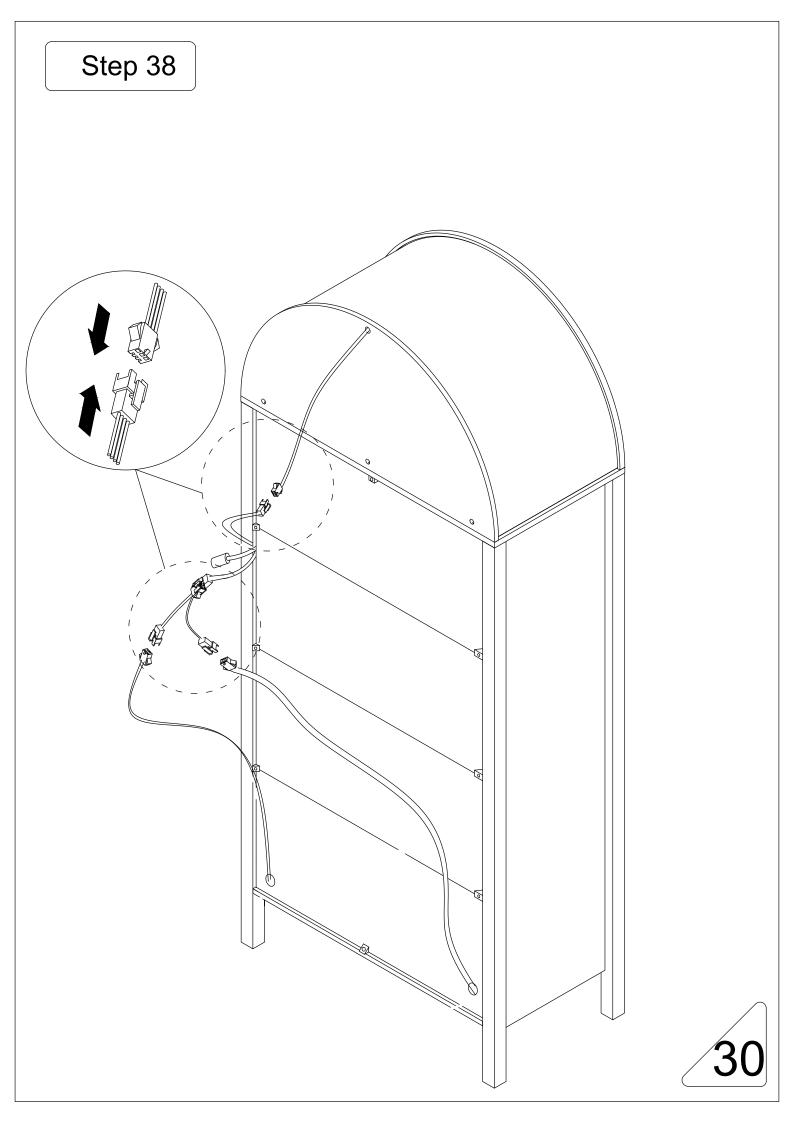


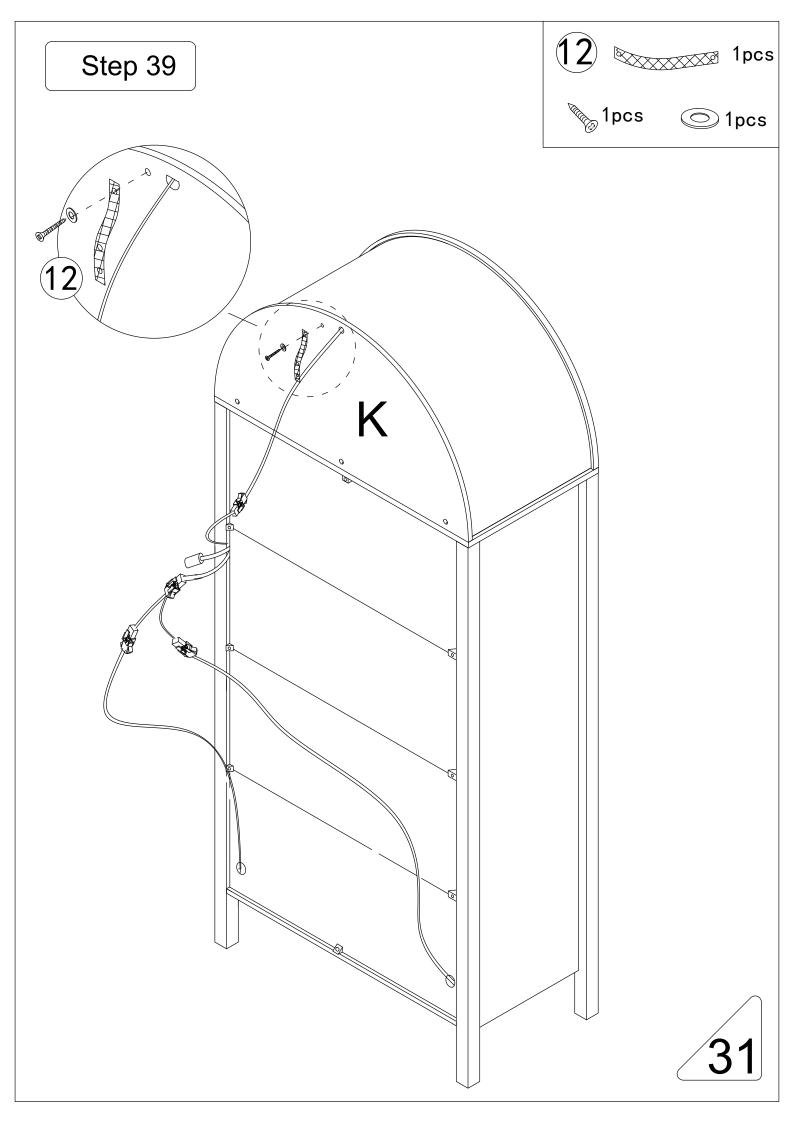


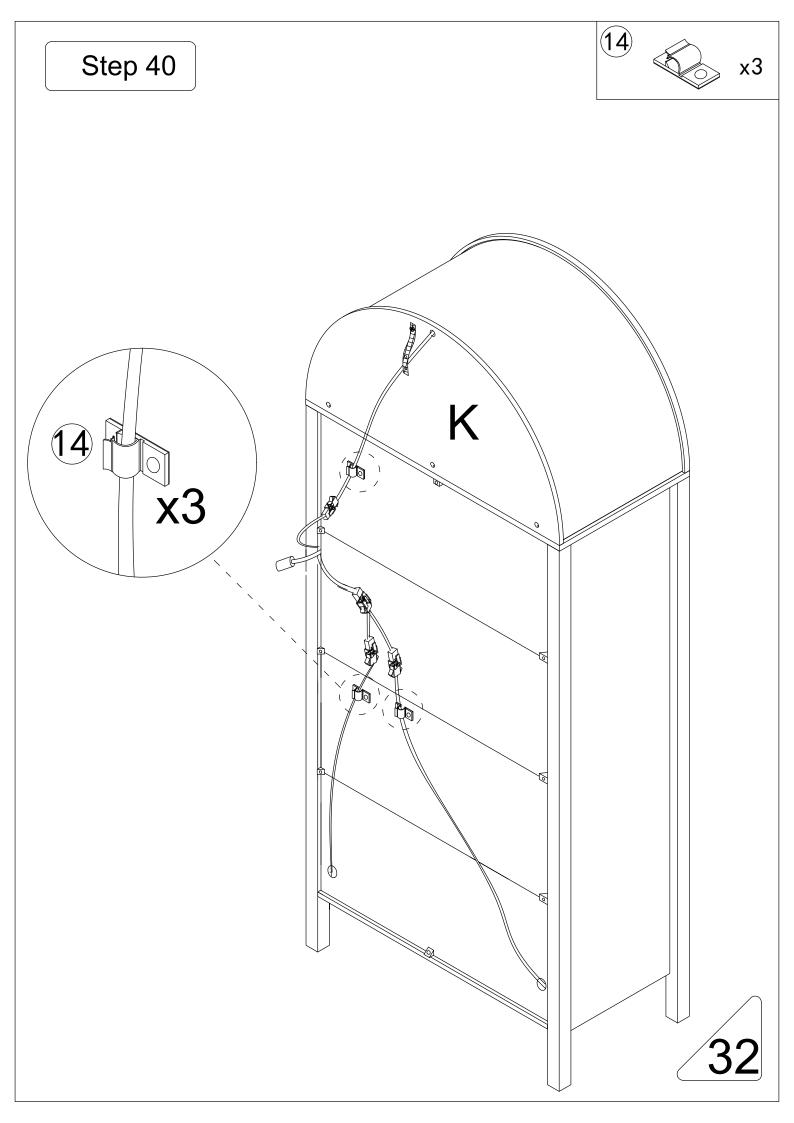

Use a hammer to drive the nail into the gap of the wooden board and fix the back board

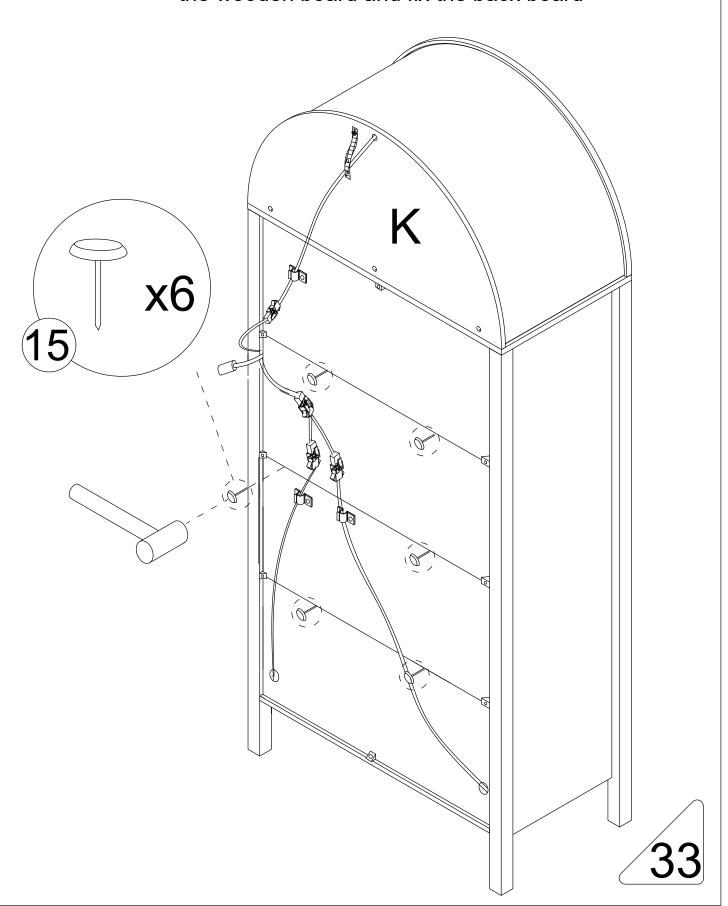

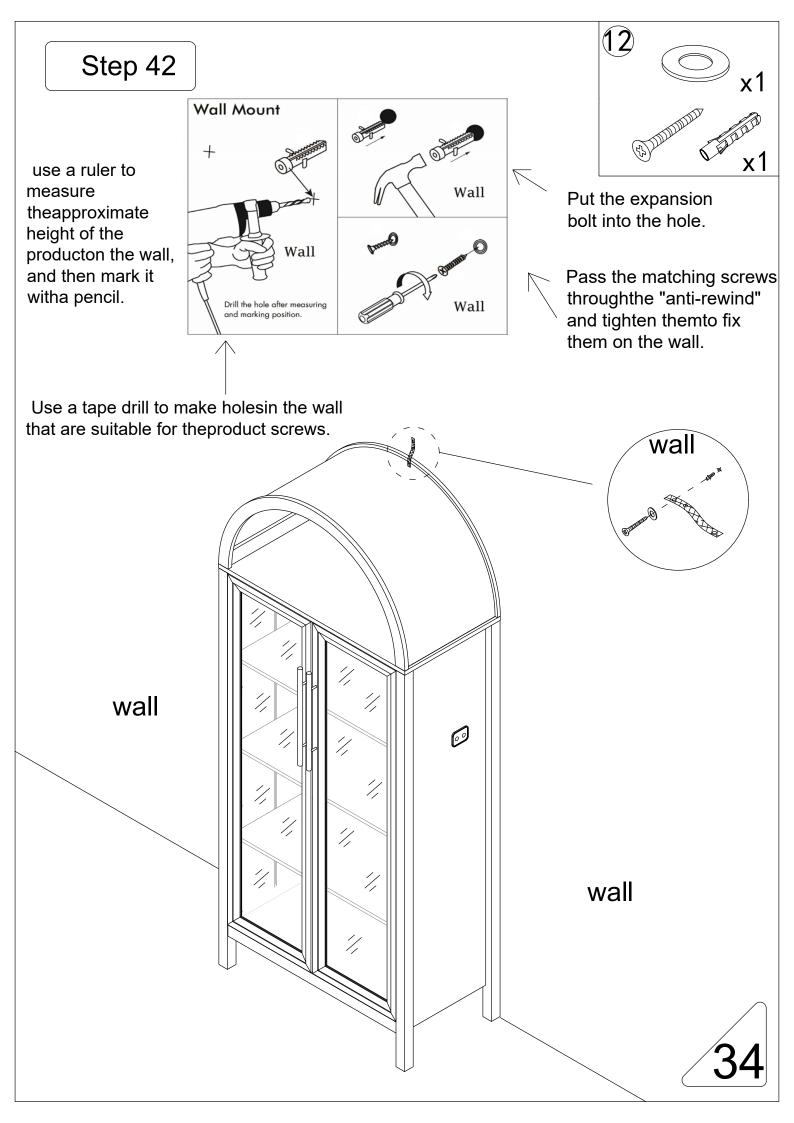

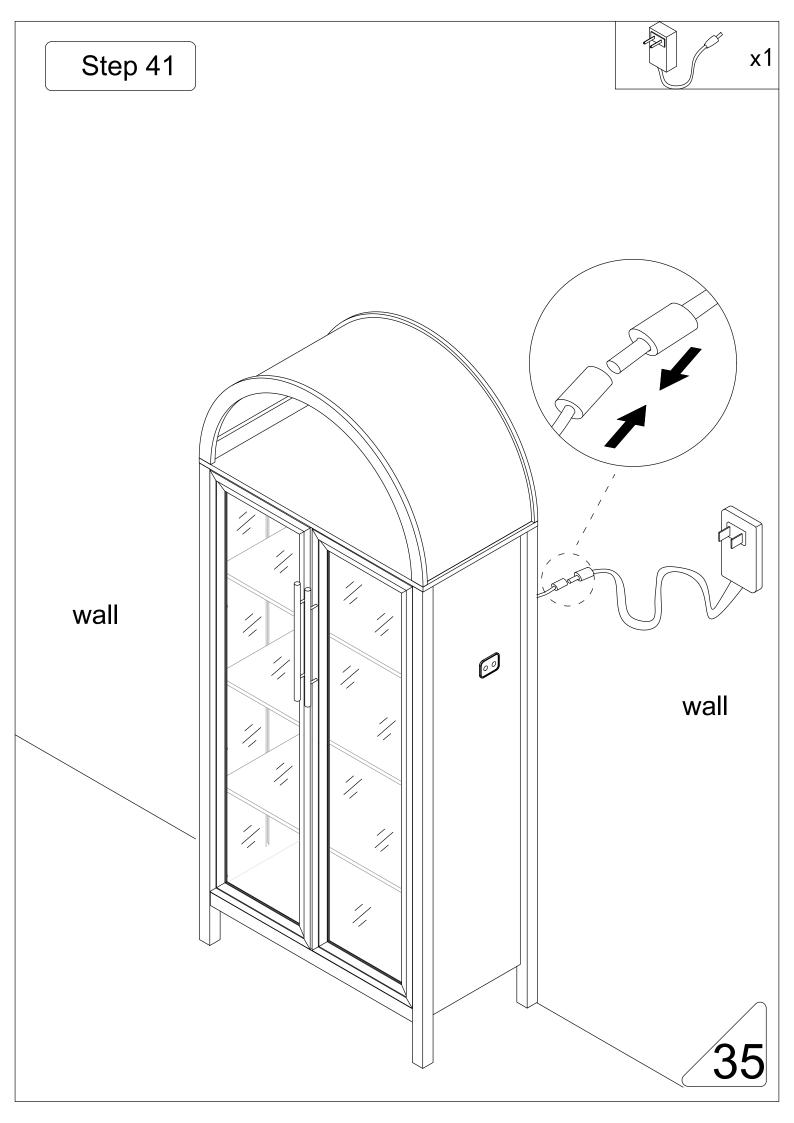


User's Guide

Thank you for purchasing this product. To use this product, please plug it into a 12V DC power supply. Please use if the product works normally after connecting to power.

Introduction

The box is an intelligent controller with 2 touch buttons. It can turn ON/OFF the light, change light colors, and adjust the light luminance.

Product Show

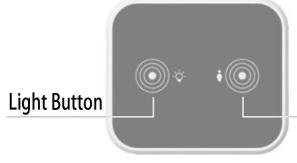

Induction Button



ATTENTION PLEASE

- 1. If there is no touch response suddenly, Re-plug the power to reset the touch static electricity.
- 2. If bubbles appear on the panel, remove the protective film.

Operation



This touch button is used to turn on/off, change colors, and adjust brightness.

- A. Short touch -> lighting on -> short touch -> change light color -> short touch -> change light color -> short touch -> lighting off. B. Long touch -> adjust the luminance
 - This touch button is used to turn on/off the induction function.
- A. Short touch to turn on the induction function. It can auto-turn on the light when people are close to the controller in 1 meters. It can auto power off the light when the body is far away from the controller after 30 seconds.
- B. Long touch to turn off the induction function.
- C. Note: When you touch the light button to change the light modes, the induction function will automatically turn off. It is best to turn on this function after selecting the light color and adjusting the brightness you want.