■ Instructions of Safety and Warnings:

- · Any failure to comply with the safety and installation instructions in this manual may cause serious bodily injury.
- Overlooking any part of the instructions, warnings and additional information marked with the "Note" and "\n"" may result in serious damage to the system or its components.
- Children should never be allowed to operate or touch the product without direct supervision of an adult. Users should prevent children from being near or around the desk during operation.
- Disabilities and/or lack of experience and knowledge should be prevented from using the product unless under supervision or assisted during use and operation.
- · Never sit on or exceed the rated weight of the desk

Electrical Safety Instructions:

The product is powered by electricity. In order to avoid burns, fire and electric shock, please read the



Don't clean the product with water while the power is still connected.



Never operate the system if it's in moist environment or its electrical components have contact with liquids.



Don't disassemble or replace components while the power is still connected.




Don't operate the system if the control box makes noise or odor. Alterations of the given power unit and

control box aren't allowed.



Never operate the system with a damaged cord or plug. Please contact your point of purchase to replace the damaged parts.



Other Safety Instructions:

- Remove any obstacles from the area around the desk during assembly and subsequent use.
- $\boldsymbol{\cdot}$ Organize all cords and wires to prevent any possible tripping or accidents from occurring.
- \cdot Never attempt to modify or change the desk frame or components that operate the desk.
- Don't add anything to the adjustable junctions of the desk frame.
- · The desk is rated for Indoor Use Only.

Disposal: The product with this mark indicates that this product shouldn't be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the local recycle service or contact your point of purchase to withdrawn the product.

MOUNT-IT!

PREMIUM ELECTRIC SIT-STAND DESK FRAME


Instruction Manual

MI-8030W MI-8030B




to visit the product page


VISIT US AT MOUNT-IT.COM FOR PRODUCT REGISTRATION AND WARRANTY INFORMATION. CONTACT US AT SUPPORT@MOUNT-IT.COM OR 855-925-5668 FOR QUESTIONS OR COMMENTS.

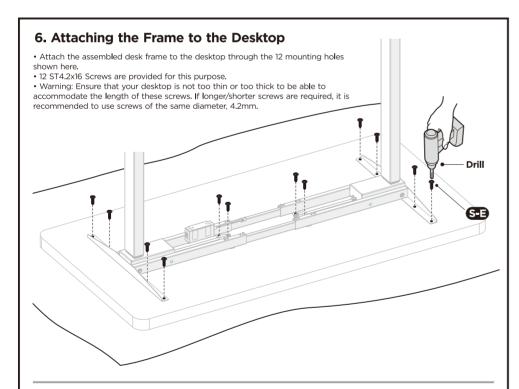

7. Connecting the Cables


- Determine which side the control panel will be located then connect the Controller (#I) to the AC Adapter (#G) as shown.
- Connect the Controller to the 2 Lifting Columns. Use the longer cable (#S-F)
- to connect the column furthest from the control panel. • Insert the end of the Power Plug (#S-H) into the AC Adapter.
- Note: Do not plug into a power source until the desk is fully assembled and

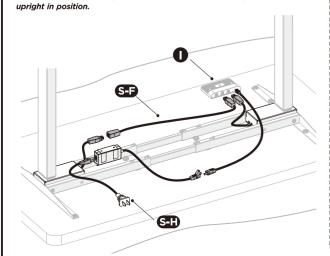

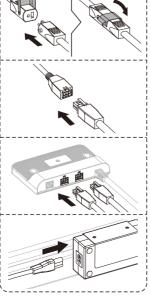


8. Attaching the Controller

• Attach the Controller to the desktop using 2 ST4.2x16 Screws (#S-D) or the same user selected screws as in

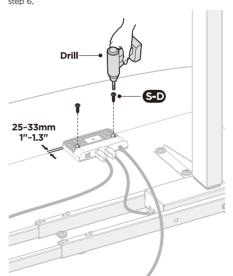

9. Cable Management

- Position the Cable Clips (S-I) as needed and attach them using ST4.2 Screws (#S-D) or the same user selected screws as in step 6.
- · Route the cables through the Cables Clips to prevent dangling cables and to provide a clean and neat setup.

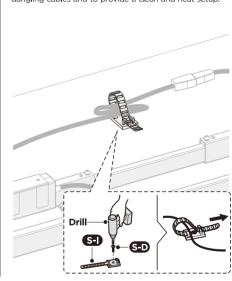


10. Adjusting the Desk

- Turn the desk upright with the help of another person.
- There are 2 adjustable foot pads on the bottom of each foot. If the desk is not even on the floor, turn the pad to raise or lower it to adjust the level of the desk.

Tip: Use a bubble level (not included) to help level the desktop.


• Before using the desk for the first time, you will need to perform a system reset following the steps below. Refer to the below or Digital Control Panel User Guide for more information on using the control panel.

• To reset the system, press and hold the "Up" and "Down" buttons simultaneously. The unit will emit one beep, the display will show "rSR" and the desk will automatically move down to the lowest position. Do not release the "Up" and "Down" buttons until the unit emits another beep. The desk will raise slightly, and the display will show the current height, then

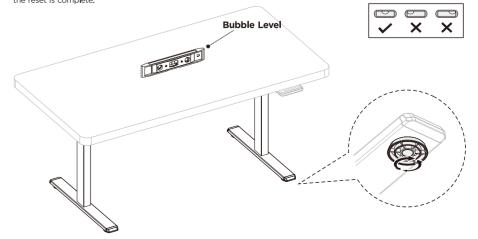

■ Checklist and Installation


Please check all of the components shown in the component checklist. If any of the components are missing or damaged, contact your point of purchase for a replacement.

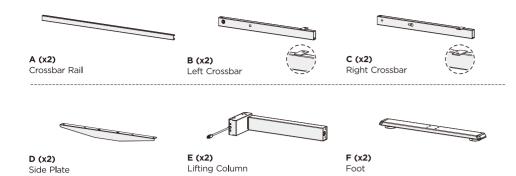









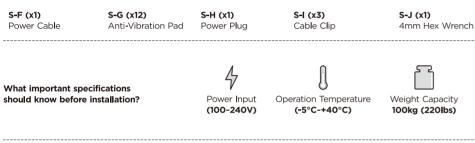




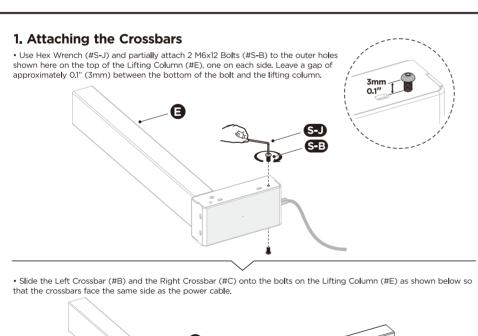

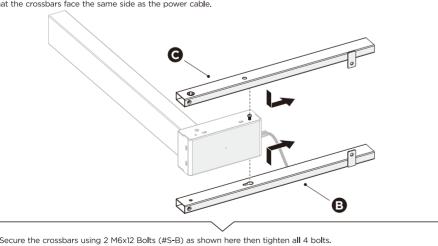


Secure the crossbars using 2 M6x12 Bolts (#S-B) as shown here then tighten all 4 bolts.

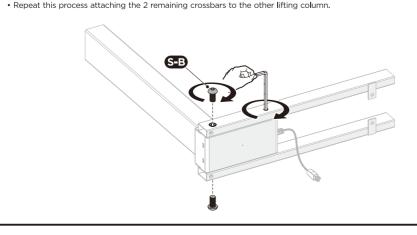


2. Attaching the Side Plates

- Attach Side Plates (#D) to the top of the Lifting Columns using 2 M6x10 Bolts (#S-A).
 Insert 6 Anti-Vibration Pads (#S-G) to the holes shown here. 4 on the Side Plate, and 1 on each Crossbar.

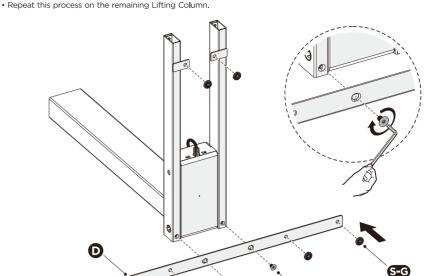


3. Attaching the AC Adapter

 \bullet Slide the AC Adapter (#G) into the Adapter Holder (#H) then hang the holder on one of the crossbars.

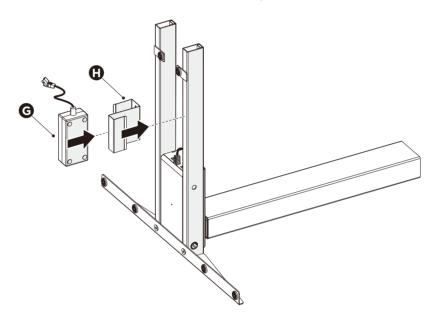

4. Attaching the Feet

- Attach the Foot (#F) to the Lifting Column using 4 M6x35 Bolts (#S-C).
- · Repeat the same process to attach the other foot.

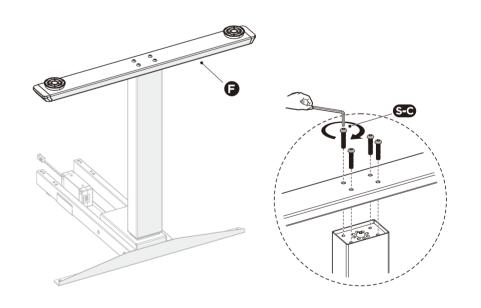

5. Adjusting the Frame and Attaching the Crossbar Rail

- Carefully place the desktop (not included) upside down on a smooth and flat surface, or on a blanket.
- Insert the Crossbar Rails (#A) into the ends of the Crossbars on one of the leg assemblies. Place the legs upside down on each side of the desktop as shown here in the center of the desktop, far enough apart to fully support the desktop.
- Slide the Crossbar Rails (#A) into the crossbars on the other leg as shown in magnification bubble 1.
 Secure the rails in place using 8 M6x12 Bolts (#S-B) with 4 on each leg assembly, as shown in magnification bubble 2.

