


USER'S MANUAL

52-inch ceiling fan light

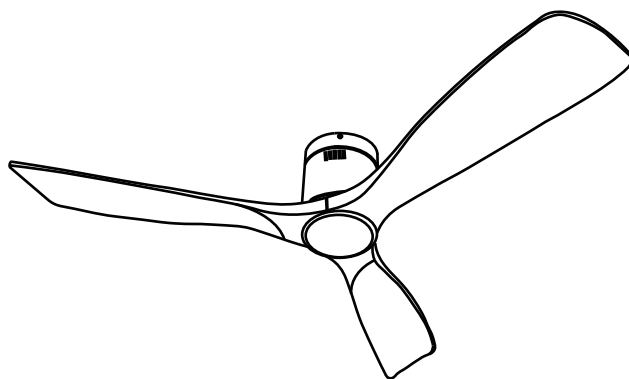

Warm Tips

1. Wall switch light memory: (Figure 1)

* Turn off wall switch

* Wait 10 seconds to turn on wall switch, it will remember the last light setting.

If quickly toggle the wall switch within 5 seconds, the CCT will switch.

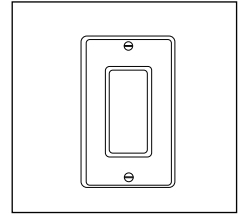


Figure 1

2. The lighting kit is replaceable.

WARNING!!!

To avoid fire, shock and serious personal injury, follow these instructions.

1. Read your user's manual and safety information before installing your new fan. Review the accompanying assembly diagrams.
2. Before servicing or cleaning the unit, switch off the power at the service panel and lock the service panel to prevent power from being switched on accidentally. If the service disconnecting means cannot be locked, securely fasten a warning device, such as a tag, to the service panel.
3. Be cautious around the fan and blades when clearing, repairing, or working near the fan. Always turn off the power to the ceiling fan before performing any servicing.
4. Do not insert anything into the fan blades while the fan is operating.
5. This appliance is not intended for use by young children or individuals with disabilities without supervision. Young children should be supervised to ensure they do not play with the appliance.
6. Before installing your ceiling fan, refer to the section on the proper method of wiring your fan. If you feel that you do not have enough wiring knowledge or experience, it is recommended to have your fan installed by a licensed electrician.


Fan components



● — Mounting bracket (1)




● — Receiver (1)

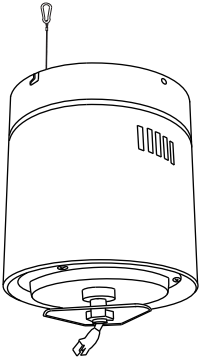


● — Safety rope (1)

● — Fan motor host (1)



● — Fan blade (3)



● — Lamp body (1)



● — Lampshade (1)



Remote controller



Washers



Expansion screw



Balance sticker



Balance clamp



Wire nut



Blade screw




Canopy screw (spare)



Self-tapping screw



Outlet box screw



Remote controller bracket

Energy Saving Usage

Ceiling fan performance and energy savings rely heavily on the proper installation and use of the ceiling fan. Here are a few tips to ensure efficient product performance.

Choosing the Appropriate Mounting Location

Ceiling fans should be installed or mounted in the middle of the room and positioned at least 7 feet above the floor and 18 inches away from the walls.

If the ceiling height allows, it is recommended to install the fan 7~9 feet above the floor to achieve optimal airflow.

Turn Off When Not in the Room

If the room is unoccupied, turn off the ceiling fan to conserve energy.

Using the Ceiling Fan Year Round

Summer Season: Use the ceiling fan in the counterclockwise direction. The airflow created by the ceiling fan produces a wind-chill effect, making you feel cooler. Select a fan speed that provides a comfortable breeze; lower speeds consume less energy.

Winter Season: Reverse the motor and operate the ceiling fan at a low speed in the clockwise direction. This produces a gentle updraft, which pushes the warm air near the ceiling down into the occupied space. Remember to adjust your thermostat when using your ceiling fan. This simple step can lead to additional energy and cost savings.


Electrical and Structural Requirements

Your new ceiling fan will require a grounded electrical supply line of AC 110-130V/60Hz and a 15 Amp circuit. According to electrical codes, it is necessary to use a fan-rated outlet box to support the additional weight and motion associated with a ceiling fan. A fan-rated box will be clearly labeled as such and is typically designed to support ceiling fans weighing up to 70 pounds.

Fan-rated outlet boxes are available in various ratings and designs. It is essential to ensure that the rating of your ceiling fan outlet box meets the requirements for the specific ceiling fan you are installing. Please refer to the figures below for different structural configurations that can be used for mounting the outlet box.


Low-profile use (Figure 1)

A 1/2-inch deep pancake box is meant to be screwed to a joist or block. It is used if only one cable is coming into the box. It is also available in a saddle-mount configuration.

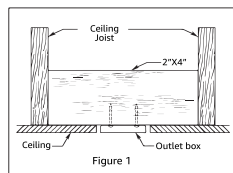


Deep-profile use (Figure 2)

A 2-1/4" deep box can be attached to blocking between joists and is roomy enough to handle more than one cable.

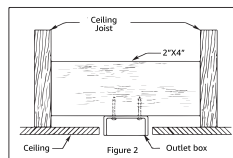

Brace Use (Figure 3)

Paired with a deep box, this hanger is meant to span between two joists and takes the place of wooden blocking.

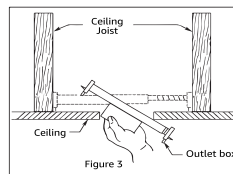

If your fan is to replace an existing light fixture, turn power off at the main fuse box and remove the existing light fixture.

WARNING


To ensure safety and prevent potential electrical shock, it is not sufficient to simply turn off the wall switch. Prior to wiring, make sure to turn off the electricity at the main fuse box. All wiring should be done in accordance with national and local electrical codes. Additionally, it is important to properly ground the ceiling fan as a precautionary measure against possible electrical shock. Following these guidelines will help ensure the safe installation and operation of your ceiling fan.

Do not use a variable (rheostat) wall controller or dimmer switch to operate this fan. Doing so can cause damage to the ceiling fan's remote control unit. It is recommended to only use the provided remote control.

Installation


1

Concrete ceiling

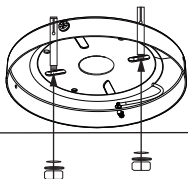

2


Wooden ceiling

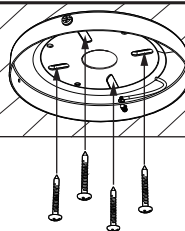

- Mount the bracket to the ceiling and use appropriate accessory screws to secure it based on the type of ceiling material.
- Cement ceiling: Drill holes in the cement ceiling, then use expansion bolts for fixation.
- Wood ceiling: Use self-tapping screws to drive into the wooden ceiling.


3

Junction box

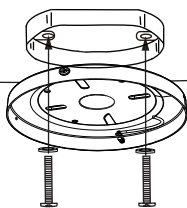


4

Safety rope

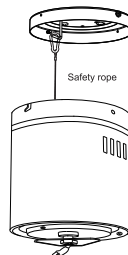


- Junction box: If securing the bracket to an outlet box, use junction box screws.
- Use the safety rope to hang the ceiling fan to the bracket.

5

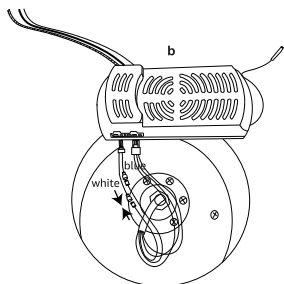

6


Concrete ceiling




- Connect the wires between the receiver and the fan motor: connect the white wire to the white wire, the blue wire to the blue wire, and connect the 3-pin wires to each other.
- Connect the "Neutral wire" (white wire) from the ceiling to the white wire.
- Connect the "Live wire" (black wire) from the ceiling to the black wire.
- Connect the "Ground wire" (green or yellow/green or bare) from the ceiling to the green wire.(housing/receiver/bracket).

Installation

7

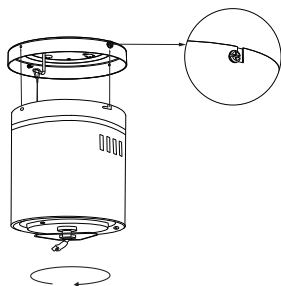


8

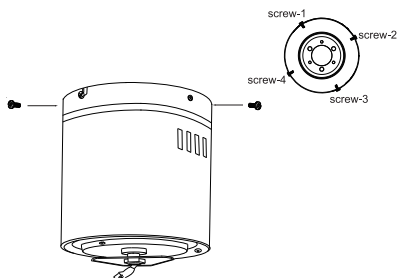


- Fix the canopy housing's L slot to the bracket screws, and then rotate the fan canopy to ensure it is in certain location.
- Lock the other 2 screws and ensure that the 4 screws are tightened.

9

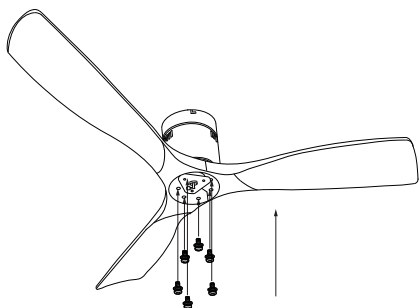


10

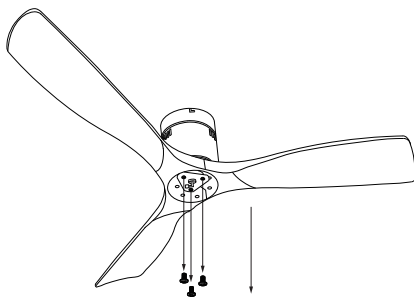


- Secure all three fan blades using six screws.
- Remove three screws from the triangular plate on the fan motor host.

11

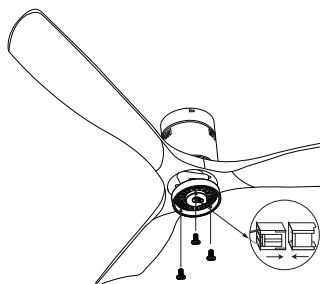

12

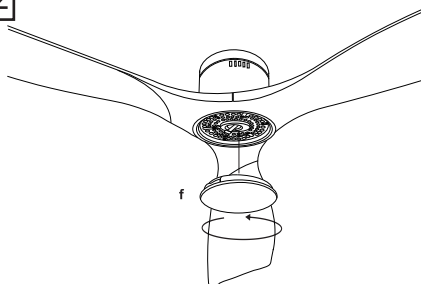



- Connect the wire terminal of the LED, push the lamp body upward, and secure it using the screws just removed from the triangular plate.
- Rotate the lamp shade upward to secure.

Operate Your Ceiling Fan

IMPORTANT: Using a full range dimmer switch to control fan speed will damage the fan. To reduce the risk of fire or electrical shock, do not use a full range dimmer switch to control the fan speed. (Figure 1).


Only control light on/off via wall fan switch.

Restore electrical power to the outlet box by turning the electricity on at the main fuse box.(Figure 2).

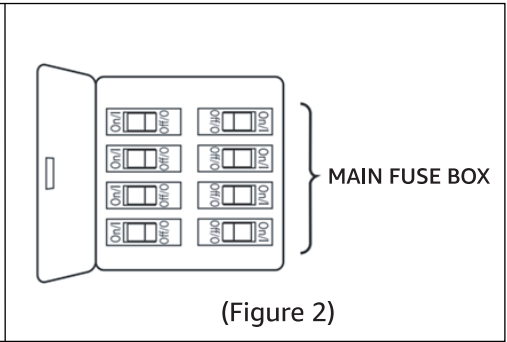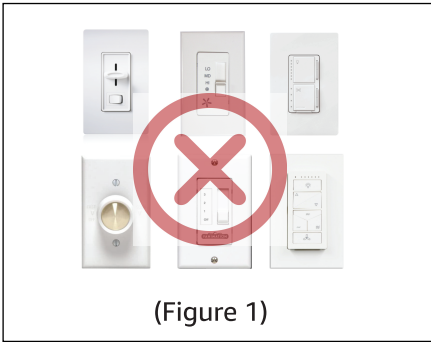


Installation Recommended

Room Size:

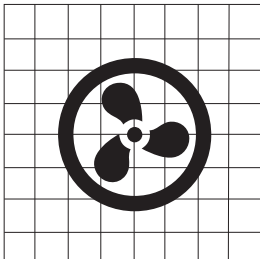


UP TO 15 ft x 15 ft

Room Height:

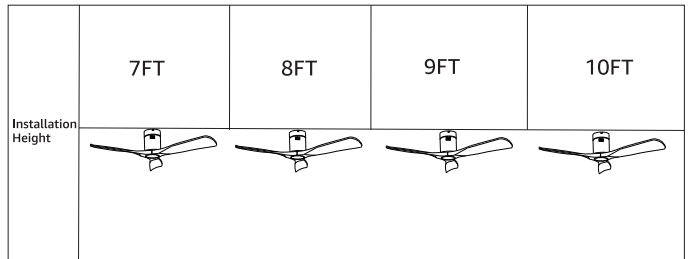

Remote Control

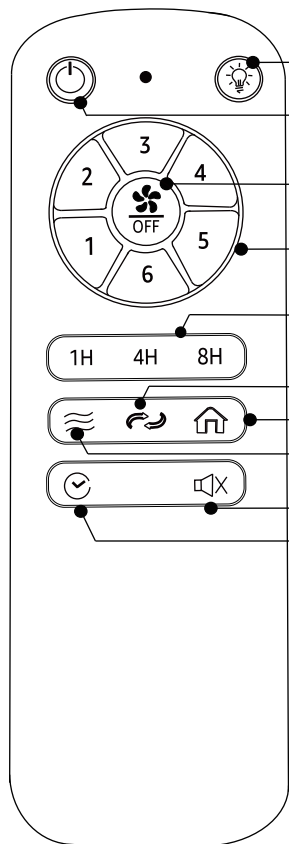

Light on/off (light memory after 10 seconds)

CCT switch (fast click to switch)

All off

Fan on/off

Fan speed

Fan stops running after 1/4/8 hours

Forward/reverse

Safe mode (anti-theft mode)


Natural wind

Remote controller mute

Delay off in 5 minutes

Installing Wall Plate:


Attach wall plate using the two provided screws.

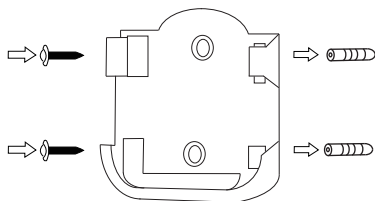

To operate the fan, please install 2 AAA batteries (included) in the handheld remote transmitter. If not used for extended periods of time, remove the batteries to prevent damage to the transmitter. Store the remote away from excessive temperatures and humidity.

Pairing method: (single/multiple fans)

The remote control transmitter can be used to control multiple receivers.

1. For the ceiling fan you want to pair, turn the main power switch off for at least 60 seconds.
2. Turn on the main power switch of the ceiling fan, then immediately press and hold  button.
3. Wait for light flashes or emitting a beep, then release the button, pairing completed.

If the pairing process is unsuccessful, repeat above steps.

Trouble shooting

PROBLEM	SUGGESTED REMEDY
If Fan Does Not Start	<ol style="list-style-type: none"> 1. Check the main and branch circuit fuses or circuit breakers. 2. Ensure that the wall control is turned "ON" do not use dimmer-switch 3. Check the line wire connections to the fan and switch wireconnections in the switch housing. <p>CAUTION: Make sure to turn off the main power before makingany electrical connections.</p>
If The Fan Sounds Noisy	<ol style="list-style-type: none"> 1. Make sure all screws in the motor housing are snug (not overtightened). 2. Check that wire connectors in the switch housing are not rattling against each other or the interior wall of the switchhousing. <p>CAUTION: Turn off the main power before entering theswitch housing.</p> <ol style="list-style-type: none"> 3. Ensure that the screws securing are tight. Make sure the lightbulb is tight in the socket and not touching the lamp frame or blades. 4. Note that some fan motors are sensitive to signals from Solid-State variable speed controls. DO NOT USE a Solid State variable-speed control. 5. Allow a "break-in" period of 24 hours. Most noises associatedwith a new fan will disappear after this period.
If Fan Wobbles	<ol style="list-style-type: none"> 1. Check that all blades are screwed firmly into blade holders. 2. Make sure that the canopy and mounting plate are tightenedsecurely to the ceiling junction box, and the junction box ismounted firmly to the ceiling joist. 3. Ensure the concave groove of the hanger ball is positioned onthe hanger lug of the mouting bracket.
If Light Does Not Work	<ol style="list-style-type: none"> 1. Check the wiring of motor to receiver, and receiver to ACinput. 2. Check for loose or disconnected wires in the fan switchnousing. 3. Check for loose for LED board. <p>CAUTION: Make sure the main circuit is turned off beforeentering the switch housing.</p>
Remote Does Not Work	<ol style="list-style-type: none"> 1. Battery out of power or not installed correctly, change newAAA battery and ensure well installed. 2. Remote controller not paired, make new pairing with light(Page.8)

Customer Service

30-Days Full Refund Guarantee

If you are not completely satisfied or the item isn't what you expected, just tell us within 30 days. We will give you a full refund unconditionally.

Friendly Reminder

It's better to contact us than leaving a negative shopping experience. Nothing is more important than your satisfaction, and we will do our best to serve you.

Quick Response within 12 Hours

You can contact us without any hesitation at any time of the day, and we will reply to you within 12 hours. (It would be appreciated if you could provide us with a video or pictures, if available)

2-year Warranty

Your fan light comes with a two-year warranty. If a malfunction occurs due to product quality issues, we will assist in diagnosing the problem and provide replacement parts free of charge to ensure your fan light resumes normal operation.