


Available for

EON | F1846977

SINGLE HANDLE BASIN FAUCET

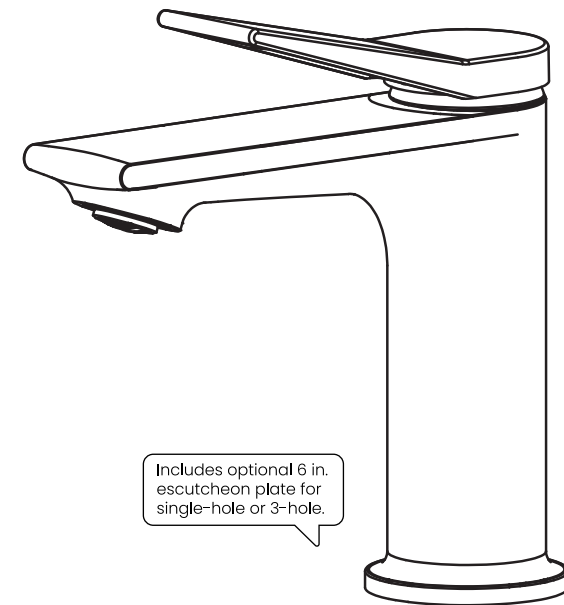

Includes optional 6 in.
escutcheon plate for
single-hole or 3-hole.

CERTIFICATE

Available for: cUPC, NSF/ANSI/CAN 61,
NSF/ANSI/CAN 372, CEC listed



f Bravat USA



@ bravat_usa

CONTENTS

Installation Instructions 02-03

Maintenance Instructions 03-04

Troubleshooting 05

Factsheet 06


Warranty 07-09

REQUIRED TOOLS

Adjustable wrench
Allen key (to remove cartridge if needed)
Plumber's putty - optional
Pipe tape
Flat screwdrivers


ASSEMBLY

- ① Shut off water supply. Remove the old faucet and flexible hoses. Clean sink surface with a non-abrasive cleaner in preparation for the new faucet.

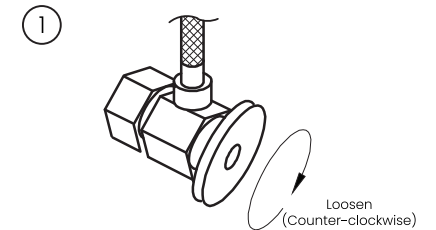


- ② Place new faucet in the position on the countertop. From under the sink, put rubber washer, metal ring, brass nut on to threaded pin. Tighten nut.

⚠ Ensure that parts are assembled in the order as depicted in the diagram to prevent damage to faucet and supply lines.




⚠ NOTE: If your sink has three holes or the countertop is uneven, install the included 6in. escutcheon cover over the faucet base before tightening the nut. This hides unused holes and conceals gaps.

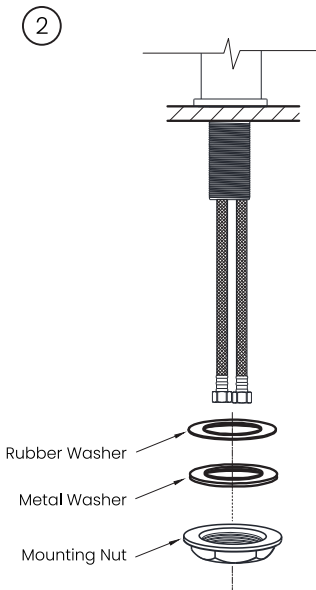


- ③ Attach the female connections of the flexible hoses to the cold and hot water supply.

⚠ Ensure that you use pipe tape and adjustable wrench, do not overtighten as this could cause product failure leading to water damage.

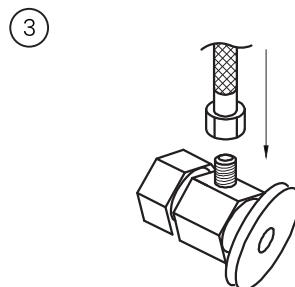

- ④ After installation is complete, turn on the water supply and allow both hot and cold water to run separately for at least two minutes each. While water is running, check for leaks. It is important to view the connections at the male and female flexible hose connections. If leaks are detected, refer back to the instructions and adjust accordingly. Tightening nuts slightly may stop any minor leaks.

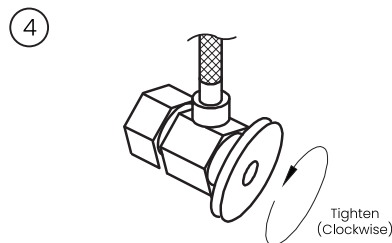

SAFETY TIPS

If you use soldering for the installation of the faucet, the seats, cartridges and washers will have to be removed before using flame. Damage caused by improper soldering will void the warranty. Protect your eyes with safety glasses when cutting or soldering water supply lines.

IMPORTANT POINTS

Prior to beginning installation, turn off the cold and hot water lines and open the hot and cold knobs on the old faucet to release pressure. When installing your new faucet, turn the connector nuts finger-tight, then use one wrench to anchor the fitting and a second wrench to tighten the nut. Connections that are too tight will reduce the integrity of the system and potentially cause product failure which could lead to water damage. Wrap all threaded connections with pipe tape available at your local hardware or plumbing supply store. Always wrap in a clockwise direction.

Not all necessary supplies to install your faucet are included, however, they are available wherever plumbing supplies are sold.

Prior to installing the faucet please FLUSH THE HOT AND COLD WATER SUPPLY LINES that are or will be connected to the new faucet to remove scale, solder or their impurities which could damage the faucet and potentially void the warranty.

INSTALLATION

We recommend installation by a licensed plumber. Prior to installation please read the instructions thoroughly, confirm that all parts are included and visually inspect the unit for any defects. If you have any questions please contact our Technical support Department before proceeding with installation.

CLEANING INSTRUCTIONS FOR FAUCETS AND SHOWERS

Please follow the instructions on your cleaning materials. In addition, pay attention to the following points:

- Clean the faucets and showers as needed and when required.
- The amount of cleaning product needed and the time the cleaner needs in order for effective cleaning to take place should be adjusted according to products; cleaning product should not be left on BRAVAT product longer than necessary.
- Clean regularly to prevent calcification.
- When using spray cleaner, spray first onto a cloth or sponge - never directly spray onto the faucet or fixture as drops could enter openings and gaps and cause damage.
- After cleaning, rinse thoroughly with clean water to remove any cleaner residue.
- Recommended cleaning solution for hard water and soap scum is to use 50/50 water and vinegar solution.



NEVER SPRAY
DIRECTLY ON
THE FAUCET



SPRAY ONTO
SPONGE/ CLOTH



CLEAN



RINSE
THOROUGHLY

CLEANING MATERIAL FOR FAUCETS AND SHOWERS

Acids are necessary ingredients of cleaning materials for removing lime, however, please pay attention to the following points when cleaning faucets and showers:

- Only use cleaning materials that are explicitly provided for this type of application.
- Never use cleaning materials that contain hydrochloric, formic or acetic acid, as they cause considerable damage.
- Phosphoric acid is also restricted as it can cause damage to the finish.
- Never mix any cleaning material with another.
- Never use cleaning materials that have an abrasive effect, such as powdered and industrial cleansers, scouring pads or micro fiber cloths.

~~Hydrochloric~~

~~Formic~~

~~Acetic Acid~~

~~Phosphoric~~


TROUBLESHOOTING

PROBLEM	POTENTIAL CAUSE	CORRECTIVE ACTION
1 - Leaks from handle	1. A - Cartridge unseated 1. B - Cartridge defective	1. A - Remove cartridge from housing , wash thoroughly with hot water and reseal in housing. 1. B - contact BRAVAT Technical support for replacement.
2 - Insufficient flow rate	2. A - Dirty aerator 2. B - Clog in supply hose / line	2. A - Remove and soak/clean with a non abrasive agent (i. e. vinegar) . 2. B - Remove sprayer or supply line and flush lines.
3 - Leak at connection points	3. A - Sprayer hose not tight 3. B - Flexible hose leaking at body or connection point	3. A - Remove spiral neck by loosing the metal screw and pulling up on the spout exposing the spray hose. Make sure the washer is seated properly and retighten with an adjustable wrench. 3. B - Tighten hoses. If this does not resolve the issue, remove the flexible hose and rethread , checking to make sure the connection is secure. Make sure to use pipe tape.
4 - Loose spiral neck	4 - Metal screw not engaged with the white washer hole	4 - Loosening the metal screw, lift off the spout and reseal making sure to thread the metal screw into the white washer housing.
5 - Loose faucet body	5 - Metal nut became loose	5 - From under the sink/counter, use an adjustable wrench and tighten the metal nut to the hollow pipe. Make sure the faucet is perpendicular to the sink/counter.

MOUNTING DIMENSION

FAUCET MEASUREMENTS & SPECIFICATIONS	
Overall Dimensions	6.57"(167mm)D × 2.16"(55mm)W × 6.56"(166.5mm)H
Spout Reach	4.78" (121.5mm)
Spout Height	4.4" (112mm)
Hole Diameter	Ø1.38" (Ø35mm)
Hose length	23.62" (600mm)
Flow rate	1.2 GPM
Pressure	60 psi
Water supply connection	9/16-24 UNEF
Handle switch mode	Pull-up

THE MEASUREMENTS IN INCHES ARE ROUNDED TO THE NEAREST 1/8"

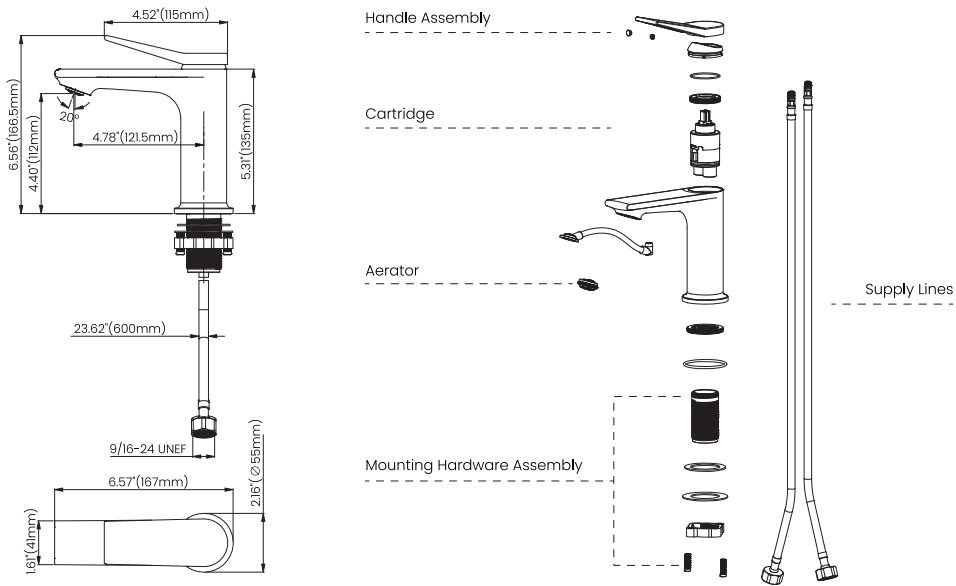

WARRANTY

Established in Germany in 1873 as the premium brand of the Dietsche Group, BRAVAT is a dedicated provider of high-quality bathroom products and stylish spatial solutions.

DISCLAIMER OF WARRANTIES

[Rational K&B Inc] ("THE COMPANY") expressly warrants to the original end-use purchasers (the "Consumers" or "you") of THE COMPANY products (the "Products") that the Products will be free of defects in materials and workmanship. This limited warranty ("Limited Warranty") only applies to THE COMPANY's Products purchased and installed in the [United States of America].

WHO IS COVERED?

This Limited Warranty covers Consumers who purchase Products from THE COMPANY or [dealers, distributors or contractors officially designated by] THE COMPANY. This limited warranty is not transferrable.

WHAT IS THE WARRANTY PERIOD?

In residential settings: All THE COMPANY's Products are covered by a one (1) year warranty unless otherwise noted below:

- LIFETIME warranty on faucet finishes with the exception to drain components due to possible chemical exposures.
- Drains and their component parts will be covered from finish defect for a period of three (3) years.
- Three (3) year Limited Warranty for porcelain and ceramic type products.
- Three (3) year Limited Warranty for accessories and hardware type products.
- Five (5) year Limited Warranty for STAINLESS sink products.
- Three (3) year Limited Warranty for composite sinks.
- Three (3) year Limited Warranty for Intelligent Toilets
- One (1) year Limited Warranty for bidet seats.
- Three (3) year Limited Warranty for non-jetted bathtubs.
- Three (3) year Limited Warranty for jetted bathtubs. Use of bath oils or salts will void the Limited Warranty as the intake and motor are not suitable for those materials.
- Three (3) year Limited Warranty for all wellness items.
- One (1) year Limited Warranty for furniture items.

*The service life of any disposable replacement cartridge varies with local water conditions and water consumption and thus is not warranted other than to be free of defects in materials and workmanship at the time of purchase.

IN COMMERCIAL SETTINGS:

- Three (3) years Limited Warranty on faucet finishes with the exception to drain components due to possible chemical exposures.
- Drains and their component parts will be covered from finish defect for a period of one (1) year.
- One (1) year Limited Warranty for porcelain and ceramic type products.
- One (1) year Limited Warranty for accessories and hardware type products.
- One (1) year Limited Warranty for STAINLESS sink products.
- One (1) year Limited Warranty for composite sinks.
- One (1) year Limited Warranty for intelligent toilets
- One (1) year Limited Warranty for bidet seats.
- One (1) year Limited Warranty for non-jetted bathtubs
- One (1) year Limited Warranty for jetted bathtubs. Use of bath oils or salts will void the warranty as the intake and motor are not suitable for those materials.
- One (1) year Limited Warranty for all wellness items.
- One (1) year Limited Warranty for furniture items.

*The service life of any disposable replacement cartridge varies with local water conditions and water consumption and thus is not warranted other than to be free of defects in materials and workmanship at the time of purchase.

WHAT THE COMPANY WILL DO TO CORRECT DEFECTS?

THE COMPANY will, at its election, repair, replace or make appropriate adjustment where an inspection by THE COMPANY or its affiliates, or any third-party agent selected by THE COMPANY discloses any defects in materials and workmanship occurring in normal residential or commercial usage.

HOW TO MAKE A CLAIM?

If you believe that you have a warranty claim, please contact THE COMPANY directly by email at support@bravat.com. Please be sure to describe your product type and include a valid proof of purchase, which, at a minimum, should clearly state the date of purchase, Product description, Product specification, Product number, bar code number and unit price. Please note that dealers, distributors or contractors and their agents are NOT authorized to approve or disapprove any warranty claim on behalf of THE COMPANY.

If a Product is determined to be defective according to THE COMPANY's specifications and quality standards (which shall be the sole criteria for determining defectiveness), THE COMPANY will instruct consumers to ship the defective Product to THE COMPANY's designated location using a pre-paid shipping label provided by THE COMPANY. All shipping costs related to the defective Product will be borne by THE COMPANY; provided, however, that THE COMPANY will NOT be responsible for any disassembly and removal costs of the defective Product or for the installation costs of the replaced or repaired Product, and related labor costs. If THE COMPANY elects to replace the defective Product, THE COMPANY will retain the replaced part or Product that is exchanged during service as its property, and the replacement part or Product will become the Consumer's property.

DISCLAIMER OF WARRANTIES

THE COMPANY's Products must be stored, handled, installed, used and maintained in accordance with instructions provided by THE COMPANY, and this Limited Warranty is conditioned upon compliance with all such instructions. Consumers should carefully read THE COMPANY's Product Service Manual, which is available on the THE COMPANY's website at www.bra-va.com/us.

This Limited Warranty does not cover defects caused by:

Non-compliance with THE COMPANY's Product Service Manual;

Improper storage, installation, handling, use, maintenance and/or fabrication of the Product (including, without limitation, the Consumer's failure to regularly replace the washer sealant).

Damage not resulting from manufacturing defects:

Damage that occurs while the Product is not in the Consumer's possession:

Unreasonable or unintended use of a Product;

Minor conditions such as stains and scratches that do not affect the normal use of a Product:

Dissatisfaction with the appearance of a Product:

Damage caused by water pressure shortage, or excessive impurity in water;

All products of THE COMPANY must be inspected right after delivery. In the event that any defect founded during the prompt inspection, evidence should be in the form of written Warranty, photographs, or any other relevant documentation that clearly demonstrates the defect to THE COMPANY.

If unproven defective product is installed prior to prompt inspection, THE COMPANY shall not be held responsible for any costs incurred during the installation process.

Any information or suggestion by THE COMPANY with respect to the Products concerning applications, specifications or compliance with codes and standards is provided solely for your convenient reference and are made without any representation as to accuracy or suitability. You must verify and test the suitability of any information with respect to the Products for your specific application.

THE WARRANTIES SET FORTH HEREIN ARE THE ONLY WARRANTIES MADE BY THE COMPANY IN CONNECTION WITH THE PRODUCTS. THE COMPANY CAN NOT AND DOES NOT MAKE ANY IMPLIED OR EXPRESS WARRANTIES WITH RESPECT TO THE PRODUCTS, AND DISCLAIMS ALL OTHER WARRANTIES, INCLUDING, BUT NOT LIMITED TO, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. PRODUCTS SOLD BY THE COMPANY ARE SOLD ONLY TO THE SPECIFICATIONS SPECIFICALLY SET FORTH BY THE COMPANY IN WRITING. OTHER THAN THE LIMITED WARRANTY SET FORTH HEREIN, THE COMPANY MAKES NO OTHER WARRANTIES, EXPRESS OR IMPLIED. YOU ASSUME ALL RISK WHATSOEVER AS TO THE RESULT OF THE USE OF THE PRODUCTS PURCHASED, WHETHER USED SINGULARLY OR IN COMBINATION WITH ANY OTHER PRODUCTS OR SUBSTANCES.

LIMITATION OF LIABILITY

No claim by the Consumer of any kind shall be greater in amount than the purchase price of the Products in respect to which damages are claimed. IN NO EVENT SHALL THE COMPANY BE LIABLE TO CONSUMER IN TORT, CONTRACT OR OTHERWISE, FOR ANY SPECIAL, INDIRECT, INCIDENTAL, CONSEQUENTIAL, RELIANCE, STATUTORY, SPECIAL, PUNITIVE OR EXEMPLARY DAMAGES, INCLUDING, BUT NOT LIMITED TO, PERSONAL INJURY, LOST PROFITS, LOSS OF USE, LOSS OF TIME, LOSS OF REVENUES, INCONVENIENCE, LOSS BUSINESS OPPORTUNITIES, DAMAGE TO GOOD WILL OR REPUTATION, OR LOSS OF DATA, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES OR SUCH DAMAGES COULD HAVE BEEN REASONABLY FORESEEN. IN CONNECTION WITH, ARISING OUT OF, OR AS A RESULT OF, THE SALE, DELIVERY, SERVING, USE OR LOSS OF USE OF THE PRODUCTS SOLD HEREUNDER, OR FOR ANY LIABILITY OF BUYER TO ANY THIRD PARTY WITH RESPECT THERETO.

STATE LAW

This Limited Warranty gives specific legal rights. Since some jurisdictions have laws governing consumer rights and damages, some of the above limitations may not apply to you, and you may have other rights which vary from jurisdiction to jurisdiction.

CONTACT INFORMATION

Should you have any questions concerning your Product, please do not hesitate to contact our Customer Service by email at support@bravat.com.