
# Instruction Manual

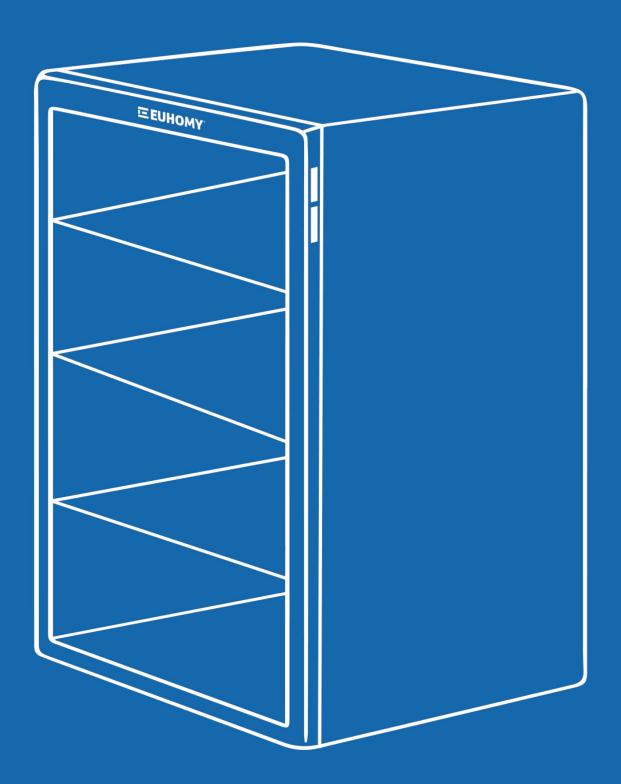

Model: BR-115

Email:euhomy@hotmail.com

Facebook: Euhomy

Congratulations on your new Euhomy product. To ensure proper operation, please read this Instruction Manual carefully before using this product. Keep this manual in a safe place for future reference.

Dear Customer, So lucky to meet you guys !!! Thanks for making a purchase on Euhomy!

We hope to provide you with sincere service. If there is anything missing or wrong with your order, If you have any doubts about using our beverage cooler. PLEASE reach out to us. Email-(euhomy@hotmail.com)or Facebook-(@Euhomy).

Euhomy team will answer your doubts online for 24 hours. Your satisfaction is our ultimate goal. We'd appreciate if you could share your experience with other shoppers on Amazon. We'd love to make it right for you! If you just want to see the problem description, you can directly see the last page, or contact us directly Email:euhomy@hotmail.com

Our Mission: To be the most trusted appliance brand ,Creat compact and practical appliance to better your life.

Five years ago, we founded Euhomy by a team of young people. Initially, we mainly sold ice maker, mini fridge, upright freezer, which are generally recognized by consumers. We are committed to providing a variety of compact and practical appliances, while taking into account the high-end design of the product. When we launched Euhomy for the first time, we are committed to the quality of all our every product and the satisfaction of customer needs first.

Now we' re thrilled to be the leading refrigeration and compact appliance company, offering unique and necessary appliances loved by people continent-wide. Euhomy wants consumers to enjoy the most practical products at the most cost-effective price. Our brand philosophy has always been around, intelligent design, intelligent technology and highend design. We would love to hear from you about how we can better innovate your life.

## Safety Precautions

#### SAVE THESE INSTRUCTIONS / For Household Use Only

- · Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- · Do not use extension cords or ungrounded (two prong) adapters.
- This appliance is intended to be used in households and similar applications such as: staff kitchen areas in shops, offices and other working environments; hotels, motels and other residential type environments; bed and breakfast type environments; catering and similar non-retail applications.
- Do not pull the power cord when pulling the power plug of the beverage cooler. Please firmly grasp the plug and pull it out from the socket directly.

#### WARNINGS RELATED TO ELECTRICITY

- Do not damage the power cord under any condition.
- Please use a dedicated three-hole power socket which is 15A or more and not shared with other electrical appliances.
- Please ensure that the grounding electrode of the power socket is equipped with a reliable grounding line.
- The beverage cooler uses AC power supply of 115V/60 Hz. If the voltage fluctuation exceeds the range of 115V +- 10%, it can cause accidents or damage the cooler.
- In case of leaking gas, turn off the leaking valve and open your doors and windows. Do not unplug the cooler yourself, as it may cause a fire. Contact customer support.
- For your safety, don't place electric devices on top of the cooler like microwaves or electric kettles, and don't store your beverage cooler inside pantries.


#### WARNINGS RELATED TO USE

- Make sure there is ample ventilation space surrounding the beverage cooler.
- · Be careful not to get fingers or dangling accessories caught in the cooler door.
- This cooler and its packaging are not intended to be played with or used by children. If a child is using the cooler, it must be with a dult supervision to avoid injury.
- Keep the cooler out of moist, damp or humid environments and situations so as not to damage the electrical insulation.
- · Do not use base, cooler door, etc. as pedal or support.
- Do not place heavy objects on top of the cooler to prevent accidental damage or injury.

#### WARNINGS RELATED TO PLACING ITEMS

- Do not put flammable, explosive, volatile and highly corrosive items in the cooler to prevent damages to the product
  or fire accidents.
- Do not place flammable items near the cooler to avoid fires.
- This product is for household refrigeration appliances, mainly used in the storage of beverage, not for other purposes, such as storage of blood, drugs and biological products.
- Do not cover or close ventilation and exhaust holes.

## Safety Precautions

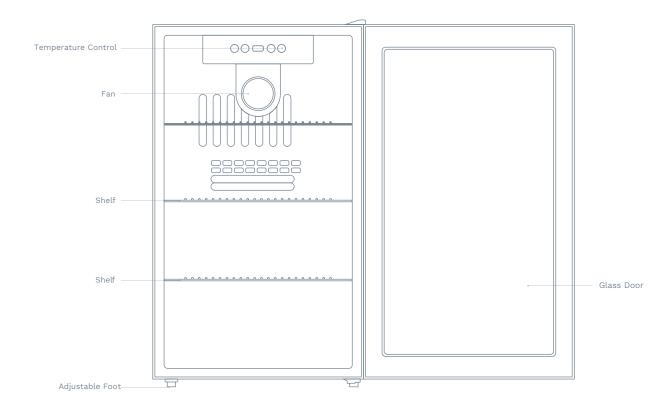

#### **PLACEMENT**

- Before using the cooler, remove all packaging materials including bottom cushions, foam pads, and tape inside the cooler, tear off the protective film on the door and the cooler body.
- Make sure the cooler is placed in a well-ventilated indoor place; on flat, sturdy ground (rotate left or right to adjust the wheel for levelling if unstable).
- The room for cooler should become larger with more refrigerant in cooler, with 8g refrigerant corresponding to 1m3 spaces. The content standards of refrigerant are labels in name board on backboard of cooler.
- Avoid putting the cooler in direct sunlight or too close to a heat source --keep a safe distance of at least 30cm between the cooler and a stove or furnace if it can't be avoided. We also advise applying an insulation board in that case.
- Keep a circulation space of at least 4cm on both sides of the cooler to preserve power.

## Operation and Controls

#### PROPER USE OF BEVERAGE COOLER

#### **Energy Conservation**

- The cooler should be placed in a room that is dry and ventilated. The cooler cannot be placed under direct sunlight or next to heat source (such as a radiator, stove, etc.), and a suitable insulation board must be applied if necessary.
- · Try to shorten opening time of cooler's door.
- · Avoid putting warm beverages in the cooler.

#### INTRODUCTION TO THE BEVERAGE COOLER' S FUNCTIONS

#### **Display Controls**

When turning on for the first time, the display screen will be a full display for 3 seconds and the startup tone will ring.

#### Standby Mode

To activate standby mode, hold the standby button for 3 seconds. You will hear a beep and the display area will be cut off. To deactivate standby mode, press the button again. You will hear a beep and the standard display will show.

#### Lighting

Press the lighting button to turn the light on or off.

#### Temperature Setting

Press the increase temperature button to increase the temperature one degree at a time. Press the decrease temperature button to decrease the temperature one degree at a time.

#### **Memory Function**

If turned off, this cooler will remember any settings in place and will work according to those settings once it's turned on again.

#### **Fault Indicators**

If any of these indicators are displayed it means the cooler has the following issues.

FAULT CODE	DESCRIPTION
E1	R Room sensor failure
E4	R room defrost sensor failure

## **Operation and Controls**

It is recommended you install the appliance in a place where the ambient temperatures is above 60°F (16°C) and below 90°F (32°C). If the ambient temperature is above or below recommended temperatures, the performance may be affected. For example, placing your appliance in extreme cold or hot conditions may cause interior temperatures to fluctuate.

#### **SETTING THE TEMPERATURE**

To control the internal temperature, turn on the temperature control

#### **INTERIOR LIGHT**

To turn on/ off the interior light, flip the switch inside the appliance.

#### **INTERNAL FAN**

This beverage refrigerator is equipped with an internal fan that prevents uneven temperature distribution, ensuring all of your beverage reaches your desired temperature.

#### **PARTS:**

- 1. Temperature Control
- 2. Light Switch
- 3. Interior Light
- 4. Internal Fan

#### **REVERSING THE DOOR SWING**


Tools needed: flathead screwdriver, Phillips screwdriver *CAUTION*: Before you begin, unplug the beverage refrigerator from power.

#### To remove the door:

- 1. Using a flathead screw driver carefully pry the top hinge cover off.
- 2. Using a Phillips screwdriver, remove the screws and take off top hinge. Keep the parts together and set them aside.
- 3. Lift the door off the bottom hinge and set the door aside.
- 4. Remove the bottom hinge by removing the screws with a Phillips head screwdriver.

#### To install the door:

- 1. Using a flathead screwdriver, remove the plugs and cover from the opposite cabinet top corner and from the door. Set aside.
- 2. Install the bottom hinge at the opposite side corner and fasten the screws.
- 3. Position the door on the bottom hinge.
- 4. Align the door on the bottom hinge and install the top hinge.
- 5. Push the plugs and covers into the corresponding holes.

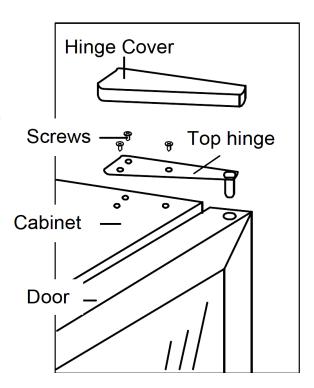


## Operation and Controls

#### LEVELING THE APPLIANCE

It is important for the beverage refrigerator to be leveled in order to work properly. It can be raised or lowered by rotating each of the feet on the bottom of the machine. If you find that the surface is not level, rotate the feet until the beverage refrigerator becomes level . You may need to make several adjustments to level it. We recommend using a carpenter's level to check the machine.

- 1. Place a carpenter's level on top of the product to see if the beverage refrigerator is level from front to back and side to side.
- 2. Adjust the height of the feet as follows: Turn the leveling feet to the right to lower that side of the refrigerator. Turn the leveling feet to the left to raise that side of the refrigerator.

**IMPORTANT**: Once you are ready to install, you must adjust the feet to level the beverage refrigerator.

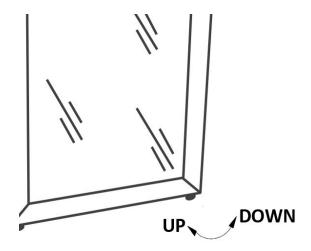

#### **DEFROSTING**

The ice build-up on the inner back wall of your cooler will automatically be defrosted in a comprossor-off cycle. When you press the button(off), the comprossor and circulation fan stops running. While defrosting is in process. Defrost water will drain out of the cooler, passing through the drain outlet in the inner back wall into a drain pan located above the comprossor. The water will evaporate from the drain pan on its own.

#### **NORMAL SOUNDS**

The unit is cooled by a compressor. The compressor pumps coolant through the cooling system, producing operating noise. Even when the compressor cuts out, noises caused by changes in temperature and pressure are unavoidable. Operating noise will be most audible immediately after the compressor comes on. It becomes guieter as the operating period continues.

The following noises are normal and occur from time to time:

- •
- Gurgling sound, caused by the refrigerant flowing through the appliance's coils,
   Humming noise made by the compressor. This noise can get louder for brief periods when the motor is
- switching on.
  - Cracking/popping sounds, resulting from the materials contraction and expansion due to temperature vari-ations,
- Fan operating sound, to circulate the air within the refrigerator cabinet.
- Unusual noise is normally the result of improper installation.
- Where the unit is installed in open-plan kitchen or in partition walls, the level of operating noise will be
- heard more acutely. However, this is due to the surrounding architecture and not to the unit.

NOTE: An individual' s perception of noise is directly linked to the environment in which the unit is lo-cated, as well the specific type of models. Our appliances are in line with international standards for such ap-pliance and in line with the latest technical developments. Please remember that the noise of the compressor and the coolant circulating in the system is unavoidable.

## Maintenance

#### DISCONNECTING THE BEVERAGE COOLER

Unplug the power plug from the socket to disconnect the cooler

#### CLEANING YOUR BEVERAGE COOLER

Dusting behind the cooler and on the ground will improve the cooling effect and save energy. The interior of the cooler should be cleaned to avoid any odor. Follow the cleaning procedure below.

- 1. Unplug the cooler.
- 2. Wipe the door seal with warm water.
- 3. Use soap and warm water to clean the cooler.
- 4. Reconnect the cooler when the cooler is clean and dry.

Note: Do not use hard brushes, wire brushes, abrasives, organic solvents, boiling water, acid or alkaline items as this may damage the cooler surface and interior.

#### FREQUENTLY ASKED QUESTIONS

I' m hearing some sounds, what' s up with that? Buzzing or any gurgling sound is normal as that can be a result of the unit working properly or refrigerating fluid flowing through the pipeline.

### Troubleshooting

PROBLEM	POSSIBLE CAUSES	SOLUTION
Cooler isn't cool	The door is being opened too often. The cooler is too full of bottles or cans.	Reduce the frequency of opening the door and give it 4-5 hours.
Cooler is not refrigerating	The power is out or the cooler isn't plugged in.	Check the power and that the cooler is plugged in.
LED light is off	The LED light is broken.	Contact customer support. : euhomy@hotmail.com
Condensation on the glass door	The temperature is set too low or too high.	Increase the temperature and use a rag to wipe away any drops of water.

## Troubleshooting-euhomy@hotmail.com

Problem	Possible Causes	Solutions
The appliance does not operate	<ul> <li>There is a power failure</li> <li>The appliance is not plugged in</li> <li>A house fuse has blown or the circuit breaker is tripped</li> </ul>	<ul> <li>Ensure the appliance is plugged in and the power outlet has power</li> <li>Replace the broken fuse or reset the breaker</li> </ul>
The appliance is not cold enough	<ul> <li>The appliance is placed too close to a heat source</li> <li>The door is opened too often</li> <li>The door is not closed completely</li> <li>The door gasket does not seal properly</li> </ul>	<ul> <li>Adjust the temperature</li> <li>Keep the appliance away from sunshine or other heat sources</li> <li>Close the door tightly and do not open the door too frequently or for a long period of time</li> <li>Ensure the door gasket is not loose.</li> </ul>
The appliance turns itself on and off frequently	<ul> <li>The ambient (room) temperature is too low or high</li> <li>A large amount of contents has been added to the appliance</li> <li>The door is opened too often</li> <li>The door is not closed completely</li> <li>The door gasket does not seal properly</li> </ul>	<ul> <li>Decrease or increase the ambient (room) temperature</li> <li>To minimize internal temperature fluctuation, do not add large amount of contents at once</li> <li>Close the door tightly and do not open the door too frequently or for a long period of time</li> <li>Ensure the door gasket is not loose</li> <li>It is normal for the fan come on and off to circulate the air inside of the unit for even temperature distribution and to save energy</li> </ul>
The appliance makes too much noise	The noise may come from the flow of the refrigerant and expansion of the inside walls may cause popping and crackling noises Contraction and expansion of the inside walls may cause popping and crackling noises The appliance is not level	<ul> <li>It is normal that as each cooling cycle ends, you may hear rattling or gurgling sounds caused by the flow of refrigerant in the appliance. The high efficiency compressor may make a pulsating or high pitched sound</li> <li>Some popping or cracking noises are normal. They are caused by expansion and contraction of the inside walls due to temperature changes</li> <li>Make sure the unit is on a hard and level surface. Do not place the appliance on carpet</li> <li>See Normal Sounds</li> </ul>
The door does not close properly	<ul> <li>The appliance is not level</li> <li>The door was reversed and not properly installed</li> <li>The shelves are out of position</li> </ul>	<ul> <li>Make sure the appliance is on a hard and level surface. Avoid placing the appliance on a carpeted or soft surface</li> <li>Reinstall door</li> <li>Correctly install the shelves</li> </ul>
Condensation builds up on the glass door.	Ambient temperature or humidity is high.	Lower the room humidity by a dehumidifier or air conditioner.