

**PROBRITE™**

**DUO LED TWIN HEAD  
FLOOD LIGHT**

**INSTALLATION,  
USAGE, & CARE GUIDE**

Model No.	DUO12-PC-3K-BZ DUO12-PC-3K-WH
Mfr. SKU	103-07400002-1 103-07400001-1



**Questions? / Missing Parts? / Need Accessories?**

Before returning to the store, call or email PROBRITE  
Customer Service 9am-5pm EST Monday to Friday.

**1-844-507-5651**

**support@PROBRITE.com**

**PROBRITE.COM**

---

*Visit us online anytime or call us to get information on our product range, download detailed spec & photometric files, find product and mounting accessories, view installation tutorials and videos, and learn about our DLC® rebate eligible products.*

## Table of Contents

<b>Table of Contents</b> .....	<b>2</b>	Package Contents.....	4
<b>Safety Information</b> .....	<b>2</b>	<b>Installation</b> .....	<b>5</b>
<b>Pre-Installation</b> .....	<b>3</b>	<b>Operation</b> .....	<b>9</b>
Planning Installation.....	3	<b>Care &amp; Cleaning</b> .....	<b>10</b>
Specifications.....	3	<b>Troubleshooting</b> .....	<b>10</b>
Tools Required.....	3	<b>Warranty</b> .....	<b>11</b>
Hardware Included.....	4		


## Safety Information


### IMPORTANT


THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE NATIONAL ELECTRICAL CODE AND LOCAL BUILDING CODES BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.


### PRECAUTIONS


- Please read and understand this entire manual before attempting to assemble, install, or operate this light fixture.
- This light fixture requires a 120-Volt AC power source.
- Some codes require installation by a qualified electrician.
- This light fixture must be properly grounded.
- Make sure connections are secure using wire nuts, crimp-on lugs or other approved connecting devices
- This light fixture should be installed outdoors to a wall or eave.
- This product may contain chemicals known to be hazardous. Thoroughly wash hands after installing, handling, cleaning or otherwise touching the product.

 **WARNING:** Turn the power off at the circuit breaker or fuse. Place tape over the circuit breaker switch and verify power is off at the light fixture.

 **WARNING:** Risk of fire. Keep the lamp heads at least 3 in. (76mm) from combustible materials.

 **CAUTION:** Burn hazard. Allow the light fixture to cool before touching.

 **NOTICE:** Do not connect this fixture to a dimmer switch.

 **NOTICE:** FCC Regulations state that any unauthorized changes or modifications to this equipment not expressly approved by the manufacturer could void the user's authorization to operate this equipment.



**INFORMATION:** The device is tested and found to comply with Part 15 of the FCC Rules. Operation is subject to two conditions: (1) This device may not cause harmful interference and, (2) this device must accept any interference received, including any interference that may cause undesired operation.

These limits are designed to provide reasonable protections against harmful interference when the equipment is operated in a commercial environment.

## Pre-Installation

### PLANNING INSTALLATION


Before installing the light fixture, ensure that all parts are present. Compare parts with the *Hardware Included* and *Package Contents* sections. If any part is missing or damaged, do not attempt to assemble, install, or operate this light fixture.

Estimated installation time: *15 minutes*

### SPECIFICATIONS

<b>Lumens (Light Output)</b>	1200 Lumens
<b>Watts (Power Consumption)</b>	12 Watts LED
<b>Replaces</b>	75 Watt Halogen Bulbs
<b>Lumens/Watts (Efficacy)</b>	100 lumens per watt
<b>Power Requirements (Input Voltage)</b>	120VAC, 60 Hz
<b>Light Color (CCT)</b>	3000 Kelvins (Warm White)
<b>Dimmable</b>	Non-Dimming (Do not wire to dimming switch)
<b>Operating Modes</b>	<p><b>Dusk-to-Dawn:</b> Automatically turns light fixture ON during night and OFF during day.</p> <p><b>Switch-Controlled:</b> Flip switch to turn light fixture ON and OFF. <i>Use included light sensor cap on fixture's light sensor to utilize this mode setting.</i></p>

### TOOLS REQUIRED



Phillips Screwdriver



Wire strippers/cutters



Circuit tester



Silicone Sealant



Work gloves



Ladder



Safety goggles

## Pre-Installation (continued)

### HARDWARE KIT



**NOTE:** Hardware *not* shown to actual size.

AA




BB



CC




DD

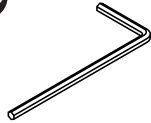

Part	Description	Quantity
AA	#8-32 x 3/4" phillips mounting bracket screw	2
BB	Wire nut	3
CC	Photocell (light sensor) screw-on cap	1
DD	Allen key	1

### PACKAGE CONTENTS

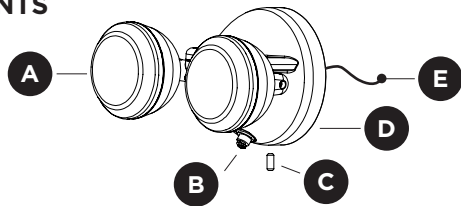


Part	Description	Quantity
A	Light fixture	2
B	Photocell (light sensor)	1
C	Mounting plate tightening bolt (pre-installed)	1
D	Mounting plate with gasket (pre-installed)	1
E	Hanger Wire for hands-free installation (pre-installed)	1


## Installation

### 1 For best results


- Install light 8-15 feet above the ground.
- Do not mount fixture close to reflective surfaces such as windows, white walls, white surfaces and water.
- When installing two fixtures on one switch, make sure the switch is rated for at least a 1A inductive load.
- Do NOT wire to dimming switch.
- When mounting fixture, make sure the photocell orientation is at the bottom for wall mount and away from building for eave mount.
- When mounting to a wall, make sure the fixture is 7 in. on center away from eave and 13 inches on center from inside corner of the exterior wall (fig 1).

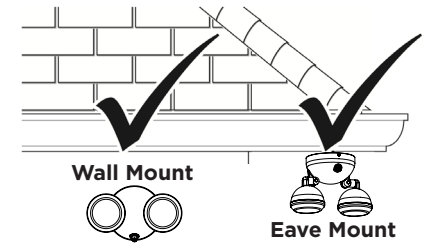

**NOTE:** Mounting plate (D) mounts to recessed mounted standard junction boxes. Junction box must be at least 1-1/2 inch in depth for proper installation for recessed mount application (fig 2).

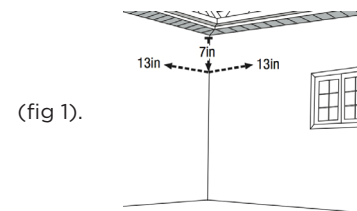

(fig 1).

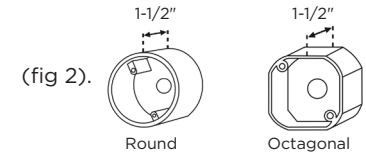


(fig 2).

### 2 Shut electric power off


- At wall switch verify it is in the off position (fig 1).
- At the main electrical panel turn off the circuit breaker that supplies power to the outlet box you are working on (fig 2).
- For screw-in type fuses unscrew the fuse that supplies power to the outlet box you are working on (fig 3).



(fig 1).

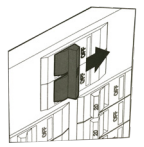

(fig 2).

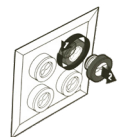

(fig 3).

## Installation (continued)


### 3 Remove the mounting plate

**NOTE:** The mounting plate (D) comes pre-assembled on the light fixture (A) for shipping.

**NOTE:** The mounting plate tightening bolt (C) comes pre-installed on the light fixture.


- Remove the mounting plate (D) from the back of the fixture by loosening the mounting plate tightening bolt (C) using the allen key (DD).

**TIP:** Only unscrew the tightening bolt (C) far enough to remove the mounting plate (D). Do not fully remove the tightening bolt (C).

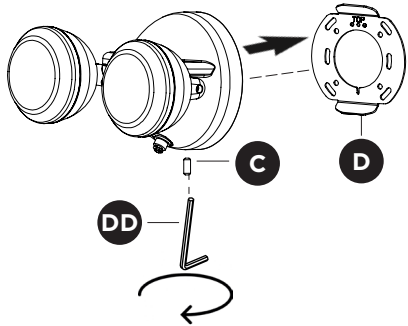

### 4 Installing the mounting plate

- Route the junction box wires through the large center hole in the mounting plate (D).
- Align the holes on the mounting bracket (D) with the holes on your junction box. Use two #8 screws (AA), depending on the size of the holes in your junction box, attach the mounting bracket (D) to your junction box.
- For wall mount,** the "TOP" arrow must point upward.
- For eave mount,** the "TOP" arrow must point toward the building.

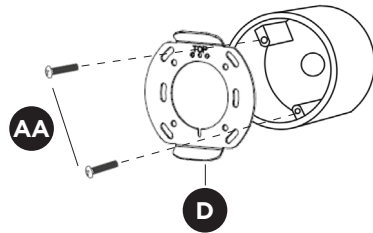


## Installation (continued)

### 5 Hang fixture to mounting plate

- Place the small sphere head of the hanger wire (E) between the back of the small groove located on the bottom of the center hole of the mounting plate (D).
  - For wall mount,** ensure the photocell (B) is facing downwards when light fixture (A) is installed.
  - For eave mount,** ensure the photocell (B) is facing away from the building when light fixture (A) is installed.

**TIP:** Ensure the light fixture (A) can safely hang onto the mounting plate (D) to allow for use of two hands to make the wiring (fig 2).

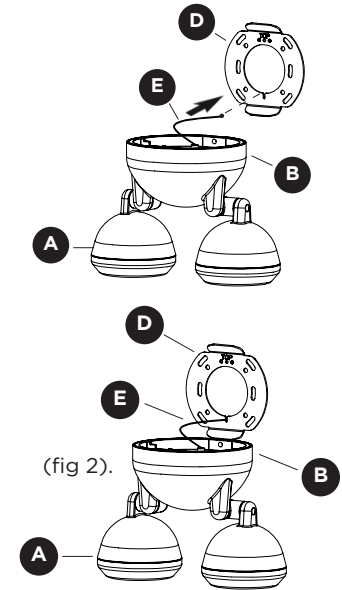

### 6 Making the electrical connections


- If necessary, strip 3/8" of insulation from junction box or fixture (A) wires (fig 1).
- Connect *fixture black wire to house black wire*, the (+) line, and *fixture white wire to house white wire*, the (-) common by twisting the exposed wires together and using the wire nuts (BB). Ensure no loose wires.
- Connect *house ground wire to the green fixture ground wire*, which is attached to the mounting plate (D), by twisting the exposed wires together and using the wire nuts (BB).



**TIP:** Hold stripped ends near each other and align any frayed strands (do not twist wires).

Push the wires into wire nut (BB) and use your fingers to twist the wire nut clockwise until tight. Check for tightness by pulling wires.


(fig 1). 3/8"

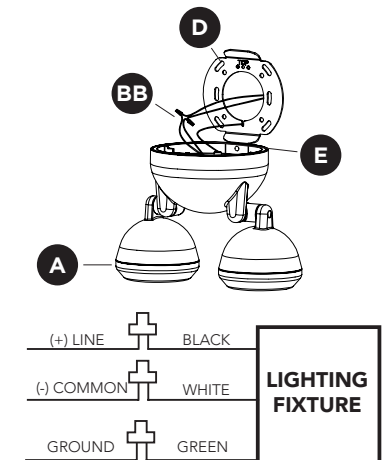

## Installation (continued)


### 7 Mounting the light fixture

- Once the fixture is wired, place the light fixture (A) onto the mounting plate (D) so the top sloped groove on the plate rests on the top sloped groove on the back of the fixture.
- Verify the fixture is flush with the wall and photocell (B) is pointed downward for wall mount or away from building on eave mount.
- Tighten the mounting plate tightening bolt (C) back through the hole on the bottom of the fixture (A) until the bolt firmly pushes against the mounting plate (D).

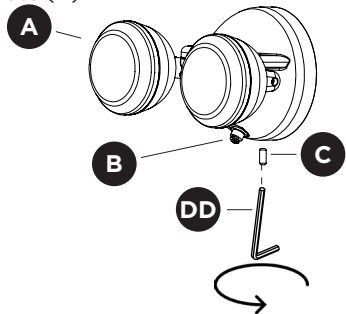

### 8 Caulking around the light fixture

- Caulk around the mounting plate (D) and surface with silicone sealant (not included).

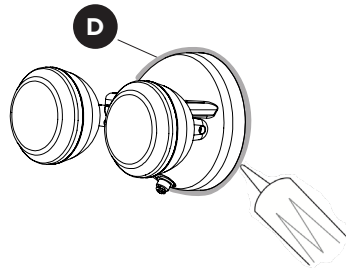


**NOTICE:** Failure to properly caulk around the surface and mounting plate (D) could lead to water damage and is not covered under warranty.

**NOTE:** When attaching this fixture (A) to an external, surface mount junction box, caulk the inside of the light fixture before attaching to the mounting plate (D).

### 9 Adjusting the light heads and testing

- After fixture is securely mounted, use your hand to pan and tilt each individual light head on the fixture (A) to point towards the direction desired.
- If one or both heads on the fixture (A) appear loose, use a philips screwdriver to tighten the screws located on the arms of the light heads.
- From the breaker and switch, turn power back ON to the light fixture to check if it lights up. Make sure the photocell (B) has no light entering it when testing.

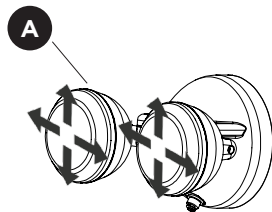

**WARNING:** Risk of fire. Keep the lamp heads at least 3 in. (76mm) from combustible materials.

**CAUTION:** Keep lamp heads 30° below horizontal to prevent water damage and electrical shock.

## Operation


### 1 Selecting Dusk-to-Dawn or Switch-Activated control



#### OPTION 1: DUSK-TO-DAWN OPERATION

Dusk-to-dawn operation enables the light fixture to automatically turn ON when dark outside and turn OFF when the sun rises, thus saving you energy.

- To enable dusk-to-dawn operation remove black cap cover and ensure the photocell (B) has clear cap cover on it and is unobstructed.
- Ensure the switch powering the outlet connected to the light fixture is turned to the ON position and *leave it ON* at all times to enable dusk-to-dawn functionality to operate automatically.

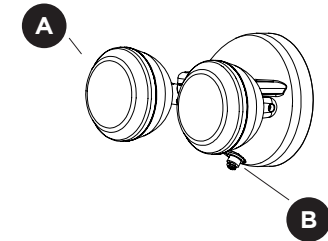

(Clear cap cover on photocell for Dusk-to-Dawn Operation)

**TIP:** To test if the light fixture (A) and photocell (B) works properly run power to the fixture and cover the photocell to turn fixture ON. Shine a light into the photocell to see if fixture turns OFF.


**NOTE:** If photocell (B) is located in an area under heavy shade the photocell may not detect enough light and may turn the light fixture on.

#### OPTION 2: SWITCH CONTROLLED

Switch controlled operation enables the light fixture to turn ON and OFF by flipping a switch that controls the electricity to the outlet powering the fixture. The light fixture will not turn ON and OFF automatically, but is manually controlled.



- To enable switch activated operation leave the black screw-on cap the photocell (already installed on the fixture) and remove the instructions label.

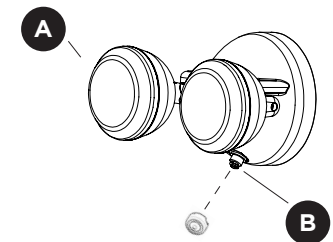

(Leave the black cap cover over the photocell)

## Care and Cleaning

- Shut off main power supply before cleaning the product. To prolong the original appearance, clean the light fixture with clear water and a soft, damp cloth only.
- Do not use abrasive cleaners or cleaners that contain alcohol. Do not apply paints, solvents, or any other chemicals on this light fixture. They could cause a premature deterioration of the finish and may void the warranty.
- Do not spray the light fixture with a hose or power washer.

## Troubleshooting

Problem	Possible Cause	Solution
<b>Light does not turn ON</b>	No power to the fixture	Check if circuit breaker is tripped Confirm wall switch is ON Verify wiring to fixture is correct (turn power off to fixture beforehand)
	Fixture is sensing daylight	Cover photocell. Wait several seconds until fixture turns ON.
<b>Light cycles ON and OFF continuously</b>	Photocell light sensor is sensing reflected light	Relocate light fixture to a location where there is no reflected light. OR place the optional photocell cover over the photocell light sensor and use the wall switch to turn the light ON and OFF.
<b>Light FLICKERS</b>	The light fixture is wired through a dimmer switch.	Do not use a dimmer switch to control the light fixture. Replace the dimmer switch with a standard ON/OFF wall switch.



**NOTE:** Photocell (B) may have a few minute delay, to reduce it's sensitivity to sudden light changes. When testing shine a light/cover the photocell for a few minutes to check if fixture functions properly

## Troubleshooting (continued)

Problem	Possible Cause	Solution
<b>Light stays ON</b>	Light sensor is in a shaded area	Shine a flashlight into the light sensor and wait a couple minutes. If the light turns OFF, the fixture should be moved to a location with enough light in the daylight hours for the light sensor to work. OR place the optional opaque cover over the photocell light sensor and use the wall switch to turn the light ON and OFF.
	Light Sensor is faulty	If the light does not turn off when a flashlight is shined on the light sensor for a few minutes, then the sensor may be faulty. Please contact customer service.

## 5-Year Limited Warranty

This is a limited warranty offered by Probrite for a period of five years from the date of purchase to its customers. Probrite warrants to customers that the products will be free from defects in material and workmanship. The obligation of Probrite under this warranty is limited to the provision of replacement of products and is extended to the original purchaser of the product on presenting valid purchase receipt or other proof of date of original purchase acceptable to Probrite. The receipt is required for rendering the warranty performance. Any warranty claims without original proof of purchase would not be accepted. It should be noted that the warranty does not apply to Probrite products that have been altered or repaired by unauthorized personnel, have been subjected to neglect, abuse, misuse or accident or damages caused during shipping. Any other products not manufactured by Probrite which have been supplied, installed and/or used in conjunction with Probrite products are not covered under this warranty. Any damages caused by replacements bulbs, LEDs or corrosion or discoloration of brass components are also not covered by this warranty.

### Limitation of Liability:

In no event Probrite shall be liable for indirect, consequential, incidental or special damages, or lost profits. Probrite is not liable for any claims or damage arising out of or connected with the manufacture, sale, delivery, use, maintenance and repair or modification of Probrite products, or supply of any replacement parts that, exceed the purchase price of Probrite products giving rise to a claim. Labor charges to remove or install the fixtures will not be accepted.

### To Claim:

Please contact PROBRITE customer service at 1-844-507-5651 or email support@PROBRITE.com and include your name, address and contact number, along with a copy of the purchase receipt and a brief description of the problem.

# **PROBRITE™**

## **Questions? / Missing Parts? / Need Accessories?**

Before returning to the store, call or email PROBRITE  
Customer Service 9am-5pm EST Monday to Friday.

**1-844-507-5651**

**support@PROBRITE.com**

**PROBRITE.COM**

**RETAIN THIS MANUAL FOR FUTURE USE**

**Para las translaciones en español,  
visit [www.probrite.com/install](http://www.probrite.com/install)**