

MASSAGE CHAIR



USER INSTRUCTIONS

Contents

1. Product Introduction	1-4
1.1 Product Overview	1
1.2 Technical Specifications	2
1.3 Core Functions	2-3
1.4 Key Features	4
2. Safety Instructions	5-8
2.1 Intended Users	5
2.2 Safety Instructions Before Use	5-6
2.3 Safety Instructions After Use	6
2.4 Important Safety Warnings	6-7
2.5 Special Population Warnings	7-8
2.6 Emergency Handling	8
3. Installation & Setup	9-16
3.1 Unboxing Guide	9-10
3.2 Installation Procedure	10-14
3.3 Pre-Use Safety Guidelines	14-16
4. Operating the Massage Chair	17-40
4.1 Operating Instructions	17-19
4.2 Control Methods	20-40
5. Maintenance & Care	41-41
5.1 Cleaning Instructions	41
5.2 Cleaning Precautions	41
5.3 Maintenance Guidelines	41
6. Frequently Asked Questions (FAQ)	42-56
7. After-Sales Service	57-57
7.1 Warranty Policy	57
7.2 Repair Services	57
7.3 Replacement Parts	57
7.4 Technical Support	57
7.5 Returns & Exchanges	57
8. Share & Earn Rewards	58-58
8.1 Buyer Show Collection	58
8.2 How to Participate	58

1. Product Introduction

This massage chair utilizes advanced intelligent sensing technology in conjunction with precise mechanical linkage technology to simulate the techniques of professional masseurs, providing users with a full-body relaxation experience. In terms of design, it takes into account both ergonomics and fashionable aesthetics. Not only can it relieve muscle tension and promote blood circulation, but it can also improve sleep quality, bringing comfort and health to families.

1.1 Product Overview



1	Pillow	7	Bluetooth Speaker
2	Shortcut Key	8	Shoulder Airbag
3	Ambient Light	9	Touch Screen
4	Armrest	10	Arm Airbag
5	Footrest	11	Calf Airbag
6	Move Rollers	12	Foot Airbag

1.2 Technical Specifications

Package Size	L: 44.1 in W: 29.92 in H: 50.78 in
Product Upright Dimensions	L: 55.12 in W: 29.72 in H: 43.7 in
Minimum Zero Gravity Dimensions	L: 63.38 in W: 29.72 in H: 36.22 in
Minimum Entry Size	29.72 in
Net Weight	141.1 lbs
Gross Weight	178.57 lbs
Rated Voltage	120 V~
Rated Power	140 W
Rated Frequency	60 Hz

1.3 Core Functions

(1) 6 massage techniques

Including Kneading, Clapping, Shiatsu, Rolling, Knocking, and Tapping, imitating the techniques of professional masseurs. The intensity and the massaged area of each technique can be adjusted independently to meet the needs of different users.

(2) 12 automatic programs

With a variety of preset massage programs built-in, such as Soft, Sleep, Master, etc., to meet your different needs.

(3) Multiple control methods

You can control it via an APP, a display screen, or quick buttons. You can flexibly choose the most suitable control method for you, making your use more comfortable and convenient.

(4) Multi-site massage

Covering multiple parts such as the neck, shoulders, back, waist, hips, legs, and feet, providing a full-body massage experience.

(5) Heating function

Heating functions are equipped on the back, waist, calves, and insteps to promote blood circulation and enhance the relaxation effect.

(6) Zero-gravity function

Three levels of zero-gravity, simulating different weightless states, reducing the pressure on the spine and helping the body to fully relax. You can adjust the leg rest and the backrest separately to suit different people.

(7) Space-saving function

It can be placed only 1.97 inches away from the wall, but it can still be fully reclined, suitable for various spaces.

(8) Timing function

Users can set the massage time from 10 to 30 minutes according to their personal needs. The massage will automatically stop after the set time to prevent over-massage.

(9) Bluetooth music playback

With built-in high-fidelity Bluetooth speakers, you can play music while massaging after connecting your mobile phone, enhancing the full-body relaxation effect.

(10) USB PORT

While enjoying the massage, you can charge your mobile phone, and you can also connect devices like heated eye masks.

(11) Foot roller function

The four-zone linkage includes the raised front sole, arch rollers, heel kneading, and ankle air pressure massage, effectively relieving foot soreness.

(12) Automatic leg extension function

It can intelligently identify the length of the legs and automatically extend by 7.09 inches. The extension distance can be adjusted to ensure that the legs are fully stretched and comfortably supported during the massage, enhancing the overall massage experience.

(13) Automatic scanning

With a built-in human body sensing system, it can intelligently identify the body curve and provide a personalized massage, ensuring that each massage conforms to the unique contour of your body.

(14) Negative ion function

It purifies the surrounding air by releasing negative ions, creating a fresher and more comfortable massage environment.

1.4 Key Features

(1) Convenience

Users can enjoy professional-grade massages right at home, without the need for appointments or going out, saving both time and money. Privacy: The independent home massage environment offers absolute privacy, making it ideal for those who don't want to go to public massage places.

(2) Multifunctionality

It combines functions such as music playback, USB charging, negative ion generation, and heating. Besides providing massages, it also helps with sleep and stretching, enhancing the overall user experience.

(3) User-friendly Design

With multiple control methods, the operation is simple and intuitive, suitable for people of all age groups. Users can easily select massage modes, adjust the intensity, and set the time.

(4) High-quality Materials

It uses high-quality simulated leather that has no unpleasant odor, ensuring the seat is comfortable, durable, and easy to clean.

(5) Custom Mode

Users can adjust the intensity and position of the rollers and airbags according to their own conditions to achieve personalized customization. They can save multiple sets of personalized settings and directly call them up the next time they use it, providing a continuously optimized experience for long-term use.

2. Safety Instructions

2.1 Intended Users

The massage chair provides convenient relaxation for diverse lifestyles, but usage should be adjusted based on individual health conditions.

Office Workers: Prolonged sitting in fixed positions can cause muscle stiffness and fatigue. The massage chair helps relax the shoulders, neck, and back to relieve discomfort.

Long-Standing Individuals: For individuals such as teachers or salespeople, the massage chair helps relax leg muscles and reduce swelling.

Elderly Users: Promotes blood circulation and eases pain, but it is recommended to choose a gentle mode.

Fitness Enthusiasts: Helps relax muscles and speeds up recovery after exercise.

People with High Stress or Poor Sleep: Reduces stress, relaxes the body and mind, and improves sleep quality.

Chronic Pain Sufferers: For conditions like muscle strain or cervical spondylosis, the chair helps alleviate pain, but consult a doctor before use.

Pregnant Women: Use with caution and consult a doctor to avoid pressure on the abdomen.

Recovery Patients: Individuals recovering from surgery or illness can use the chair under doctor supervision to aid muscle relaxation and recovery.

Individuals with Poor Circulation: Improves blood flow, benefiting those with cold extremities or frequent fatigue.

Quality of Life Seekers: For those who value comfort and relaxation, a massage chair offers an excellent way to unwind and enhance daily life.

2.2 Safety Instructions Before Use

Power Check: Ensure the power cord is intact to prevent electric shock or short circuits.

Component Inspection: Inspect rollers, airbags, and other parts for damage before use.

Session Duration: Limit each session to 30 minutes to avoid over-relaxing or muscle strain.

Usage Frequency: For best results, use 1–2 times per day. Excessive use may reduce effectiveness.

Wait After Meals: Wait at least 30 minutes after eating to prevent digestive issues.

Avoid Use on Empty Stomach: Using on an empty stomach may cause dizziness or discomfort.

Proper Posture: Maintain correct sitting position to avoid discomfort or injury.

Remove Personal Items: Remove items that could cause harm, including jewelry, hair accessories, hats, belts, glasses, and anything hard in your pockets (e.g., wallet).

2.3 Safety Instructions After Use

Stand Up Slowly: Rise gradually to prevent dizziness caused by sudden blood pressure changes.

Rehydrate: Drink water after use to help your body recover.

2.4 Important Safety Warnings

To reduce the risk of fire, burns, electric shock, or injury, please adhere to these guidelines:

- **Electrical Safety**

(1) Unplug the unit when unattended or not in use for extended periods. Always turn off all controls before unplugging.

(2) Disconnect power before installing or removing any components.

(3) Do not pull the power cord or use it to move the massage chair.

(4) Keep the power cord away from heat sources.

(5) Never unplug while the chair is in operation.

(6) Do Not Use If:

- ✗ Power cord/plug is damaged.
- ✗ Unit malfunctions or operates abnormally.
- ✗ Chair is physically damaged or exposed to water.

- **Environment & Placement**

- (1) Avoid damp, high-temperature, or flammable/explosive environments.
- (2) Indoor use only. Do not use outdoors.
- (3) Avoid aerosol products or oxygen-rich environments during operation.
- (4) Keep away from direct sunlight to prevent material fading/cracking.
- (5) Avoid prolonged contact with vinyl or wallpaper (risk of discoloration).
- (6) Ensure ventilation. Do not use in tightly enclosed spaces for long periods.

- **Other Precautions**

- (1) Do not use if damaged or malfunctioning. Exposed moving parts from torn fabric may cause injury.
- (2) Use only in a seated position. Standing on or inside the chair is prohibited.
- (3) Avoid prolonged use of the heating function to prevent the risk of burns.
- (4) The massage chair is for use by one person at a time only.
- (5) Be sure to follow all the setup instructions in the "Settings" section to properly configure your device. Improper installation may cause injury or damage.
- (6) Do not combine with external devices (heating pads, electric blankets, etc.) during operation.
- (7) Wear comfortable, cotton clothing while using the chair. Synthetic fabrics may cause static buildup.
- (8) Always supervise children to prevent unsafe play.
- (9) Do not exceed the chair's weight limit to avoid damage.
- (10) Avoid using the chair for long periods at a time to prevent motor overheating.

2.5 Special Population Warnings

- (1) Not suitable for pets, children, individuals with disabilities, intoxicated persons, or those with sensory impairments.
- (2) Any person requiring special care or elderly individuals must use this massage chair under the supervision of an adult.
- (3) Individuals with sensory loss, numbness, or cognitive impairments (including children) must use this product under adult supervision.

(4) Consult a doctor before use if you have:

- Implanted medical devices (e.g., pacemakers)
- Heart disease
- Pregnancy or recent childbirth
- Heat/pressure sensitivity
- Open wounds or injuries
- Bone fractures, osteoporosis, low bone density, or fragility
- Blood thinners or bruising susceptibility
- Skin disorders or allergies

2.6 Emergency Handling

(1) Immediately power off and unplug the chair, then contact authorized service personnel if you observe:

- Burning odors
- Overheated power cords
- Malfunctions or abnormal operations
- Failure to activate despite proper power connection

(2) Discontinue use and consult a healthcare provider if experiencing rashes, redness, itching, or other skin reactions.

3. Installation & Setup

3.1 Unboxing Guide

Please carefully read these steps or watch the video before unpacking and installing (There is a video QR code on the right side.)

(1) Cut the cable ties, lift the outer box from the bottom, and take out the protective cardboard from the packaging box. Lift the plastic bag, cut open the plastic film, and gently put down the footrest.

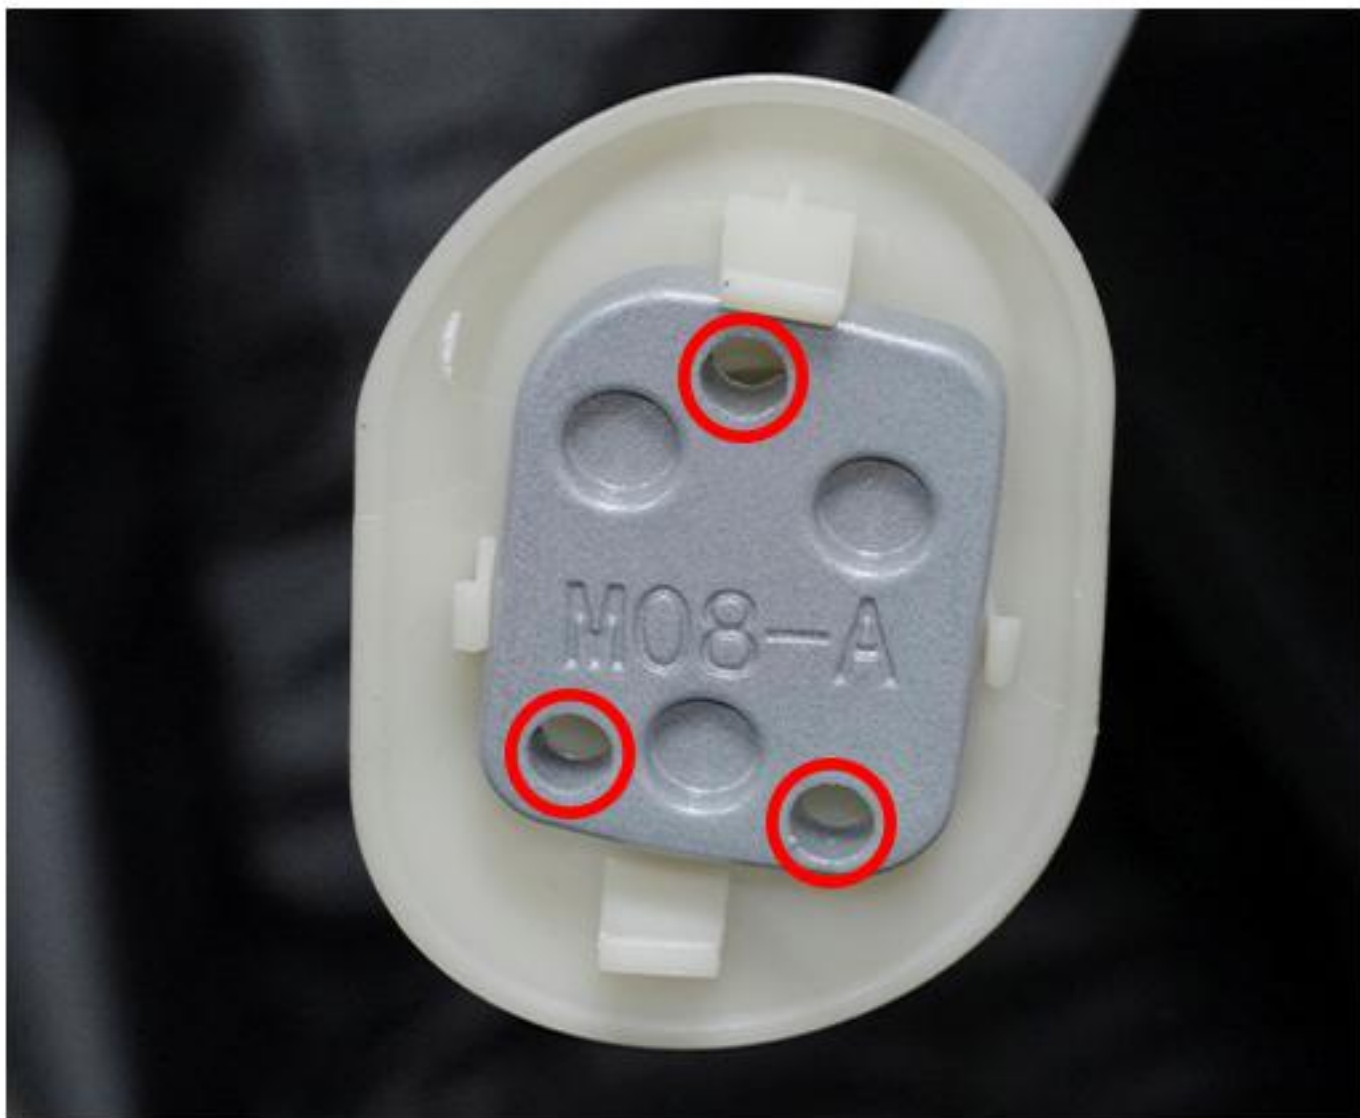
 Cut the cable ties	 Lift the outer box upward
 Before removing the protective film	 After putting down the footrest

(2) After unboxing, please check whether the appearance of the massage chair is in good condition, and also check whether the accessories in the package are complete.

				
① LCD Screen	② Screen Bracket and Accessories	③ Power Cord	④ Instruction Manual	⑤ Foot Pads (used to relieve the intensity of the foot massage)

3.2 Installation Procedure

3.2.1 Install the Screen Bracket

Locate the three corresponding holes on the armrest and the bracket.	 
Press downwards to align the buckle.	 

Press downwards to align the buckle.	
---	---

3.2.2 Connect the Screen

Connect the wires of the screen with the wires along the edge of the airbag and the seat cushion.

Before Connection	
After Connection	

3.2.3 Connect the Seat Cushion

Put down the seat cushion, and then successively fasten the zippers on the left side, right side, and bottom of the seat cushion.



Before Putting down the Seat Cushion



After Putting down the Seat Cushion



Right-side Zipper



Bottom Zipper

PLEASE NOTE:

- If it is difficult to fasten the zippers on both the left and right sides, you can use an object similar to a paper clip to extend the zipper head.
- If it is hard to fasten the bottom zipper, you can lift the footrest appropriately to make the fastening easier.

3.2.4 Power Connection

PLEASE NOTE:

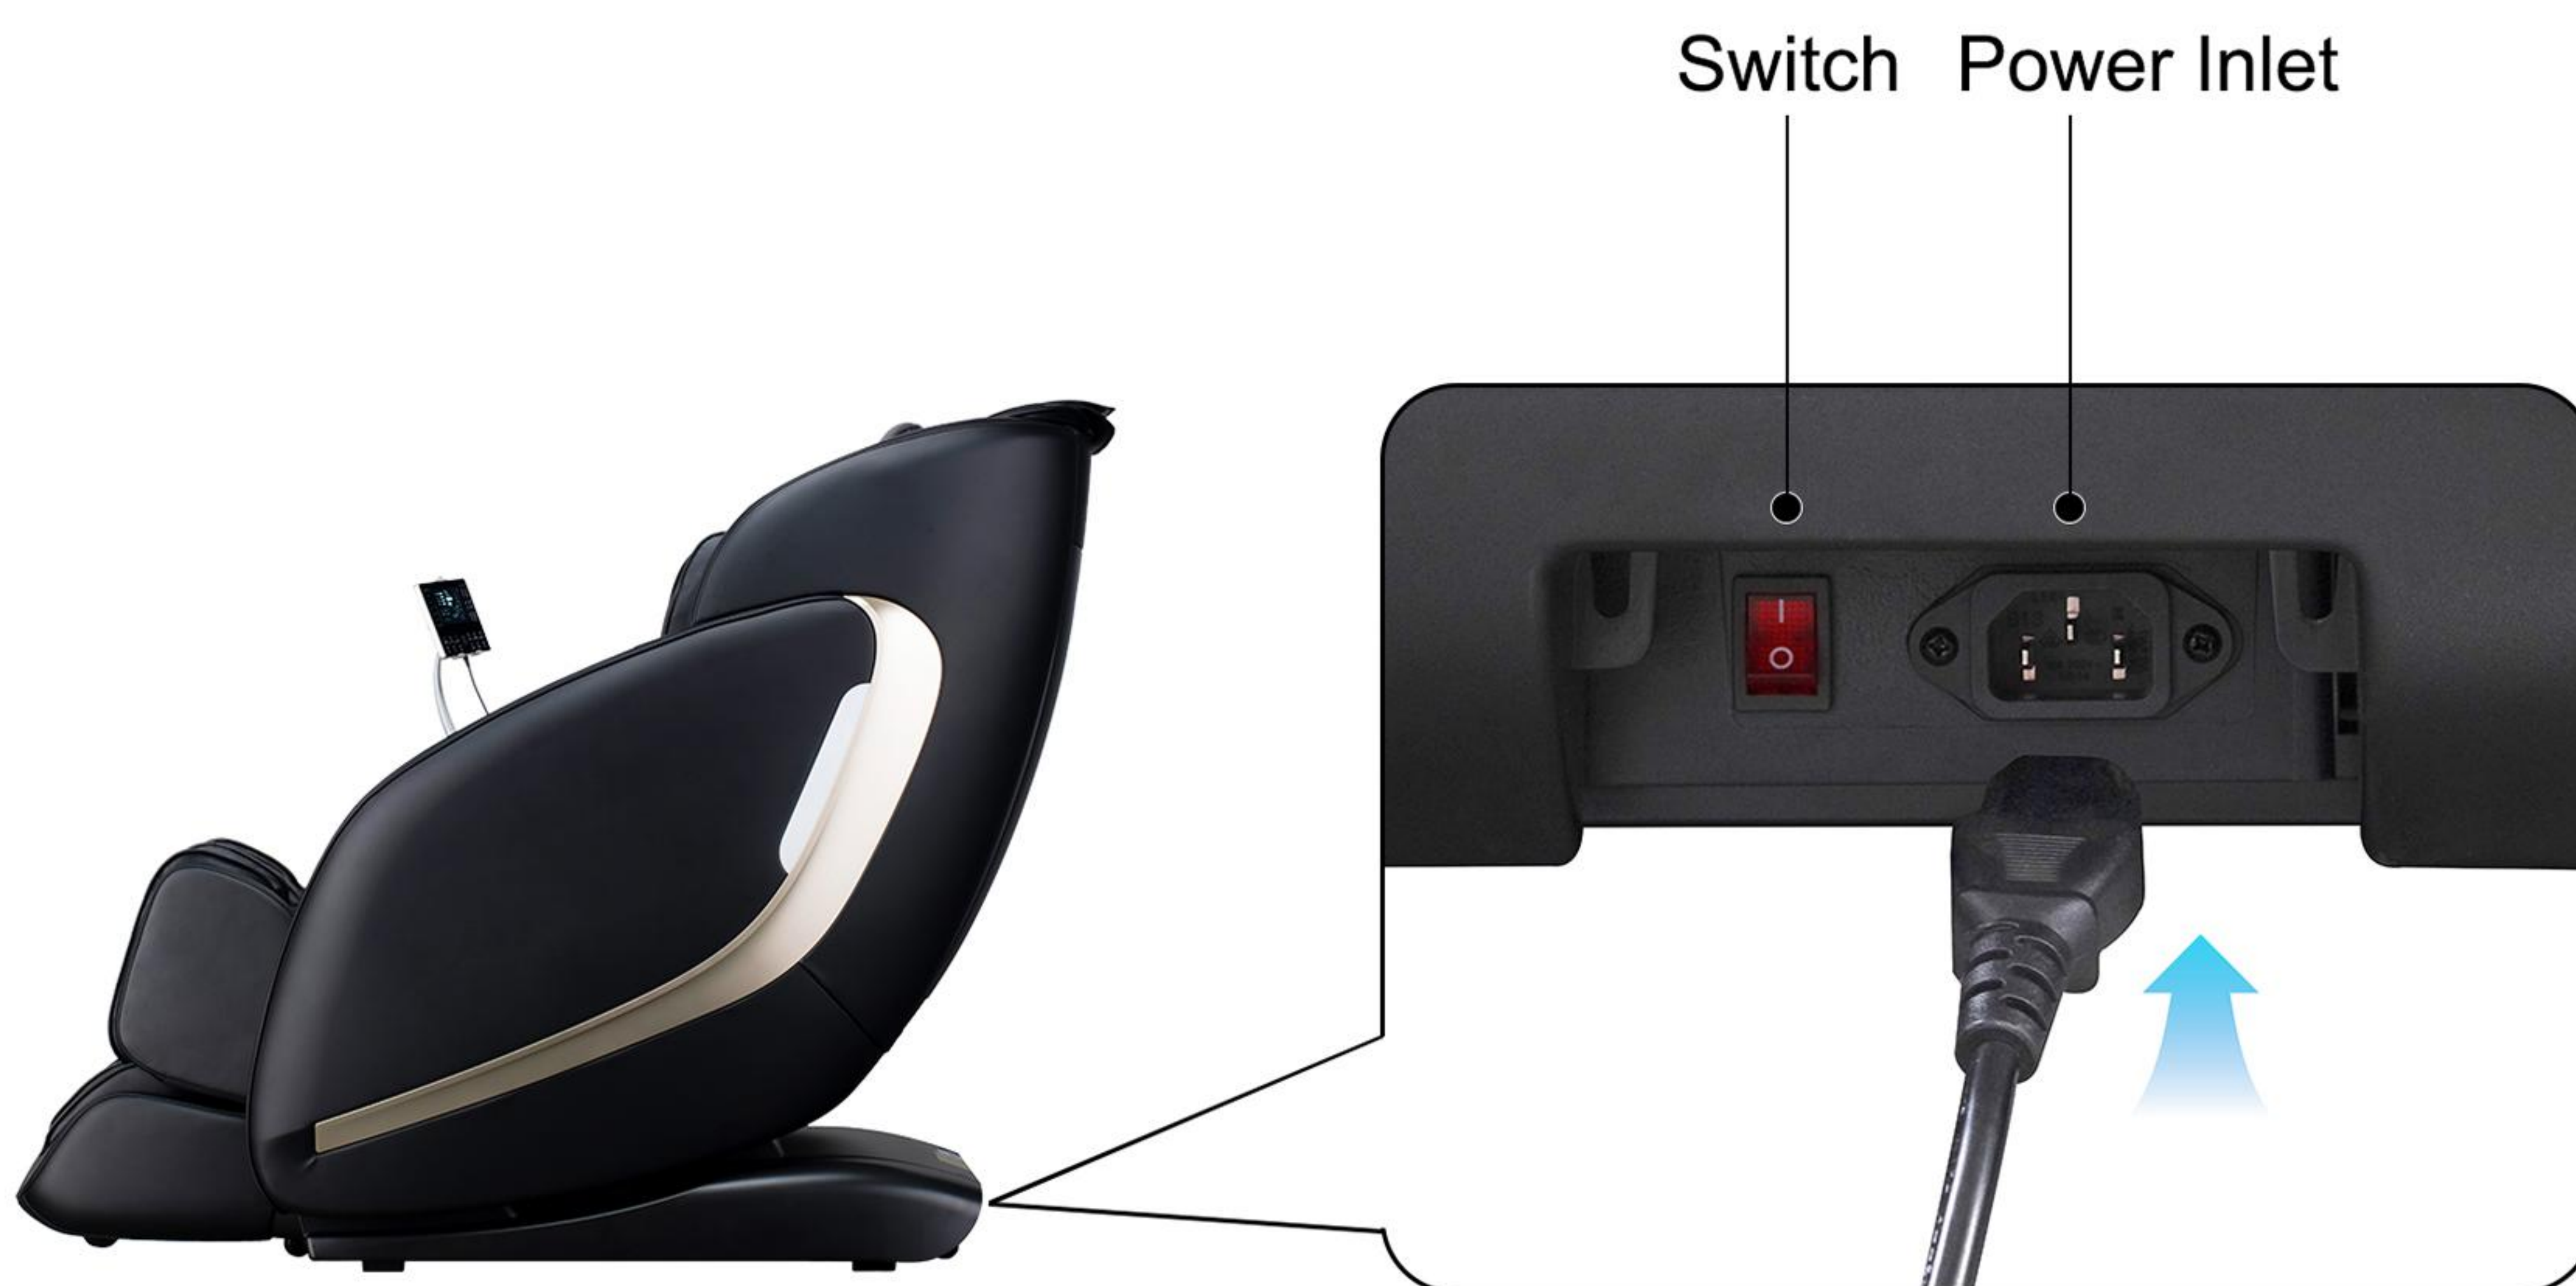
- Before plugging in, check whether the entire power cord and the plug have any possible damage.
- Make sure that no wires are exposed.
- Before inserting the power plug into the wall socket, make sure that the power switch is in the off position.

(1) Grounding Instructions

This unit must be grounded. If it malfunctions or breaks down, grounding provides a path of minimum current resistance to reduce the risk of electric shock. This product is equipped with a cord that has an equipment grounding conductor and a grounding plug. The plug must be inserted into an appropriate socket and be correctly installed and grounded in accordance with all local codes and regulations.

(2) Connect the Power Supply

- ① Insert the three-prong power plug into a properly grounded three-prong power socket.
- ② Insert the power cord into the interface at the bottom of the chair.
- ③ Turn on the power switch at the bottom of the backrest on the rear of the massage chair.



PLEASE NOTE:

- This product is designed for use in a rated 120V~ circuit, and its grounding plug matches the plug shown in the illustration. Please ensure that the product is connected to a socket with the same plug configuration. Do not use an adapter with this product.
- Incorrect connection of the equipment grounding conductor may pose a risk of electric shock. If you have any doubts about whether the product is properly grounded, consult a qualified electrician or maintenance personnel.
- Do not modify the plug provided with the product — if the plug does not fit the socket, have a suitable socket installed by a qualified electrician.

3.3 Pre-Use Safety Guidelines

(1) Moving the Chair

- ① Please turn off the main power supply and unplug the power cord from the electrical outlet.
- ② Using the moving wheels as the pivot point, tilt the chair backward as shown in the following figure, and then push it to the desired position.



- ③ When moving the massage chair, please lay a mat on the floor to prevent any damage to the floor.

PLEASE NOTE:

- Do not attempt to move the chair while someone is still sitting on it.
- Do not move the chair by pulling the armrests, as this may cause the armrests to come off.
- Before plugging in the power, check the entire power cord and the plug for any possible damage. Make sure there are no exposed wires.
- Before inserting the power plug into the wall socket, make sure the power switch is turned off.

(2) Reserve Space for Placing the Massage Chair

Check if there is enough space for the chair to recline. Leave at least 14 inches of space in front of the leg rest and at least 2 inches of space behind the backrest.



(3) Adjusting the Headrest

If you are not satisfied with the neck massage, you can remove the headrest, adjust its position through the Velcro on the back, or turn it over to the back of the massage chair.



(4) Placement of the Massage Chair

- ① Do not expose the massage recliner to direct sunlight or high-temperature environments, such as in front of a heater, as this may cause the synthetic leather to fade or harden.
- ② It is advisable to place the device on a mat to prevent damage to the floor.

(5) Before using the massage chair, please ensure the following

- ① Make sure there is nothing, no people, and no pets around the massage chair.
- ② Before the first use, use the controller to lower the backrest to the lowest zero-gravity position and raise the leg rest to the highest position. Ensure that the leg rest is correctly connected to the chair. Press the power button to return the chair to its original upright position.

4. Operating the Massage Chair

This product can be operated in 12 automatic modes and 6 manual techniques, and can be controlled in three ways: through Quick-Access Buttons, the LCD Screen, and the mobile phone APP.

4.1 Operating Instructions

4.1.1 Auto Mode

Serial Number	Programme	Description	Intensity
1	Master	Full body massage, strong intensity of rollers and airbags massage	High
2	Relaxing	Full body massage, medium intensity of rollers and airbags massage	Medium
3	Sport Care	Full body massage, a program designed specifically for athletes and fitness person	Medium
4	Soft	Suitable for elderly, full body massage in the lightest way to relieve back pain and leg cramp for the elderly	Low
5	Stretch	Full body massage, stretch your leg and back to better relieve muscle soreness after sport or hard work	High
6	Sleep	Full body massage with swing function, soft massage help to have a nice nap	Low
7	SPA	Full airbag massage and foot roller massage	Medium
8	Refreshing	Full body massage wake up the body, strong intensity for roller and airbag massage	High
9	Spine Care	Massage focus on the spine area to relax the body	Medium
10	Waist & Back	Partial massage, focus on waist and back, help to relieve muscle soreness of back and waist	Medium
11	Neck & Shoulder	Partial massage, focus on neck and shoulder, help to relieve muscle soreness of back and waist	Medium
12	Slim	Soft massage focused on the waist and hip	Low

PLEASE NOTE:

- When using the automatic program, you cannot adjust the width and intensity of the backrest rollers, nor can you adjust the position of the airbags.
- When using the stretching program, you cannot adjust the extension and retraction of the footrest, or the up and down positions of the backrest and the leg rest.
- After the sleep program is completed, the seat will not return to the initial position. Please press the power button to return to the initial position.

4.1.2 Manual Mode

Manual technology	Icon	Descriptions
Kneading		This mode mimics the human hand action of kneading muscles to improve circulation and soothe tense muscles. It helps to reduce muscle fatigue and pain, and is particularly useful for the shoulders and back.
Clapping		The mode simulates the rhythmic clapping of the palms or fingers on the surface of the body, which improves blood circulation, relaxes and stimulates the muscles, and increases the body's vitality.
Knocking		The mode simulates the rhythmic Knocking of the root of the palm against the body with a relatively high level of force, which stimulates the meridians and acupoints, promotes the flow of qi and blood, and relieves tension in the deep muscles.
Tapping		This mode mimics a gentle tapping or tapping motion. This action helps to relax the body while stimulating the skin and muscles, providing a certain vibratory effect that helps to relieve physical fatigue.
Shiatsu		The mode simulates finger or palm pressure on specific points on the body, which regulates the flow of qi and blood in the body by applying pressure, relieving pain and improving the body's functioning.
Rolling		This mode simulates the action of rolling the palm or fingers back and forth across the skin. It is commonly used on the back or lower back to help relax muscles, especially when larger muscle groups need to be relaxed.

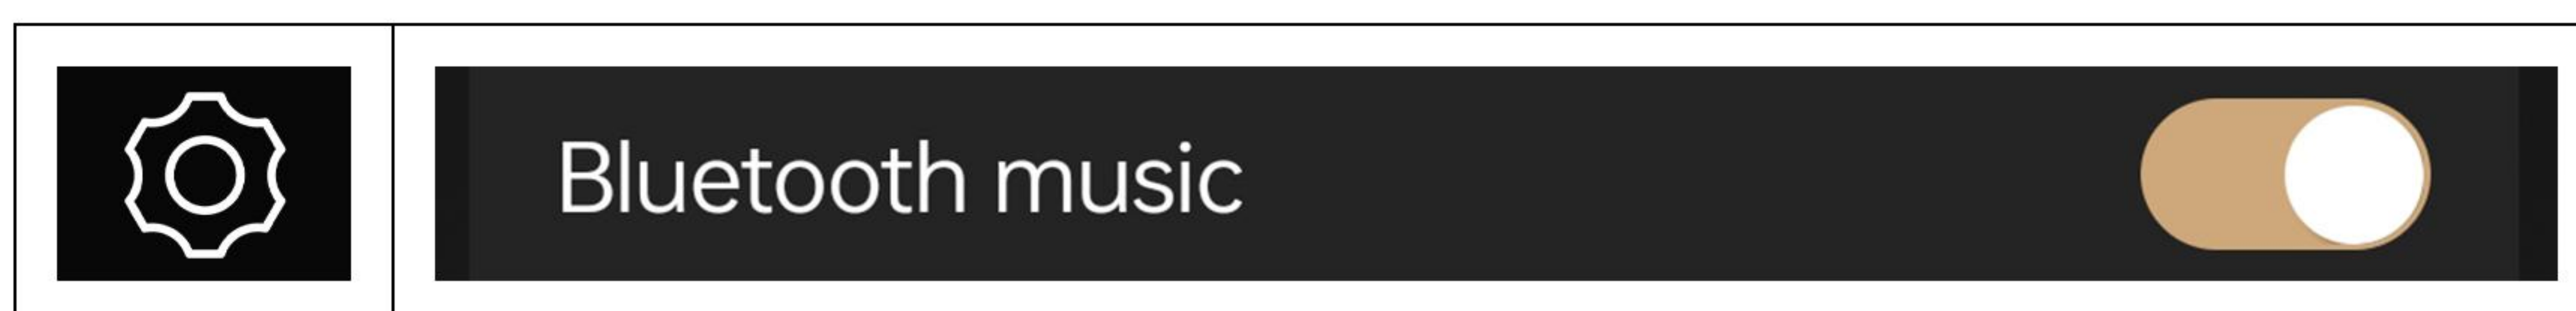
PLEASE NOTE:

- The manual setting mode can only be used after a massage technique is selected.
- When using the Kneading and Knocking techniques, you cannot adjust the width of the backrest rollers.
- When using the Rolling program, you cannot select the "Spot" area for massage.
- After selecting the "Spot" part, long press the "Up/Down" button to adjust the position of the rollers.

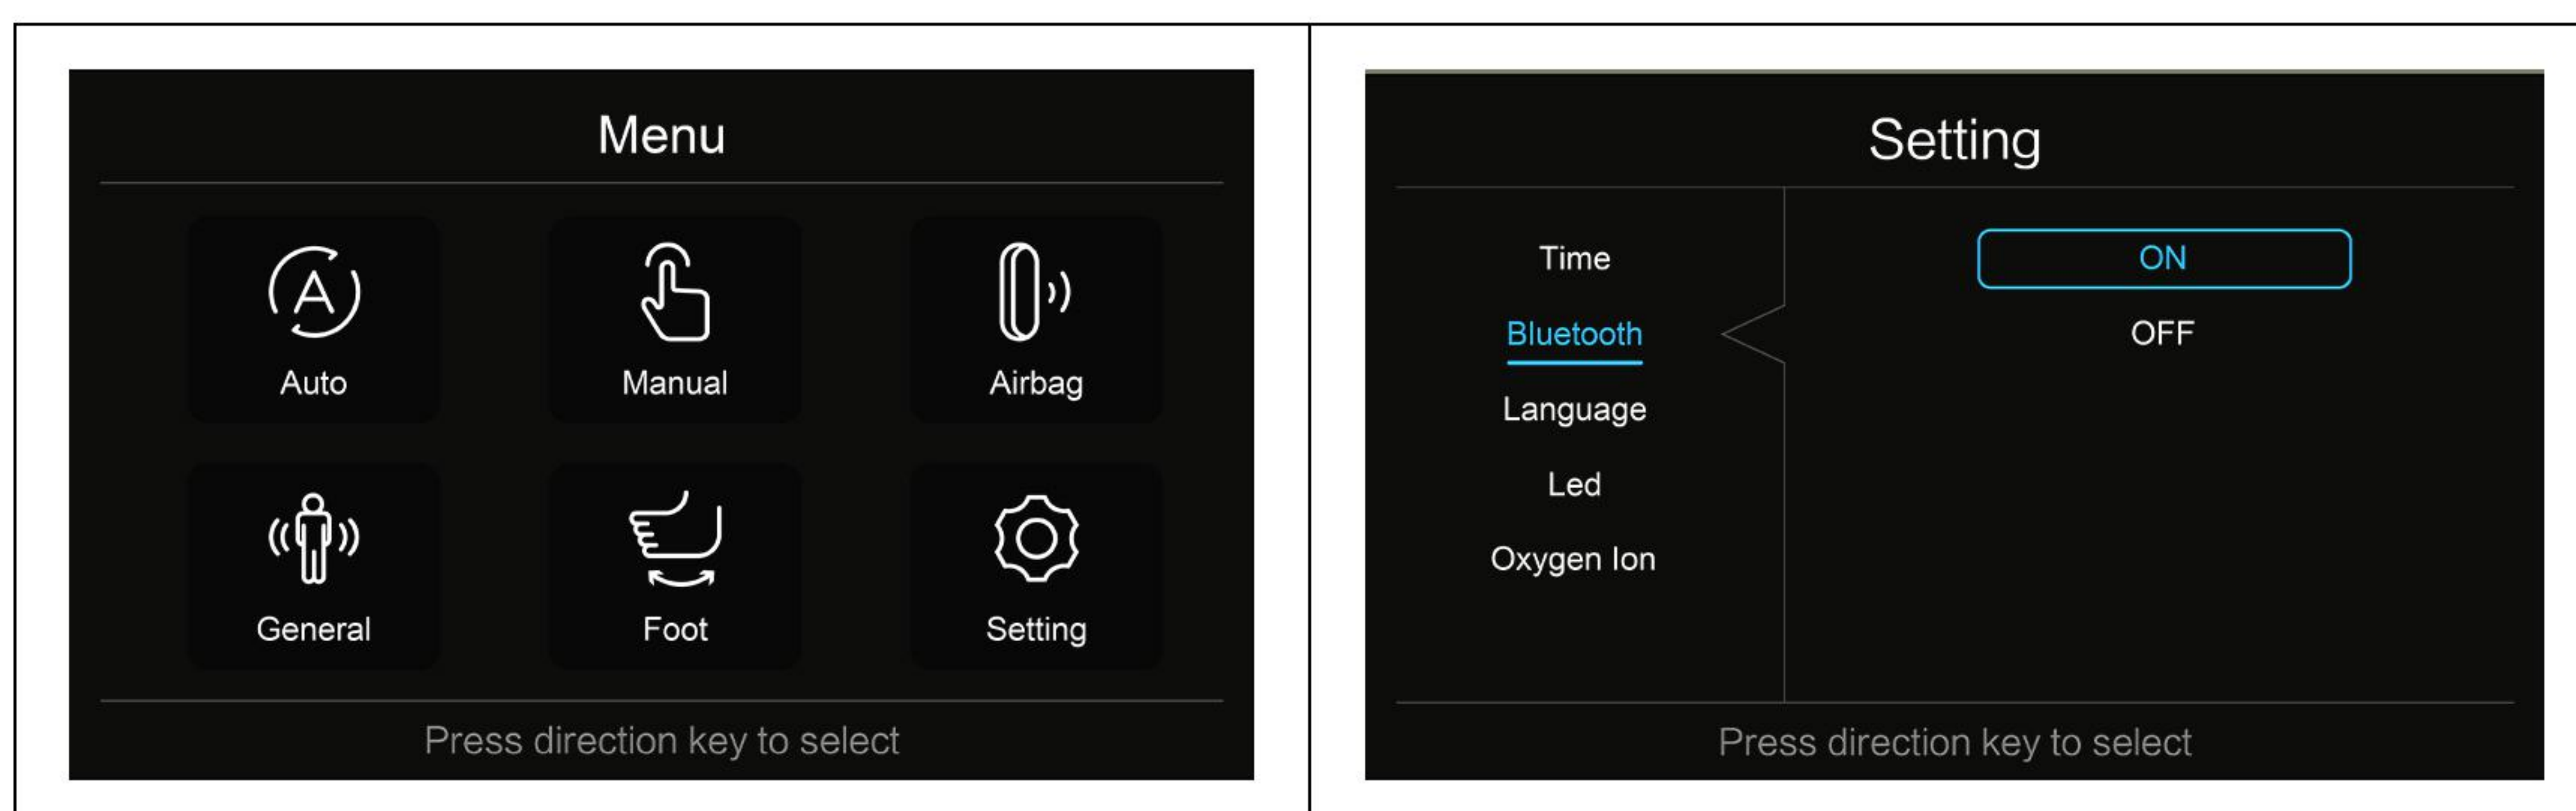
4.1.3 Bluetooth Pairing

Step 1. Start the massage chair and make sure Bluetooth is turned on.

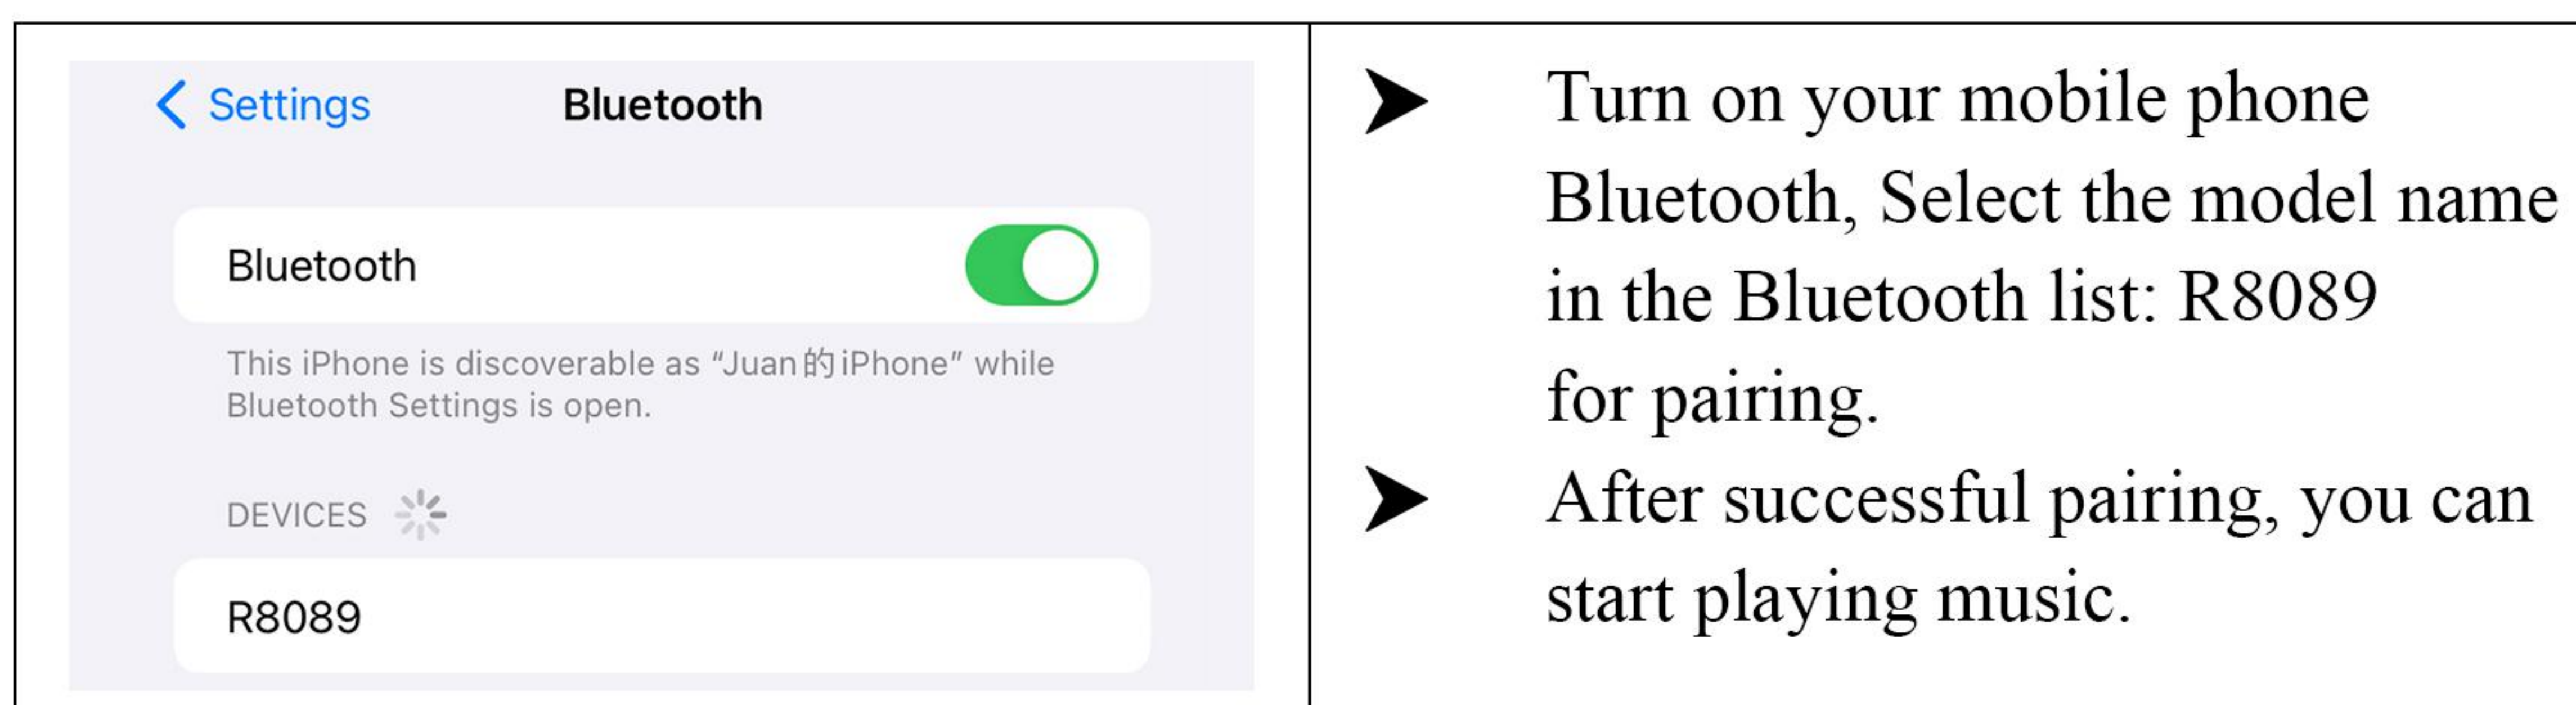
(1) Turn on Bluetooth in APP setting page



(2) Turn on Bluetooth in LCD Screen setting page



Step 2. Turn on your mobile phone's Bluetooth for pairing.



4.2 Control Methods

4.2.1 Remote Control

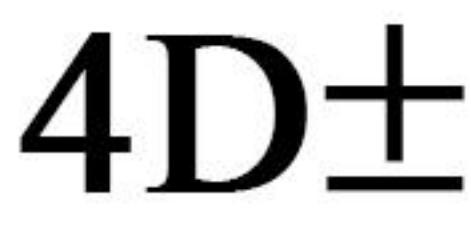
PLEASE NOTE:

- Do not sit, step on, or place heavy objects on the controller.
- Do not apply excessive force to the controller.
- Do not operate the controller with wet hands.
- Do not use objects with sharp edges or hard objects to operate the controller, as damage may result.
- Remove the screen protector before use.

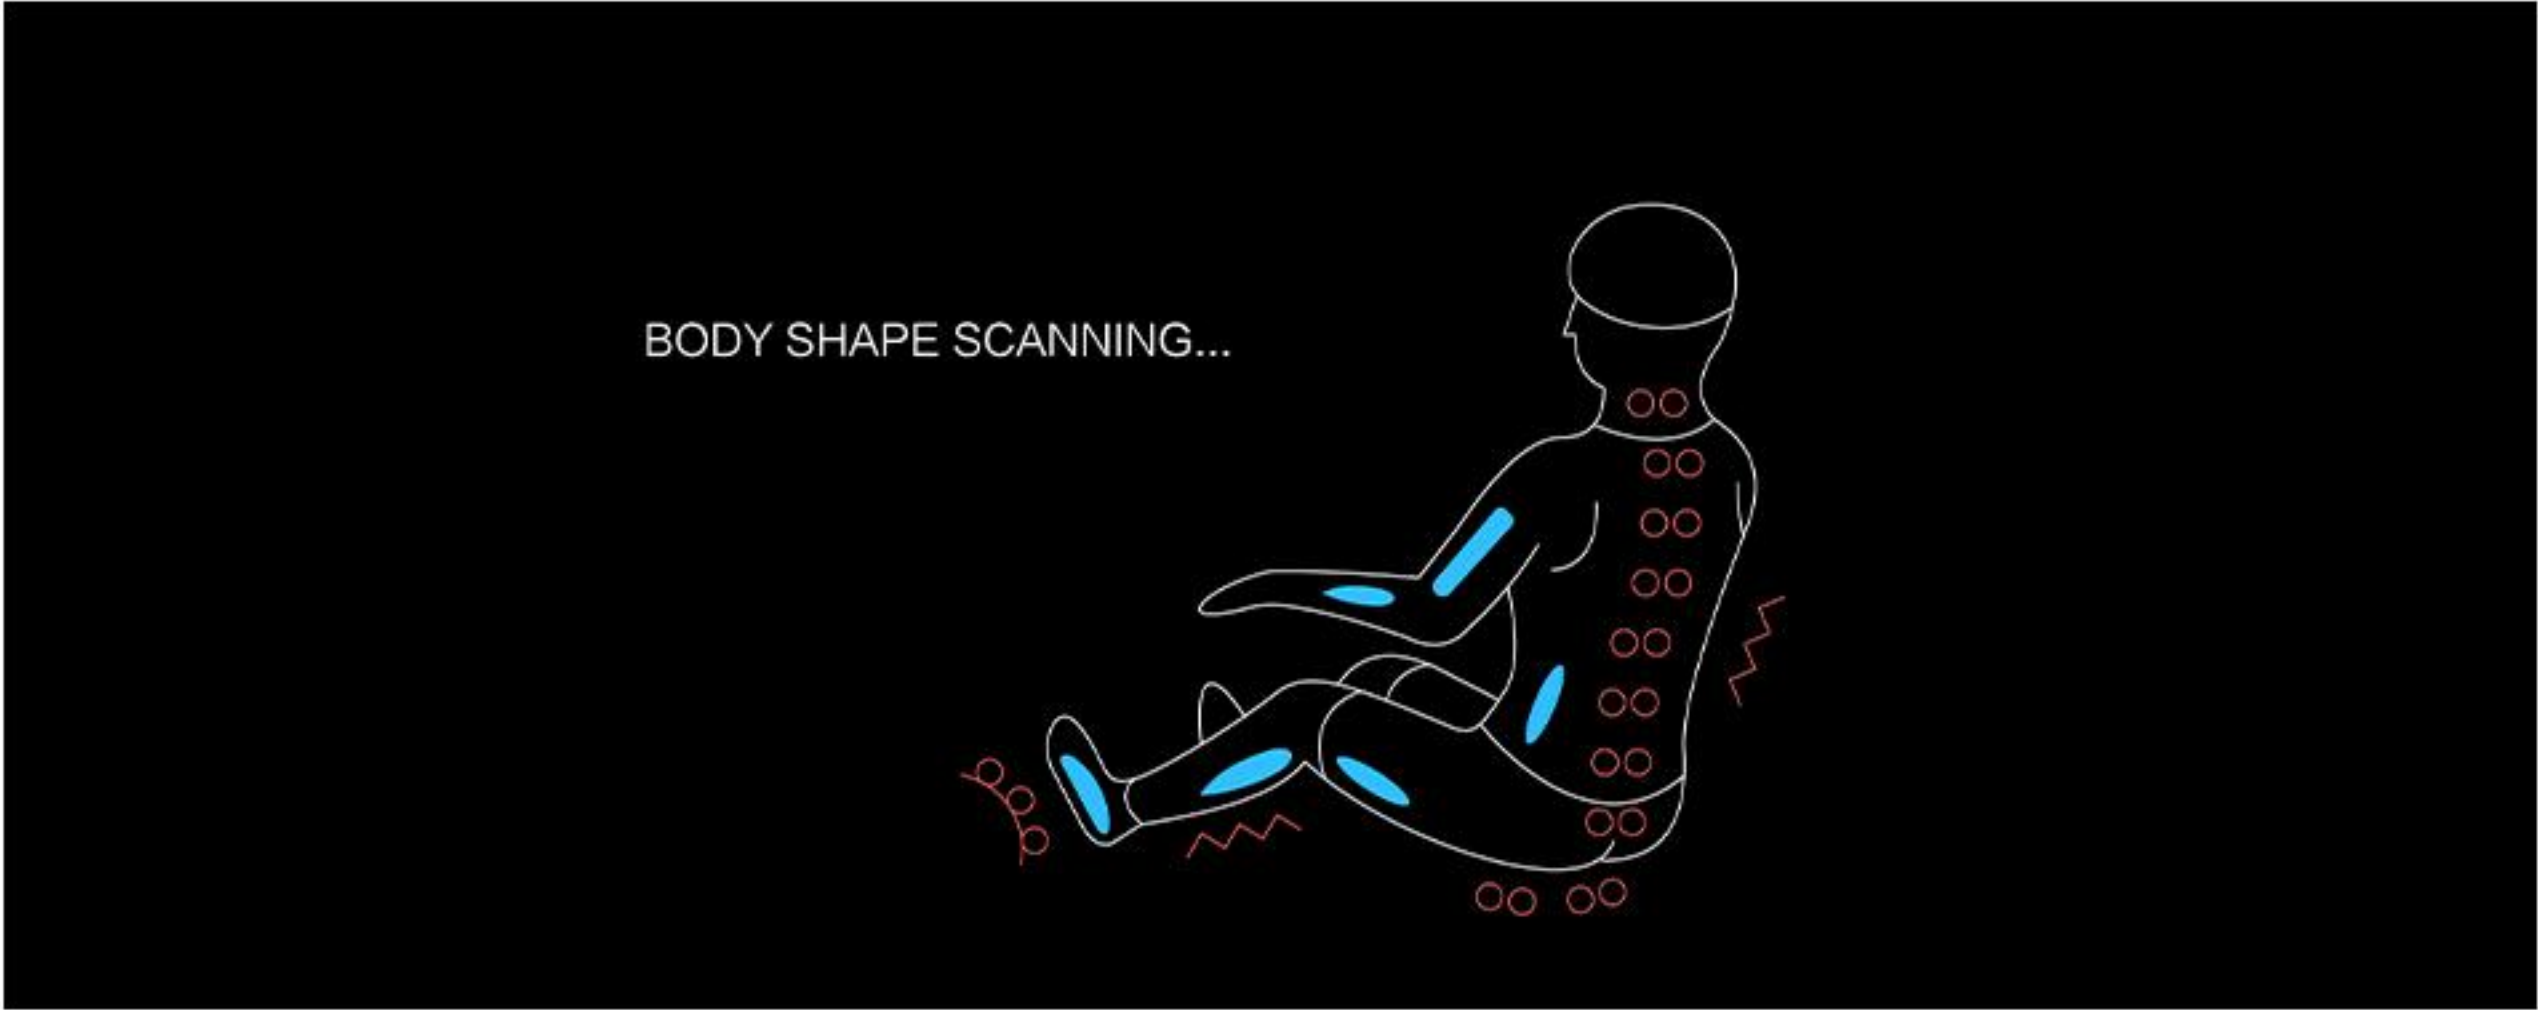
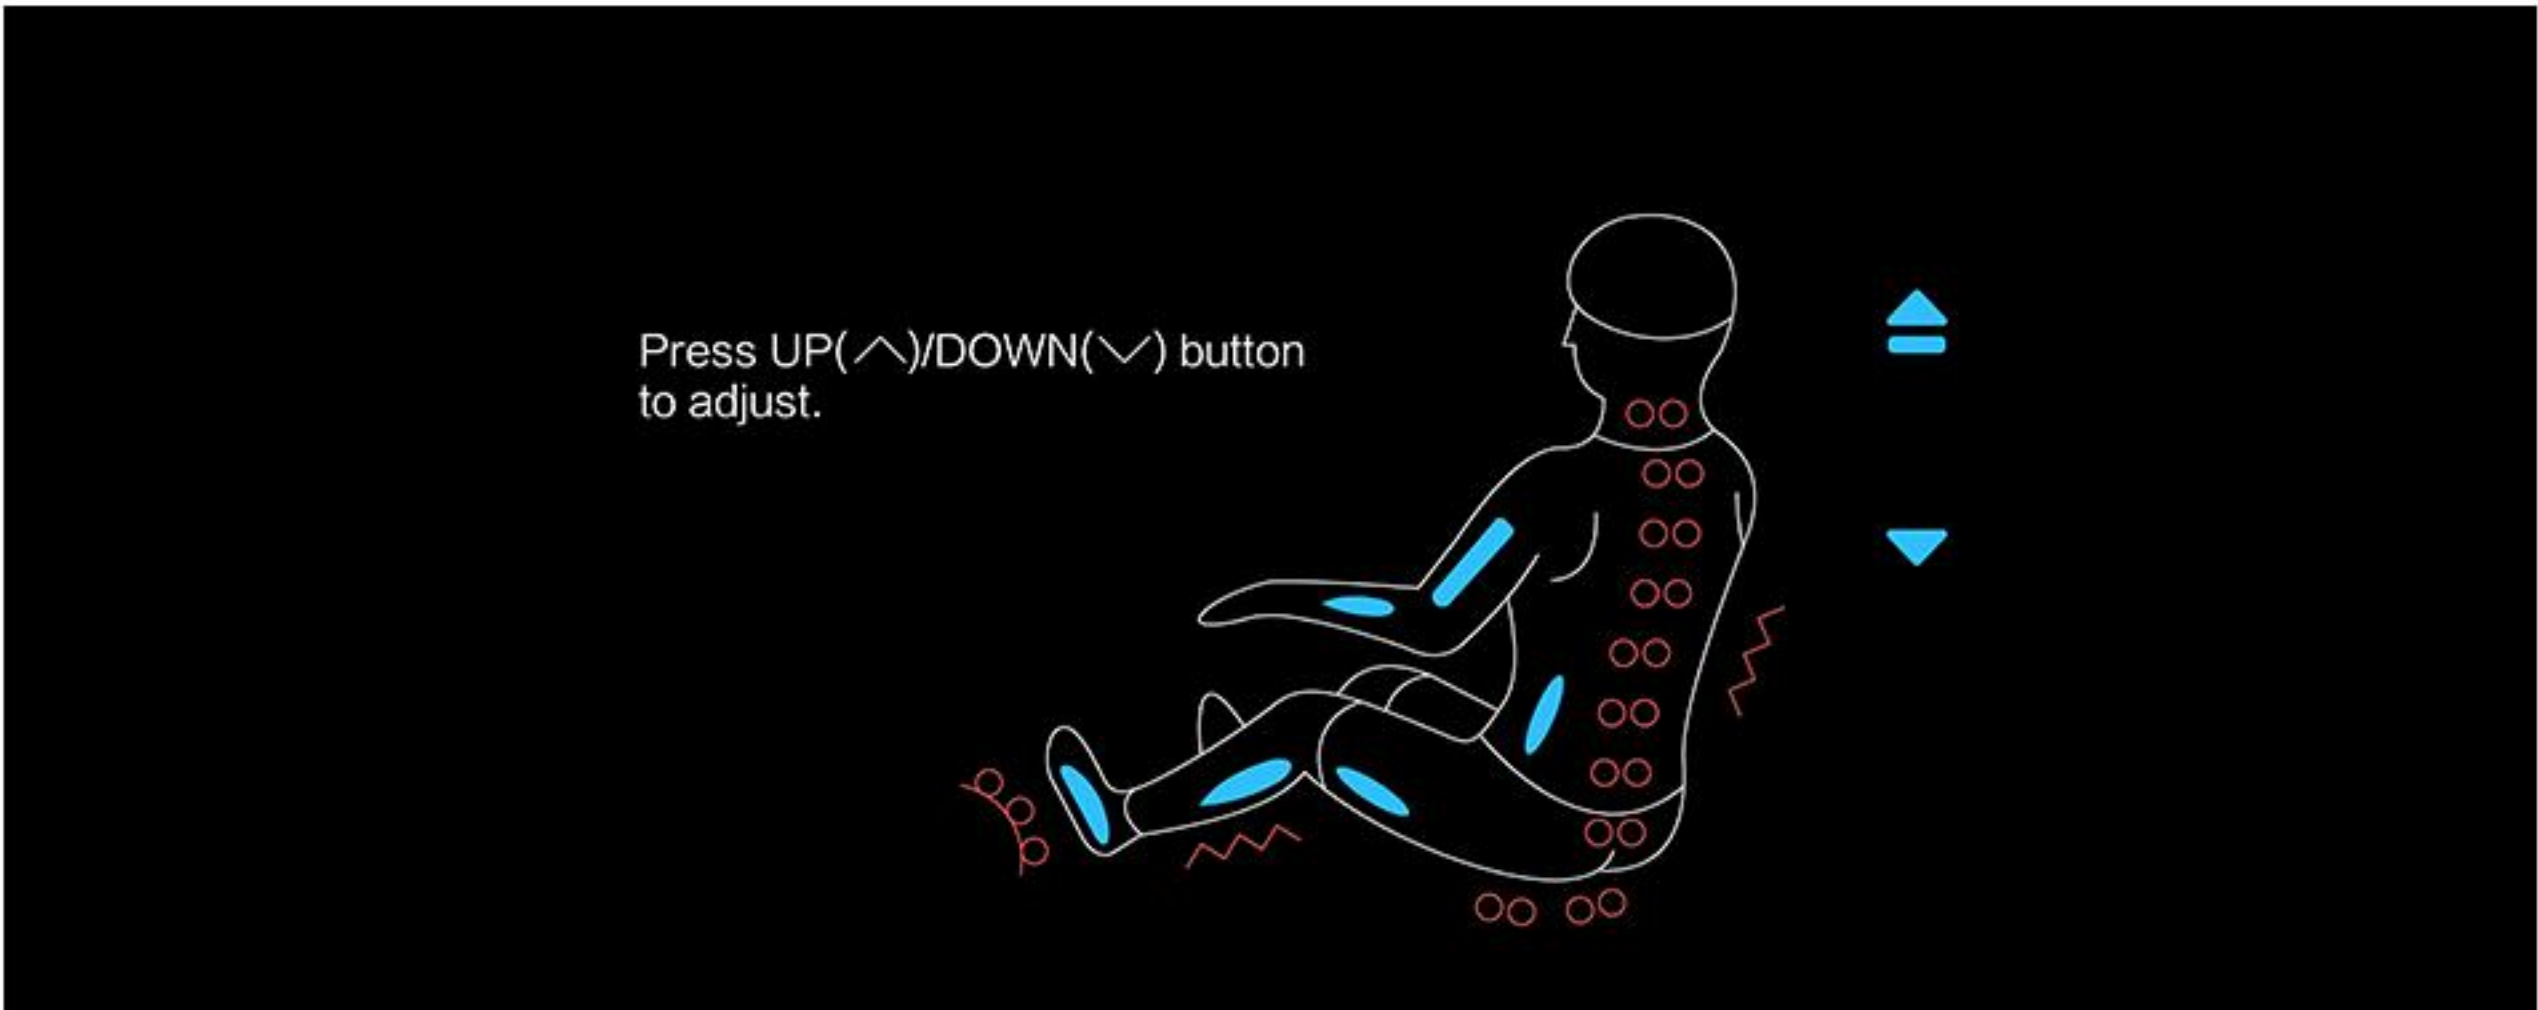
1.Introduction of buttons



	Power Button		Descriptions
	➤ Long press to switch on the massage chair. ➤ Press again to switch off the massage chair.		➤ Press the arrow keys to select the appropriate function. ➤ At the end of a body scan or after selecting Spot in manual mode, long press the up and down keys to adjust the roller position.

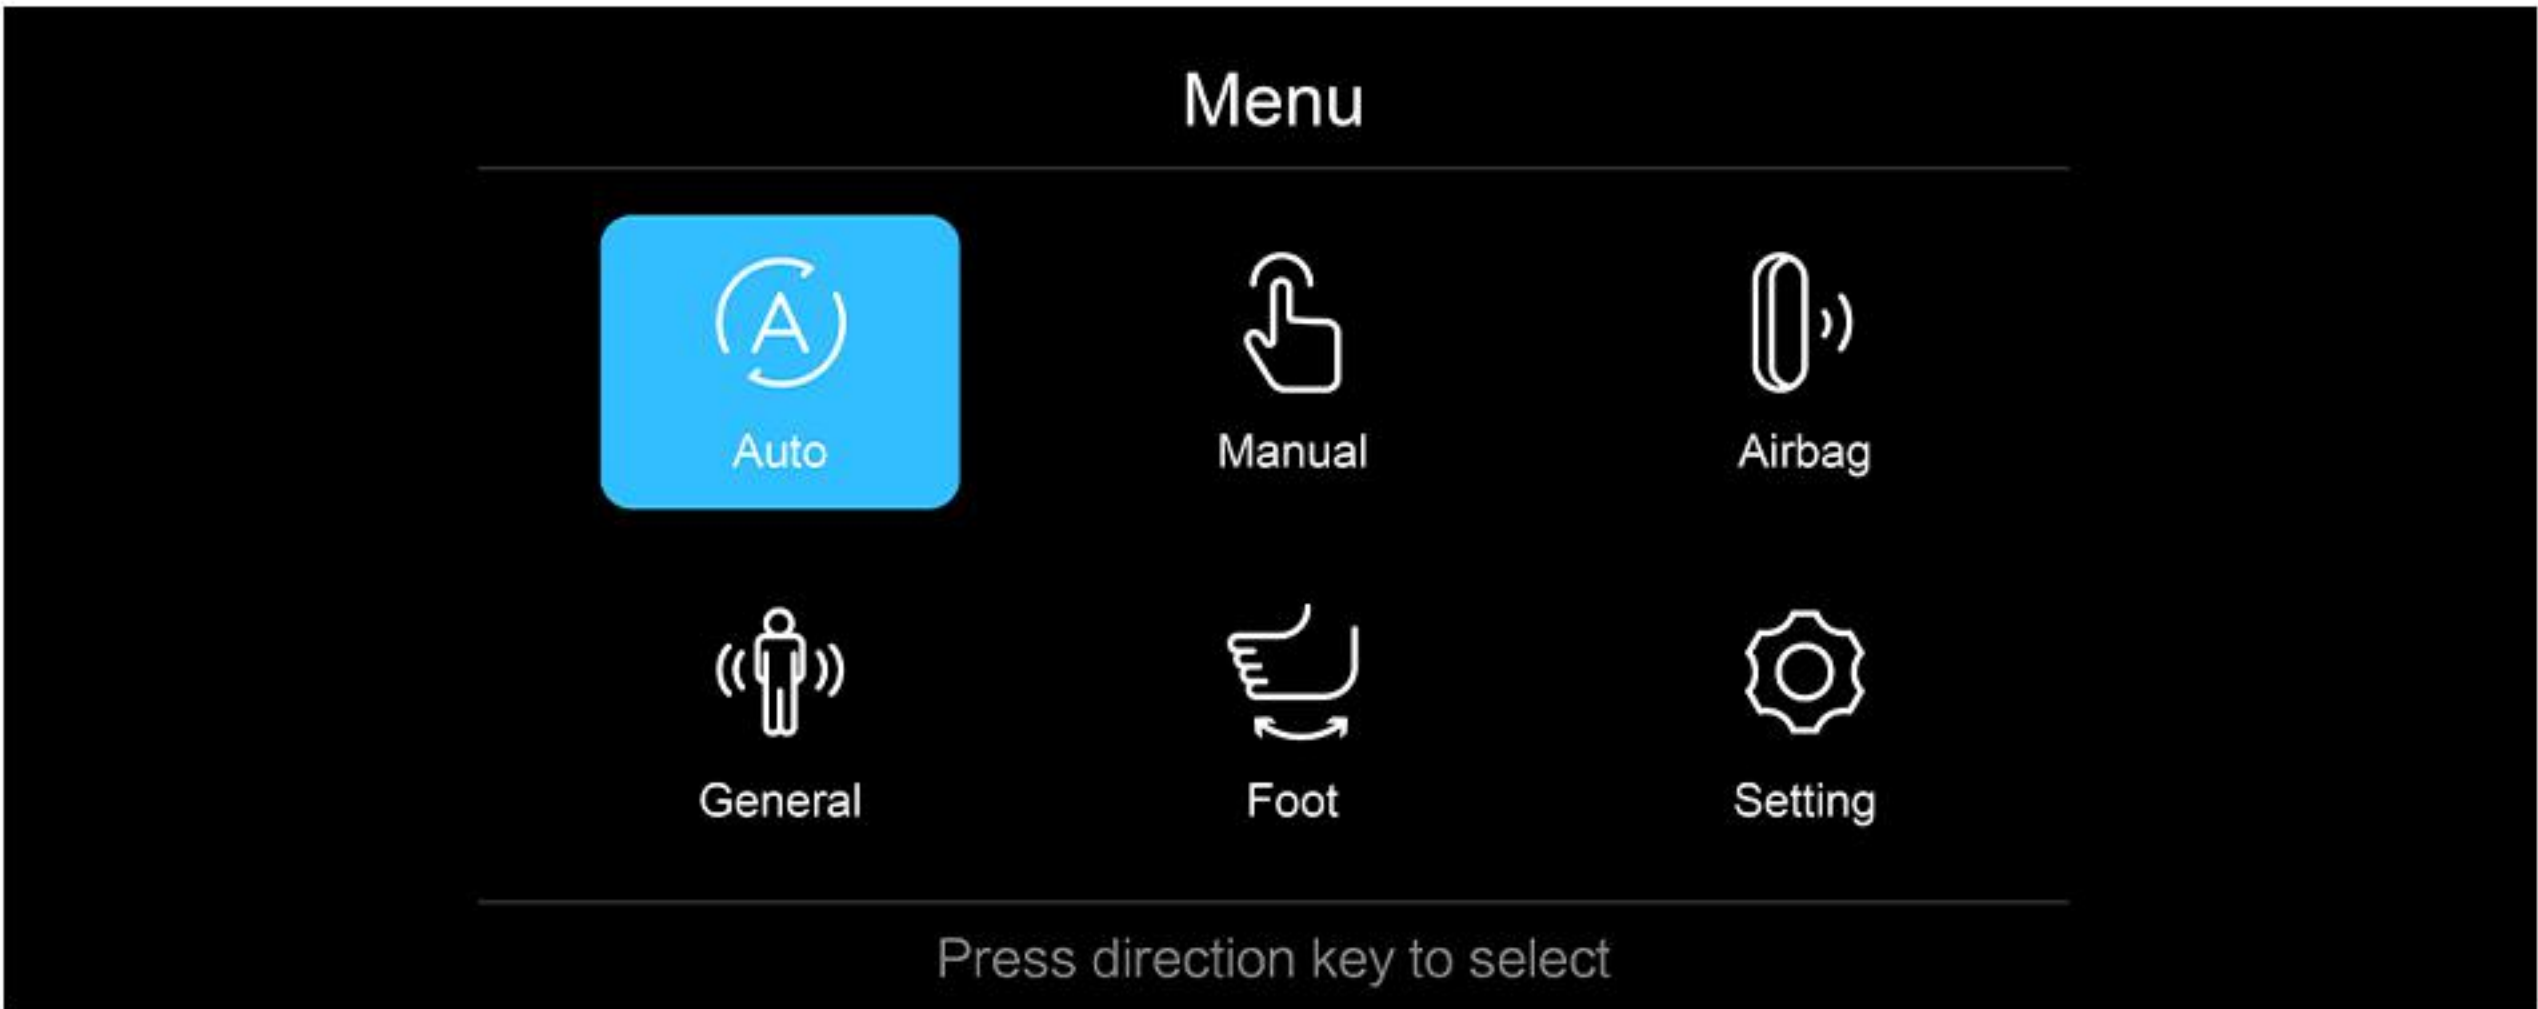
	Menu ➤ Press to enter the function interface.		Manual ➤ Press to switch 6 massage techniques when in manual mode.
	OK Button ➤ Press to confirm the function.		Time ➤ Press to set massage time 10-30 minutes.
	Return ➤ Press to return to the previous interface.		Stop ➤ Press to pause the massage. Press again to resume massage.
	Auto ➤ Press to switch 12 auto programmes when in auto mode.		4D Intensity ➤ Press to adjust roller intensity 1-6 levels when in manual mode.
	Airbag ➤ Press to turn off the airbags or switch the airbag parts.		Heat ➤ Press to turn heat on/off.
	Zero-G ➤ Press to turn off or adjust the zero-gravity 1-3 levels.		Foot Roller ➤ Press to turn off or adjust foot roller strength 1-3 levels.
	Back Up / Back Down ➤ Long press to adjust the angle of the backrest.		Leg Up / Leg Down ➤ Long press to adjust the angle of the legrest.
	Extend Up / Extend Down ➤ Long press to adjust the angle of the backrest.		

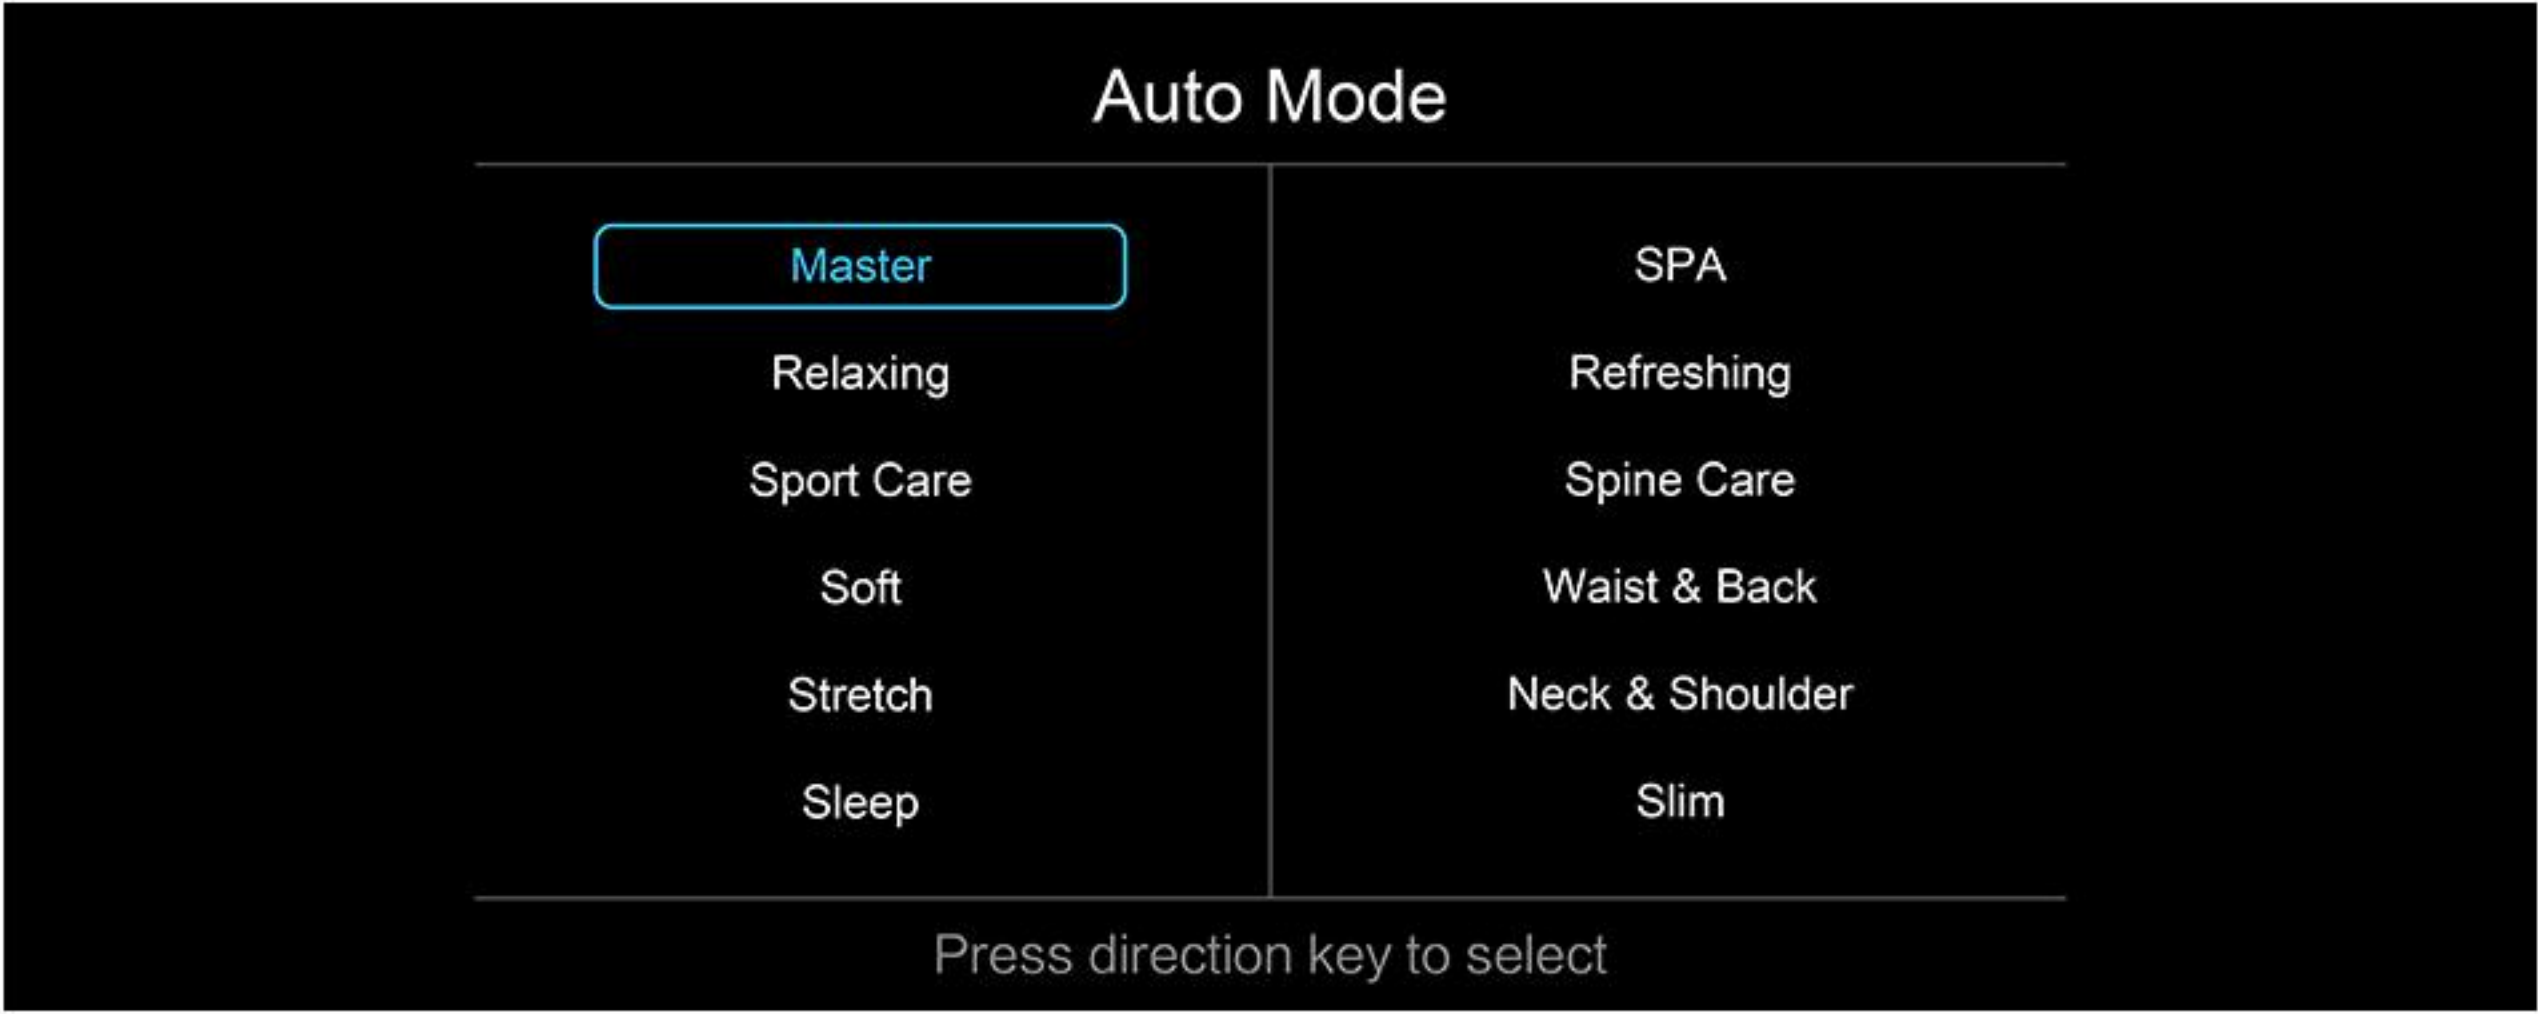
2.Introduction of menu
Auto Body Shape Scanning

	➤ Press the Power button to turn the chair on, and it will start the "Body scanning" to find the position of your shoulder.
	➤ When the auto body shape scanning is done, there will be a "beep" sound to remind you to adjust the position of the back roller. Long press the "UP/DOWN" button on the remote to adjust the position and press "OK" button to start massage.

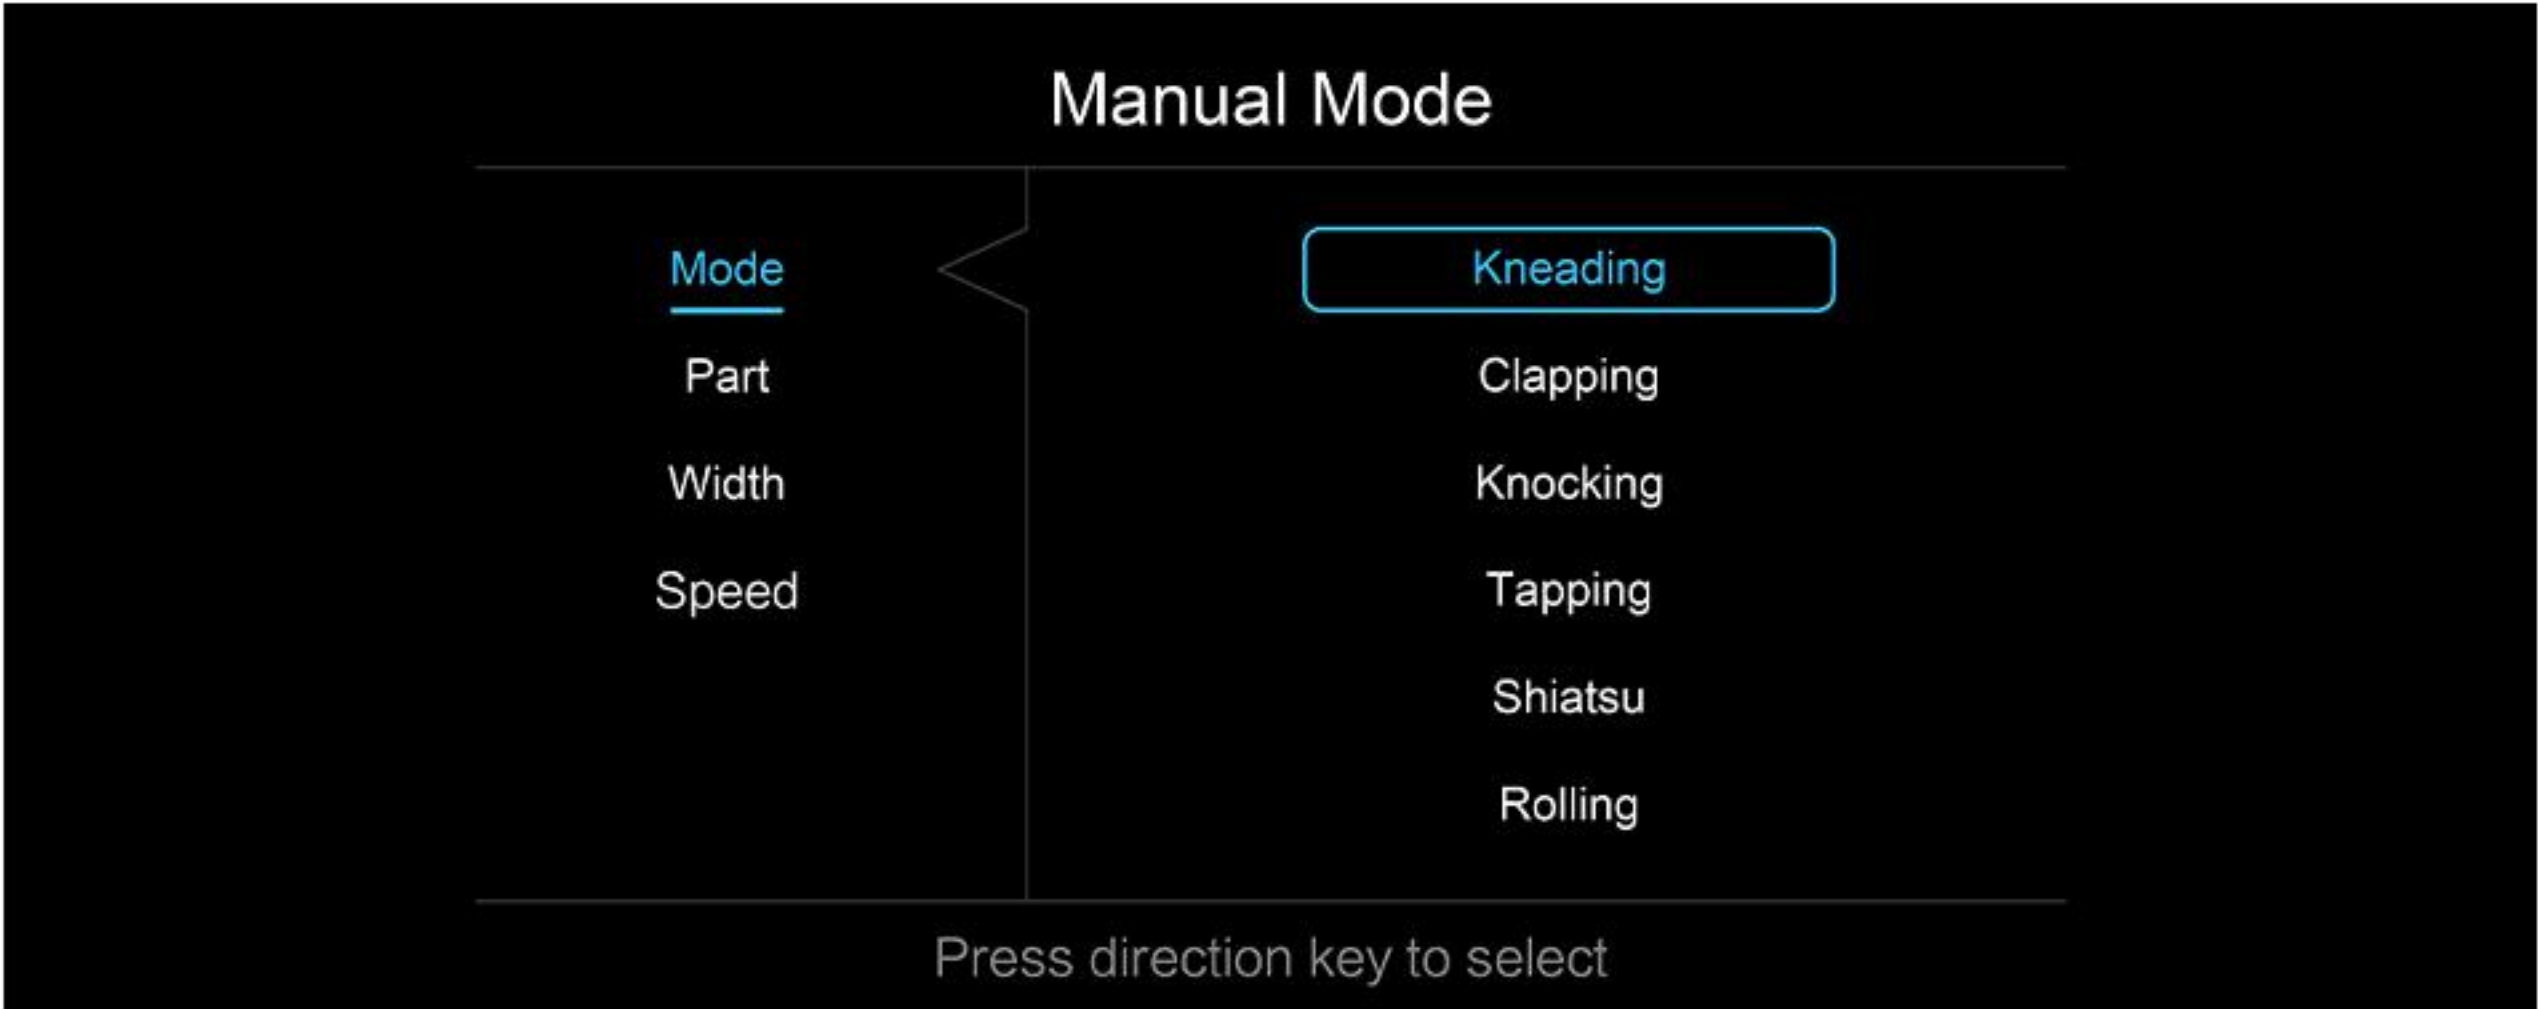
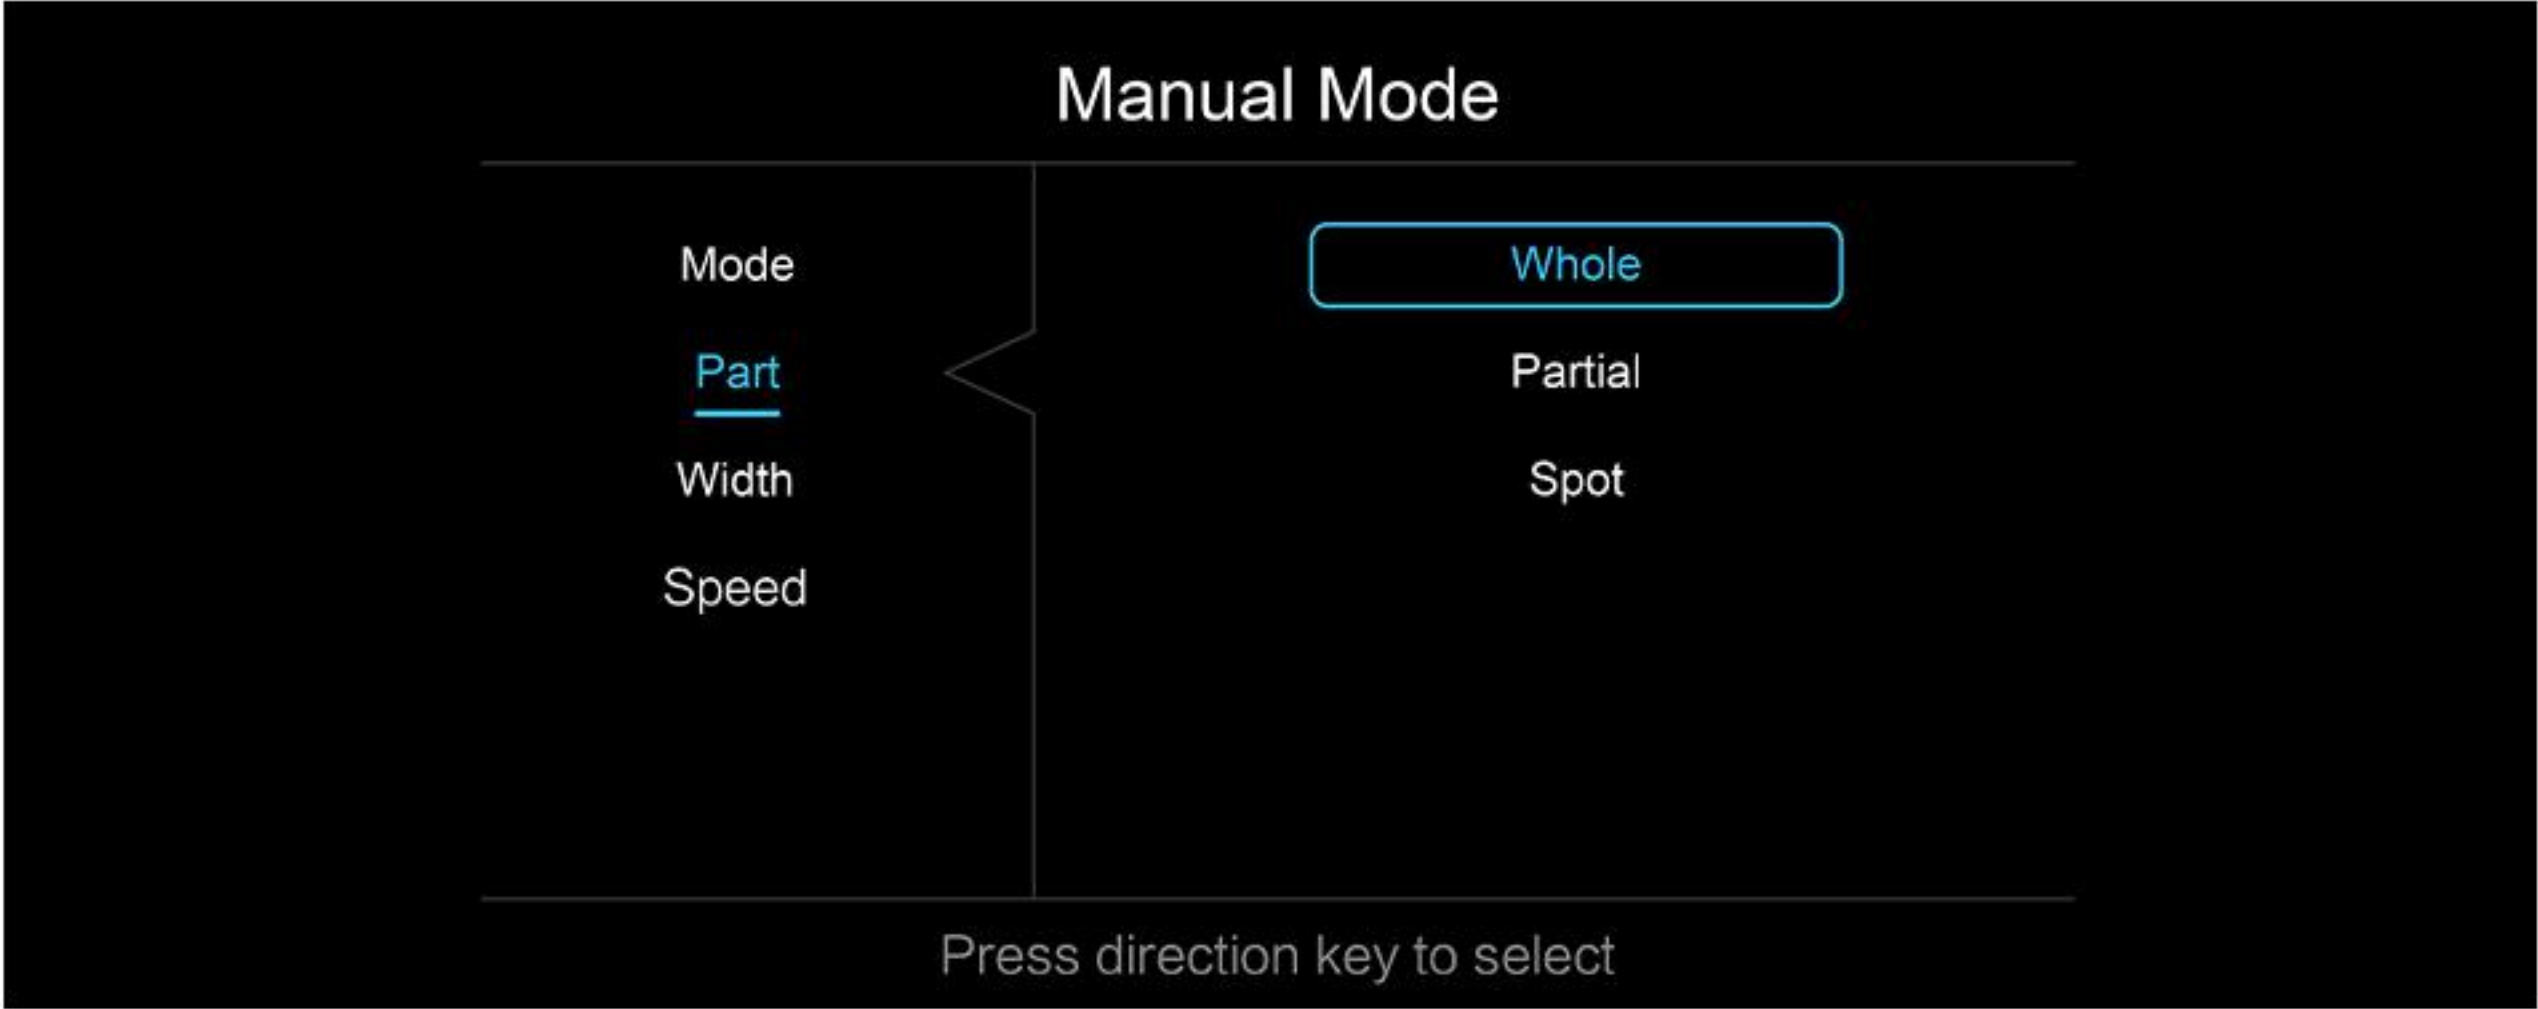
PLEASE NOTE: ➤ Please relax and rest your head on the pillow to make the detection more accurate. ➤ During auto body shape scanning, other functions are disabled. ➤ It will automatic run one of the "AUTO PRESET PROGRAM" after the body shape scanning is done. If you prefer any other massage program, please press "Menu" for further operation.	
---	--

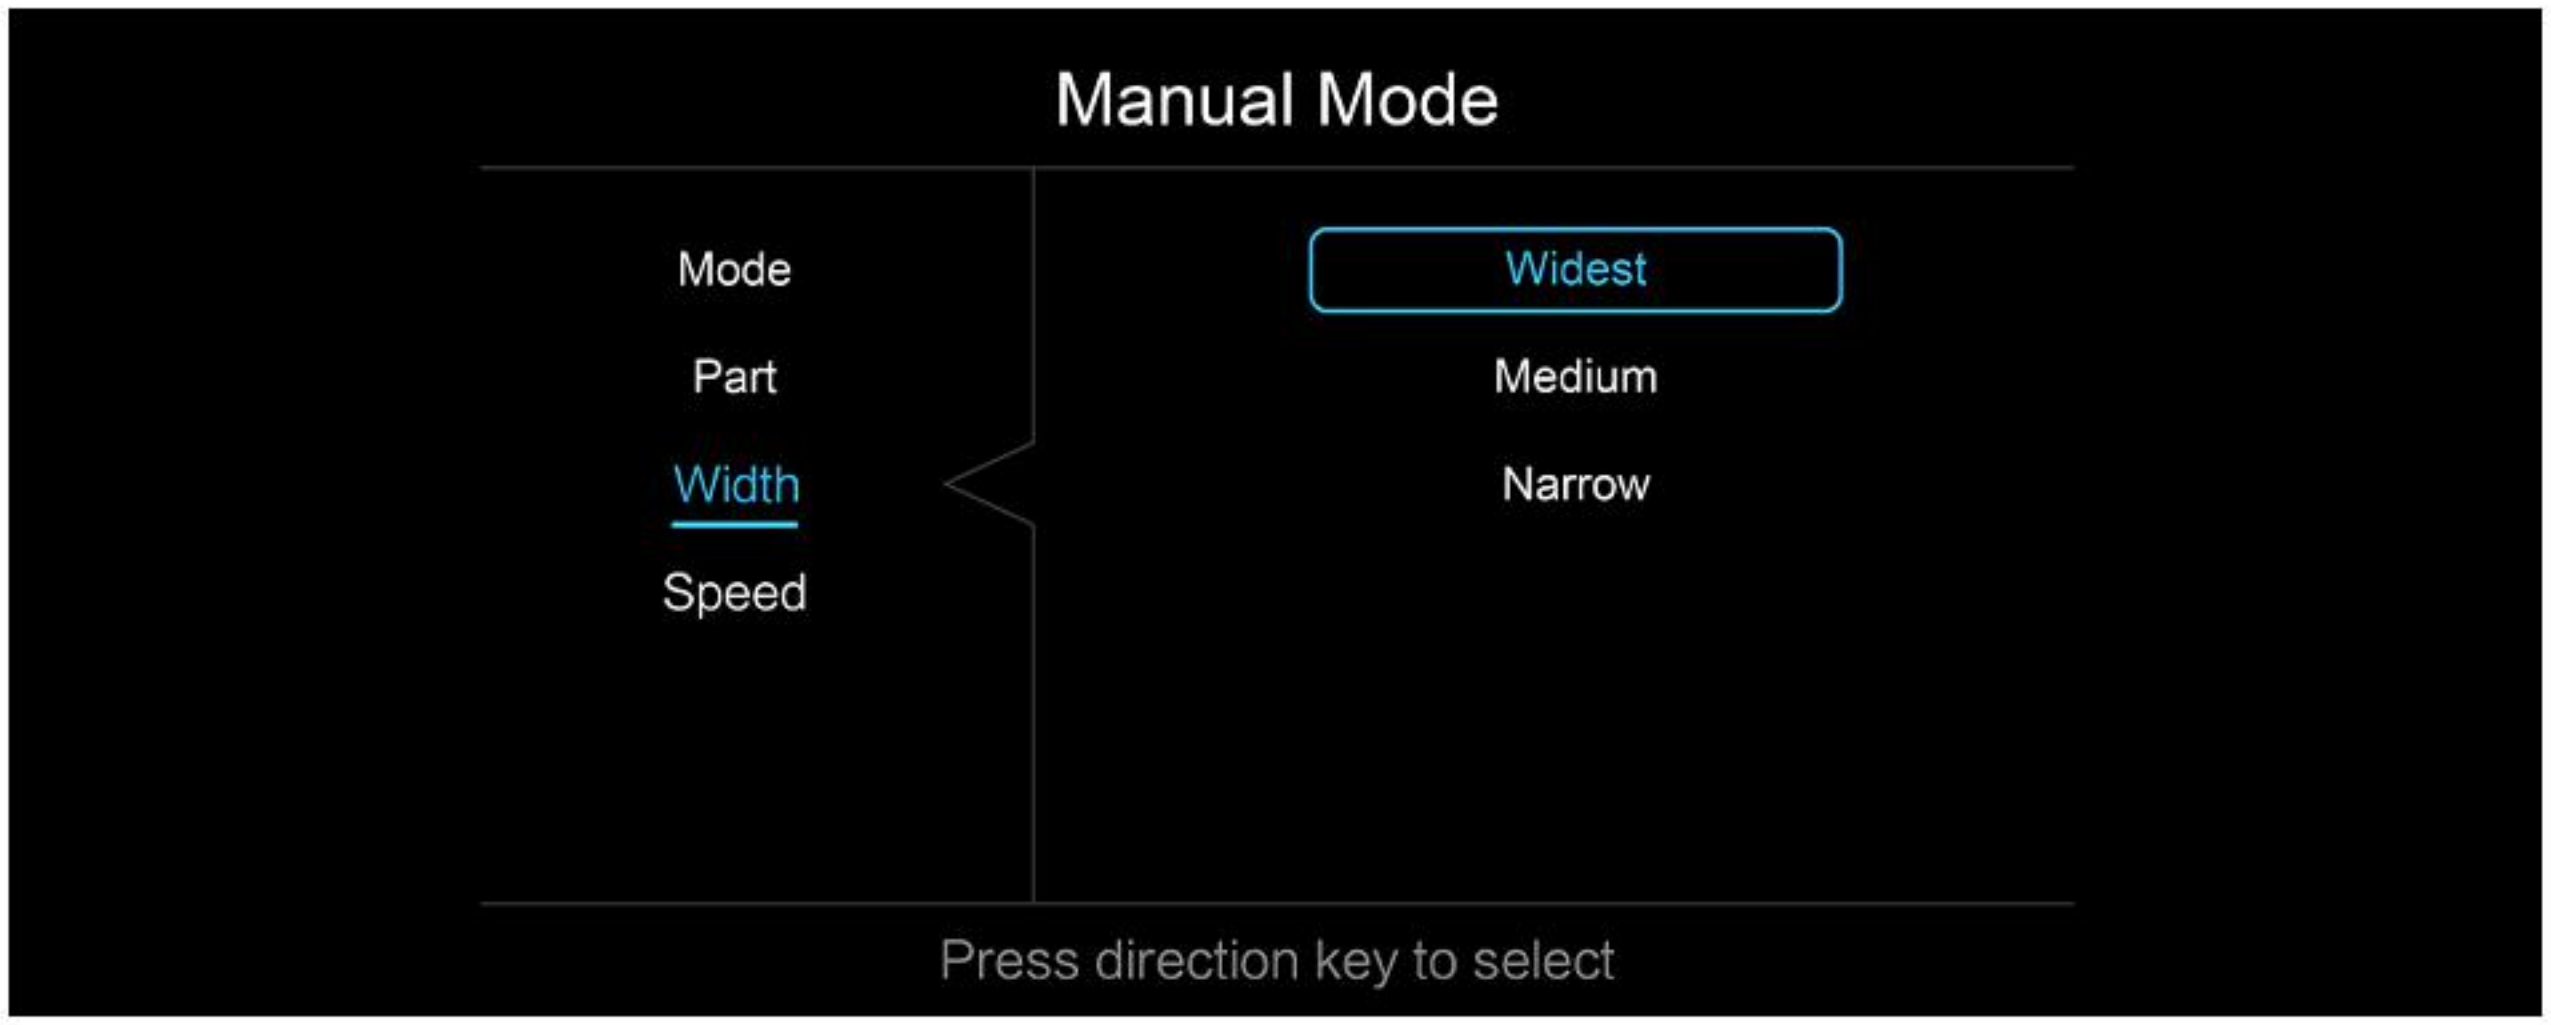
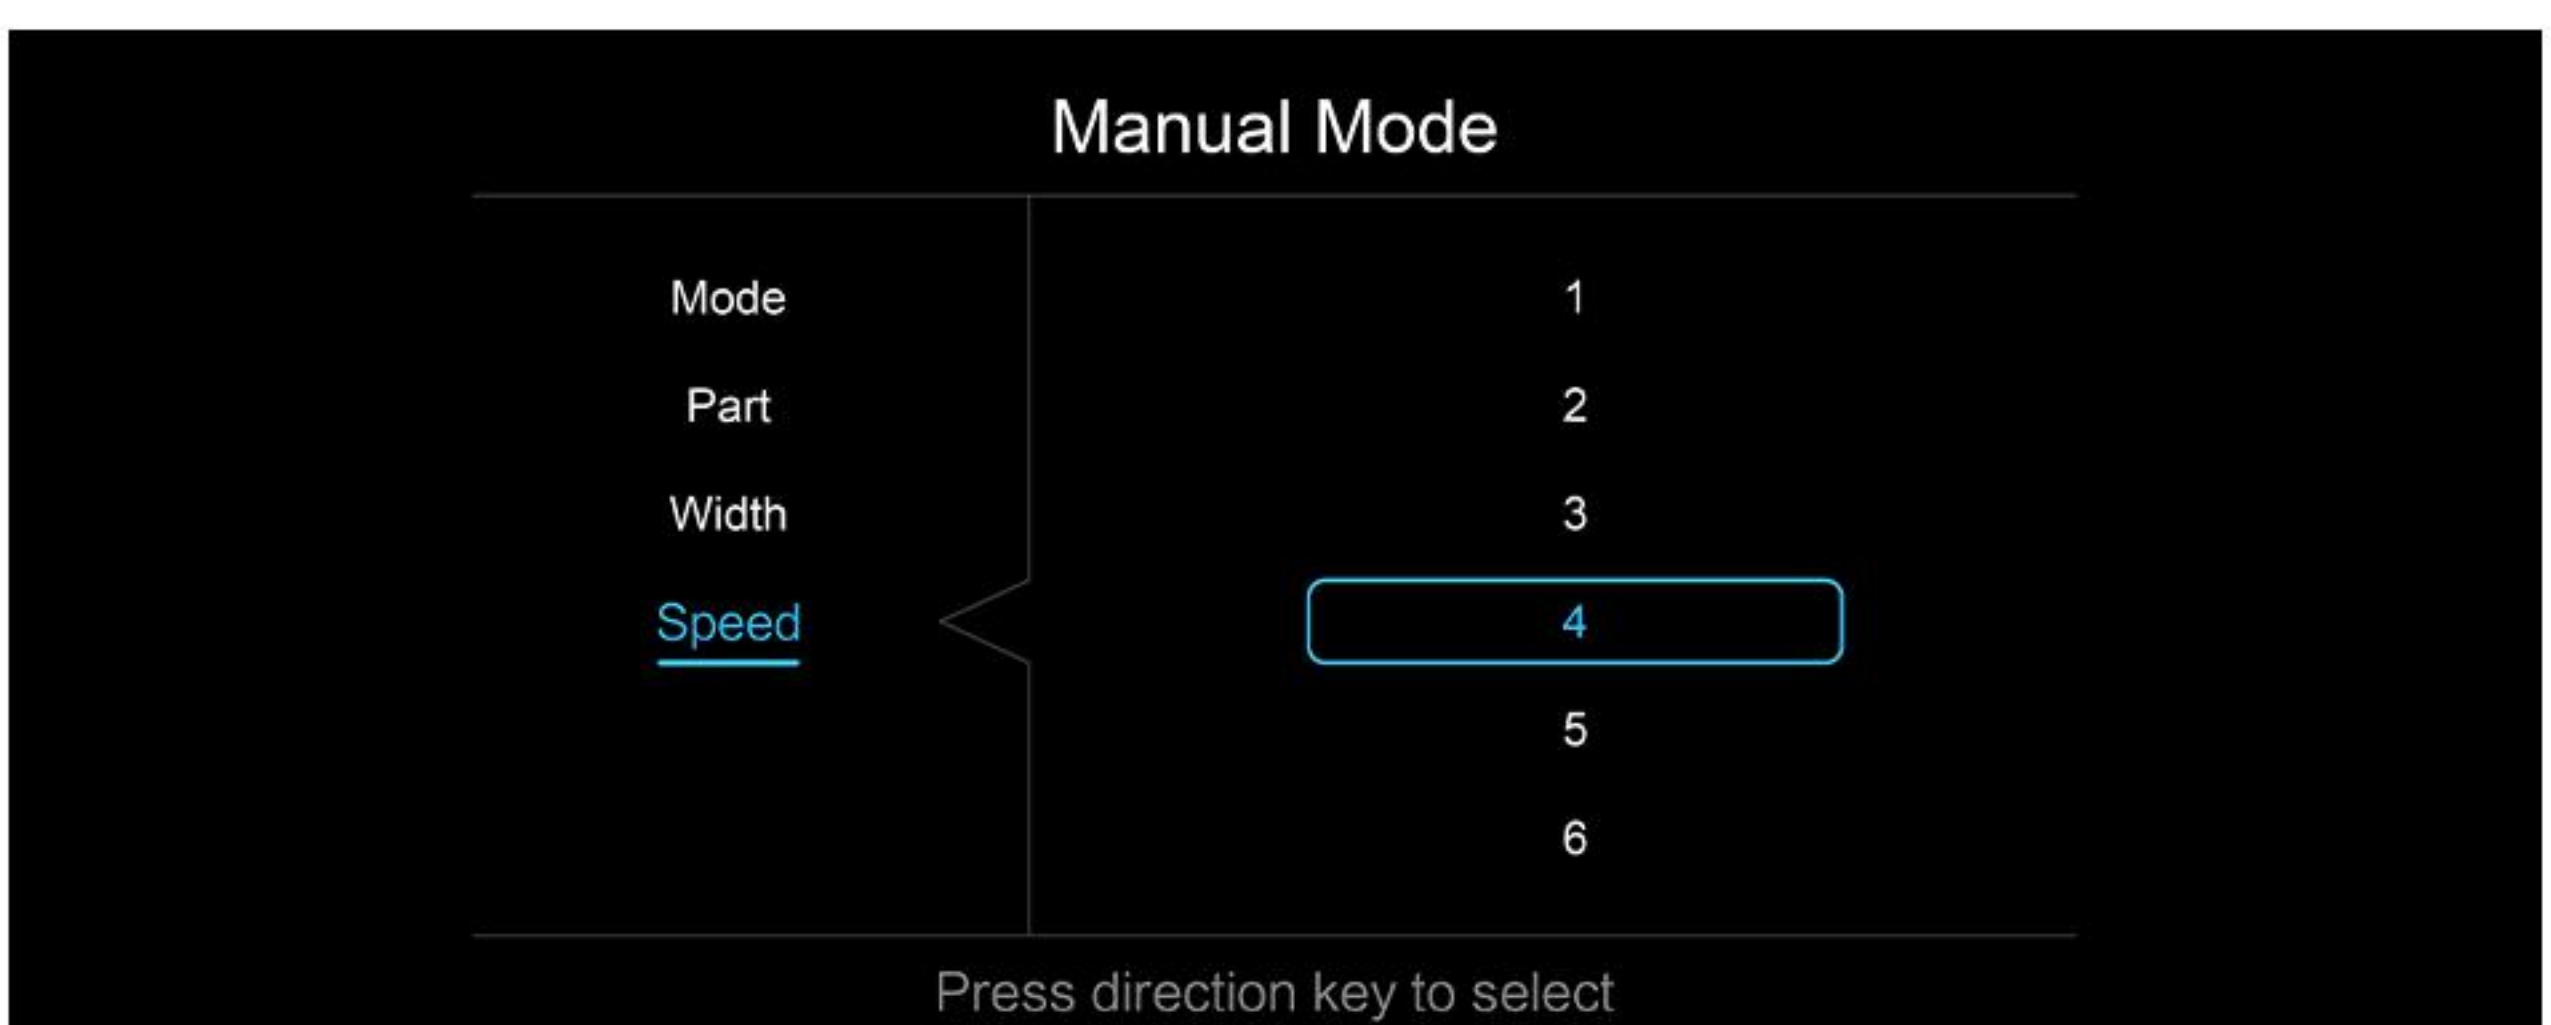
Auto Mode

	➤ Press "Menu" button and choose "AUTO MODE" to select the program you like.
--	---

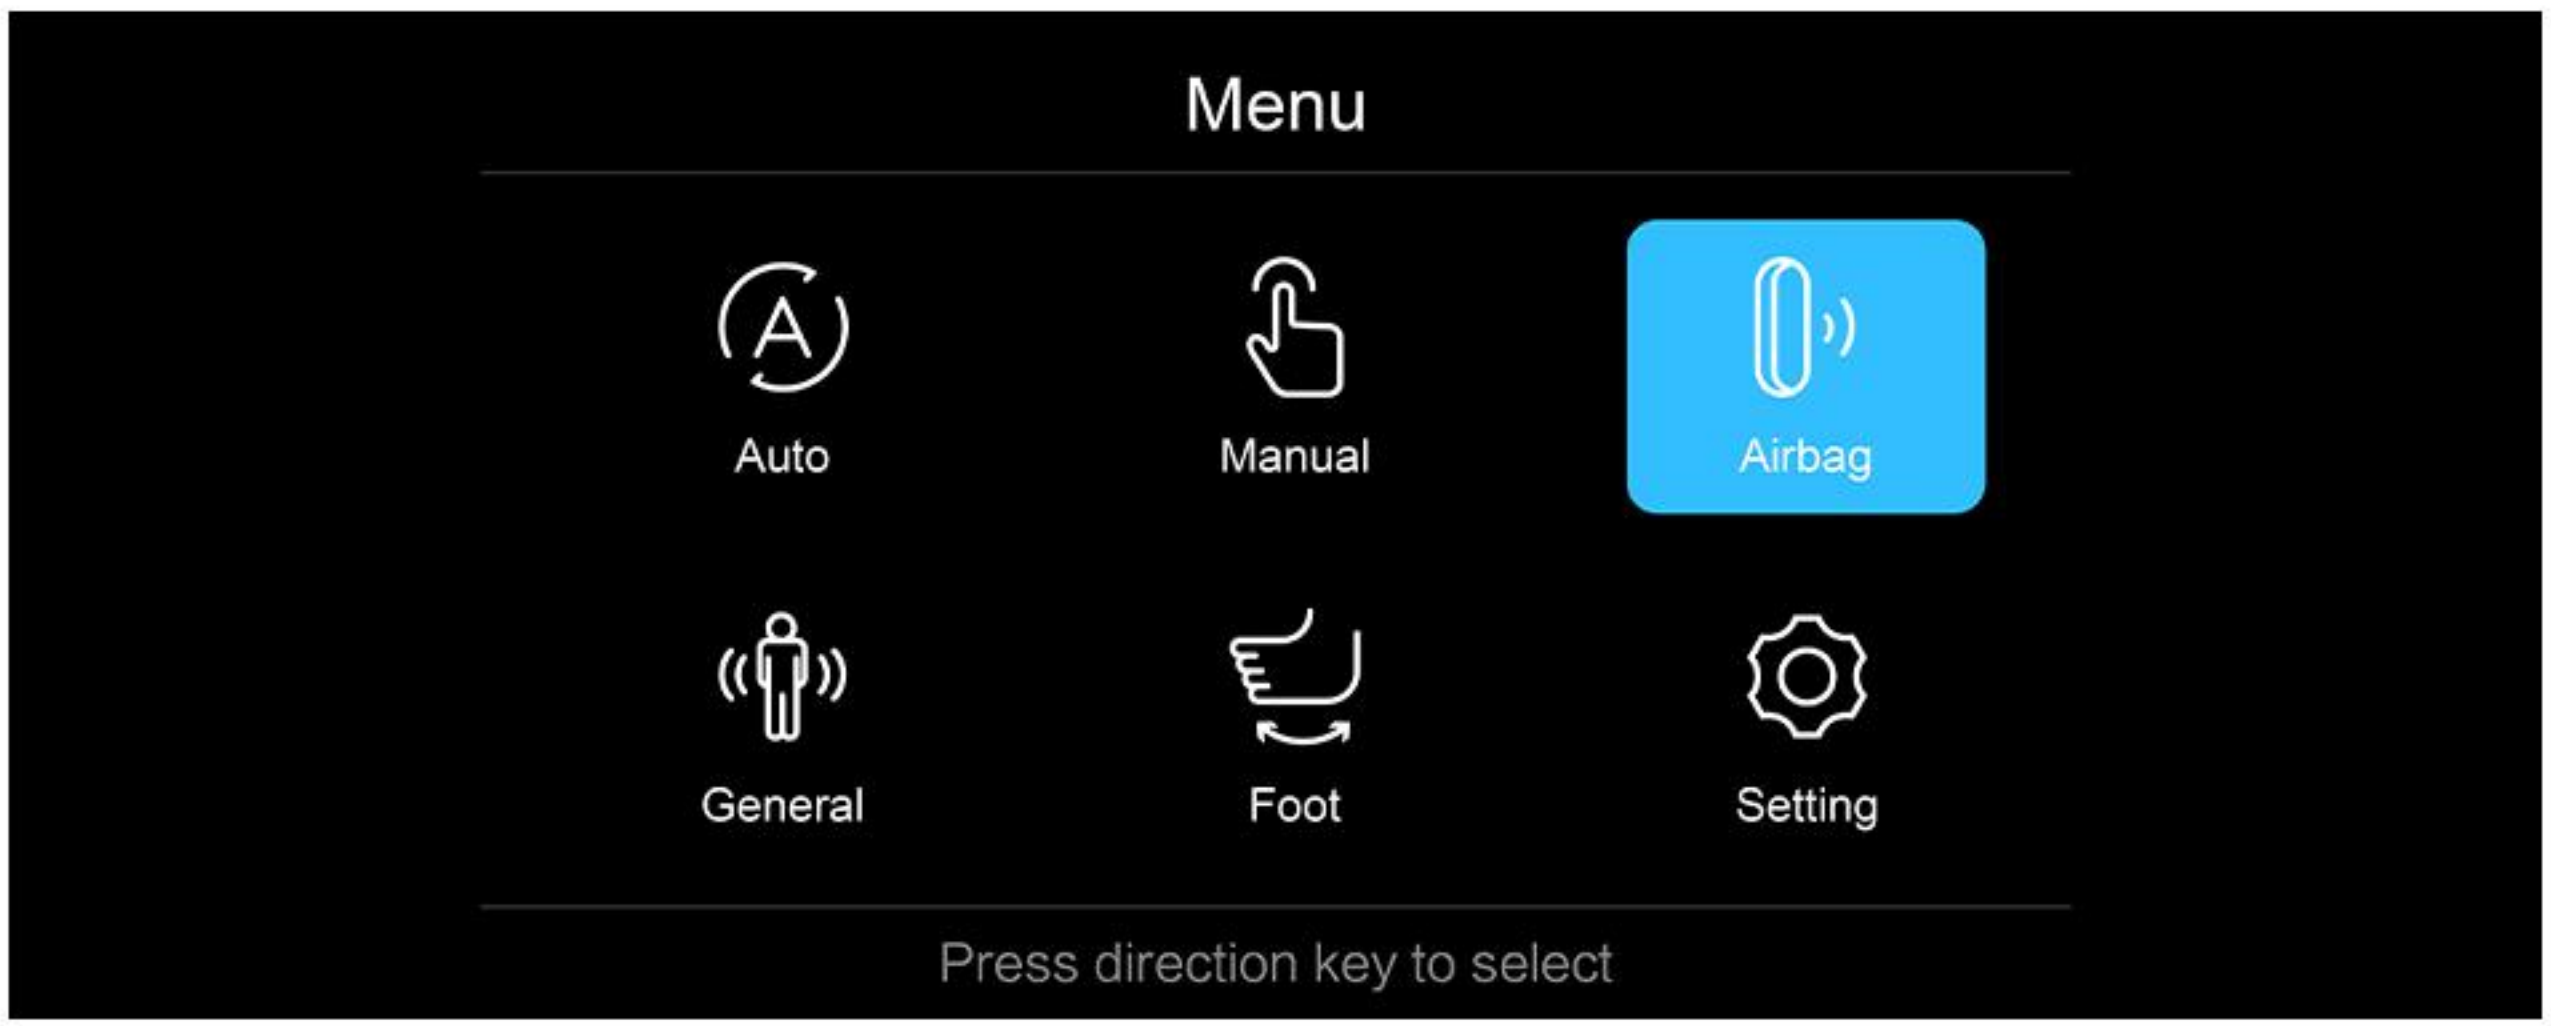
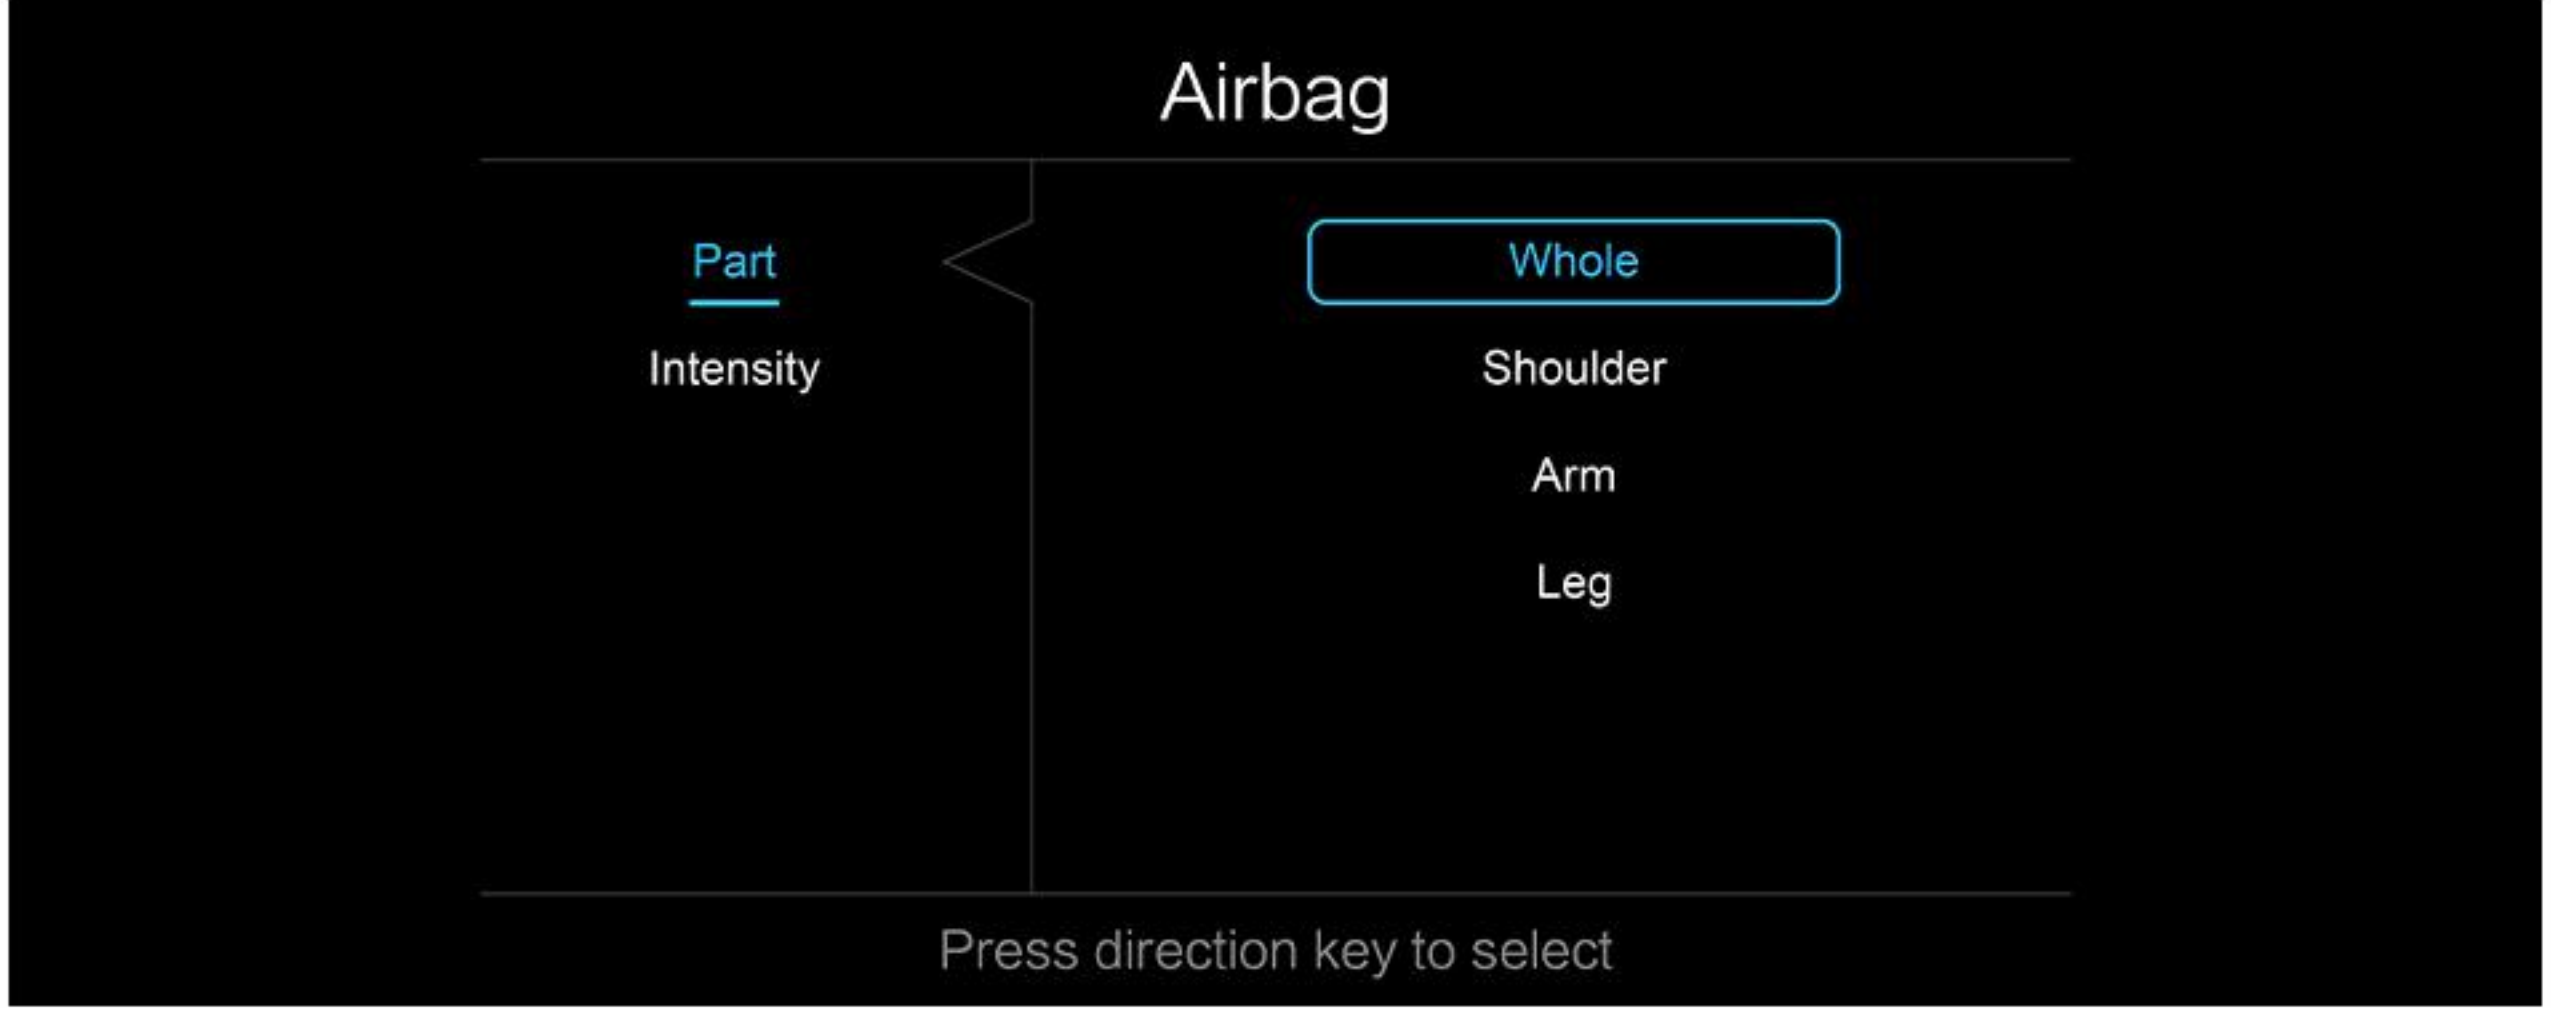
	➤ Press the "UP/DOWN" buttons on the 4-way selection button to go over all the auto programs, and press "OK" button to confirm. ➤ Note: The "STRENGTH", "WIDTH" and "POSITION" of the back roller is not allowed to adjust while running a program.
--	---

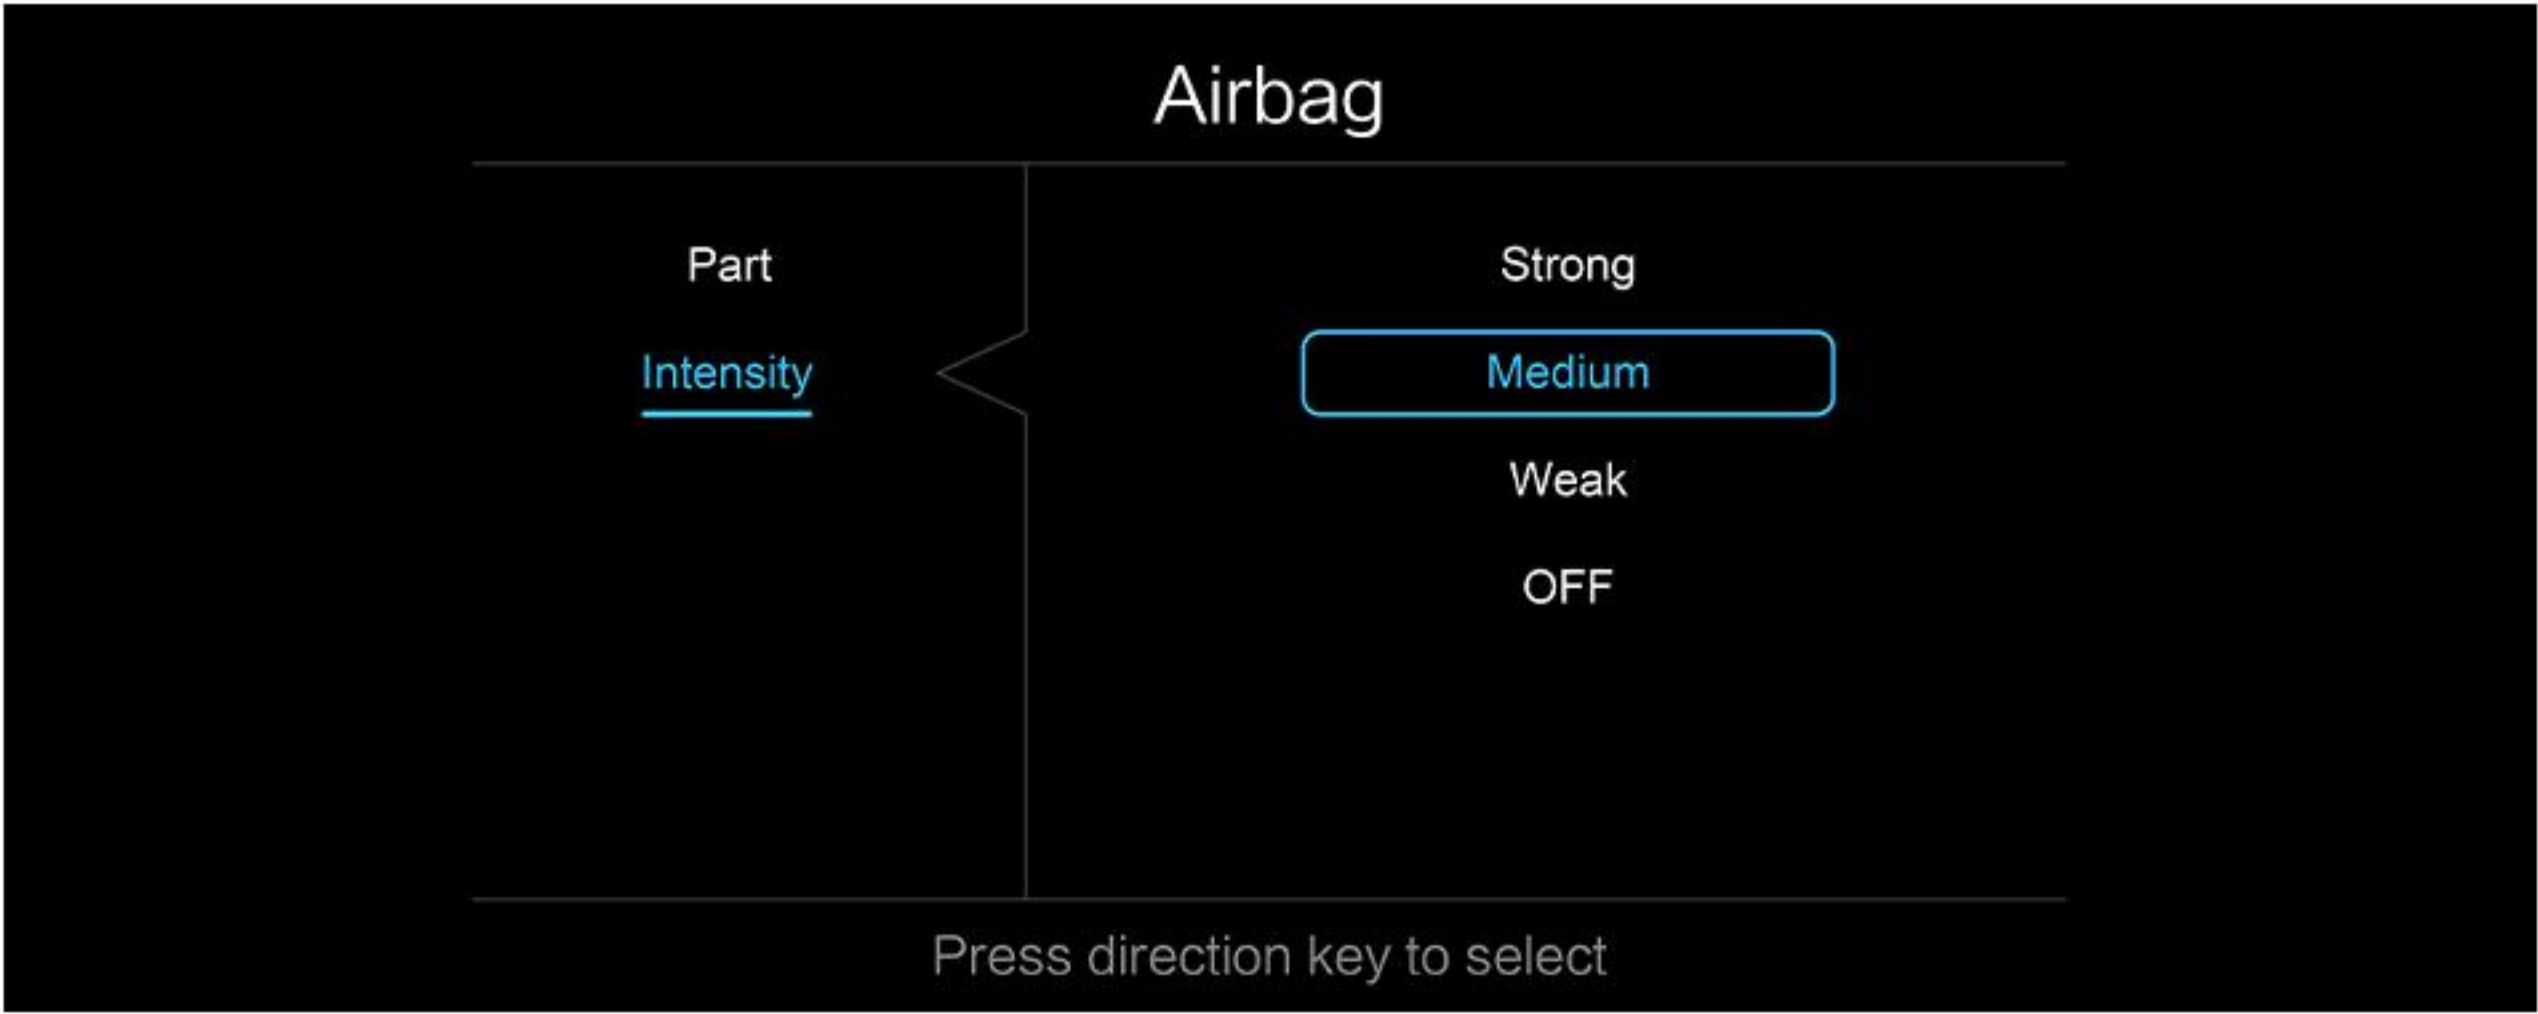
Manual Mode

	➤ Press "Menu" button and choose "MANUAL MODE" to select the program you like and adjust the "SPEED" , "WIDTH" and "POSITION" of the back roller.
	➤ You can select: 6 massage techniques for massage. ➤ Press the buttons on the 4-way selection button to operate, and press "OK" button to confirm. ➤ Note: The "WIDTH" of the back roller is not allowed to adjust while running "KNEADING" and "KNOCKING"
	➤ Press "Part" button to select the massage area. ➤ Press the buttons on the 4-way selection button to operate, and press "OK" button to confirm. ➤ Exit menu, long press the "UP/DOWN" button to adjust the position. ➤ Note: Back roller position is not allowed to adjusted while select "whole" area massage.

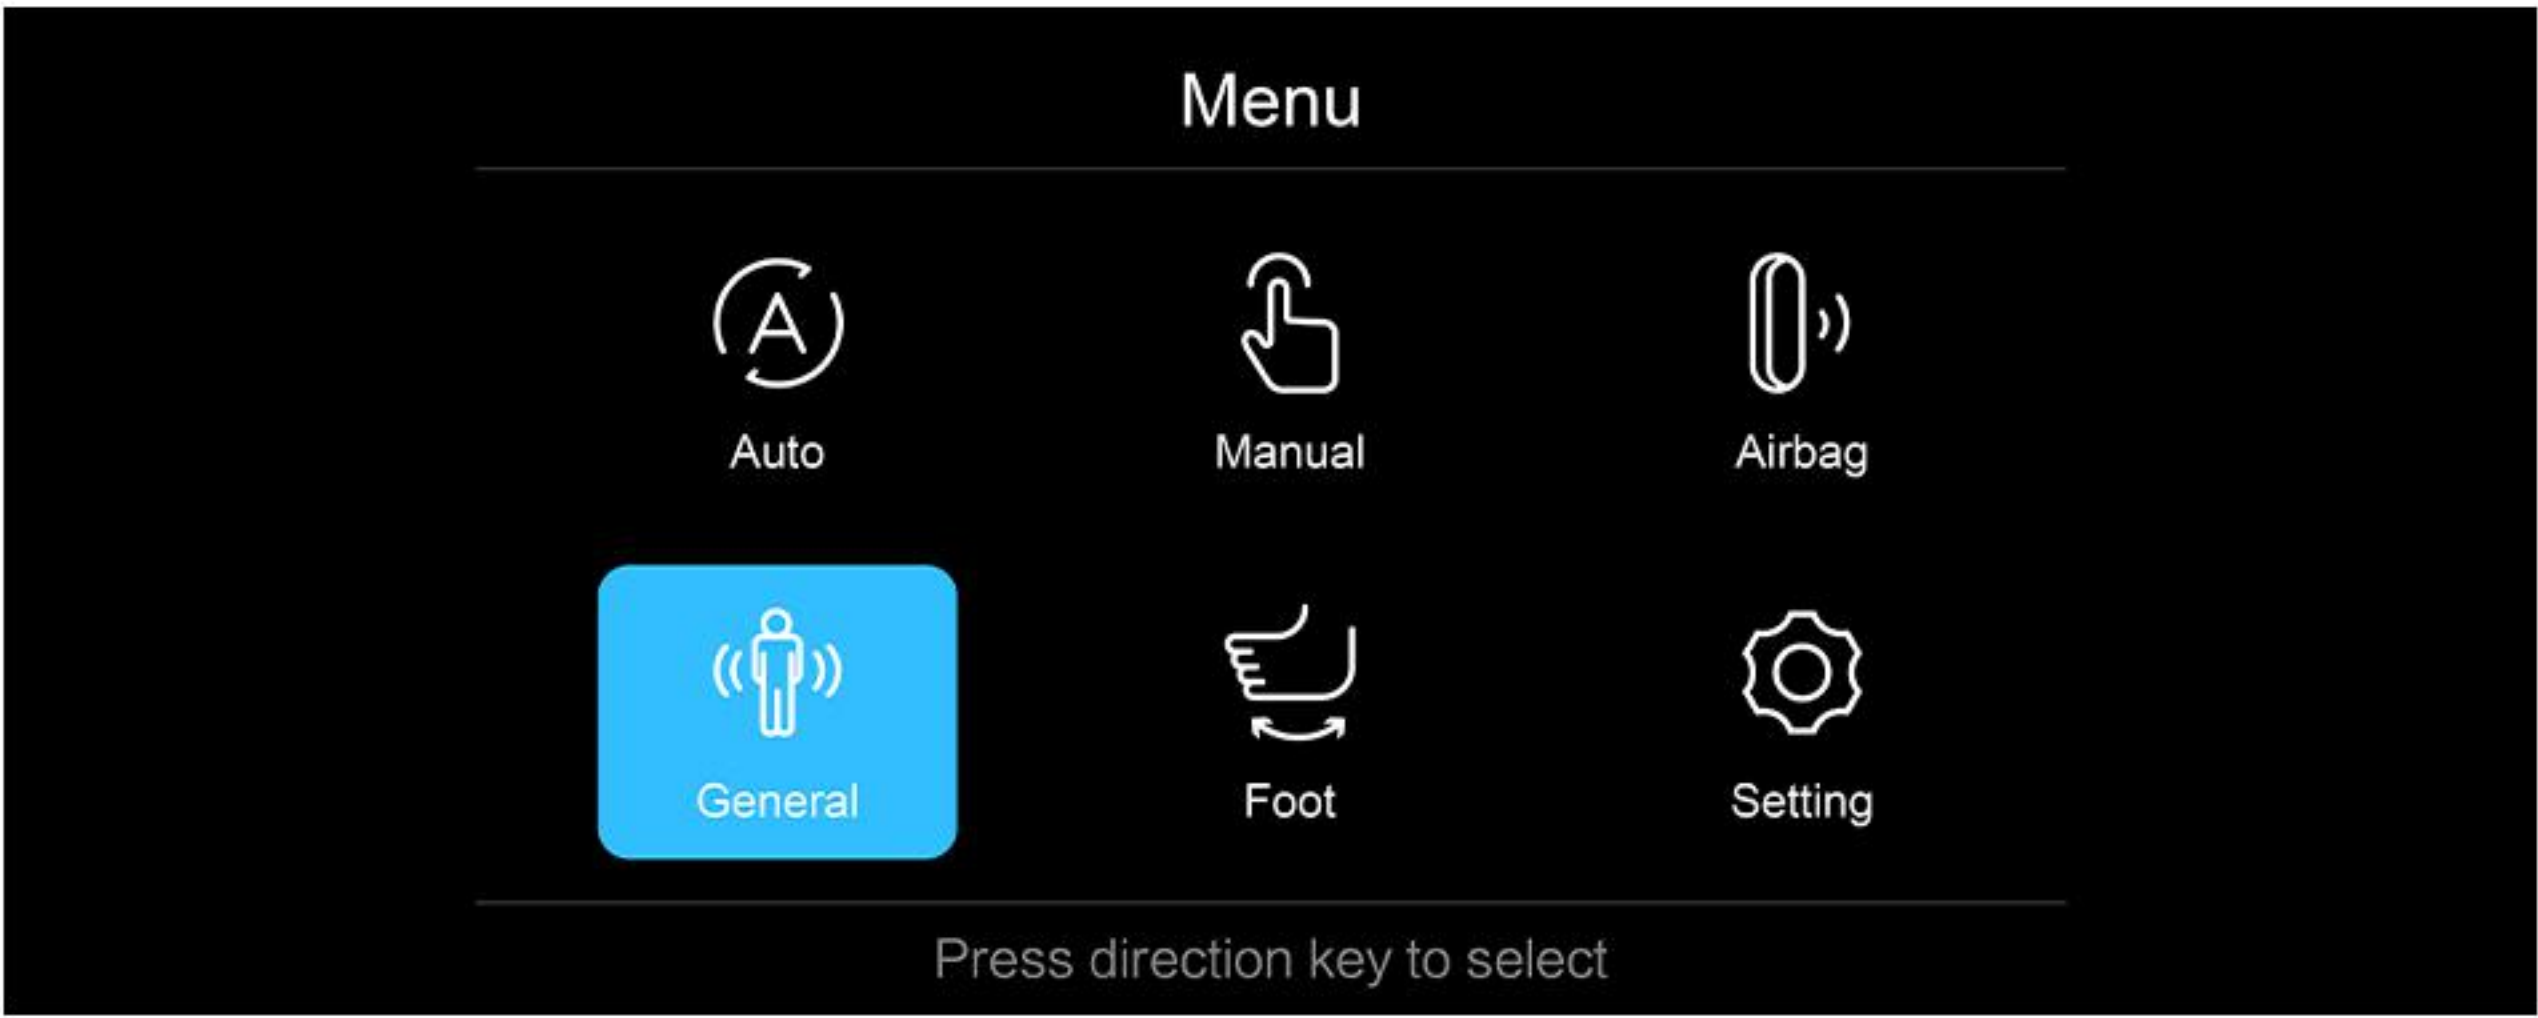
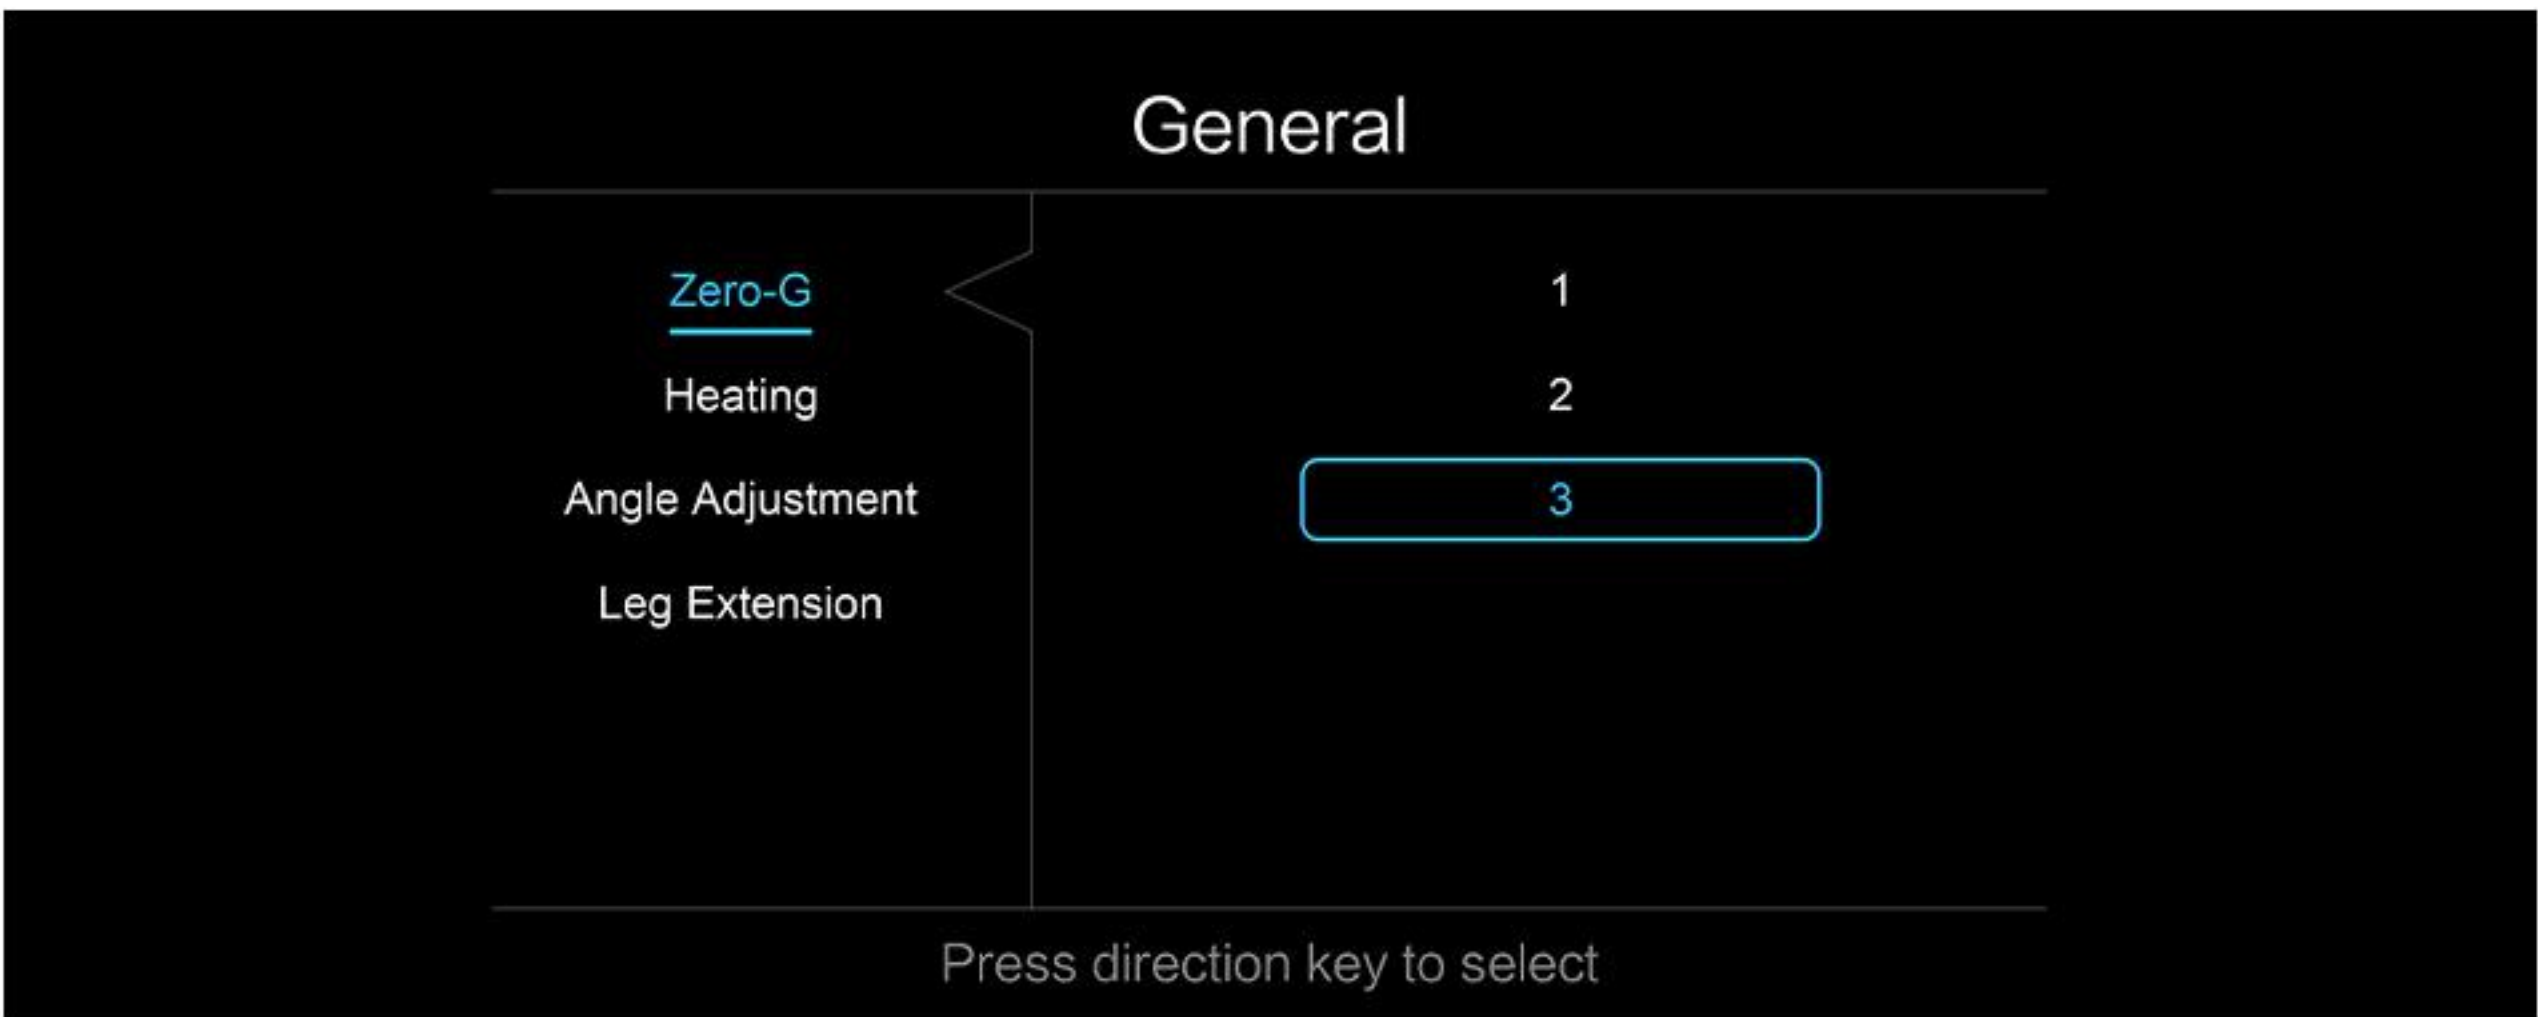
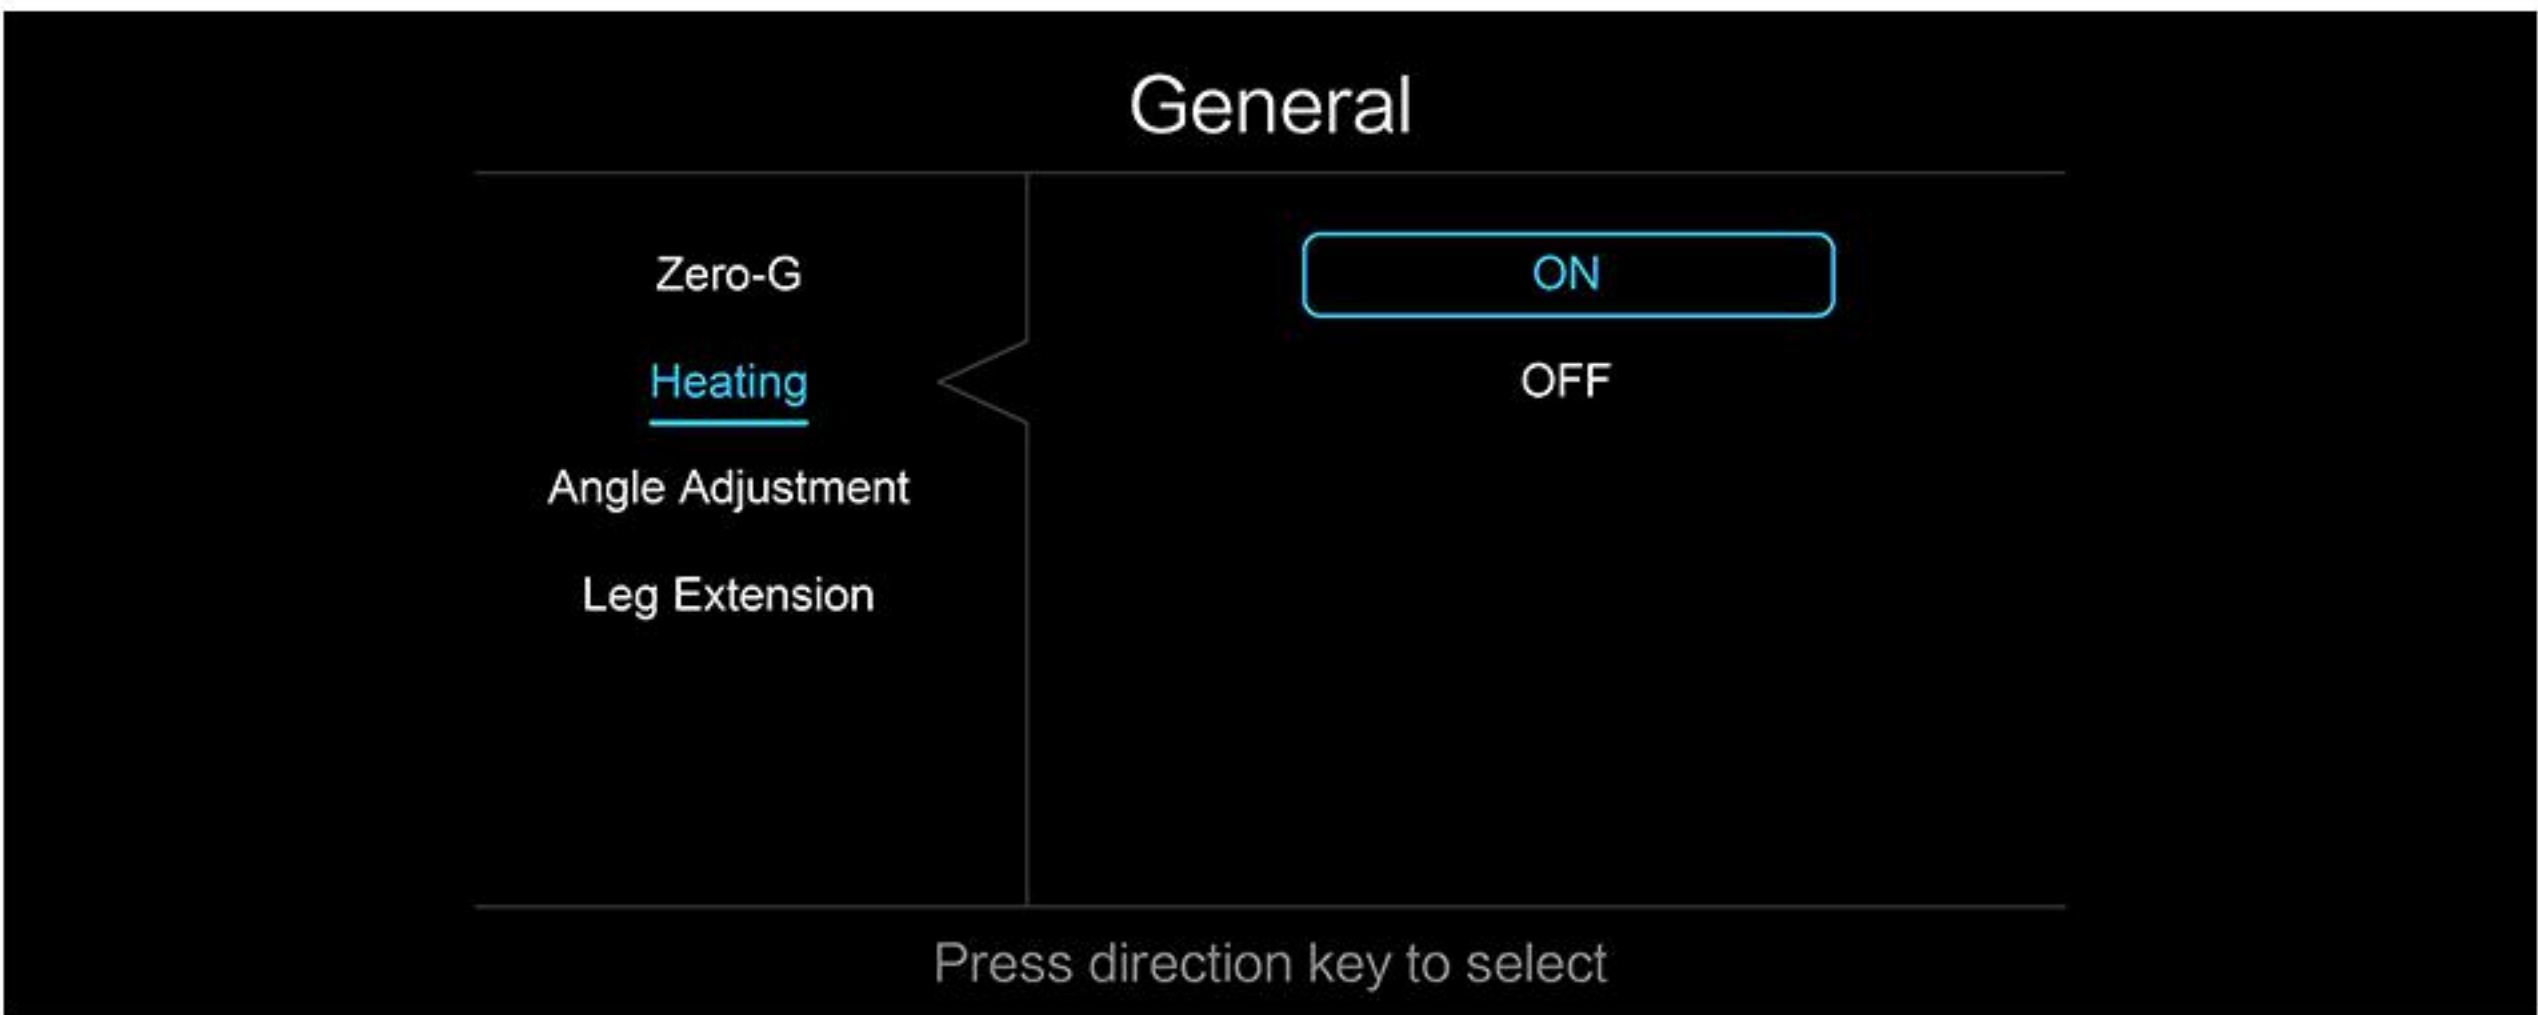
 The screenshot shows the 'Manual Mode' interface. On the left, a vertical menu lists 'Mode', 'Part', 'Width', and 'Speed', with 'Width' highlighted in blue. On the right, three options are listed: 'Widest' (highlighted with a blue box), 'Medium', and 'Narrow'. At the bottom, it says 'Press direction key to select'.	➤ You can adjust the back roller width: "Widest", "Medium", "Narrow" ➤ Press the buttons on the 4-way selection button to operate, and press "OK" button to confirm. ➤ Note: Back roller width is not allowed to adjust while having, "Kneading" or "Knocking" massage.
 The screenshot shows the 'Manual Mode' interface. On the left, a vertical menu lists 'Mode', 'Part', 'Width', and 'Speed', with 'Speed' highlighted in blue. On the right, a list of numbers from 1 to 6 is shown, with '4' highlighted by a blue box. At the bottom, it says 'Press direction key to select'.	➤ You can adjust the strength of the back roller from level 1 to level 6. ➤ Press the buttons on the 4-way selection button to operate, and press "OK" button to confirm.

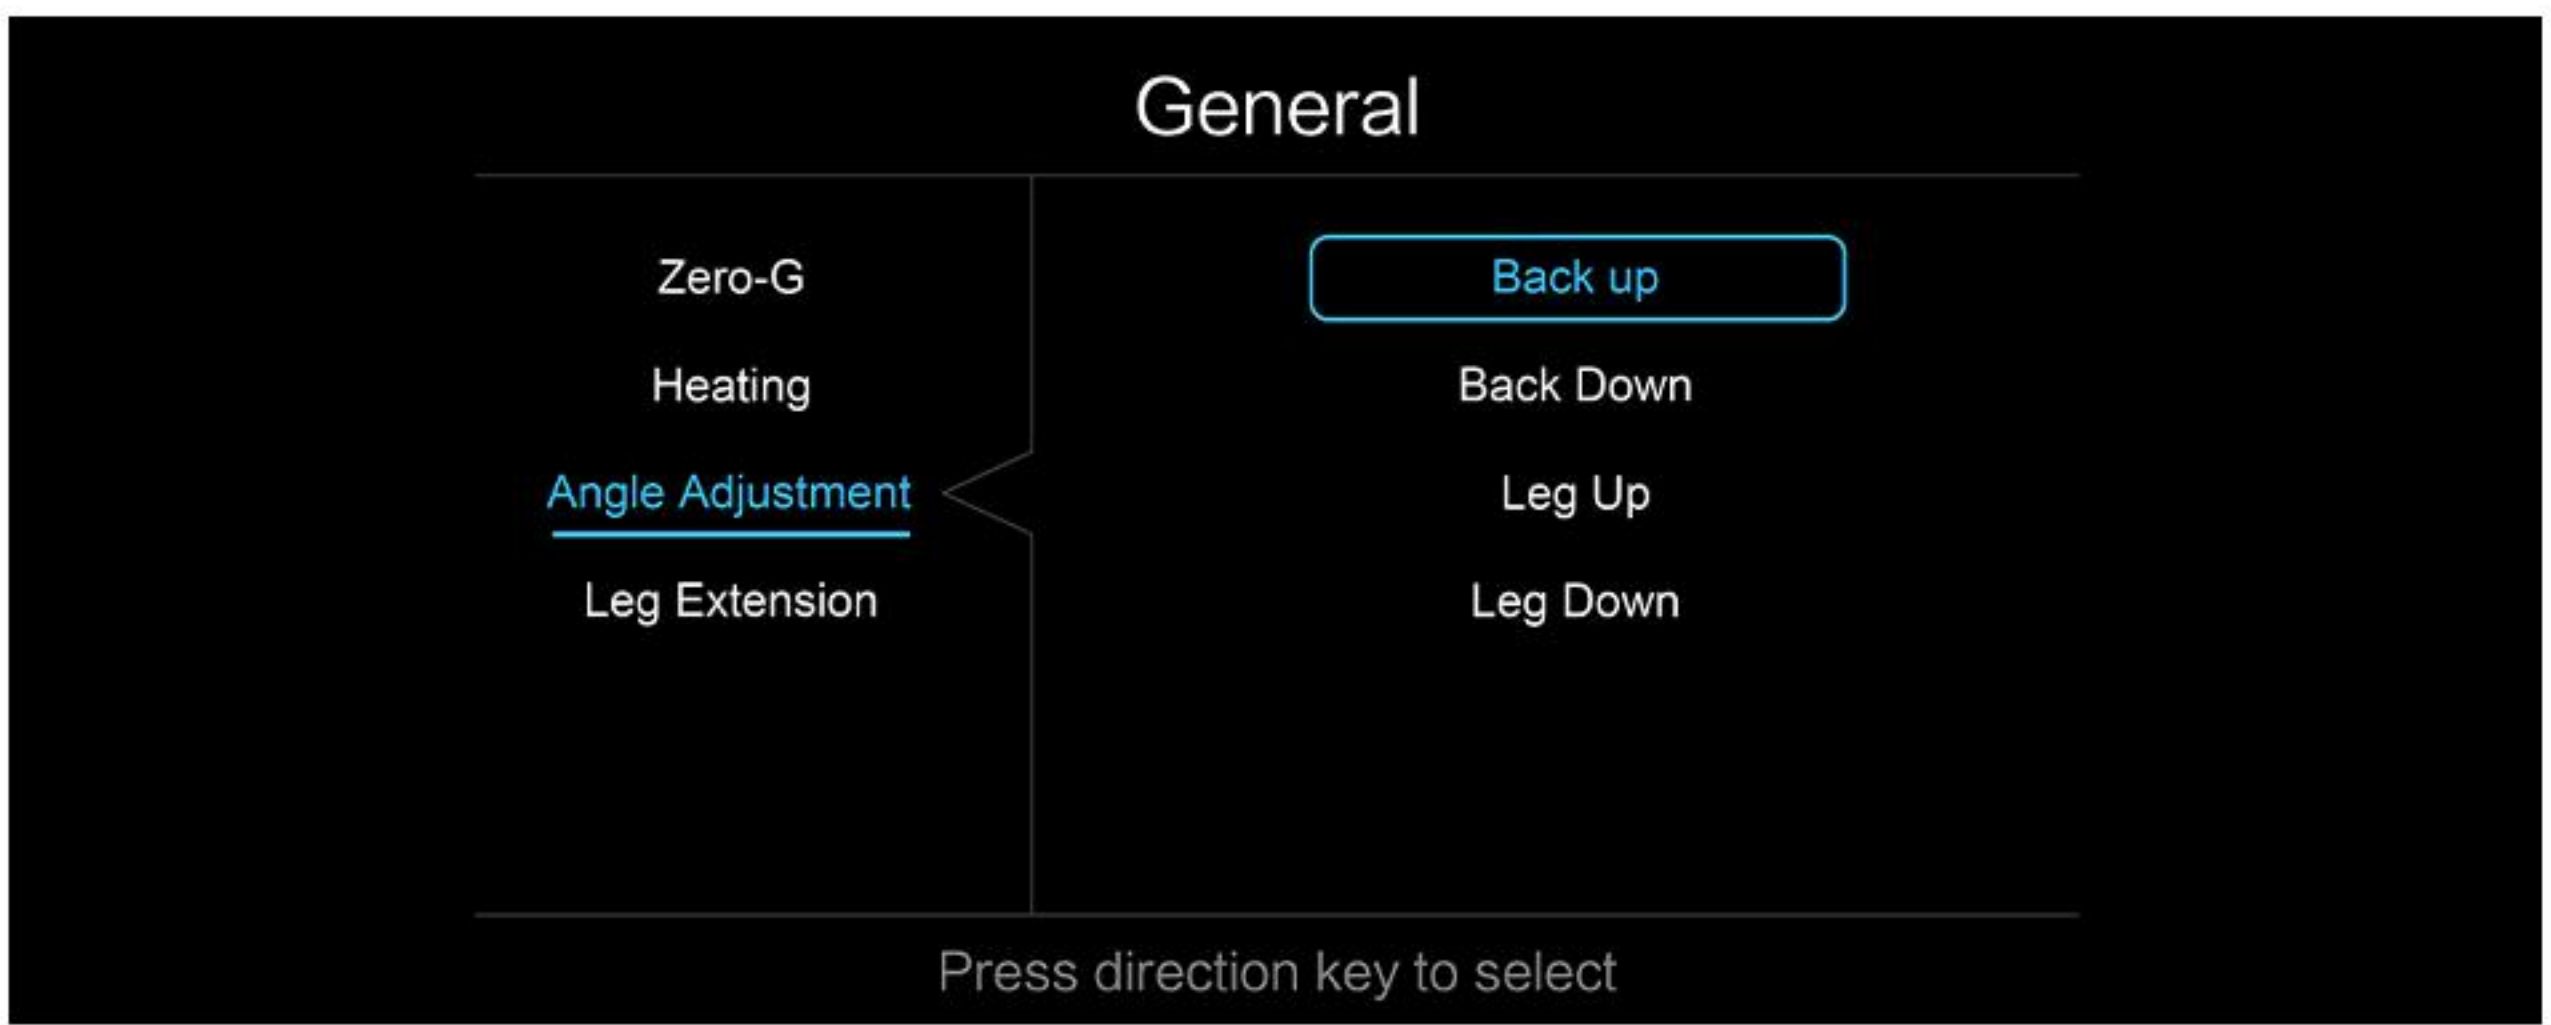
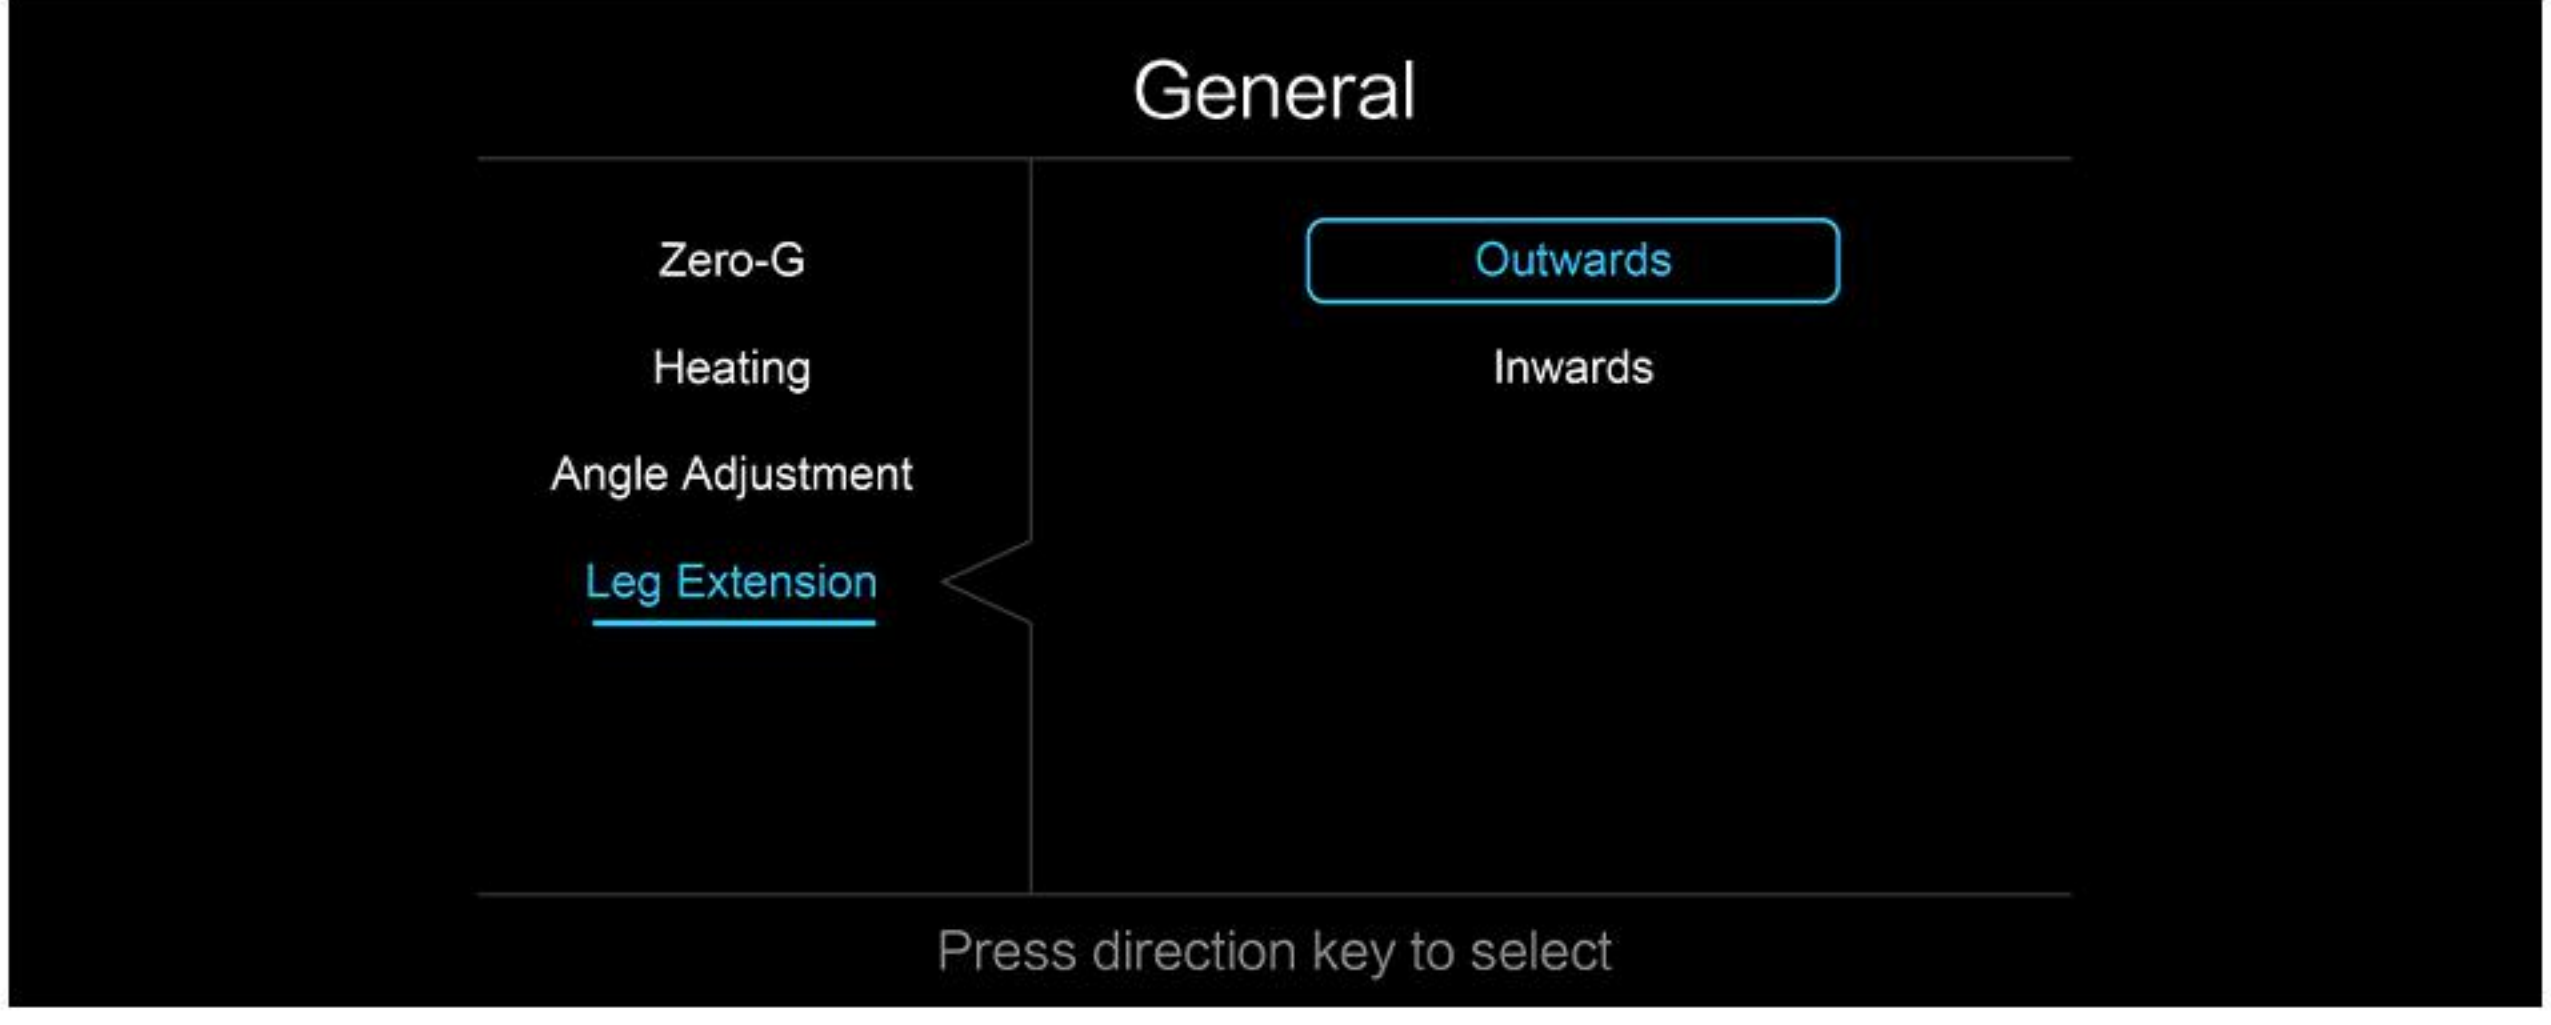
Airbag

 The screenshot shows the 'Menu' screen with six icons: 'Auto' (circular arrow), 'Manual' (hand pointing), 'Airbag' (pillow icon, highlighted with a blue box), 'General' (person icon), 'Foot' (foot icon), and 'Setting' (gear icon). At the bottom, it says 'Press direction key to select'.	➤ Press "Menu" button and choose "Airbag" to enter into the airbag function interface.
 The screenshot shows the 'Airbag' screen. On the left, a vertical menu lists 'Part' and 'Intensity', with 'Part' highlighted in blue. On the right, four options are listed: 'Whole' (highlighted with a blue box), 'Shoulder', 'Arm', and 'Leg'. At the bottom, it says 'Press direction key to select'.	➤ You can select: airbag massage position. ➤ Press the buttons on the 4-way selection button to operate, and press "OK" button to confirm. ➤ Auto mode cannot adjust the airbag massage position.

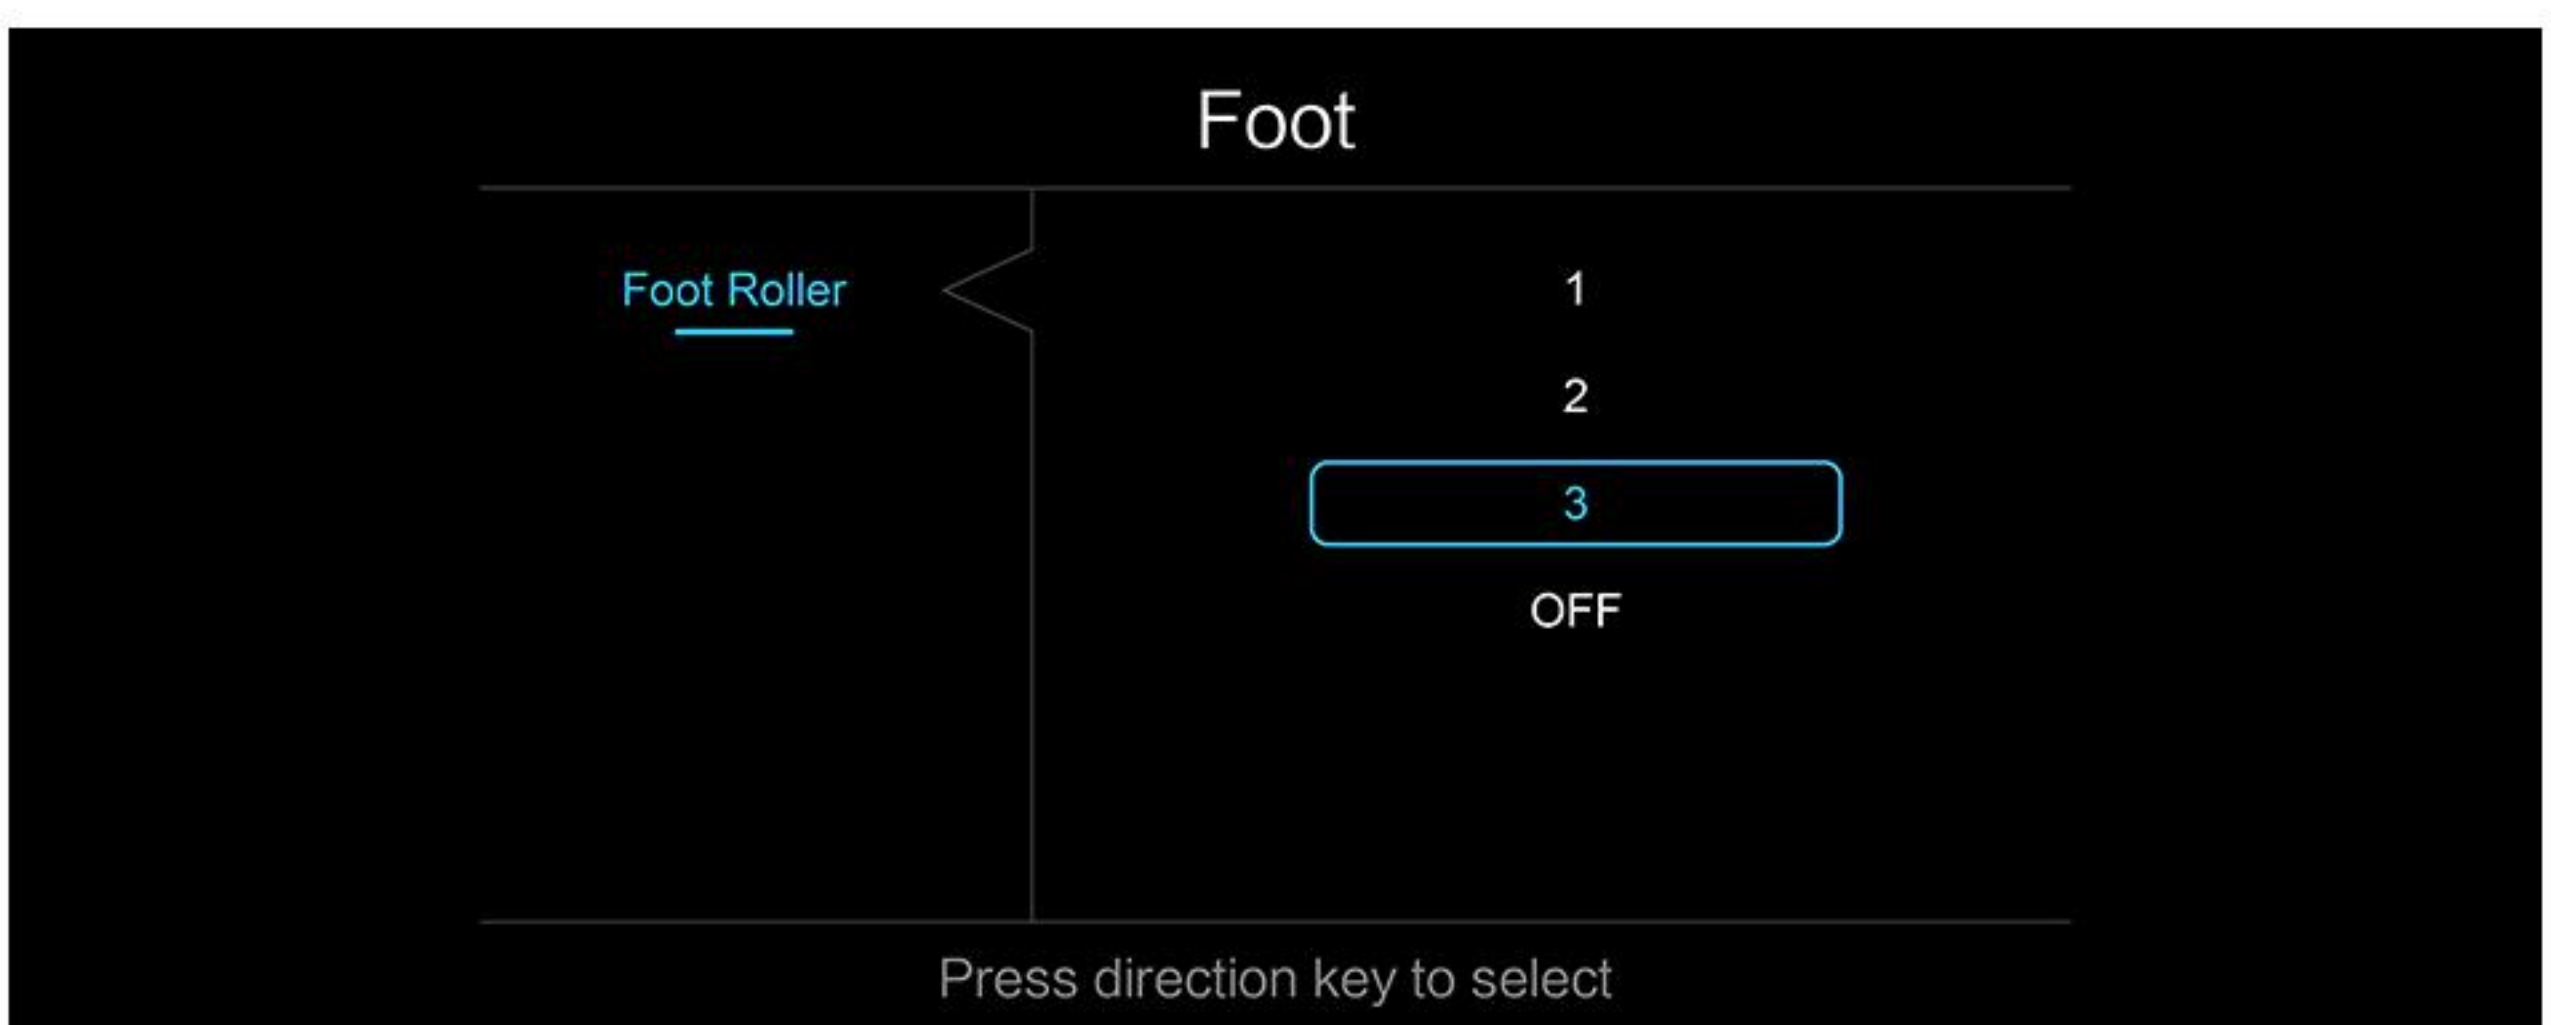
	➤ You can adjusting: airbag massage Intensity. ➤ Press the buttons on the 4-way selection button to operate, and press "OK" button to confirm.
--	--

General

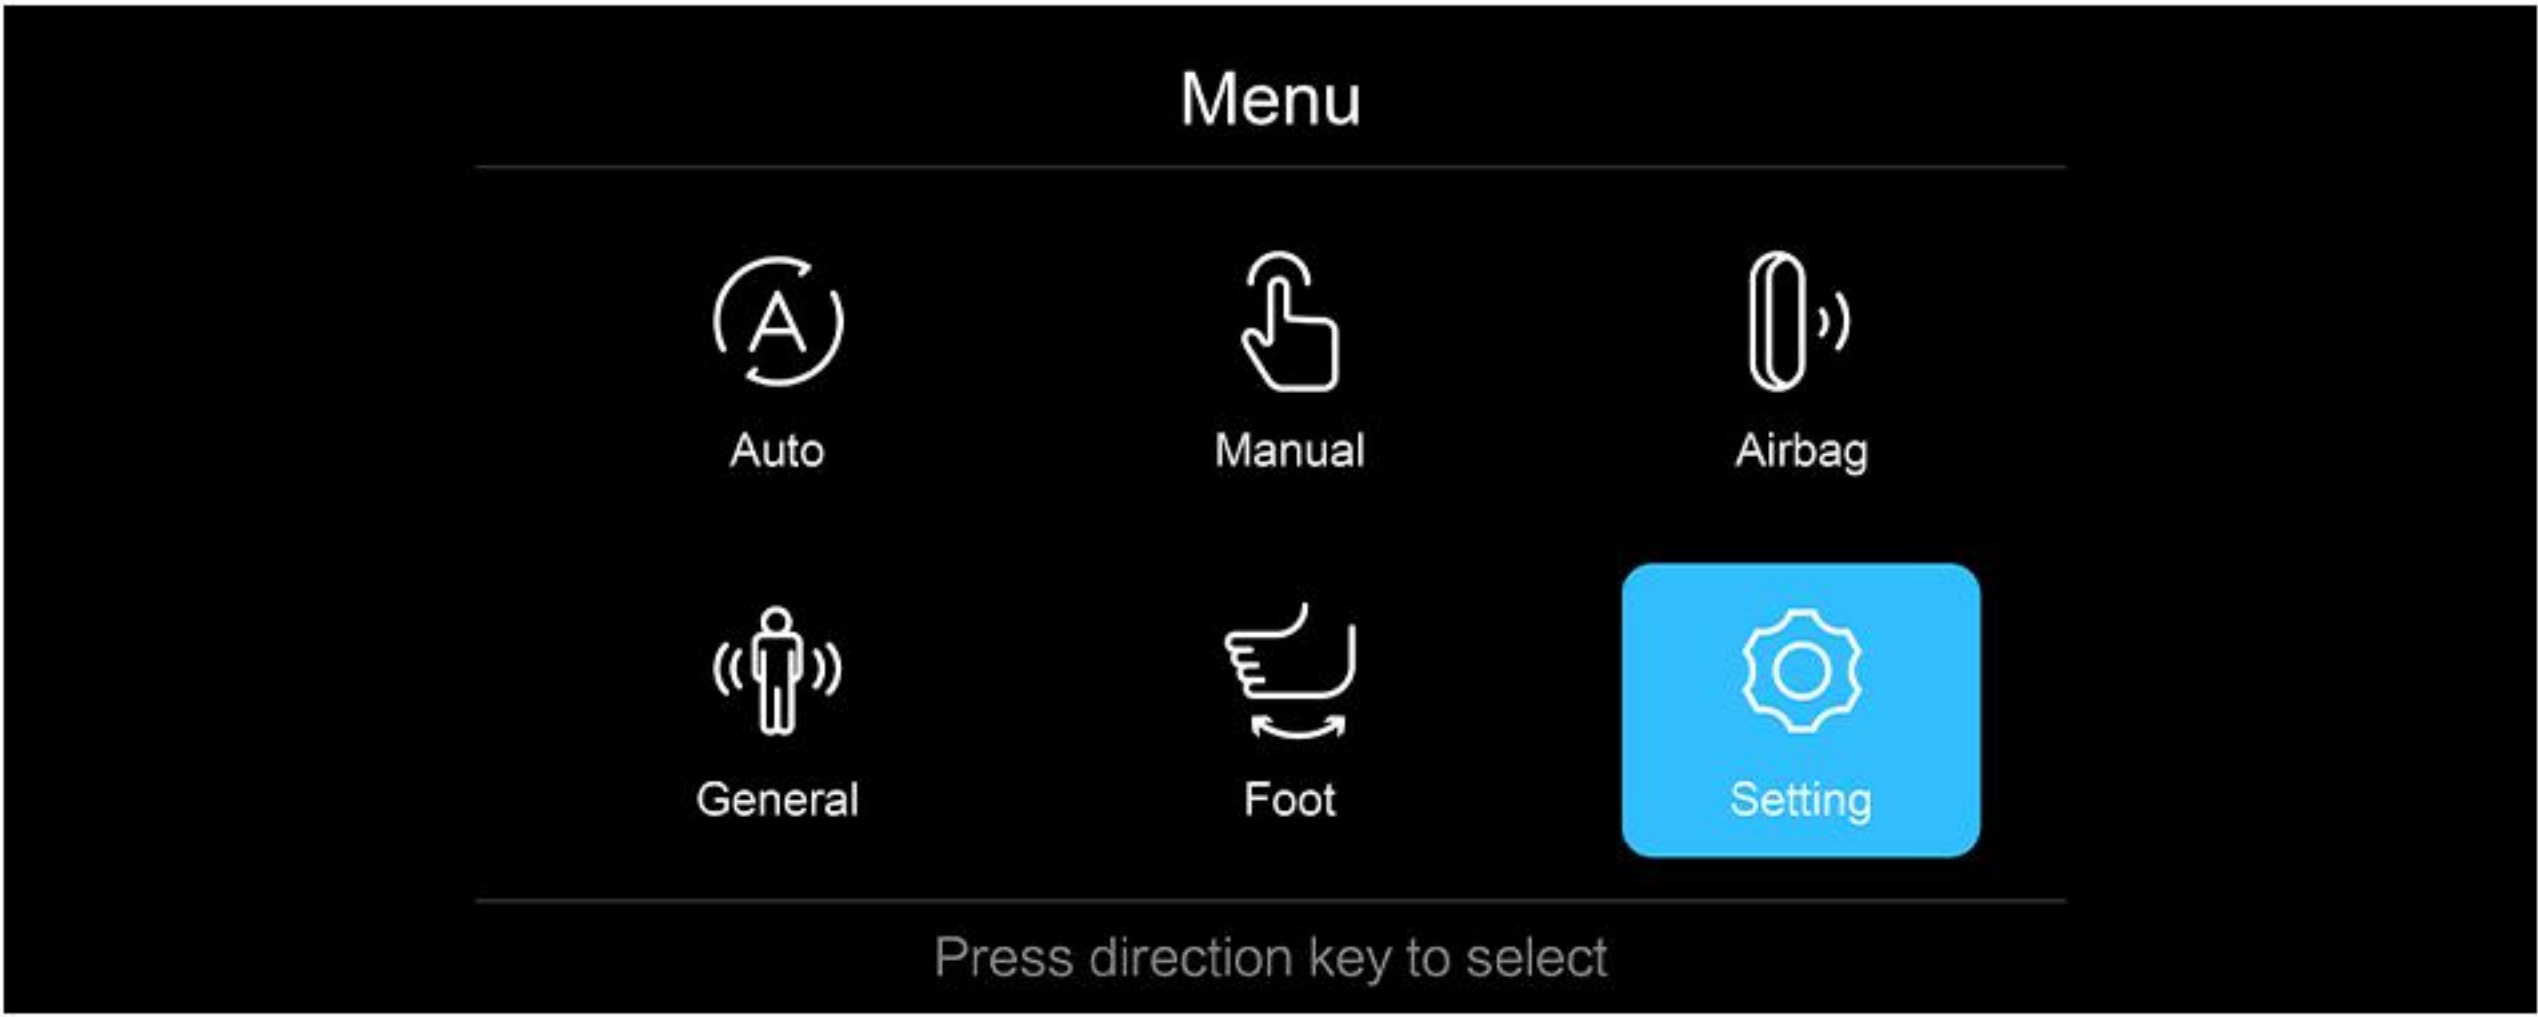
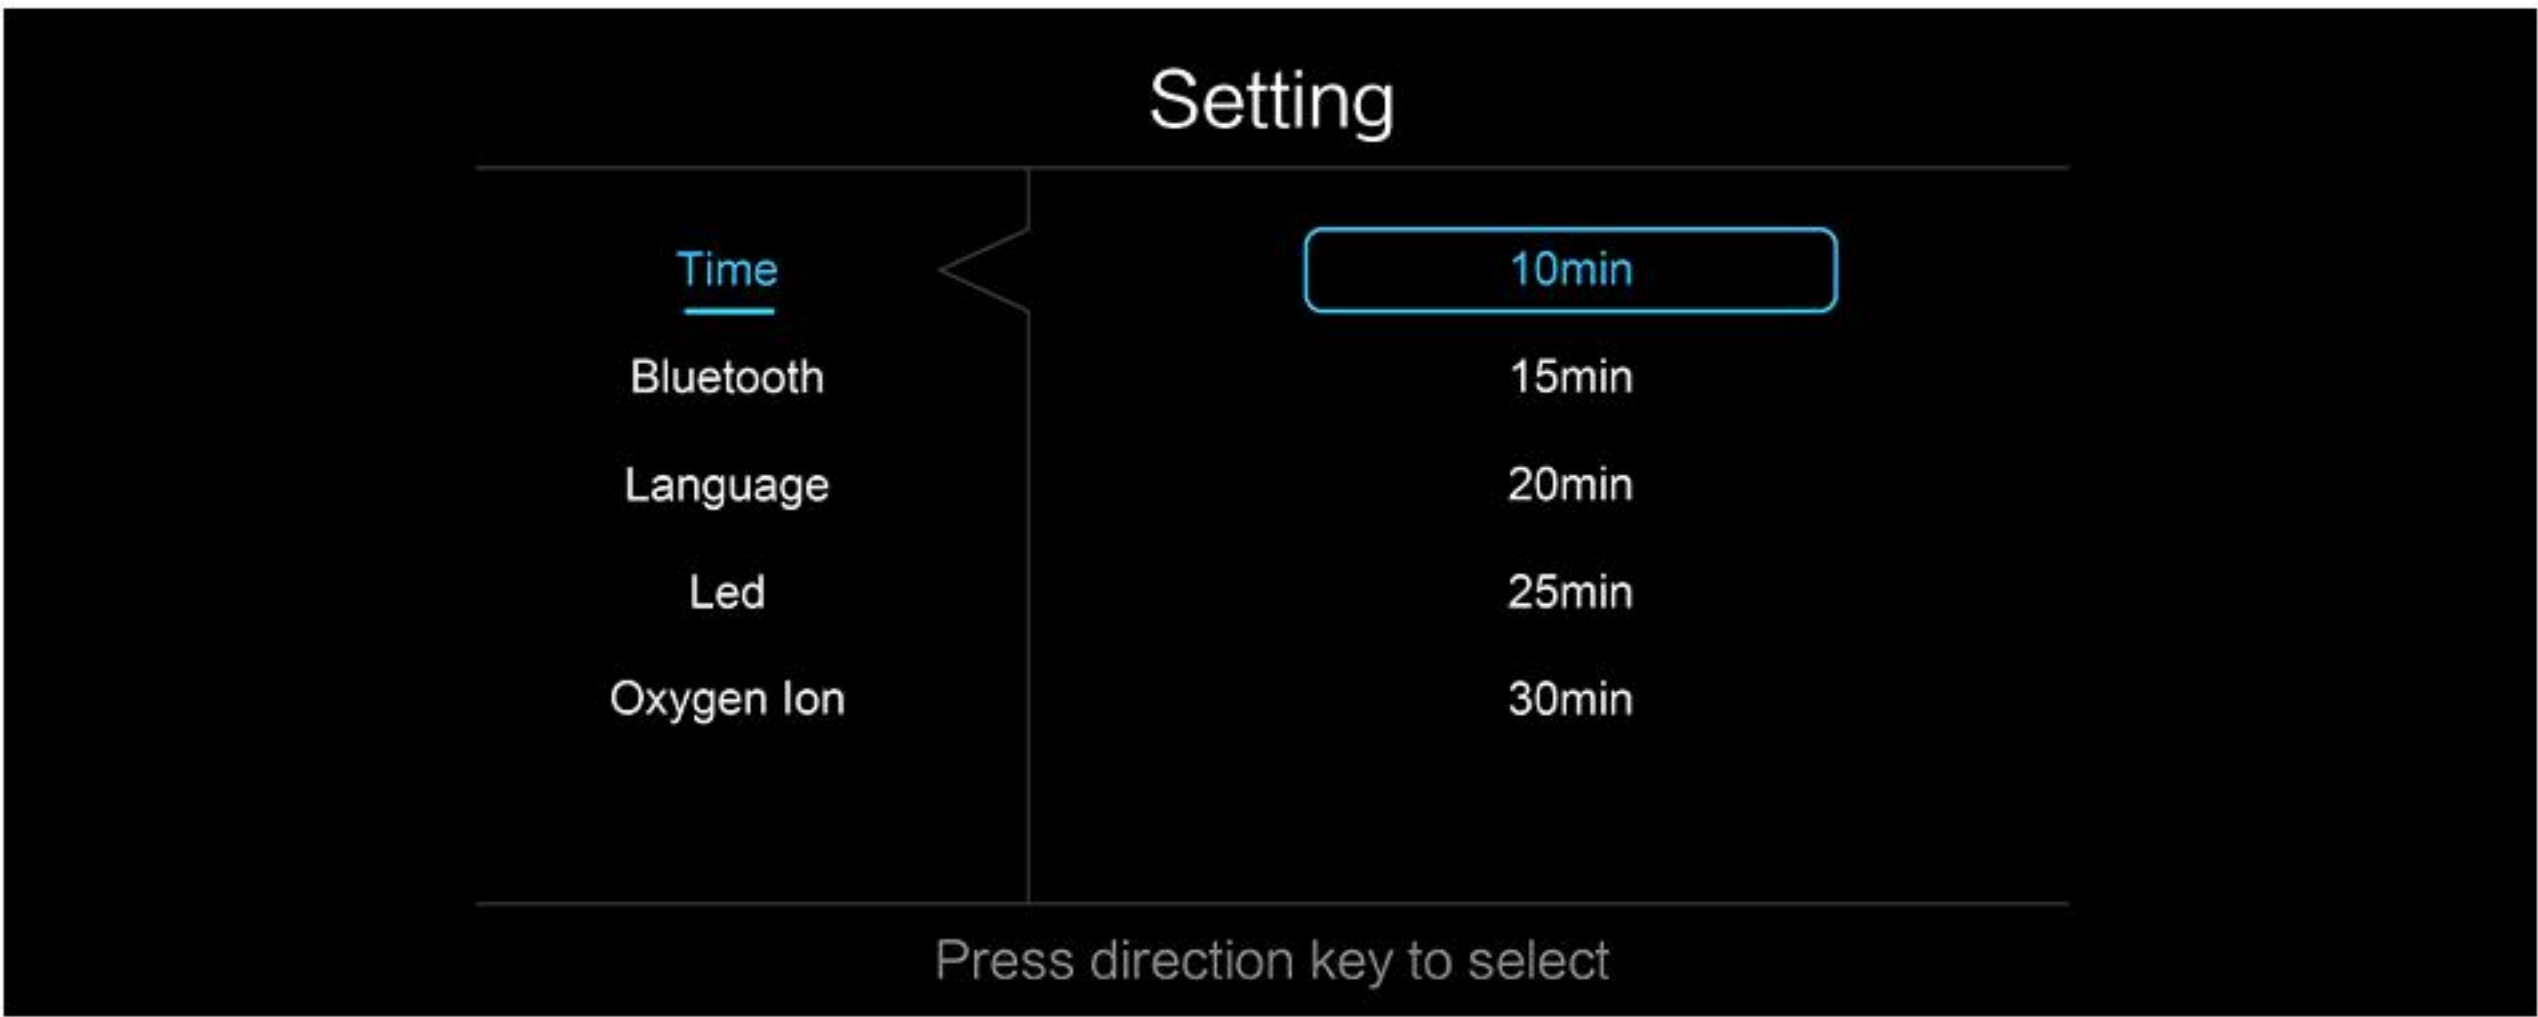
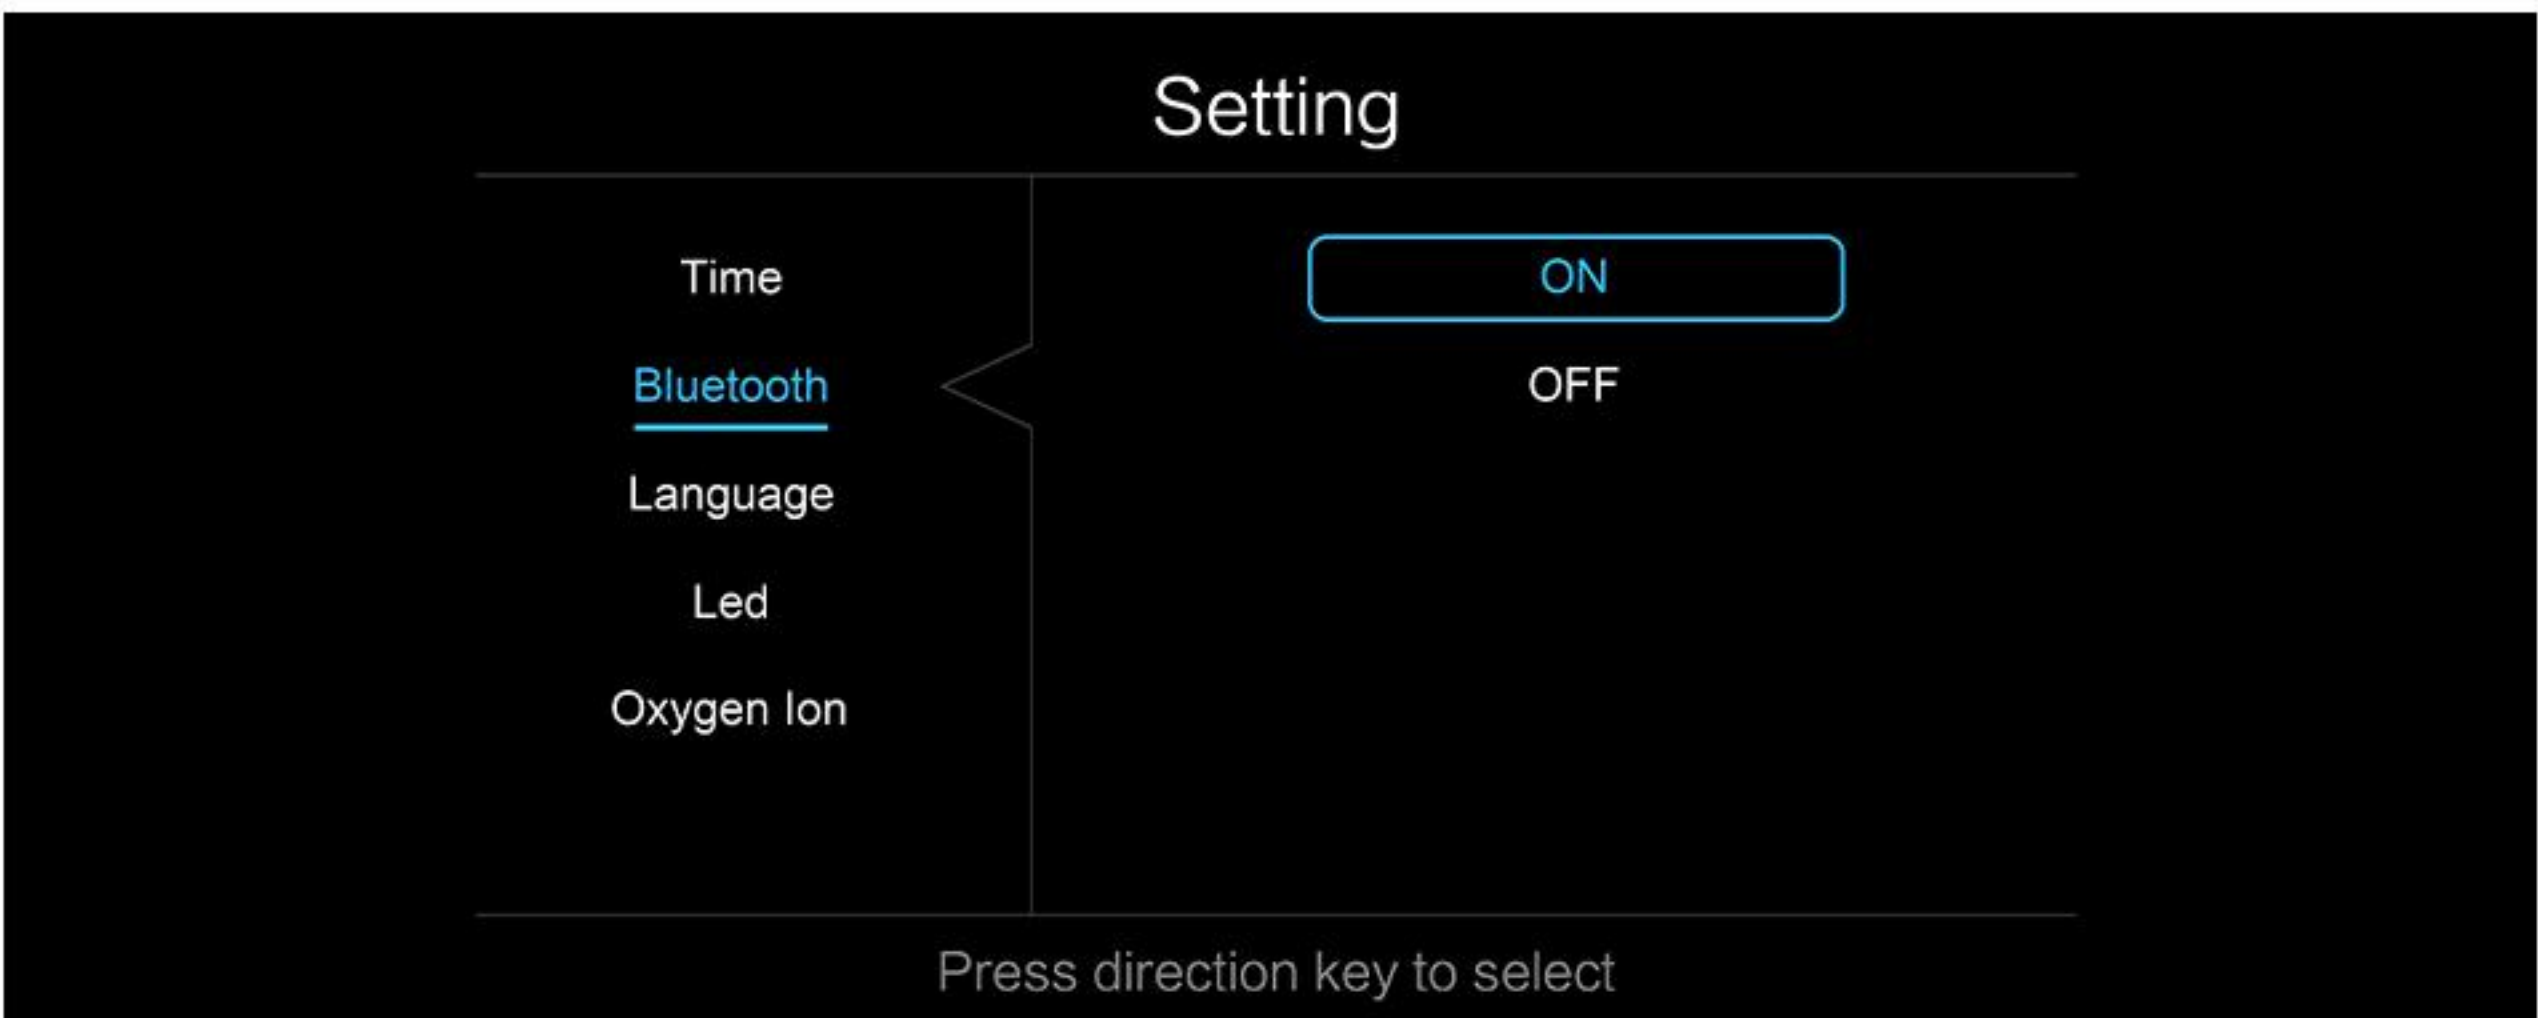
	➤ Press "Menu" button and choose "General" to enter into the general function interface.
	➤ Zero-G: You can adjusting zerogravity position. ➤ Press the buttons on the 4-wayselection button to operate, and press "OK" button to confirm.
	➤ Heating: You can select the on and off heating function. ➤ Press the buttons on the 4-way selection button to operate, and press "OK" button to confirm.

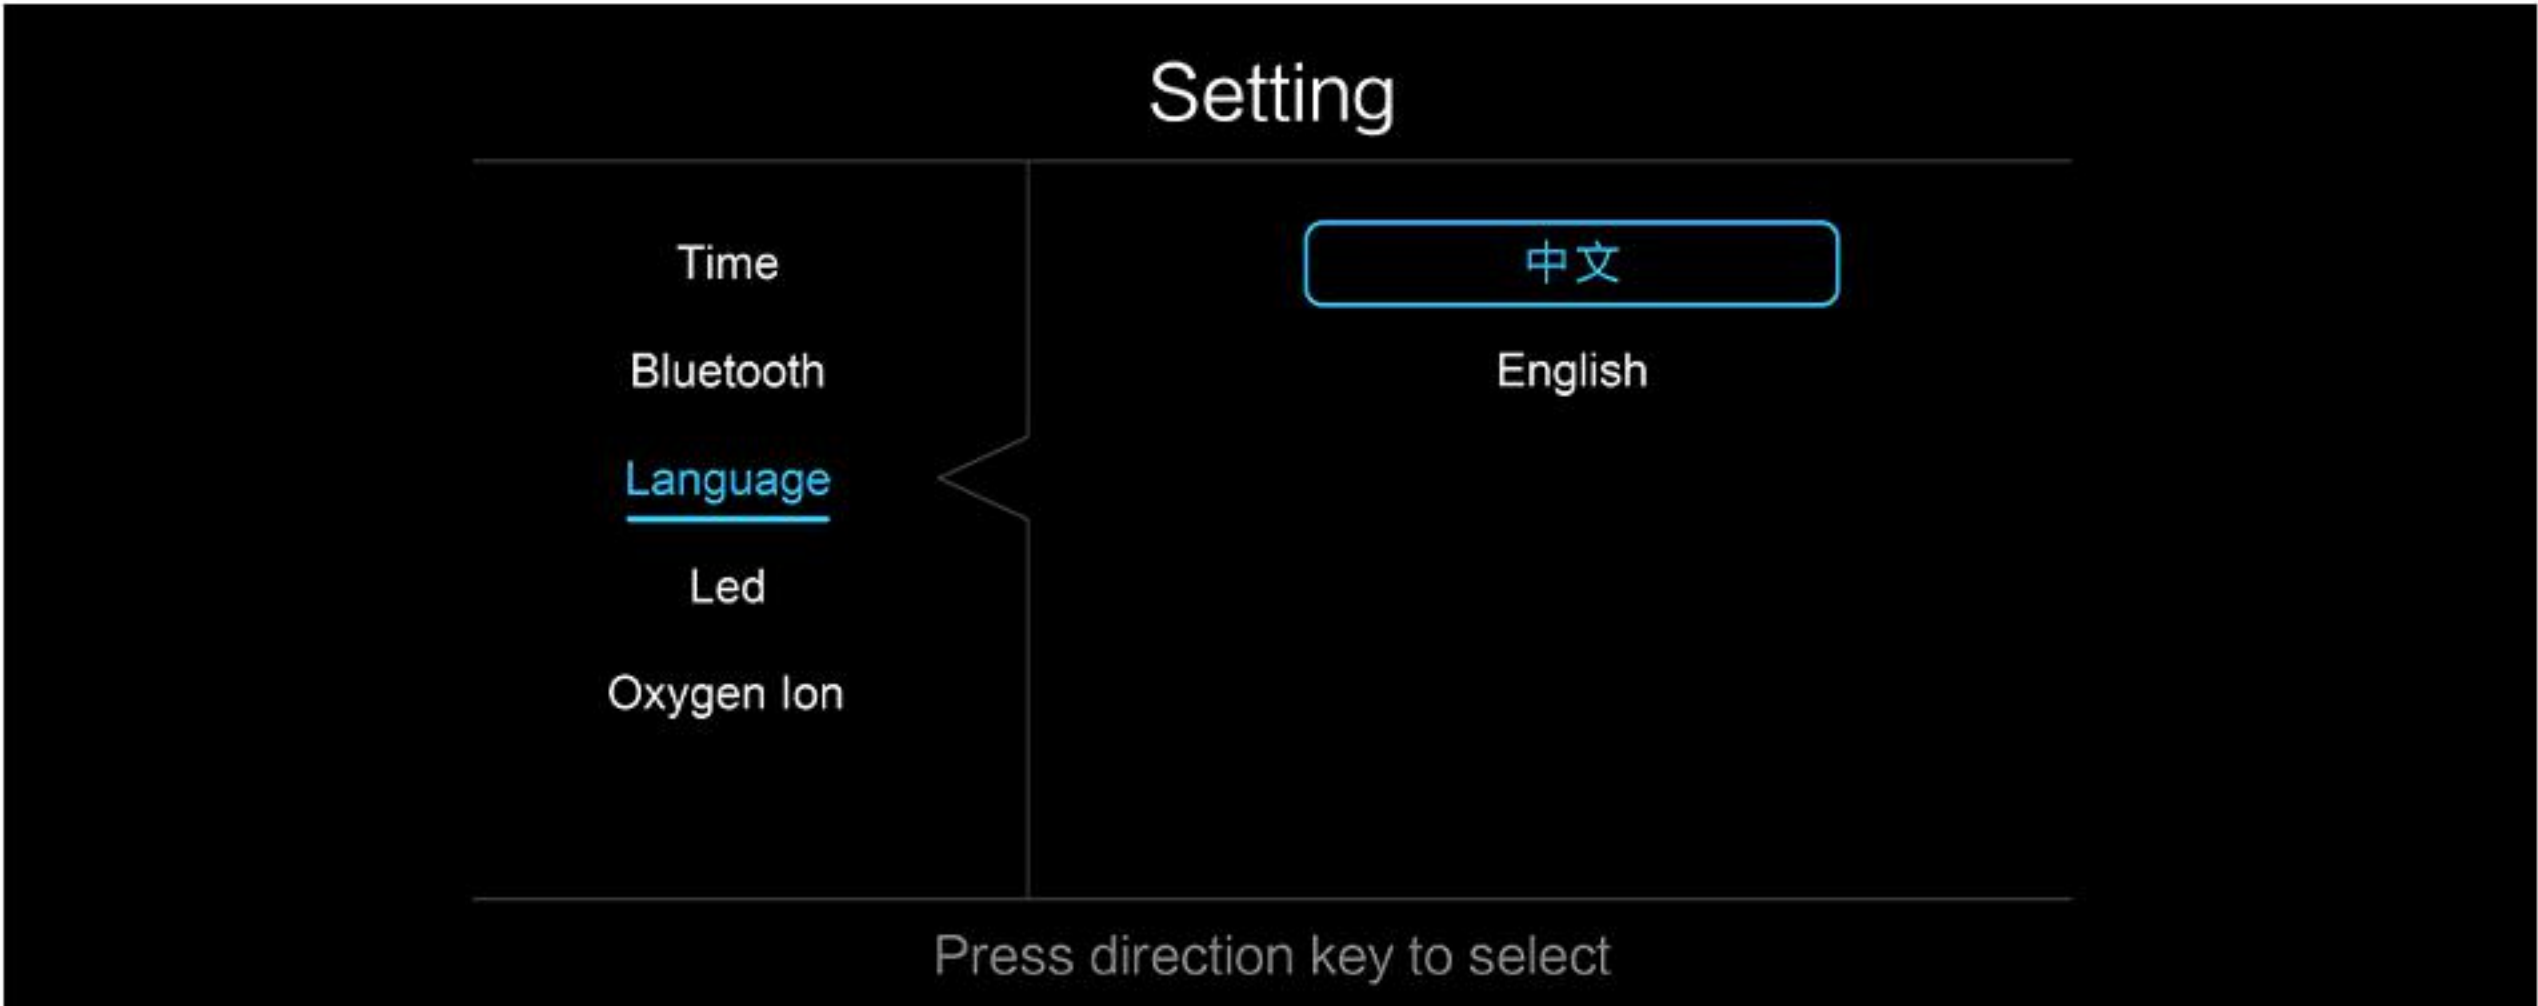
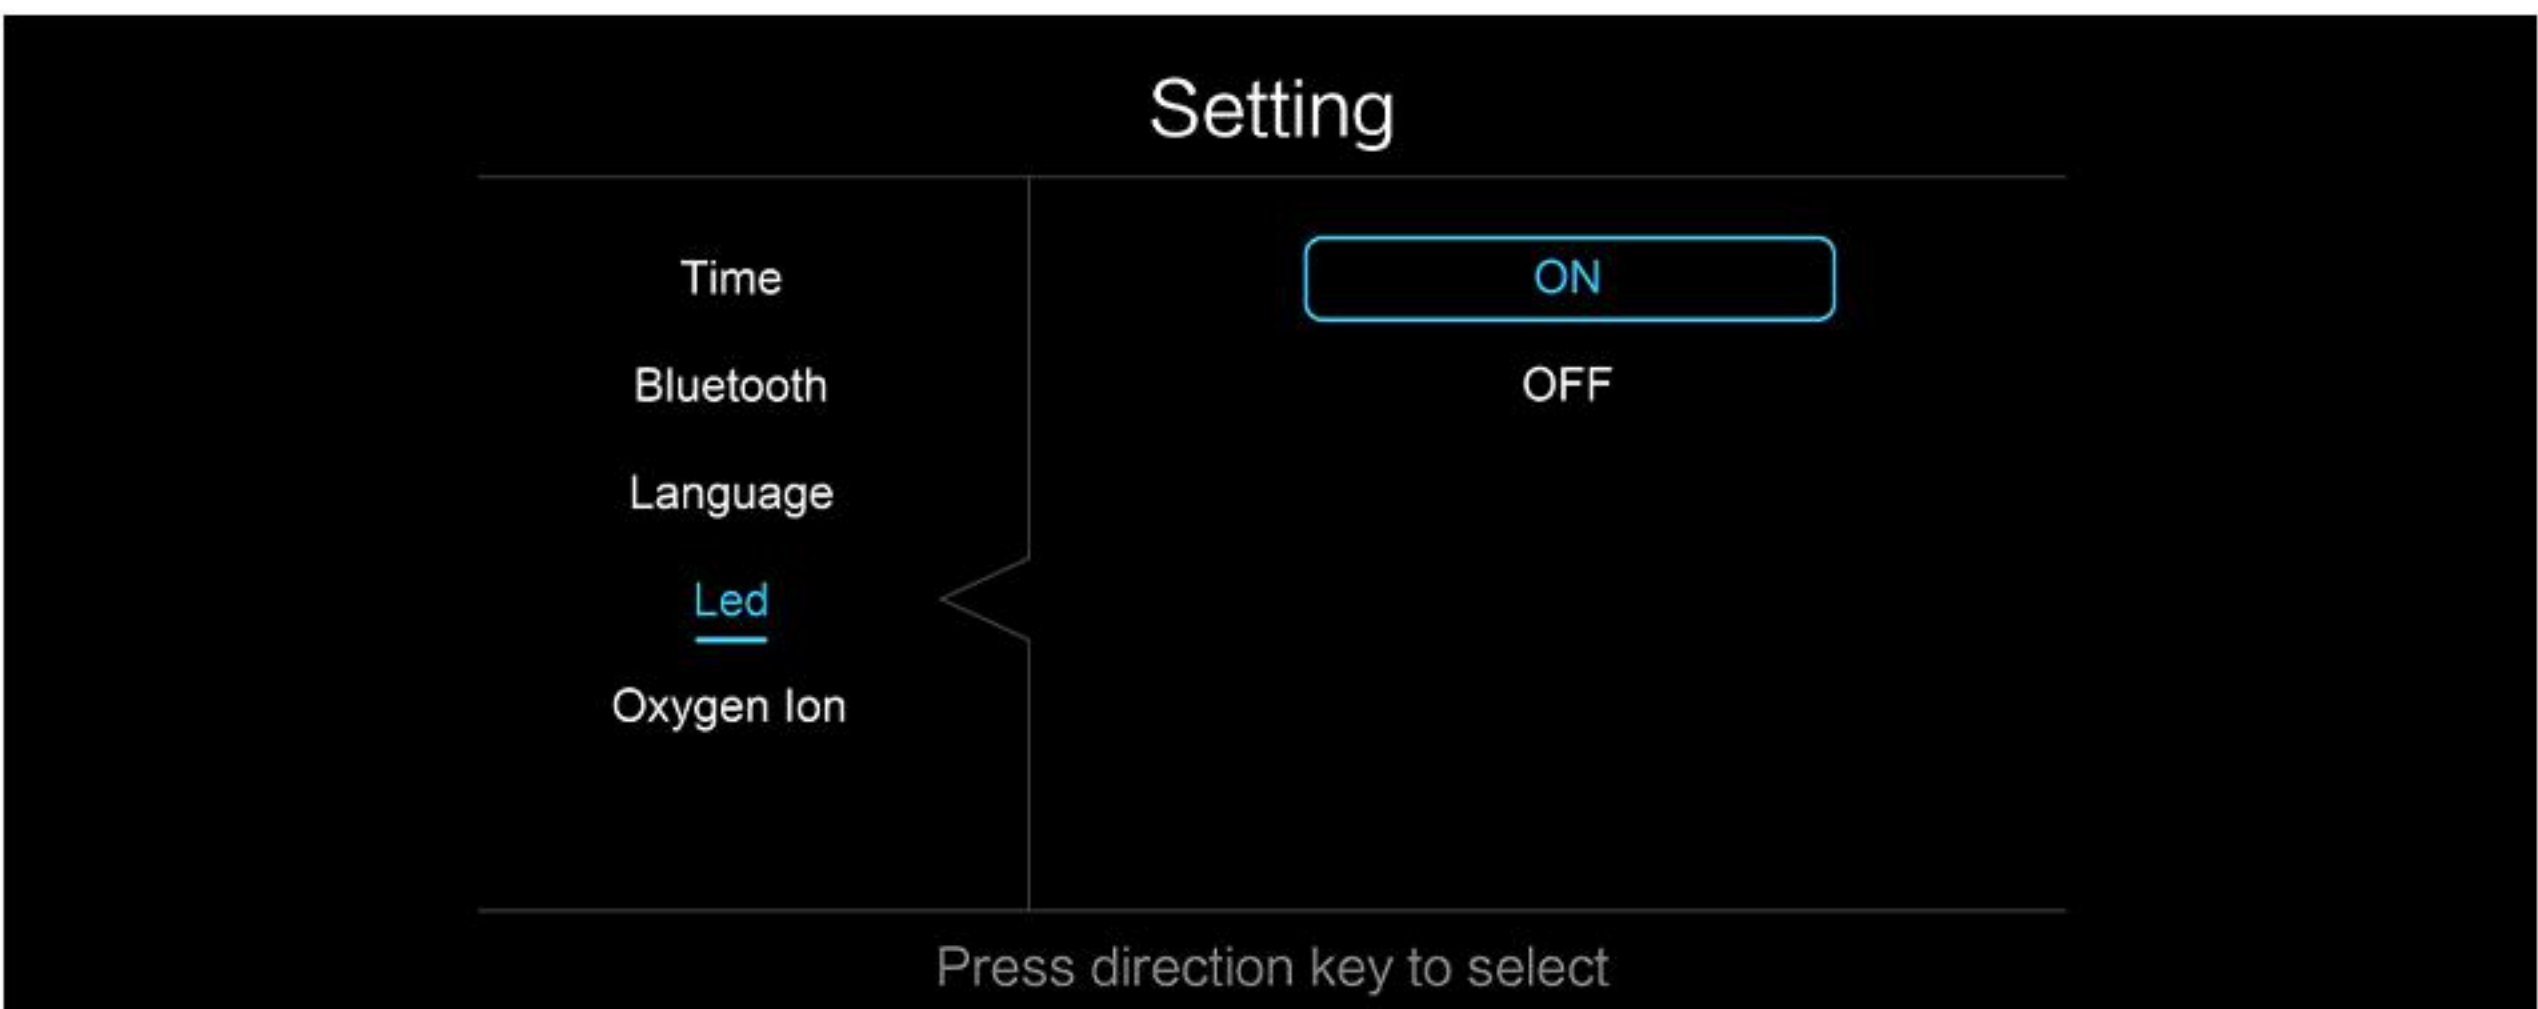
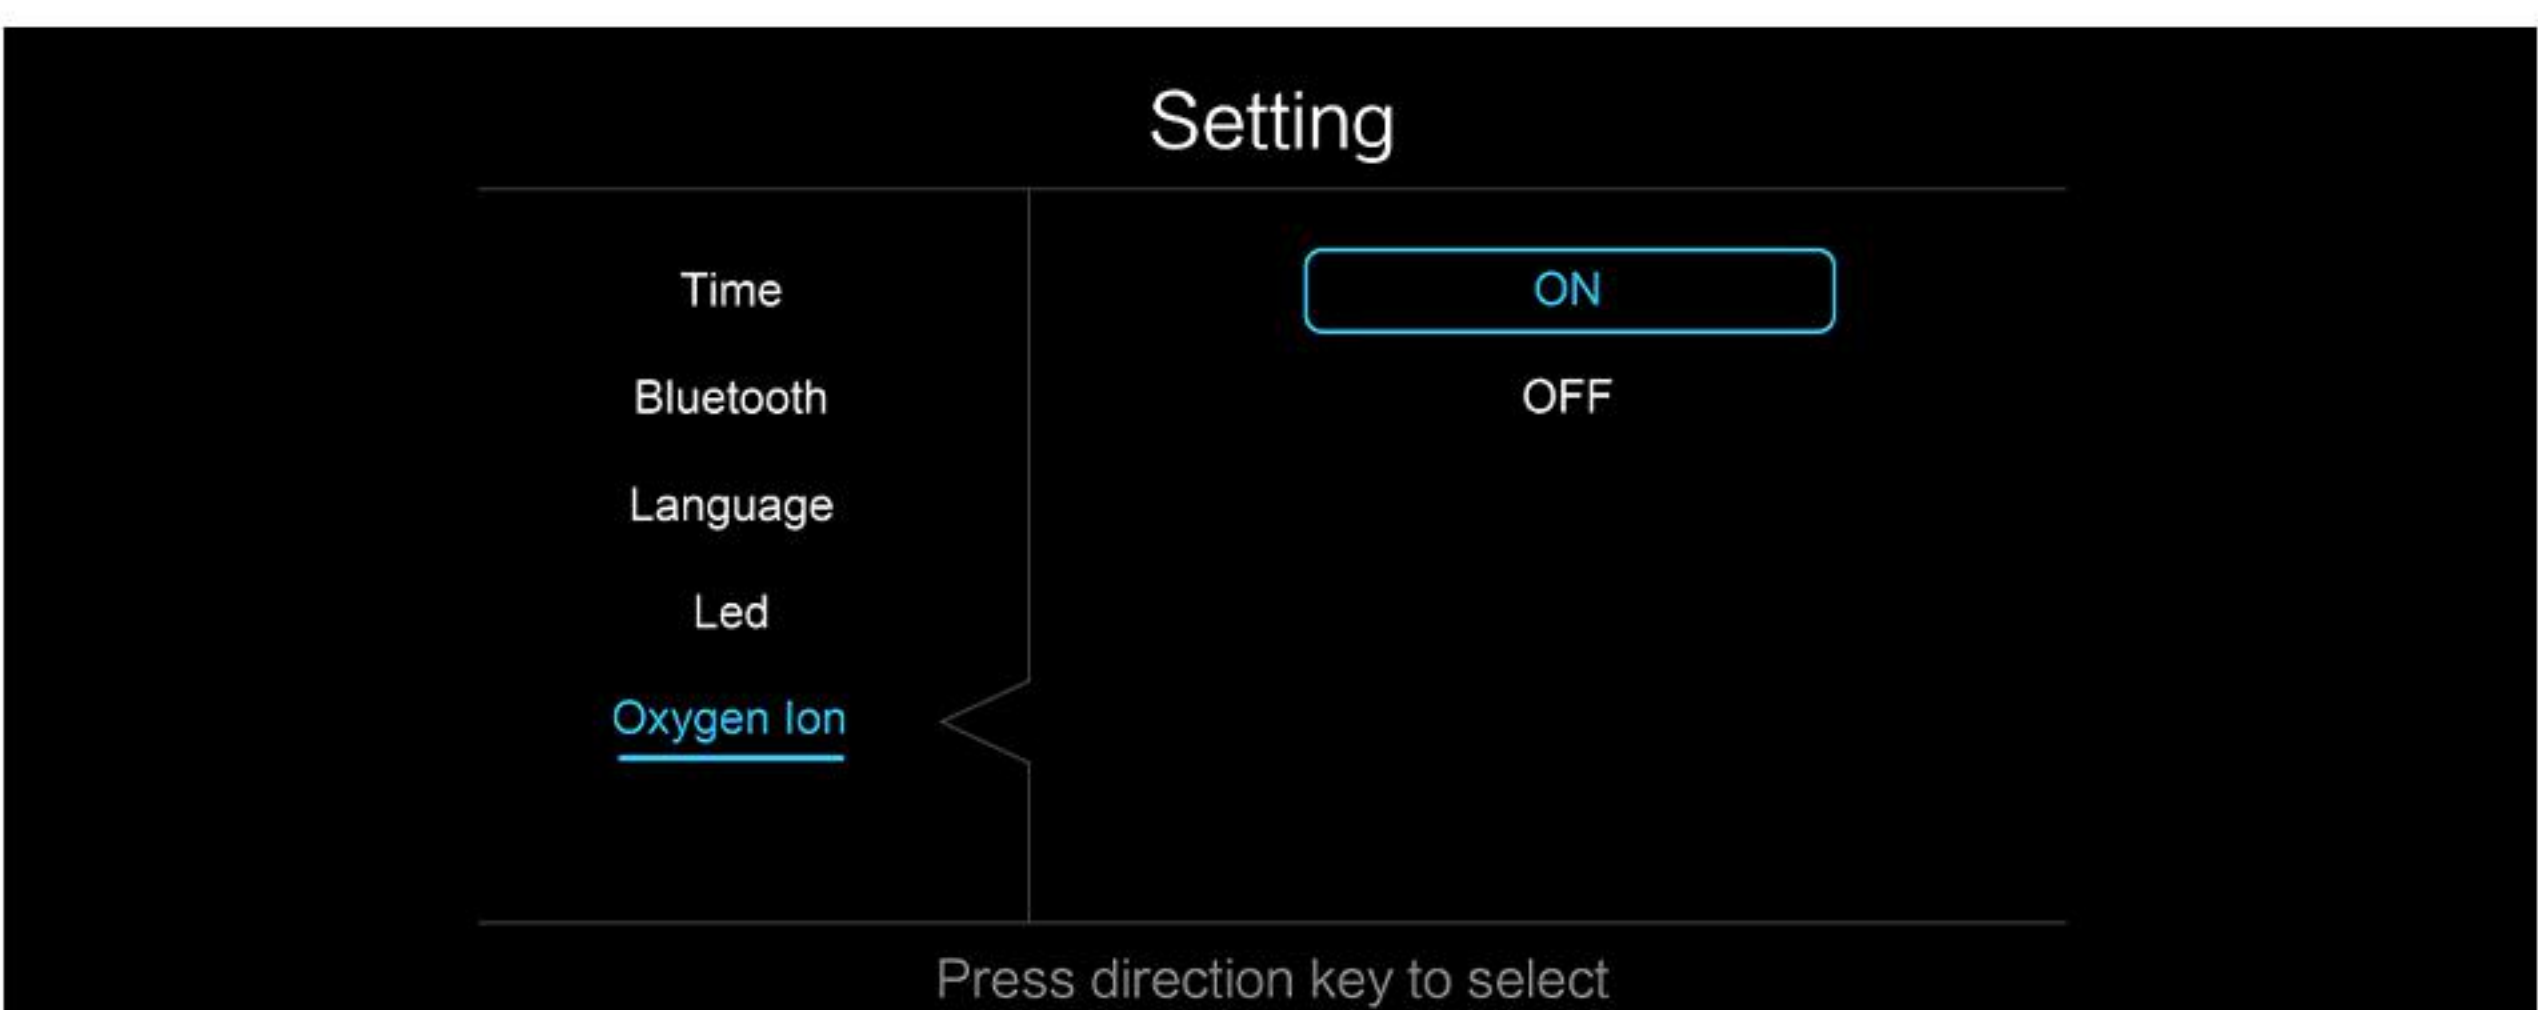
	➤ Angle adjustment: You can choose the backrest up/down and the footrest up/down to adjust the massage chair angle. ➤ Press the buttons on the 4-wayselection button to operate, After selecting, Long press the "OK" key to adjust the angle, and release it to look the angle you like.
	➤ Leg Extension: You can choose the leg extension up/down function. ➤ Press the buttons on the 4-way selection button to operate, After selecting, Long press the "OK" key to adjust the angle, and release it to lock the angle you like.

Foot

	➤ Press "Menu" button and choose "Foot" to enter into the foot roller function interface.
	➤ You can turn on/off the foot roller function, and select the strength of foot roller from level 1 to level 3. ➤ Press the buttons on the 4-way selection button to operate, and press "OK" button to confirm.

Setting

	➤ Press "Menu" button and choose "Setting" function.
	➤ Time: You can select massage time. ➤ Press the buttons on the 4-way selection button to operate, and press "OK" button to confirm.
	➤ Bluetooth: You can select to turn on/off the Bluetooth function. ➤ Press the buttons on the 4-way selection button to operate, and press "OK" button to confirm.

	➤ Languages: You can select to your desired language. ➤ Press the buttons on the 4-way selection button to operate, and press "OK" button to confirm.
	➤ Led: You can select to turn on/off Led light function. ➤ Press the buttons on the 4-way selection button to operate, and press "OK" button to confirm.
	➤ Oxygen Ion: You can select to turn on/off Oxygen Ion function. ➤ Press the buttons on the 4-way selection button to operate, and press "OK" button to confirm.

4.2.2 Quick-Access Buttons

		Power Button ➤ Long press the to turn on/off the massage chair. ➤ Short press to stop/resume the massage function.
		Backrest Up/Down ➤ Press the Backrest Up/ Down button to adjust the backrest angle.
		Auto ➤ Press this button to switch 12 auto programs.
		Zero-G ➤ Each time you press it, switch to a zero gravity mode.
		USB ➤ Your can connect devices with USB lines, like mobile phones, heated eye masks.

4.2.3 App Control

4.2.3.1 App Download and Login

(1) Download

Search for iBooMas+ on Google Play or Apple App Store and click Install.

(2) Register and Login

01:56

Q iBooMas+

Cancel

Earn savings you can use on fuel, car washes or in-store

Rewards

Collect exclusive member Badges – and extra bonus points

Access your rewards, anytime, anywhere

Rewards

Access your rewards, anytime, anywhere

Message Chair

iBooMas+

Health & Fitness

Download

Health & Fitness

2022 Rovos

Different brands have different styles

Explore message chair journey

Exclusive message

01:27

Search

Message Chair

iBooMas+

Health & Fitness

Download

AGE

4+

Years Old

CATEGORY

Health & Fitness

DEVELOPER

2022 Rovos

LANGUAGE

EN

+ 1 More

What's New

Version 1.0.4

Optimized some functions.

1w ago

Preview

Different brands have different styles

Explore message chair journey

Today

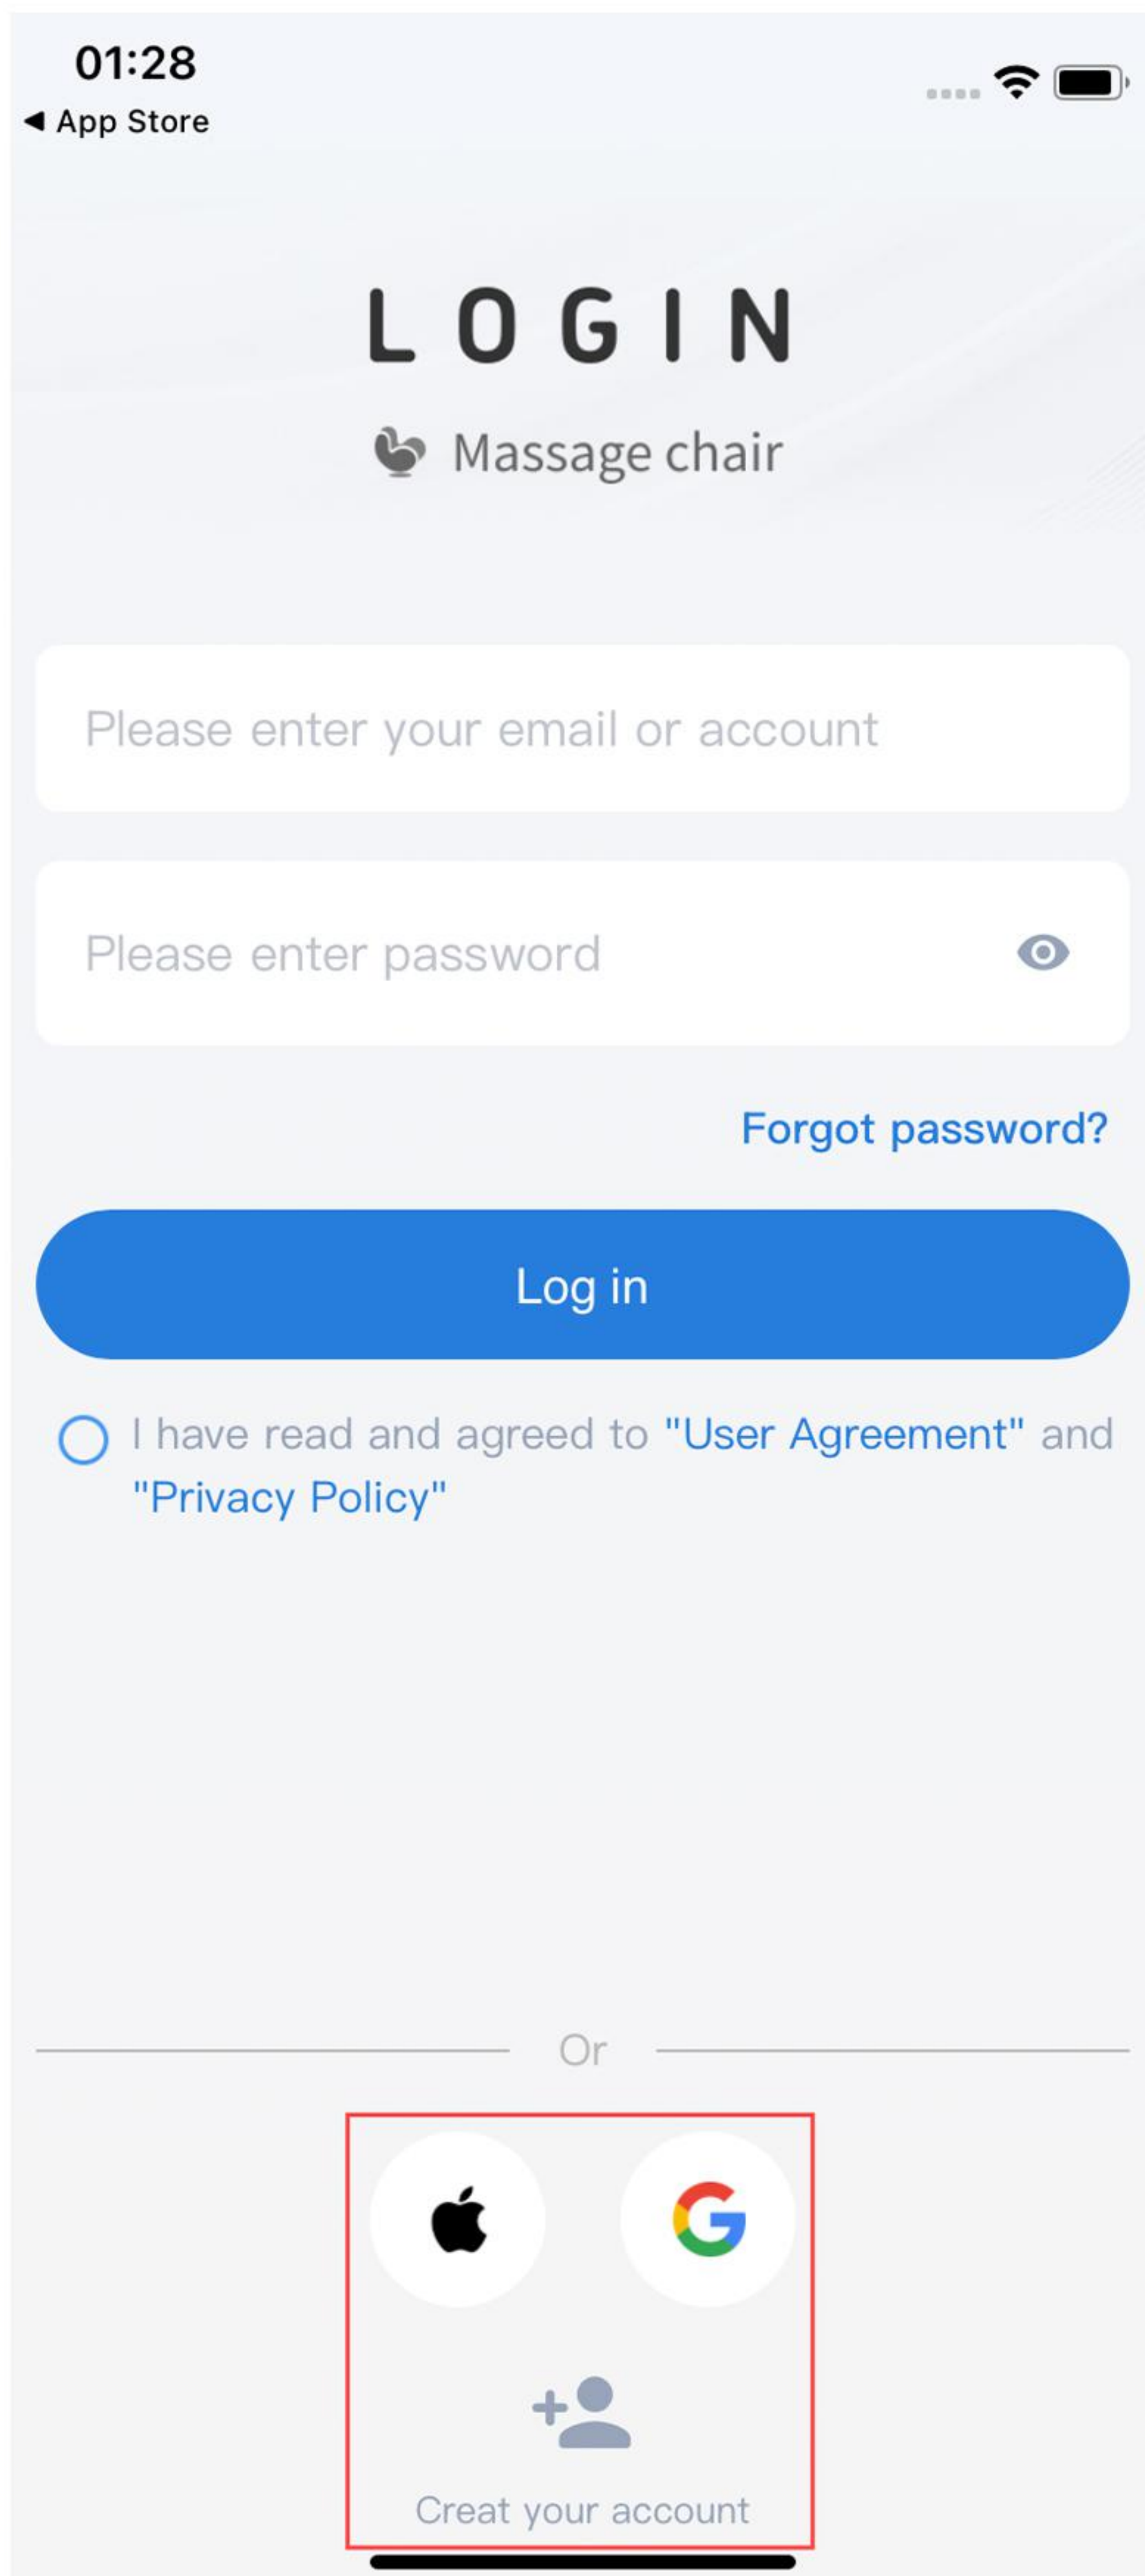
Games

Apps

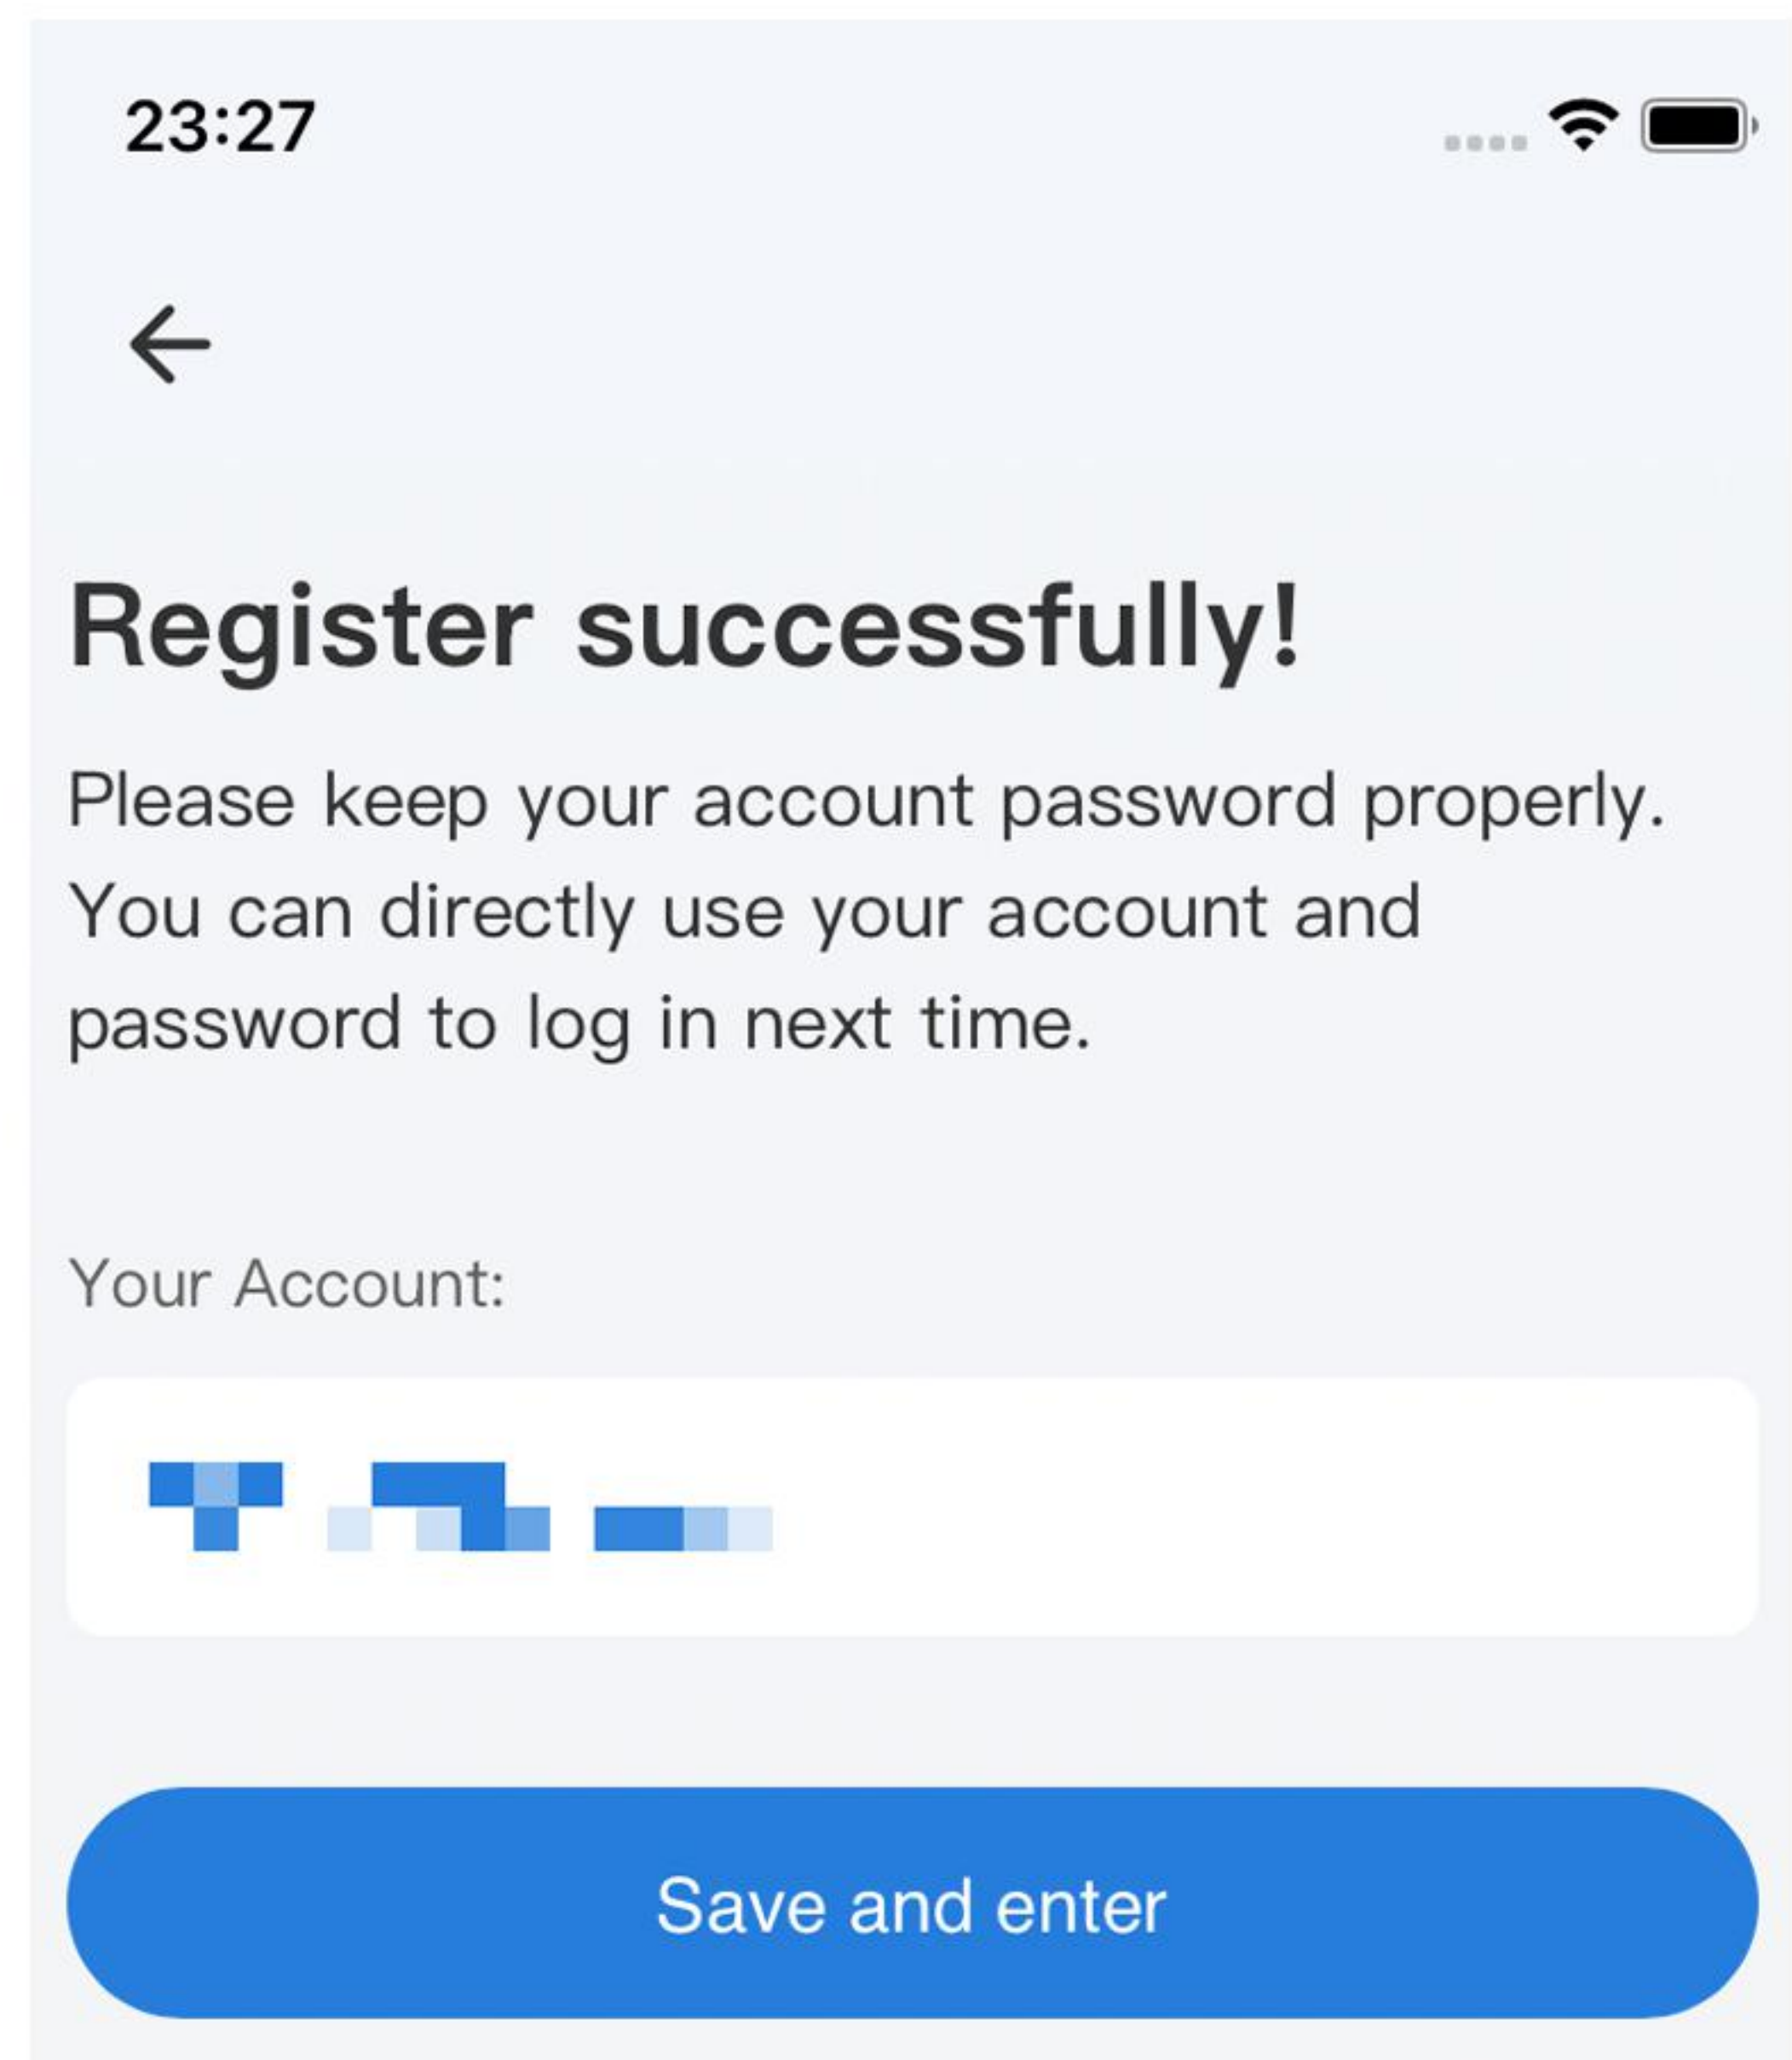
Arcade

Search

30



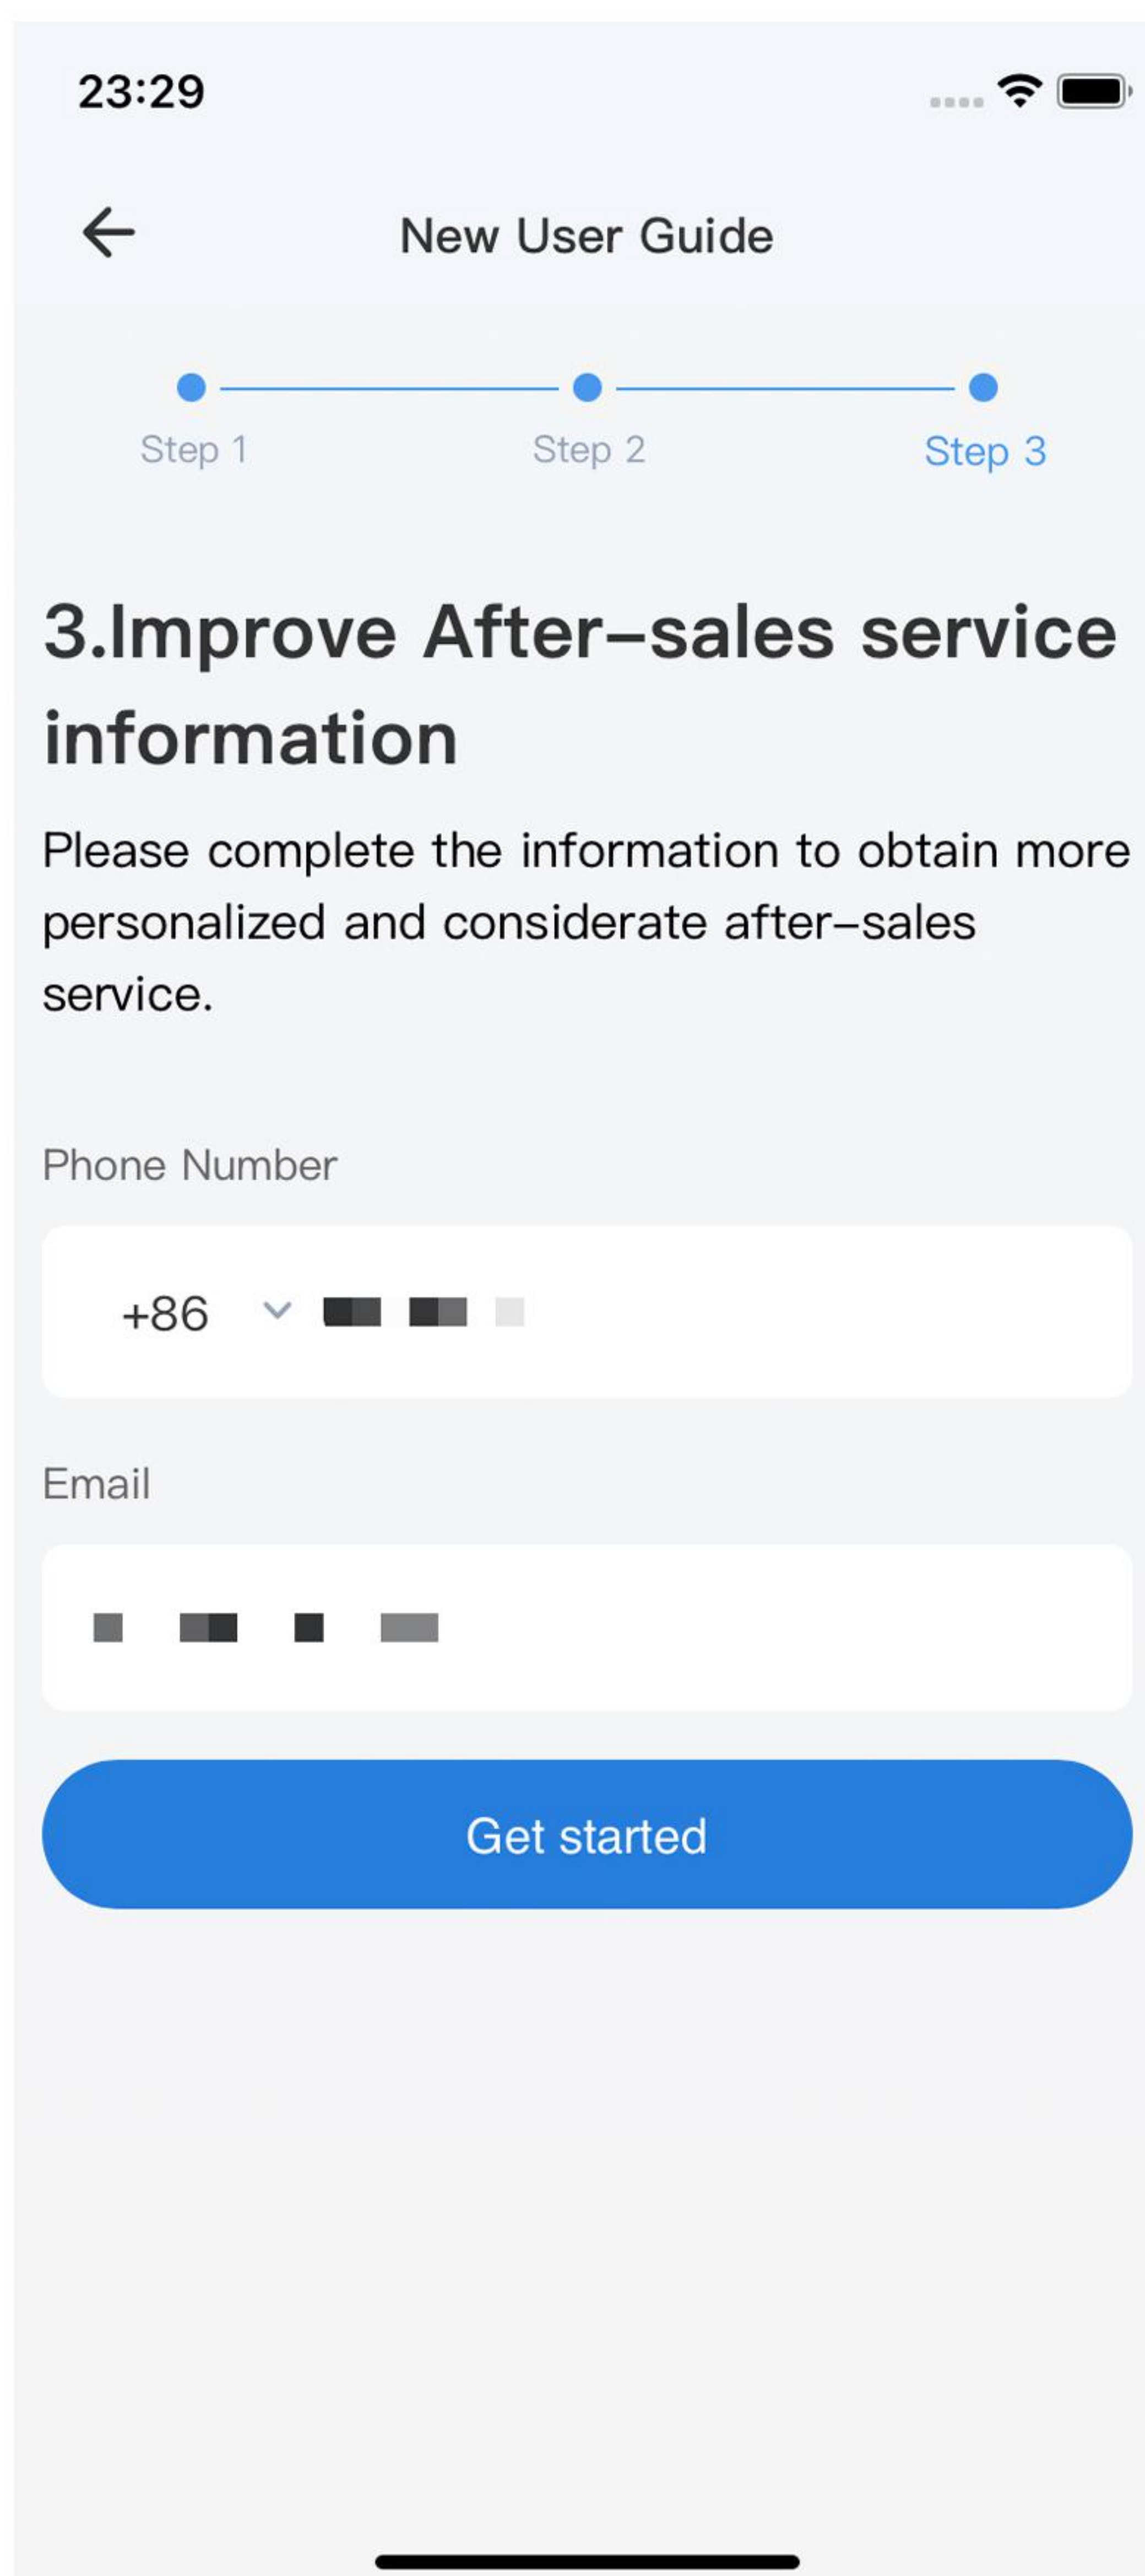
Enter the App, there are three login methods for you to choose: Apple ID, Google Account, Account Login.



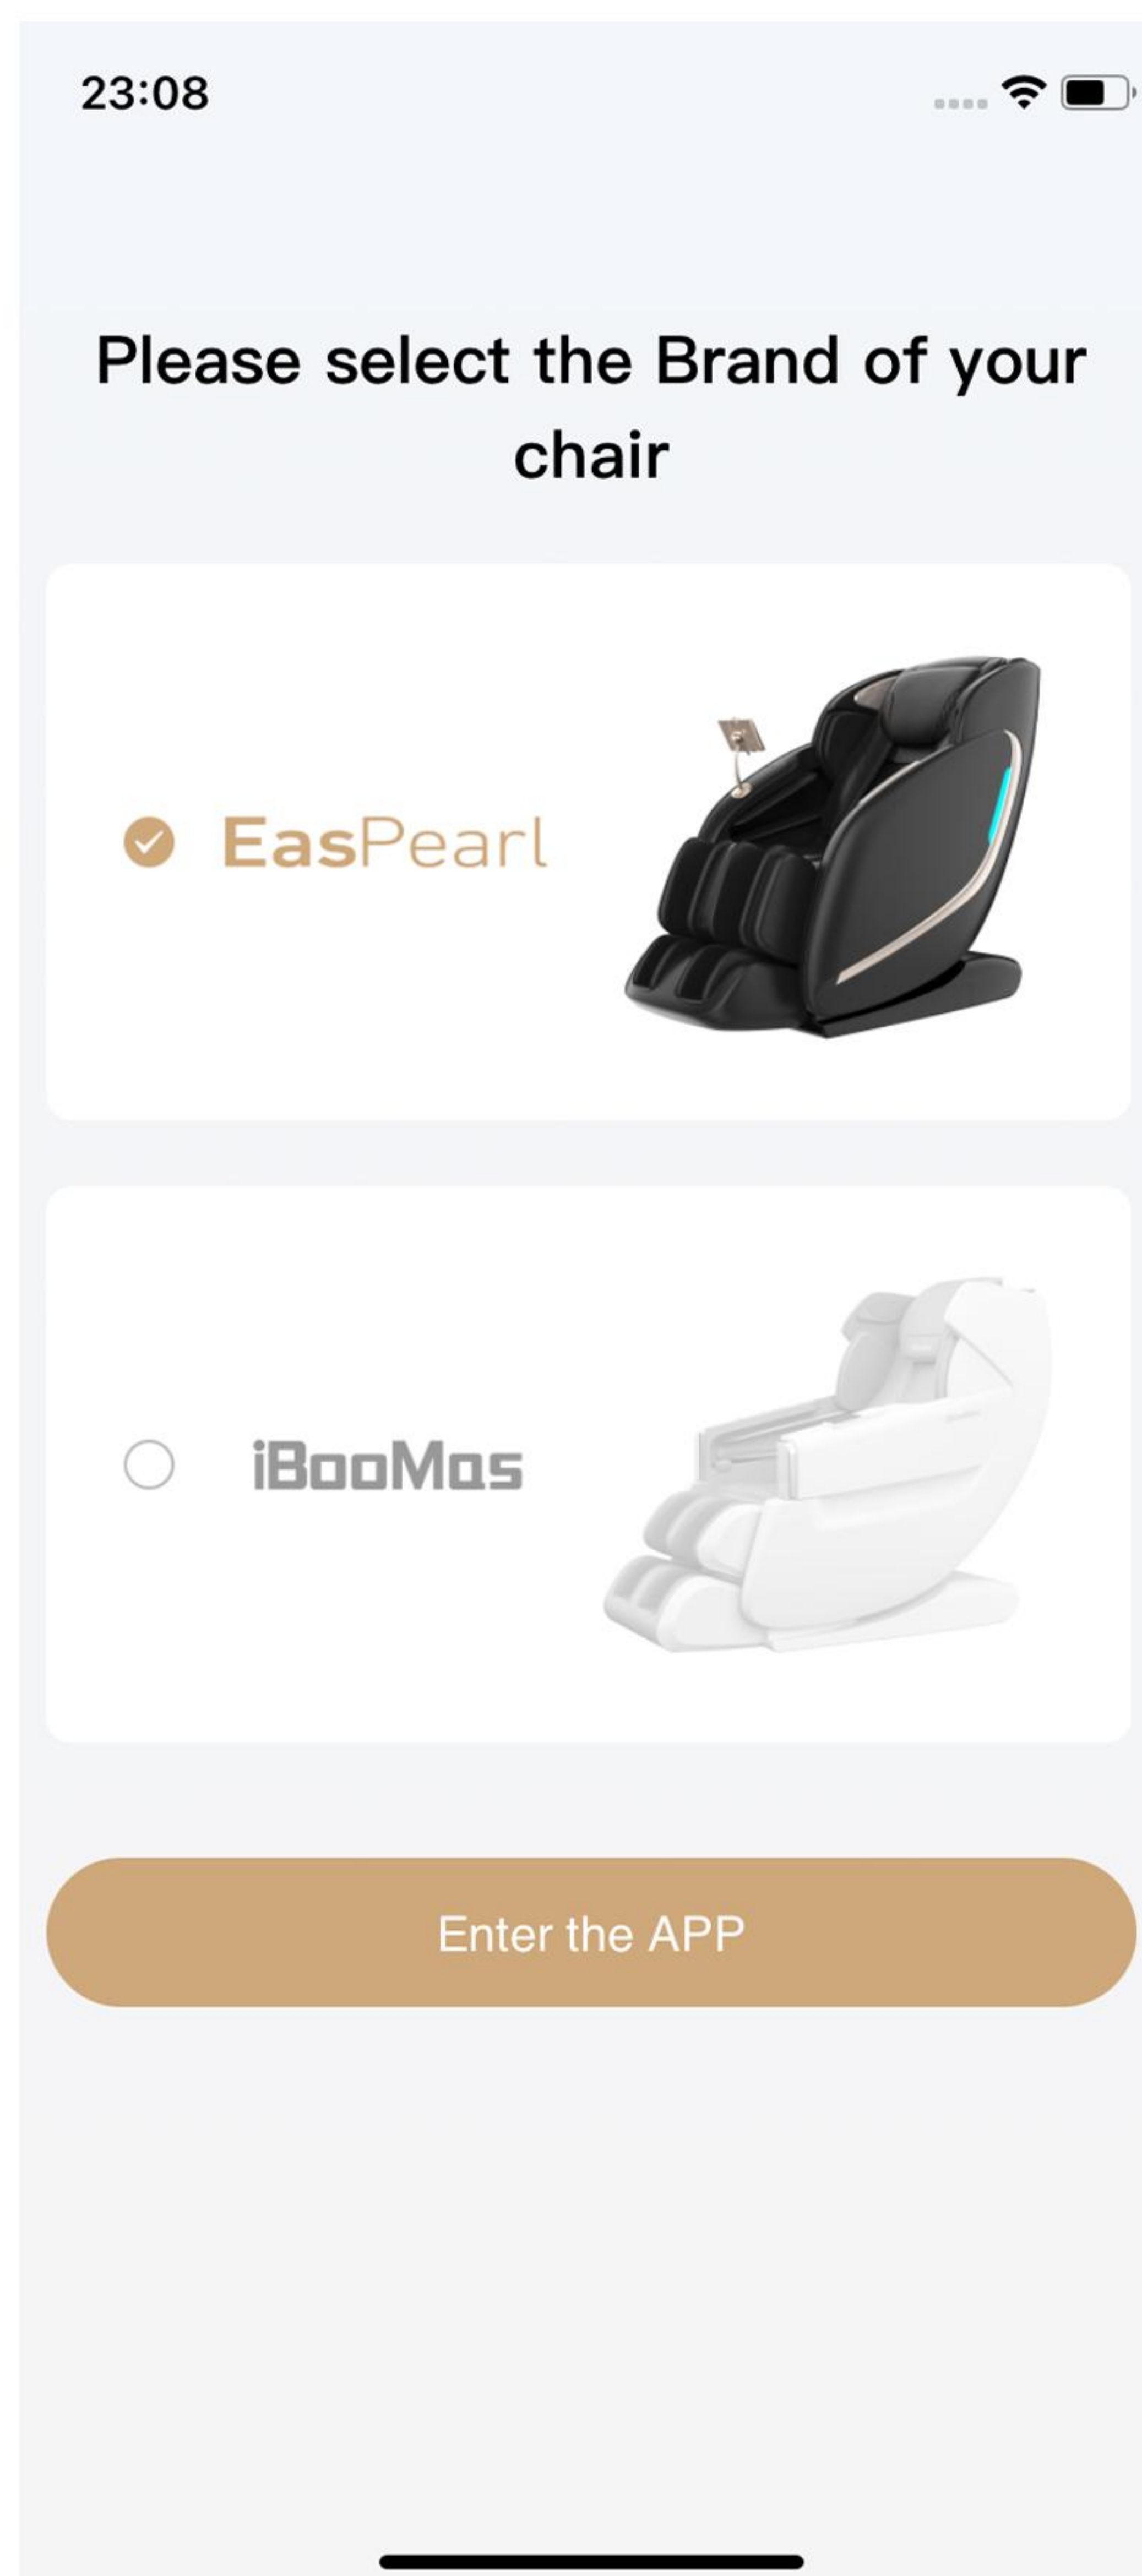
Please keep your account password safe after registering and logging in. Next, click Save and enter to proceed to the next step.

(3) Complete new user orientation

23:28 ← New User Guide ● ● ● Step 1 Step 2 Step 3 1.Basic information Complete your personal information to enjoy a more personalized massage service. *Height(ft) 6 *Weight(lb) 165 Birthday 1998-03-30 > Gender female > Next ① Fill in the basic information.	23:28 ← New User Guide ● ● ● Step 1 Step 2 Step 3 2.Improve After-sales service information Please complete the information to obtain more personalized and considerate after-sales service. *Which channel did you purchase the massage chair from? Amazon Walmart Wayfair iBooMas.com Other Next
---	---



② Fill in your mobile phone number and email address to receive more personalized and thoughtful after-sales service.

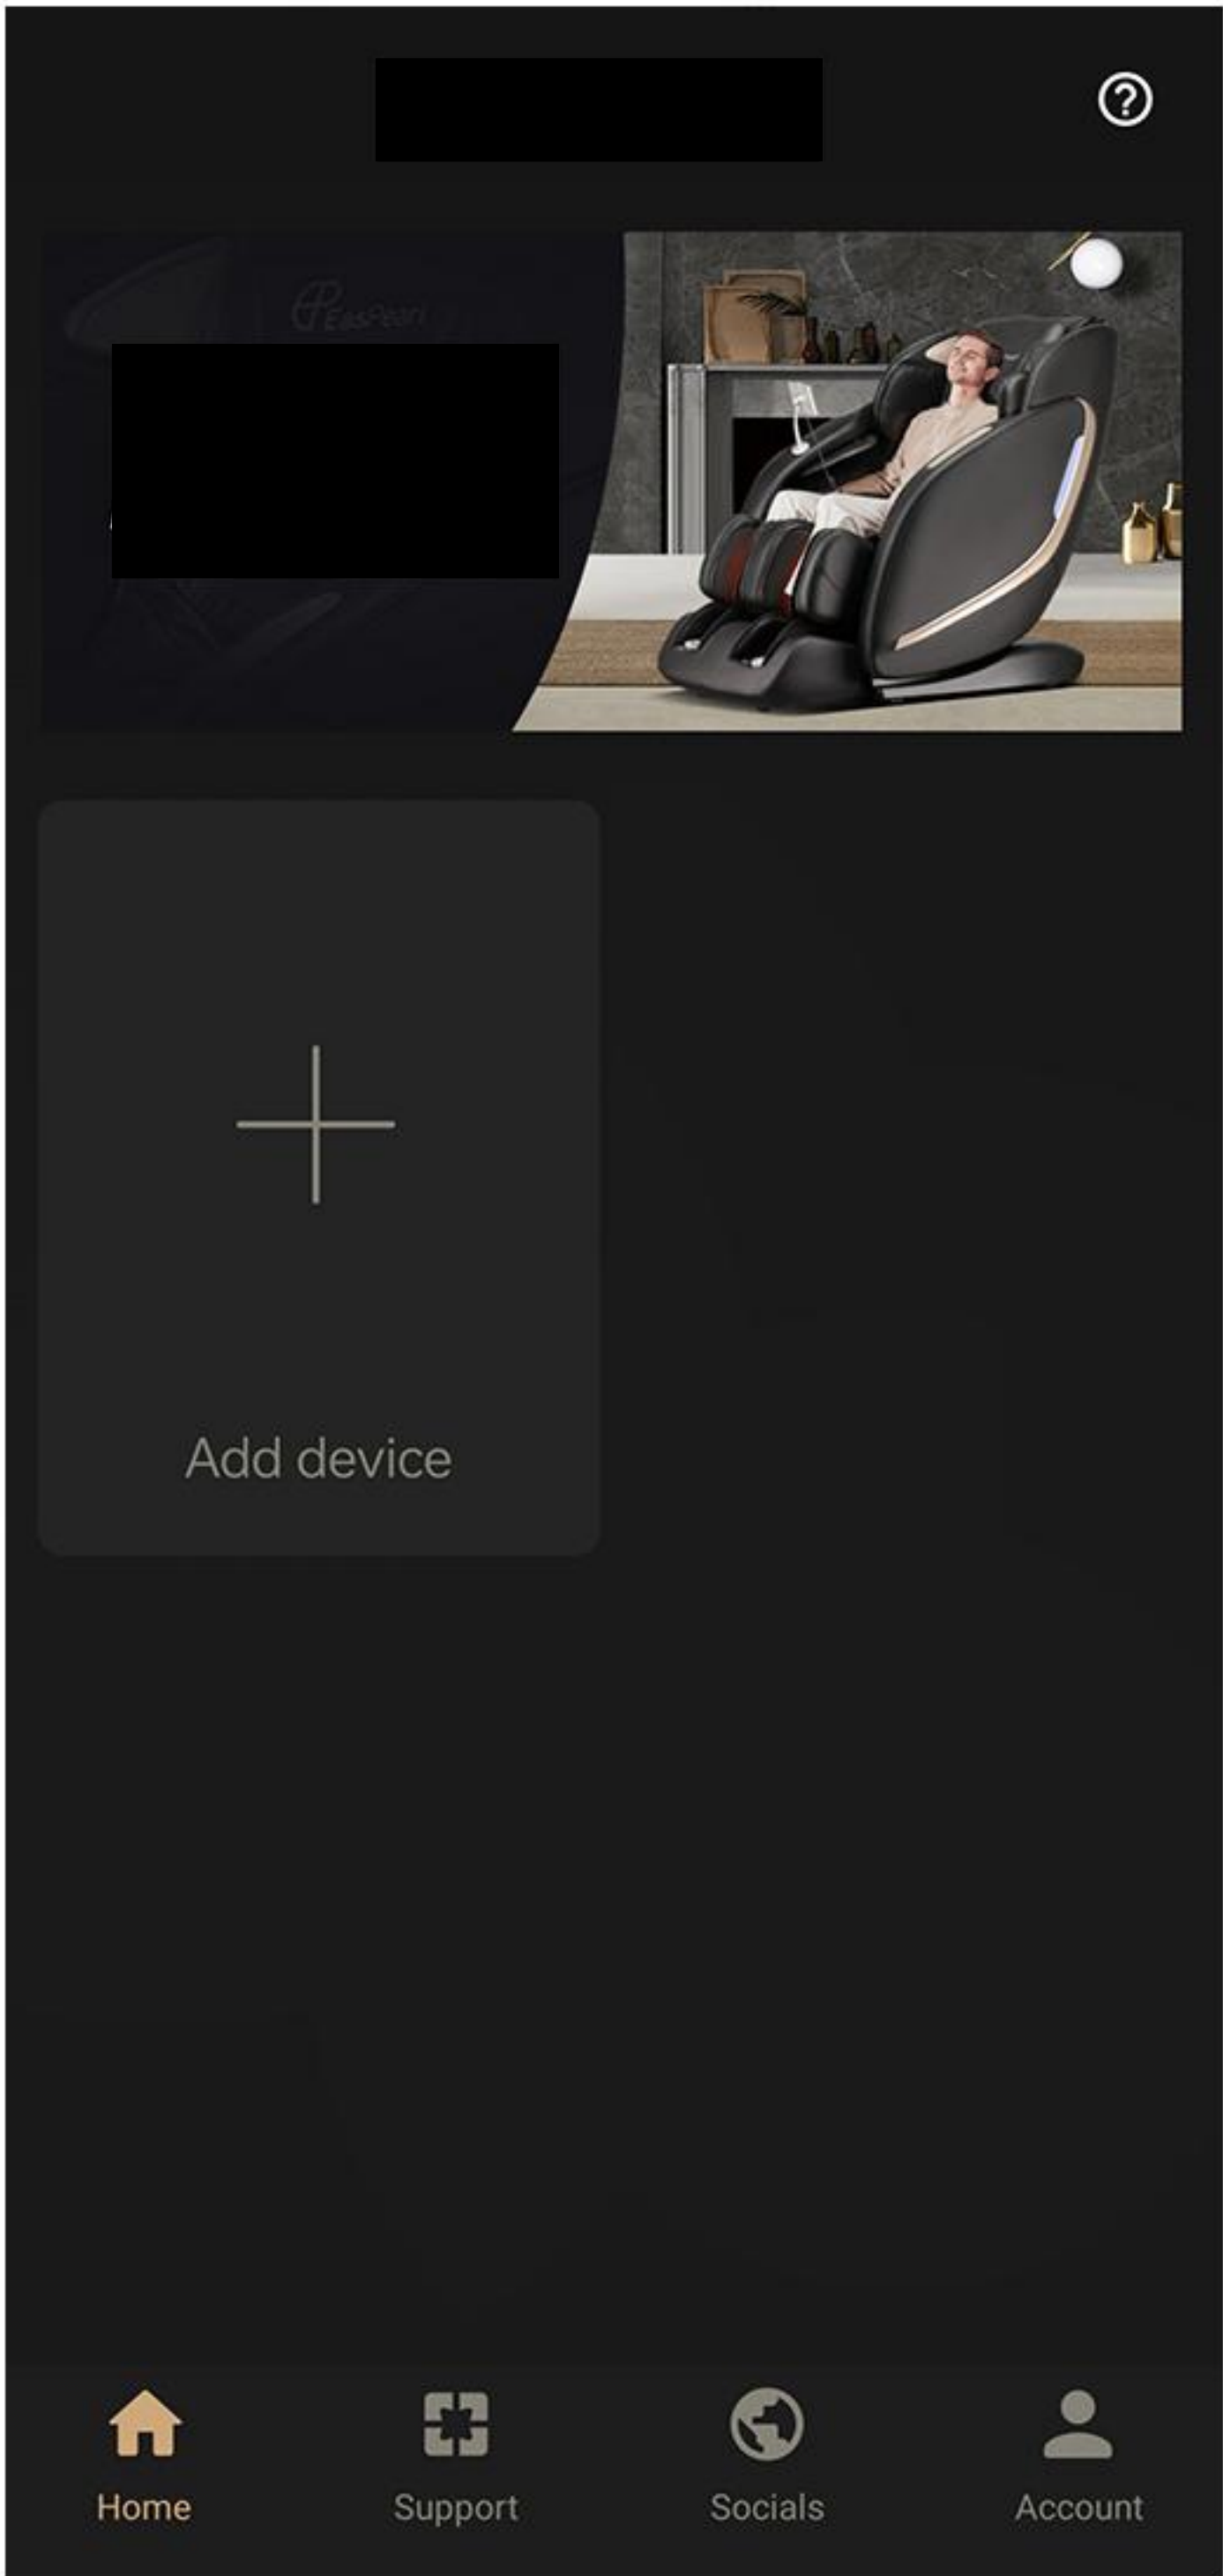
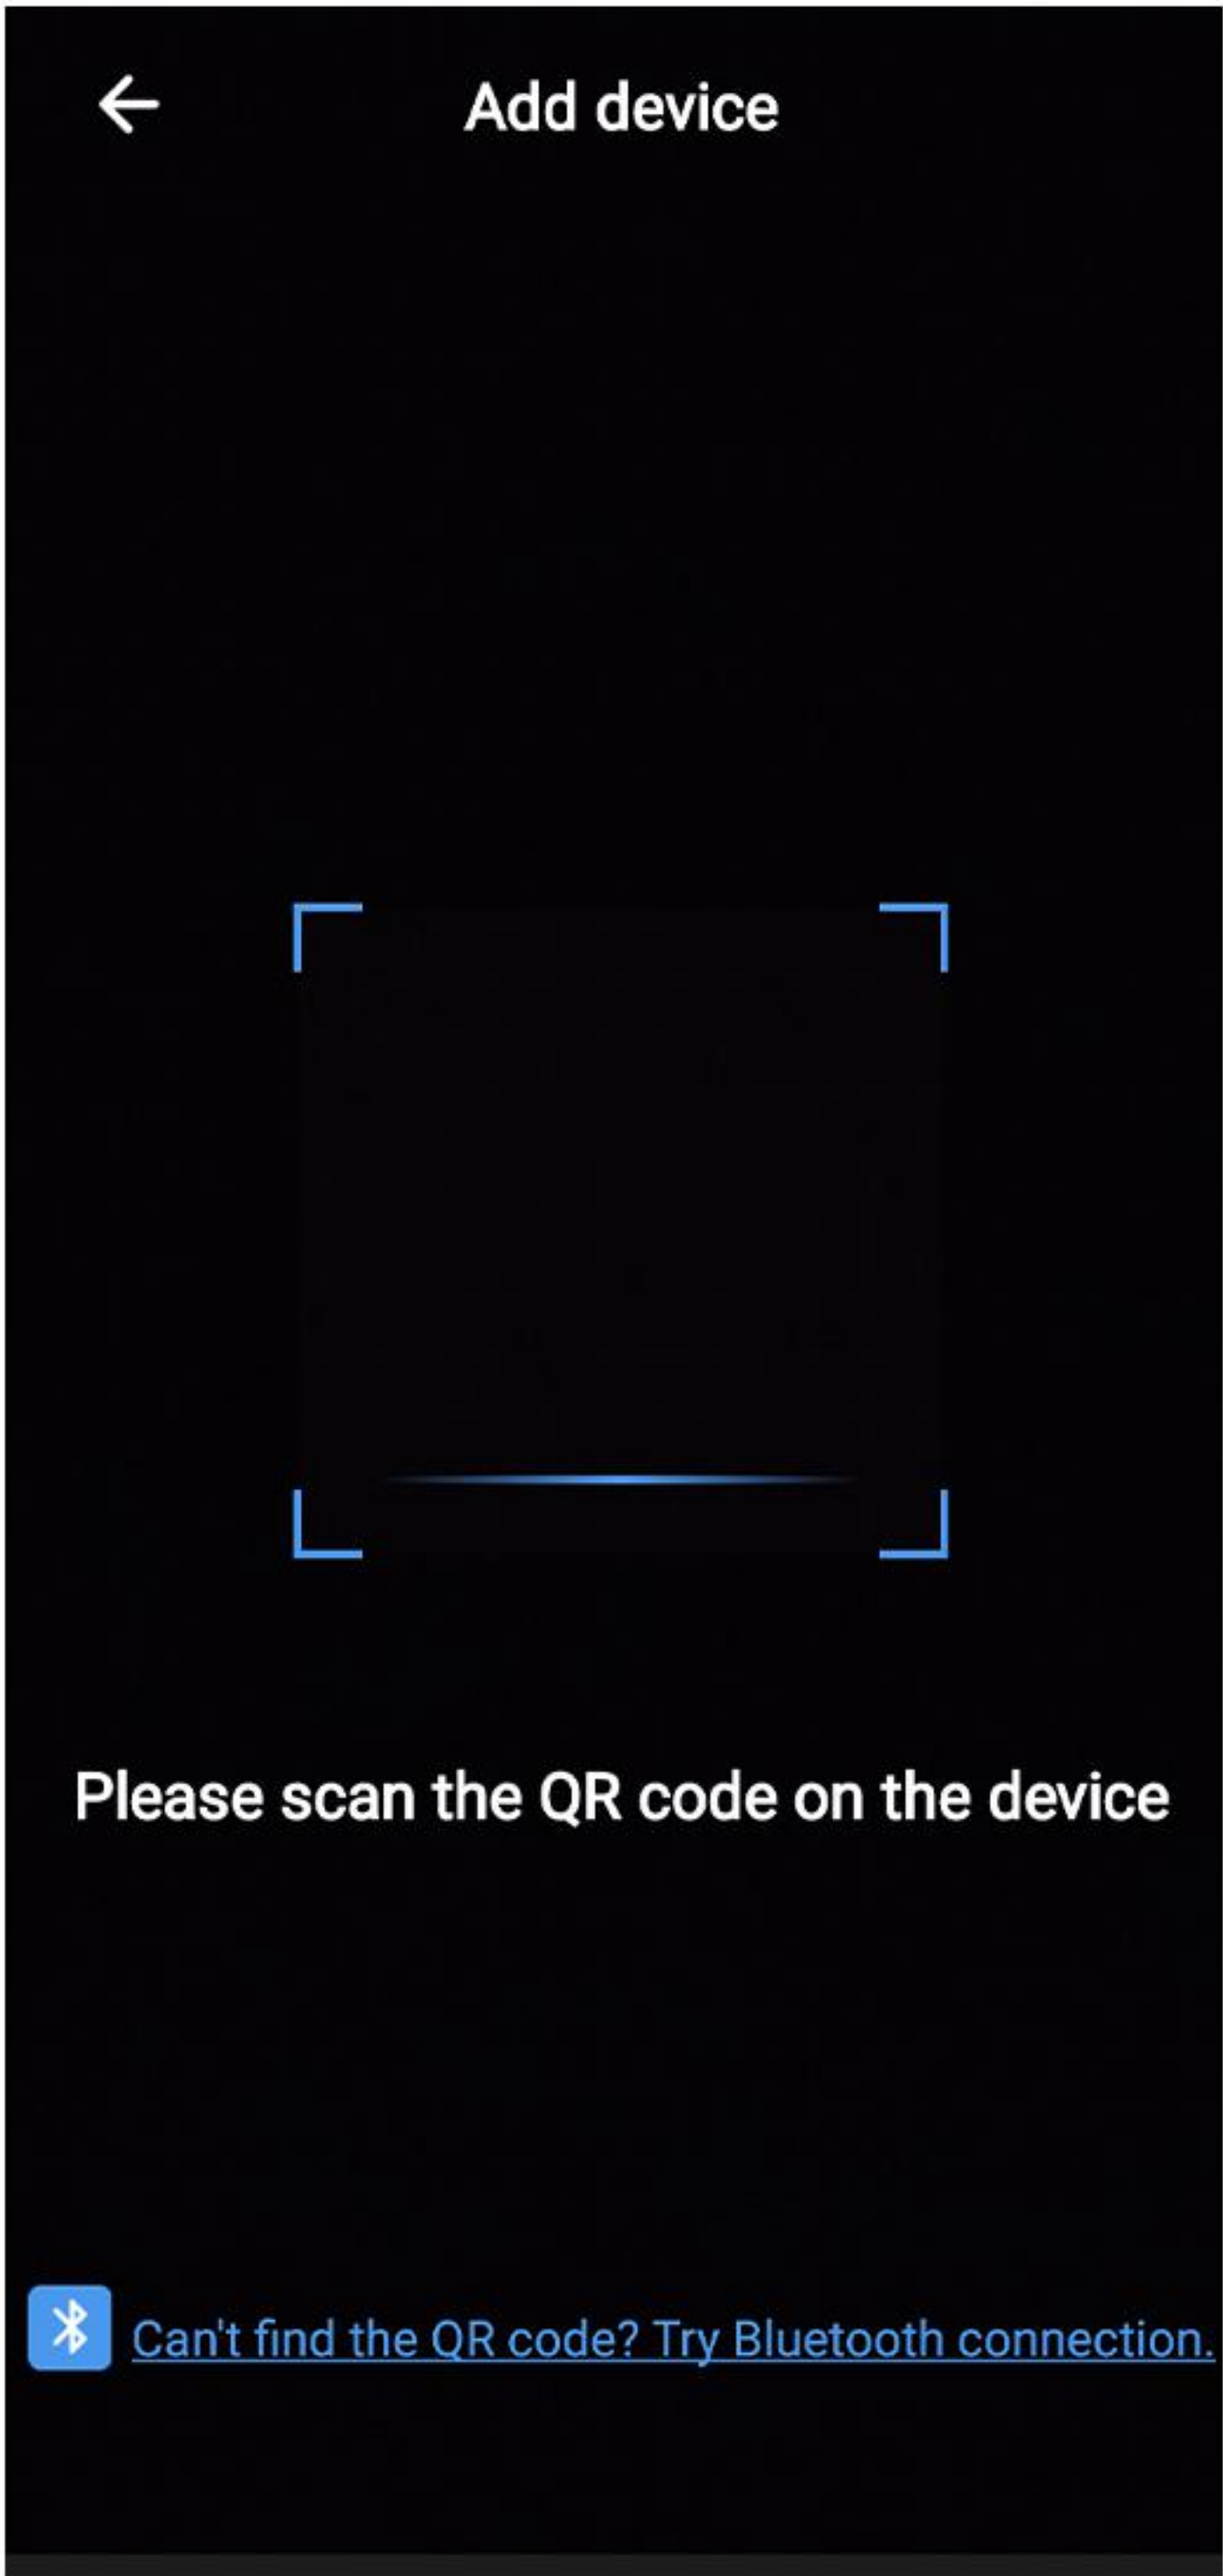
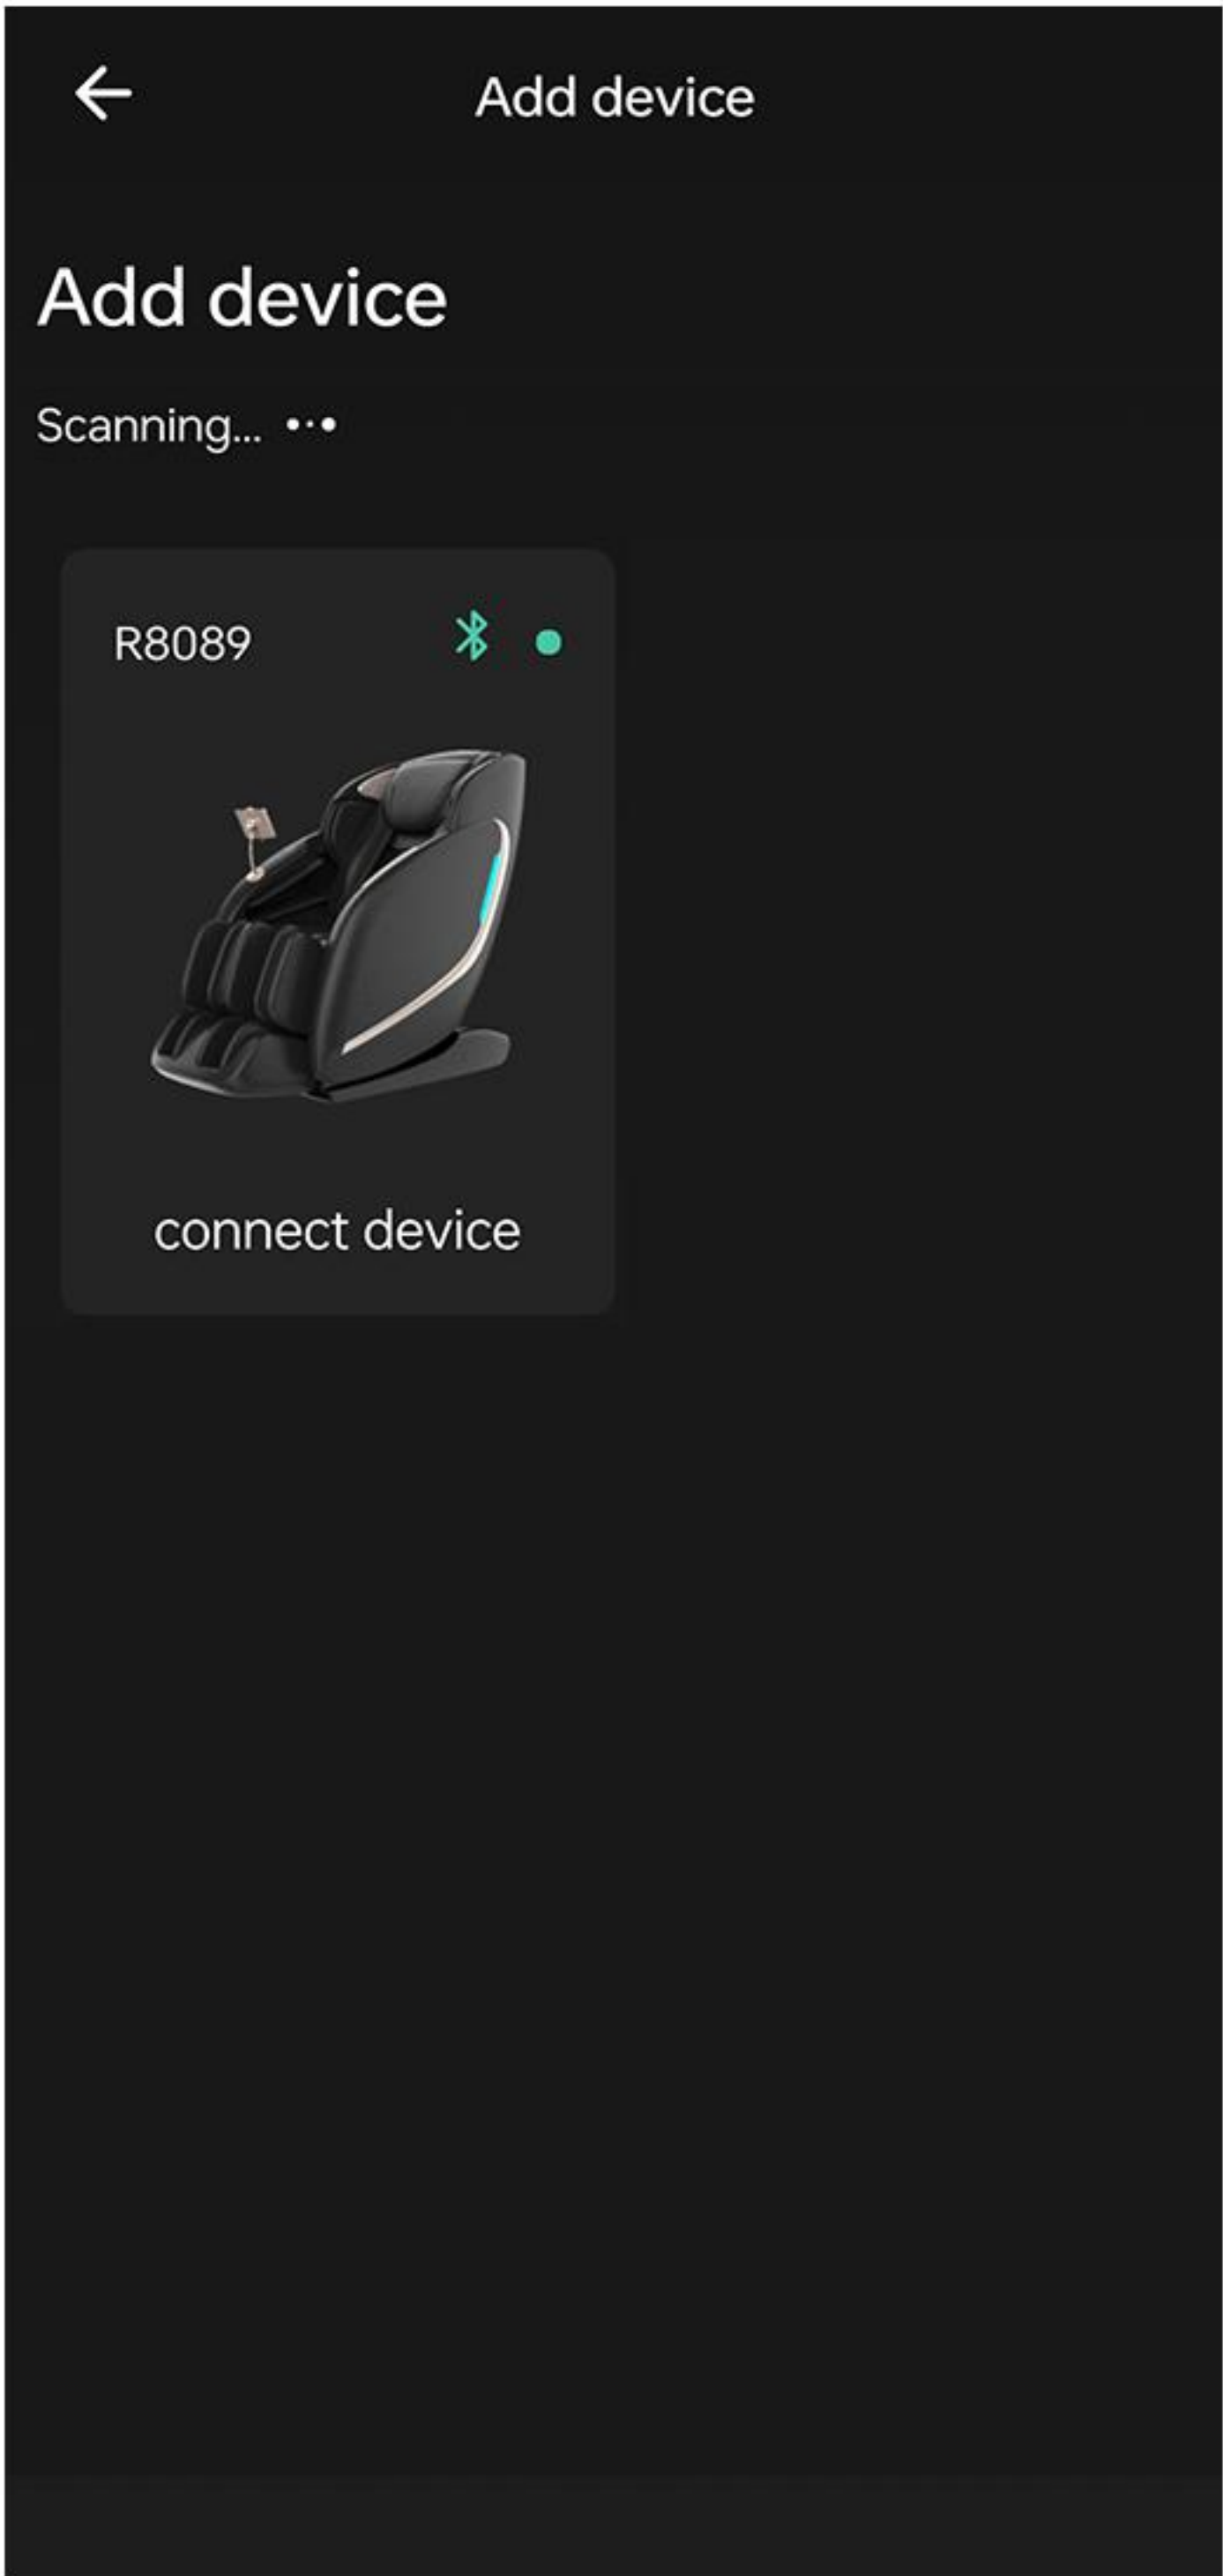


③ Select the brand of the massage chair: Easpearl.

- (4) Enable the location and Bluetooth permissions
- (5) Connect to the massage chair device

PLEASE NOTE:

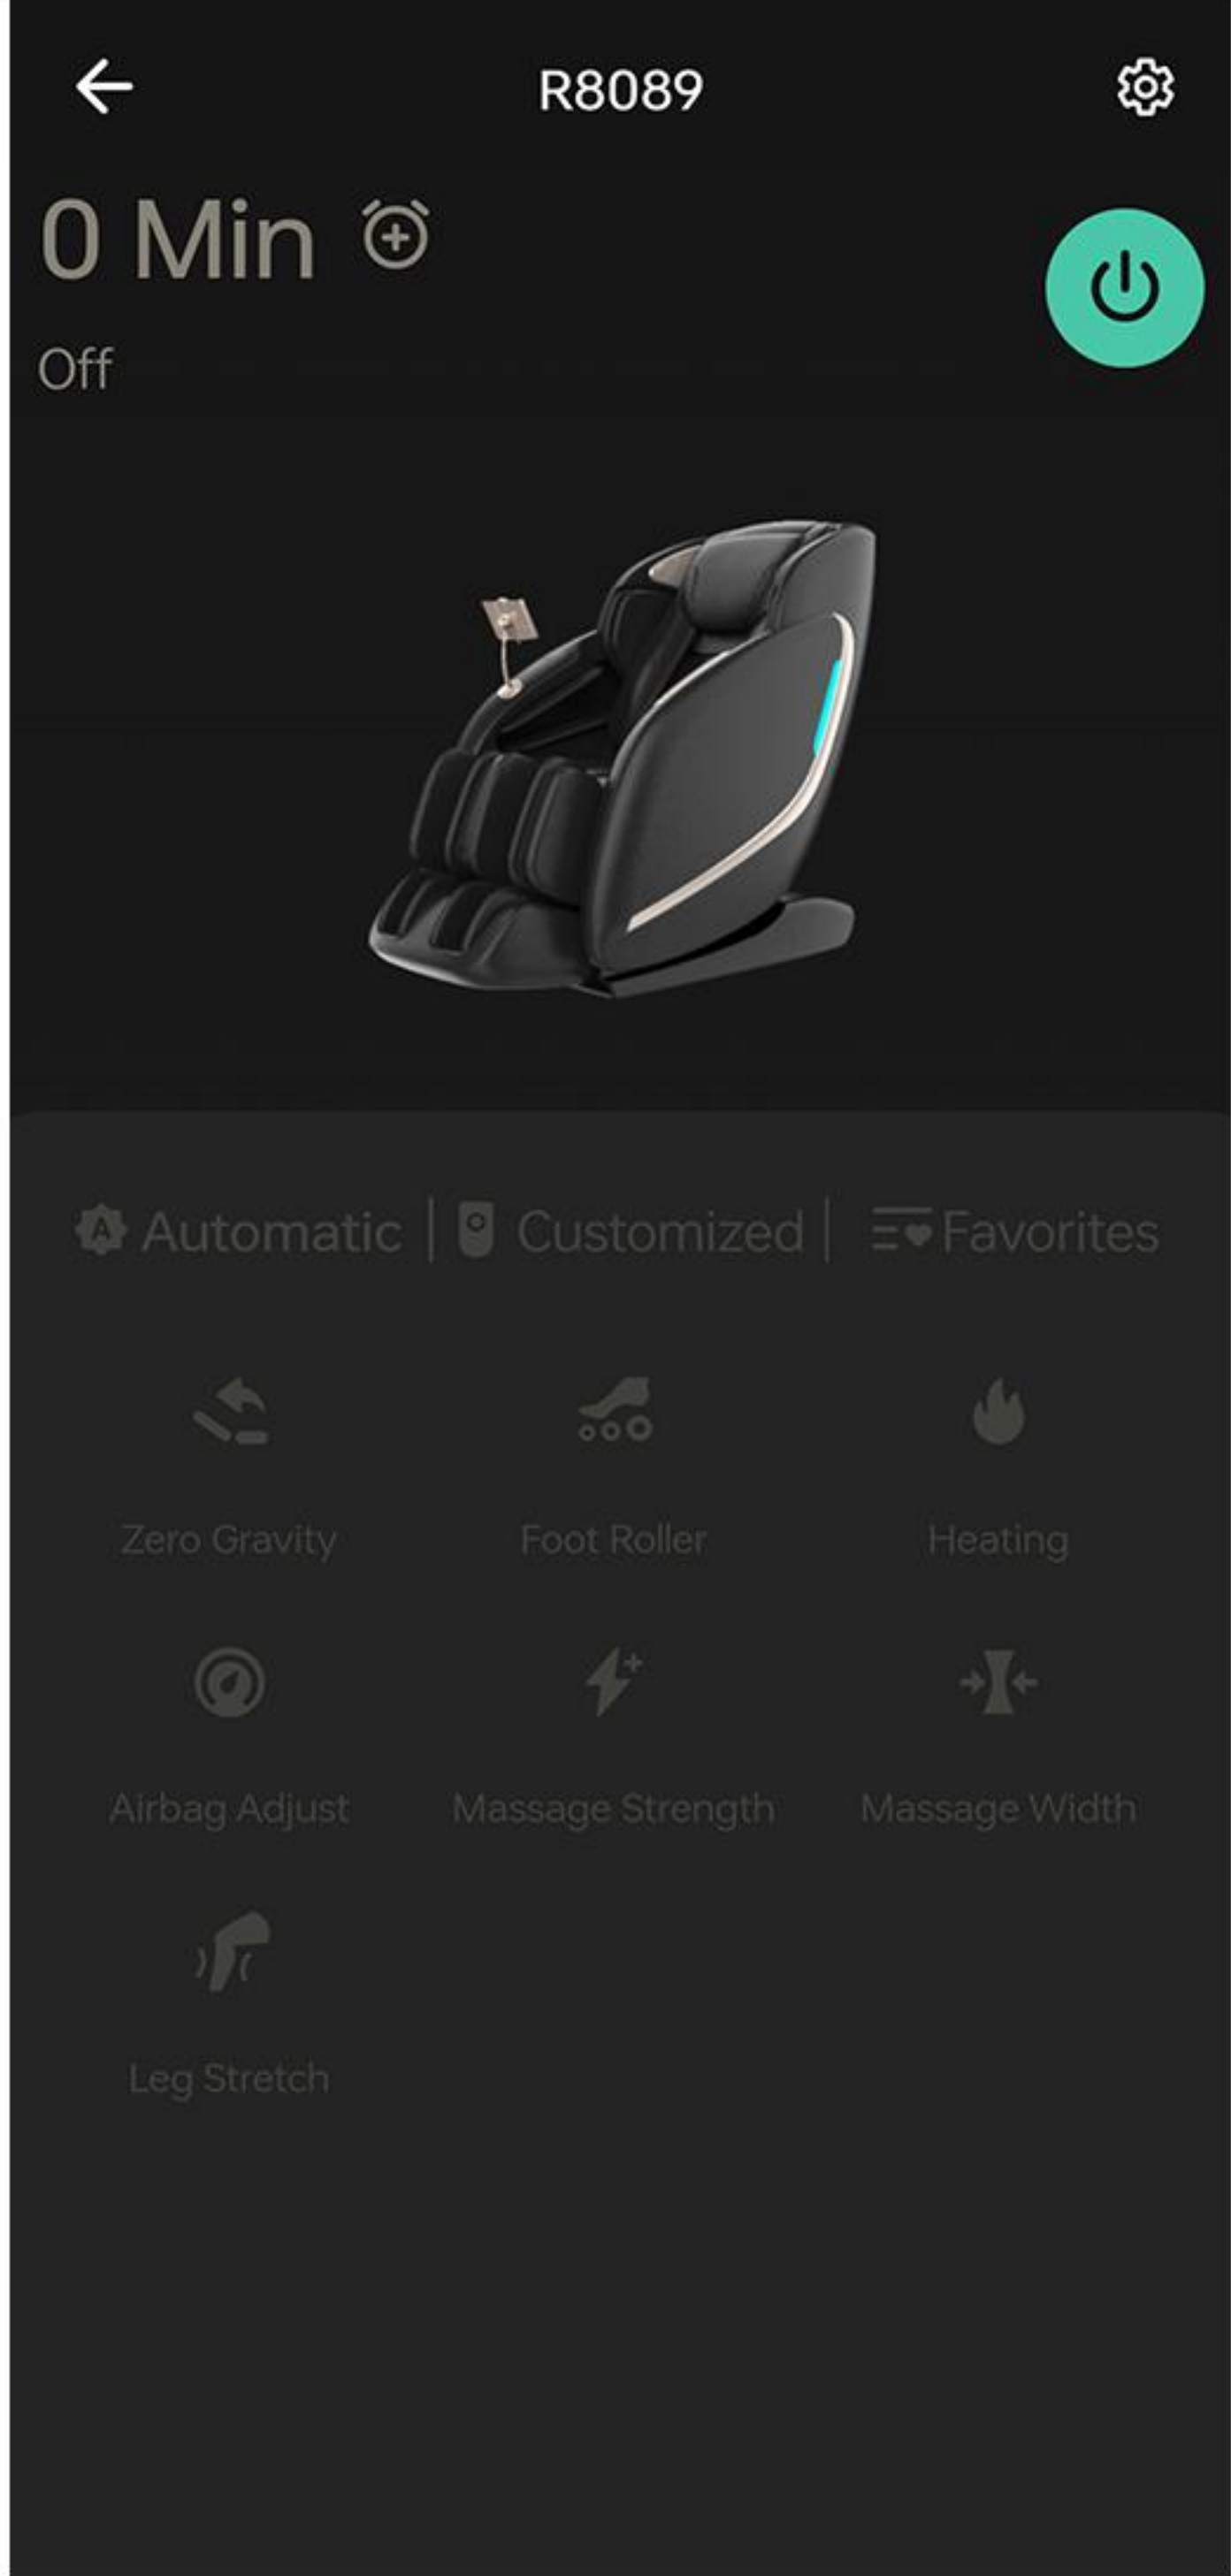
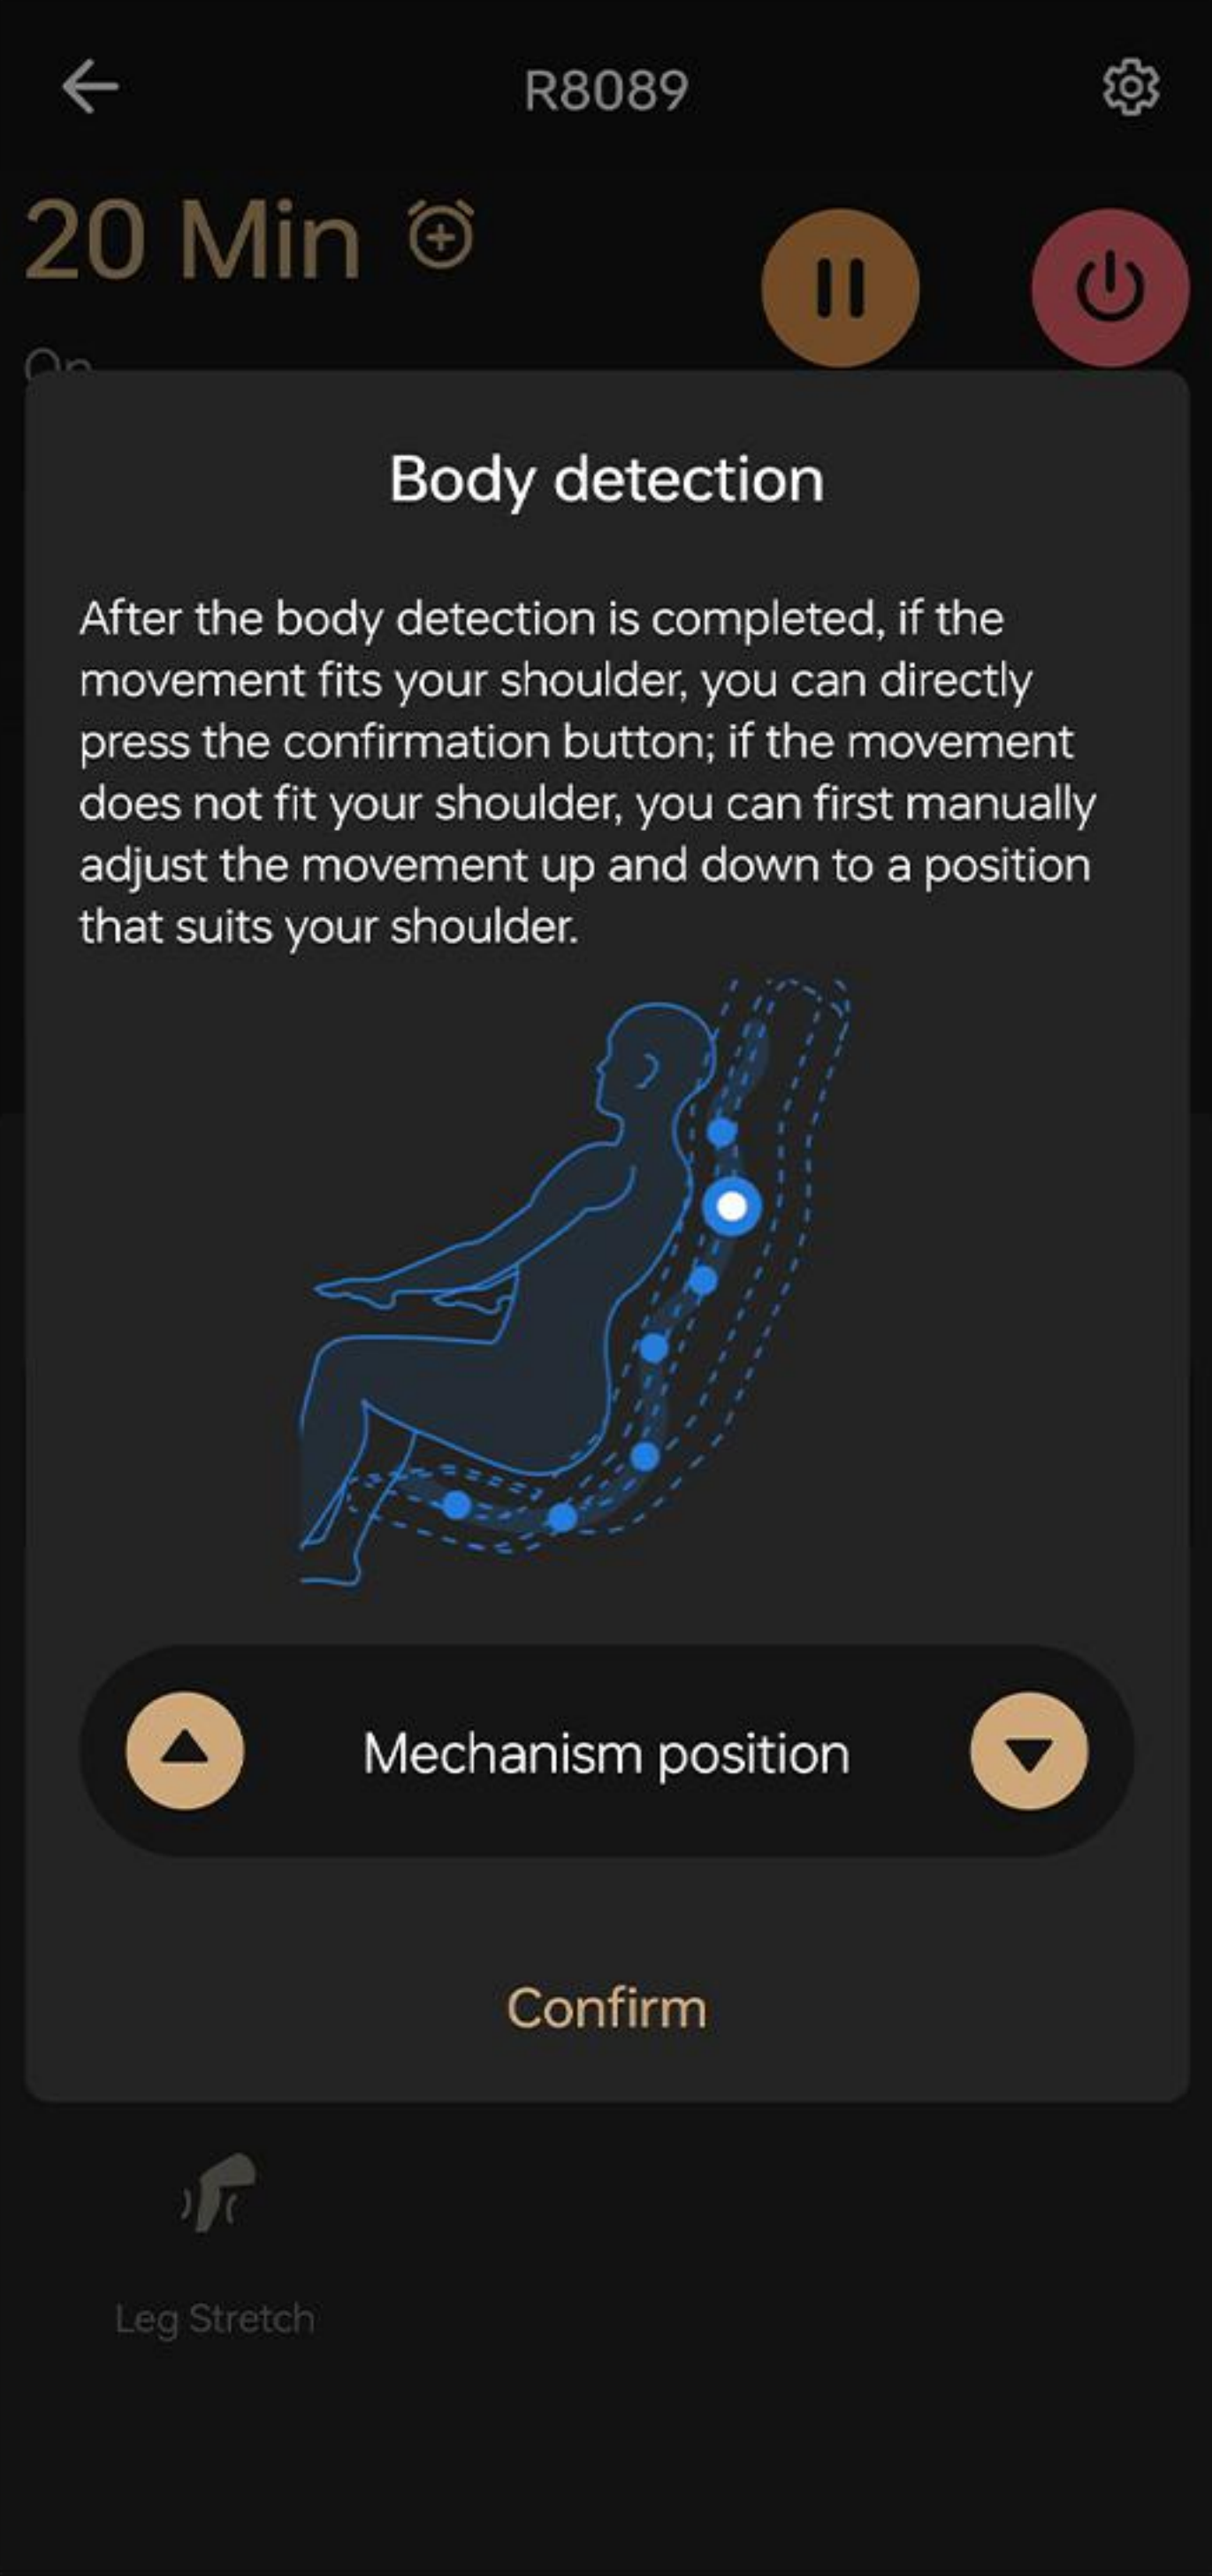
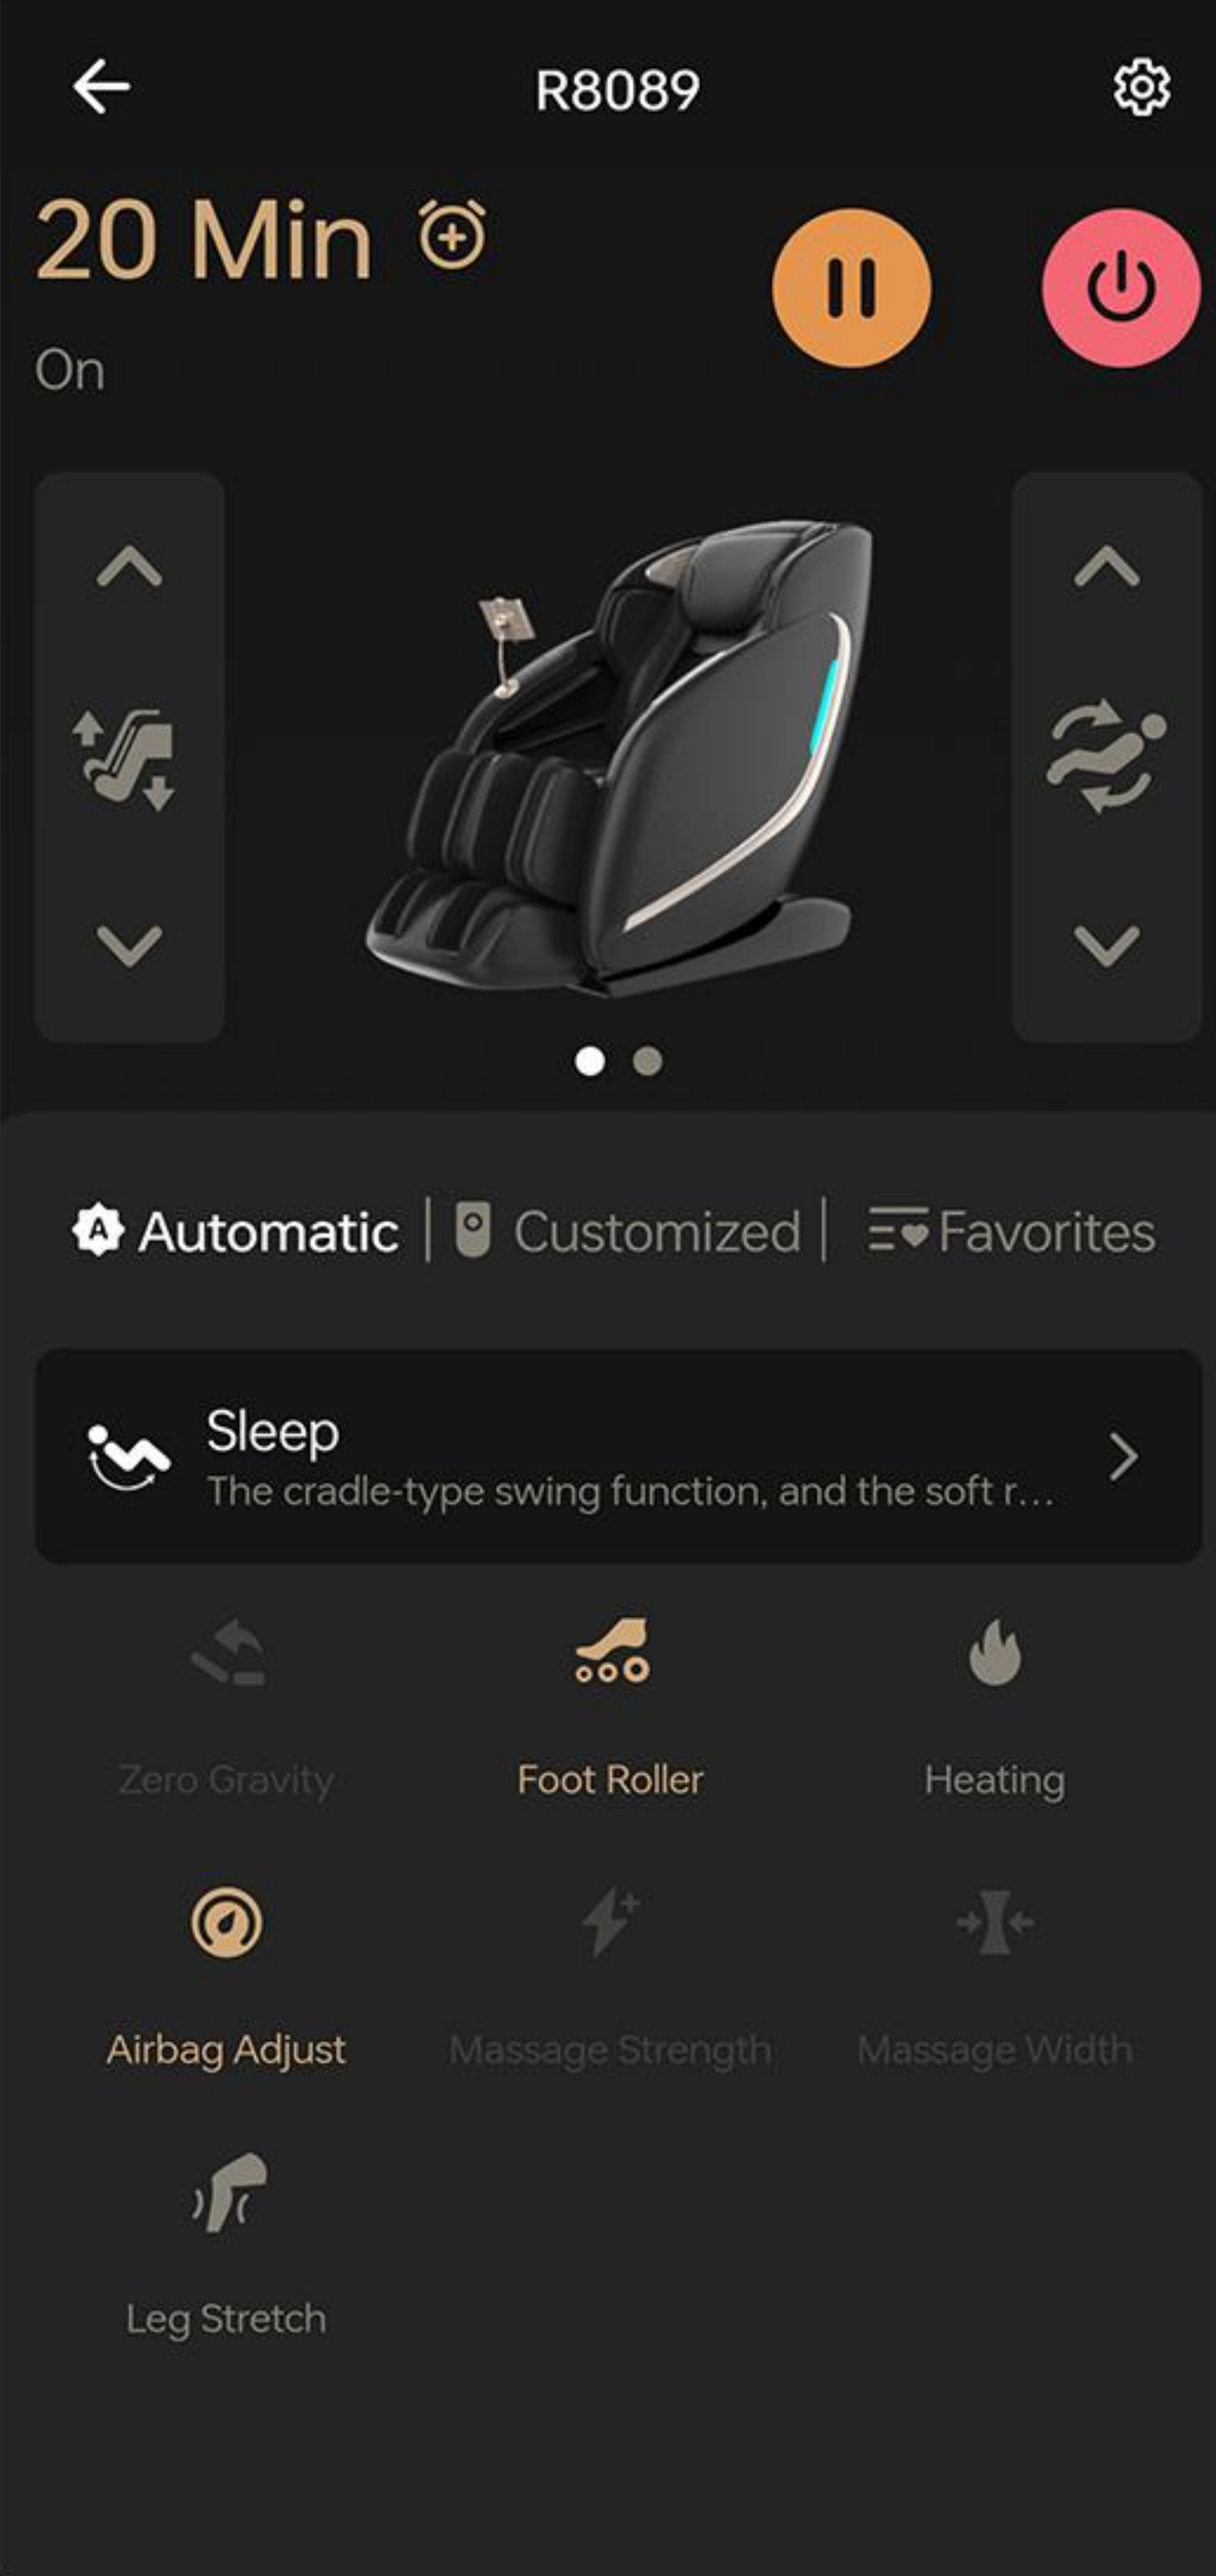
- Check whether the power connection of the massage chair is normal; please be close to the massage chair when using it.
- A massage chair can only be connected to one mobile phone, please check whether there are other mobile phones connected to the massage chair.
- If there are other mobile phones connected, please click the 'Disconnect' button in the 'Massage Chair Settings' page, and then reconnect.

		
① Please click 'Add device' in Home interface	② Click 'Try Bluetooth connection'	③ Select R8089

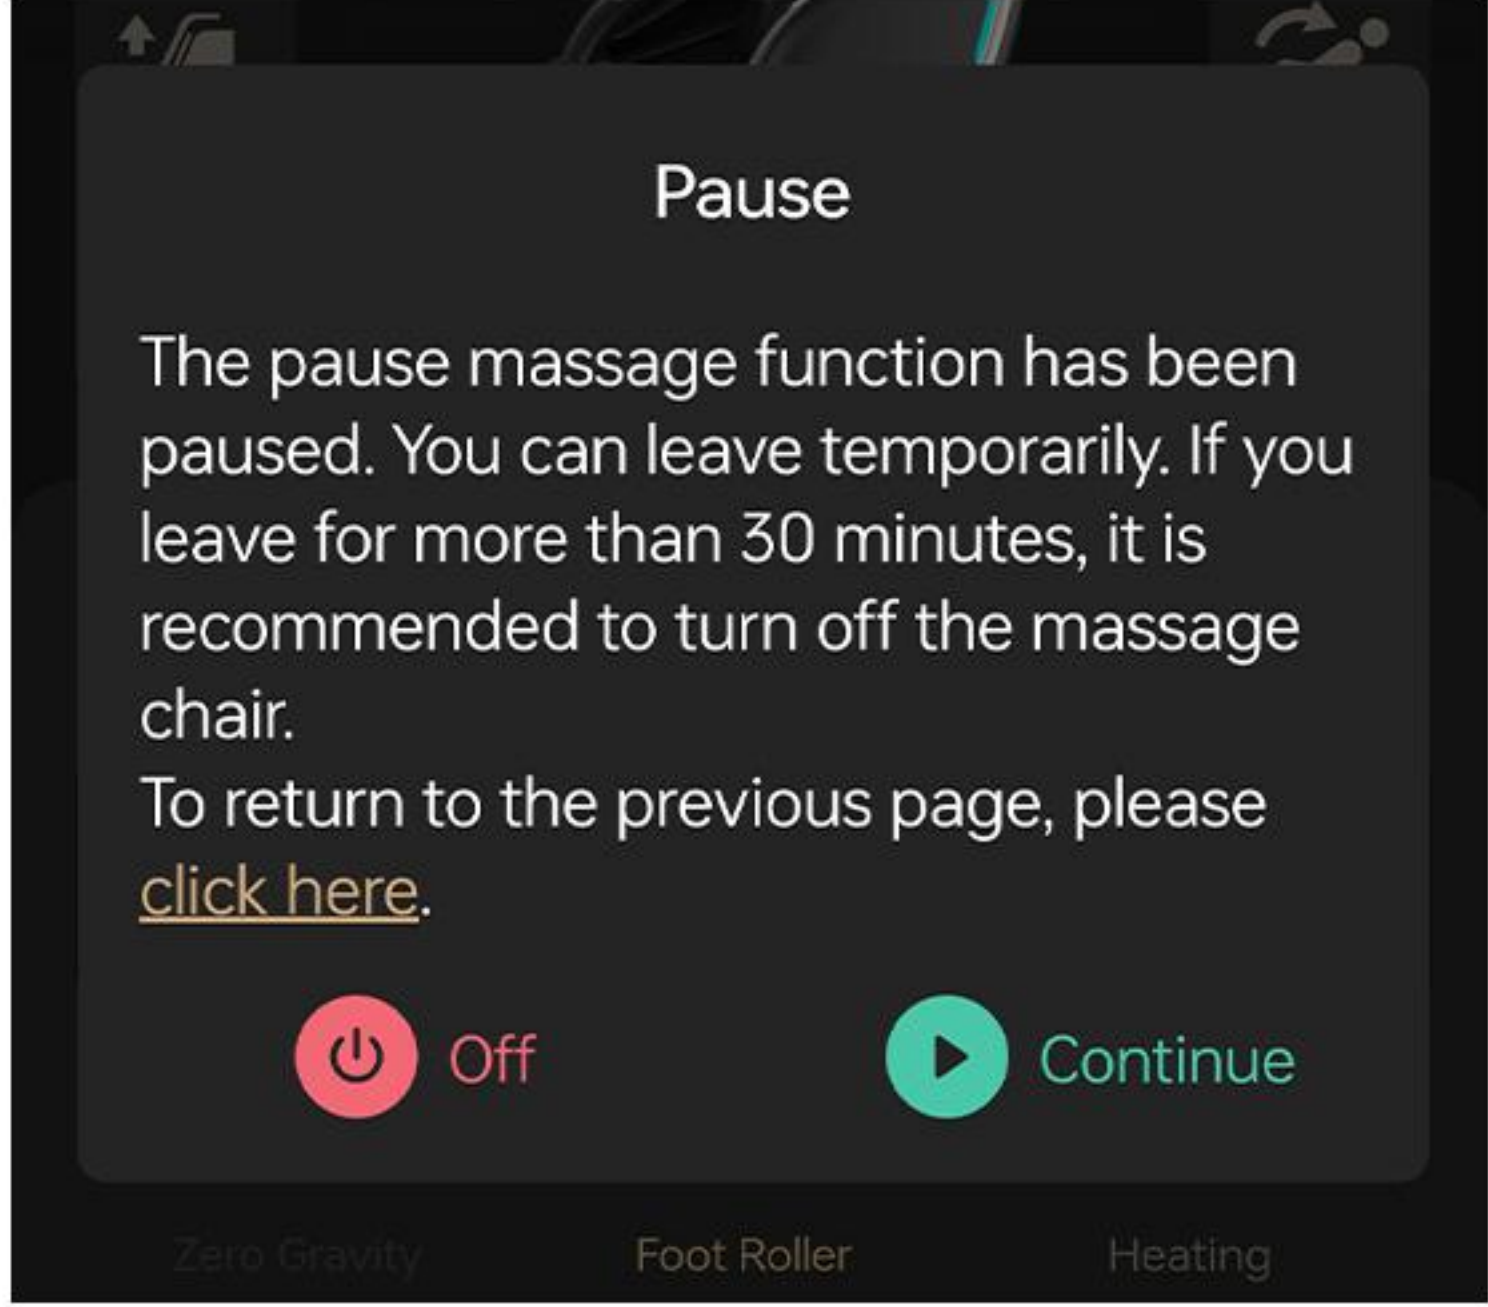
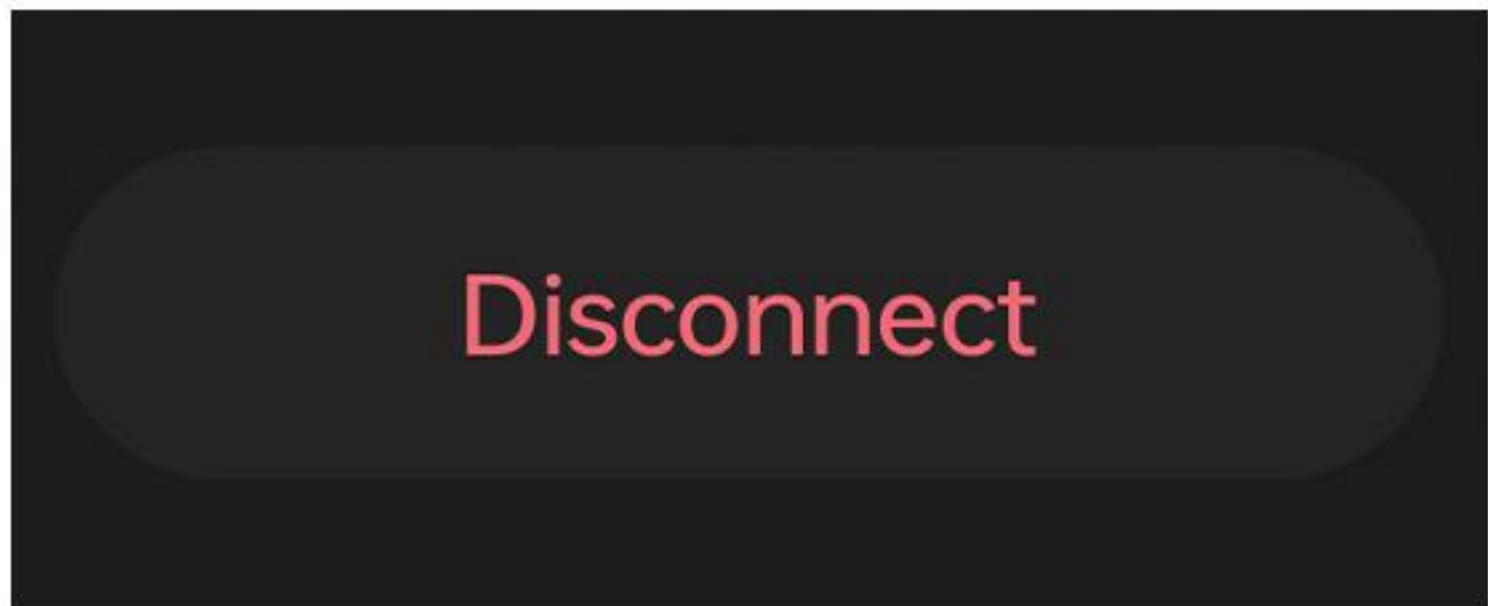
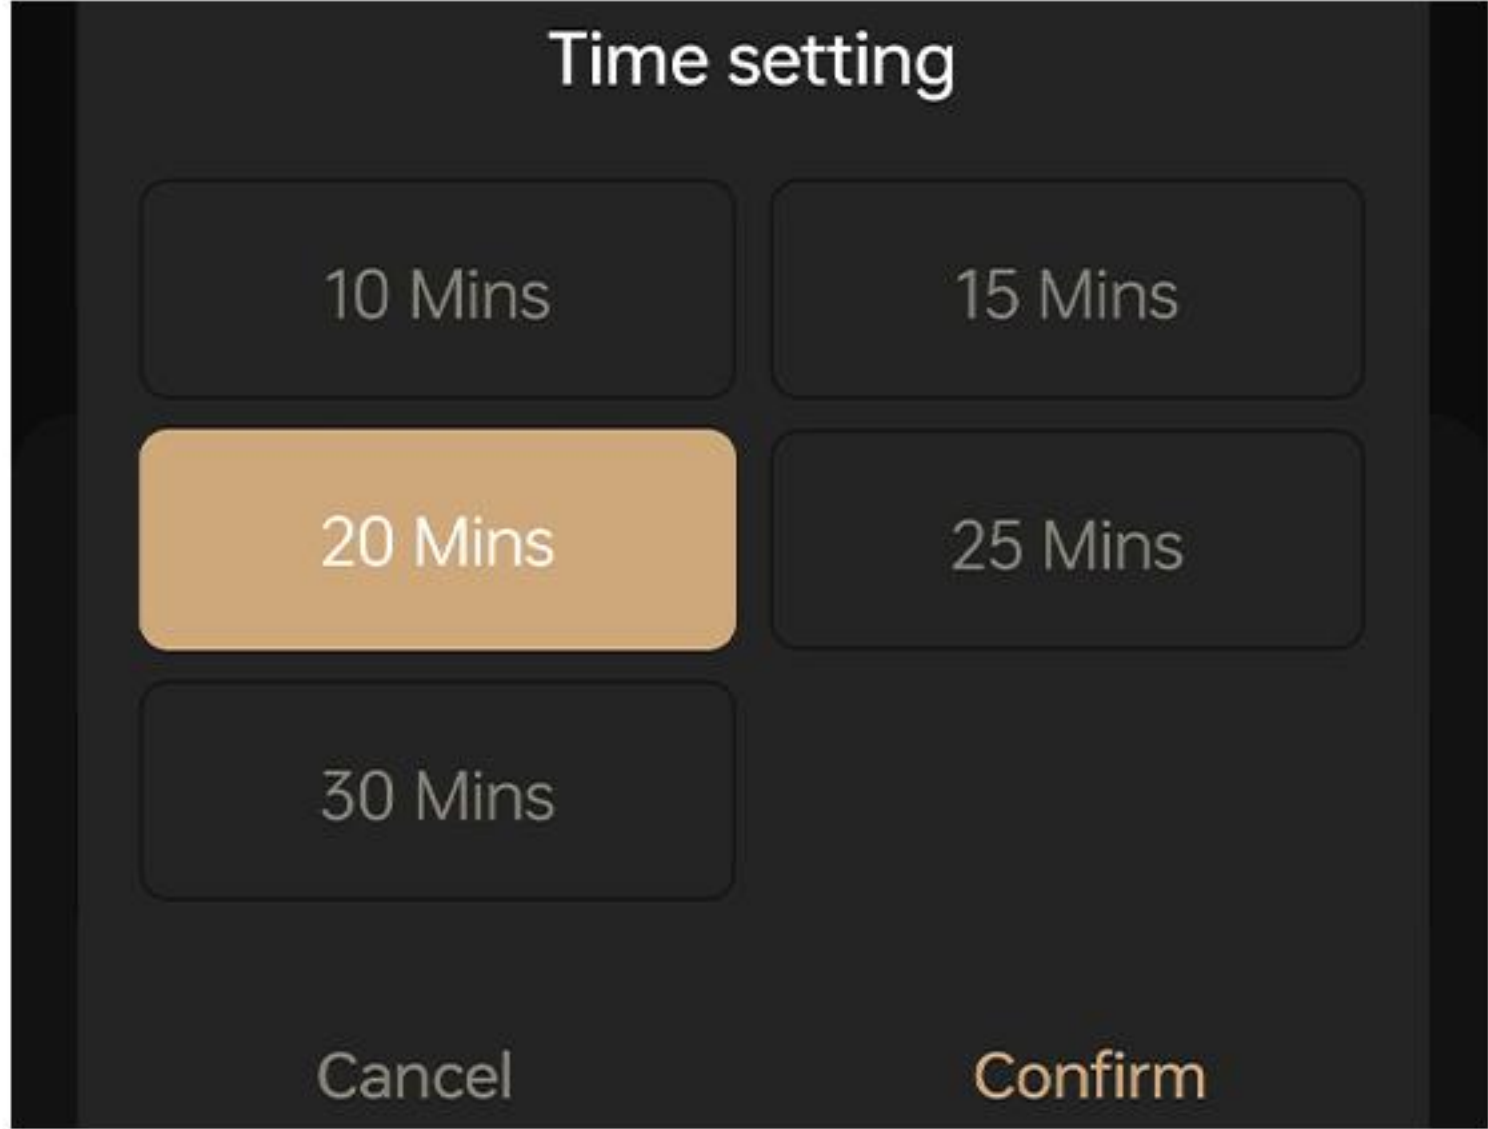
4.2.3.1 App Download and Login

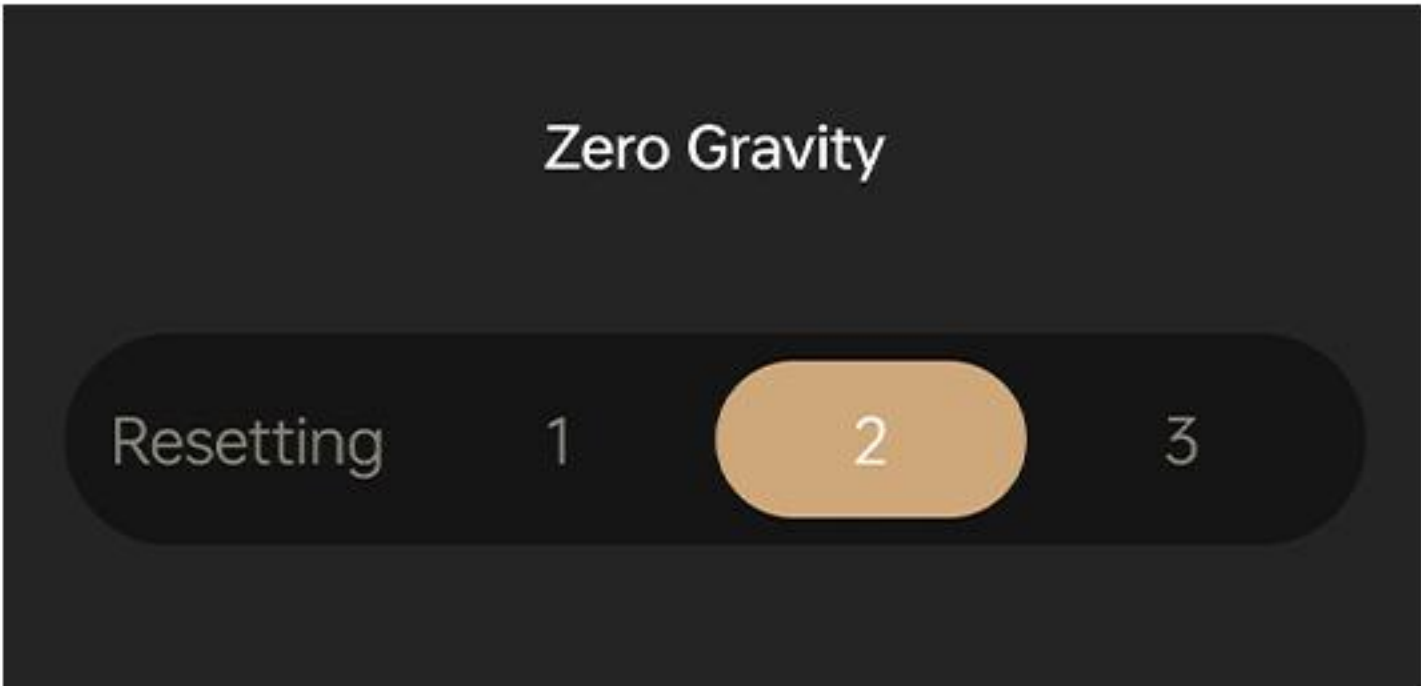
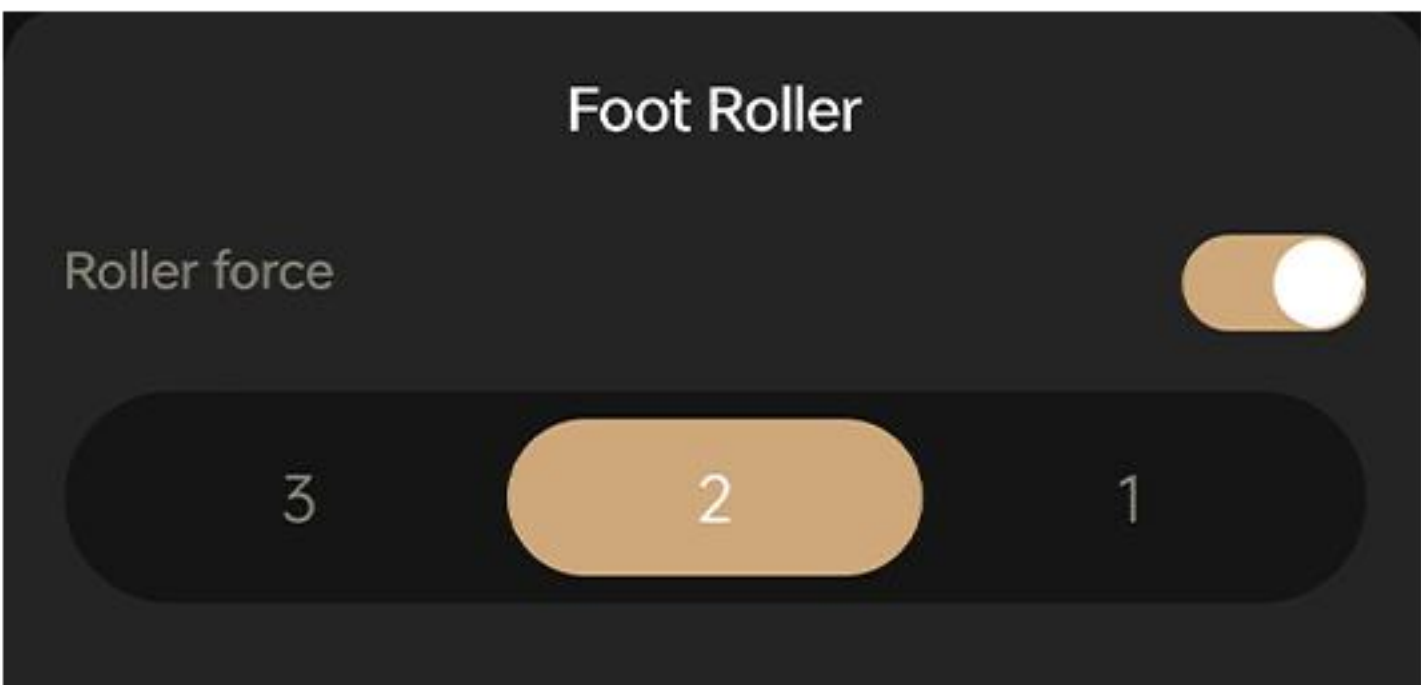
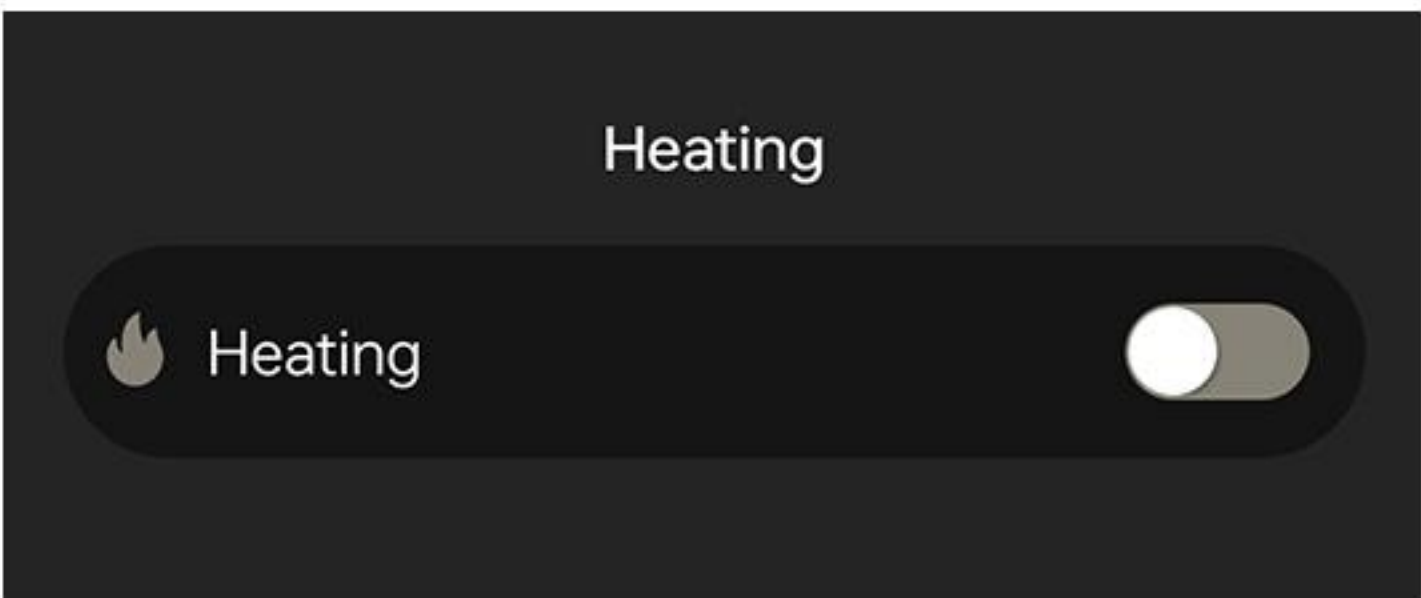
1. Introduction of massage chair operation page

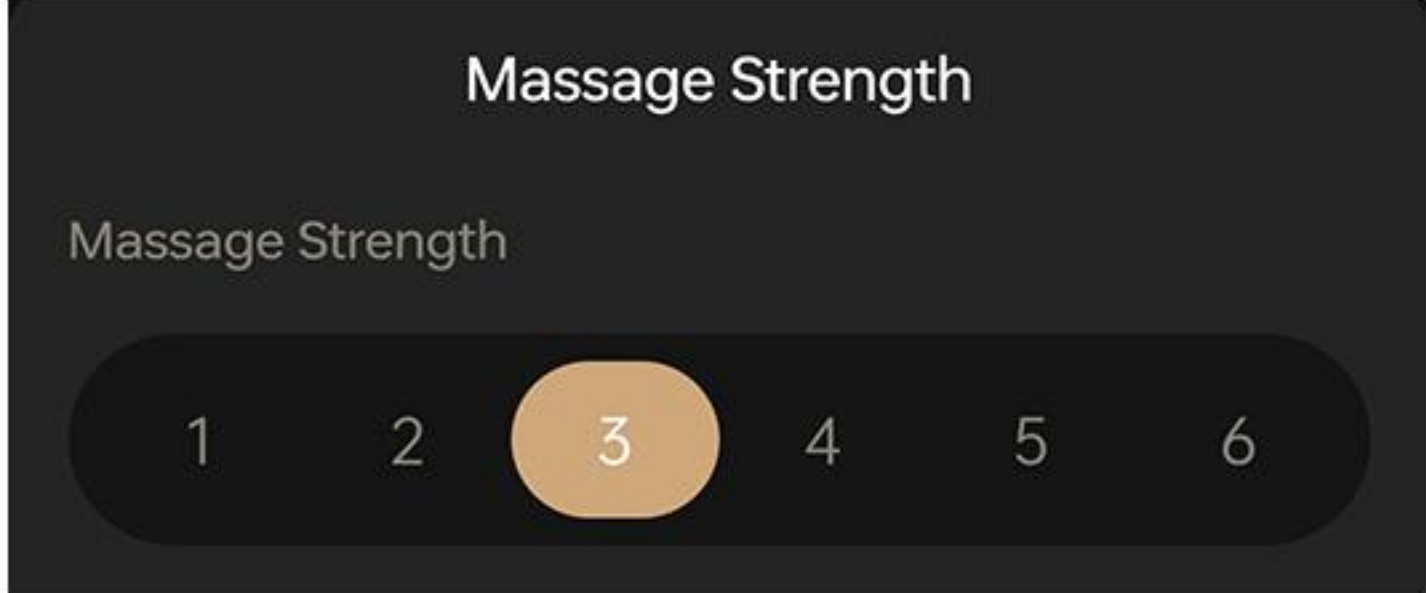
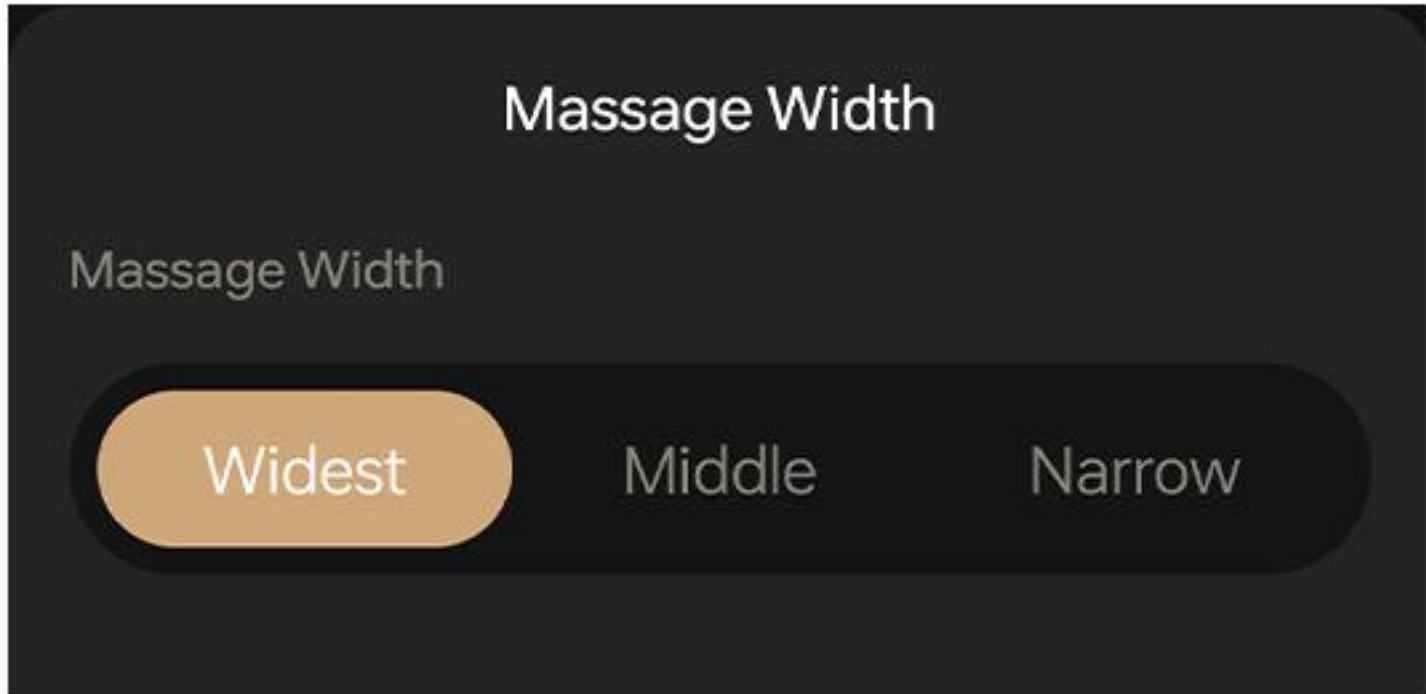
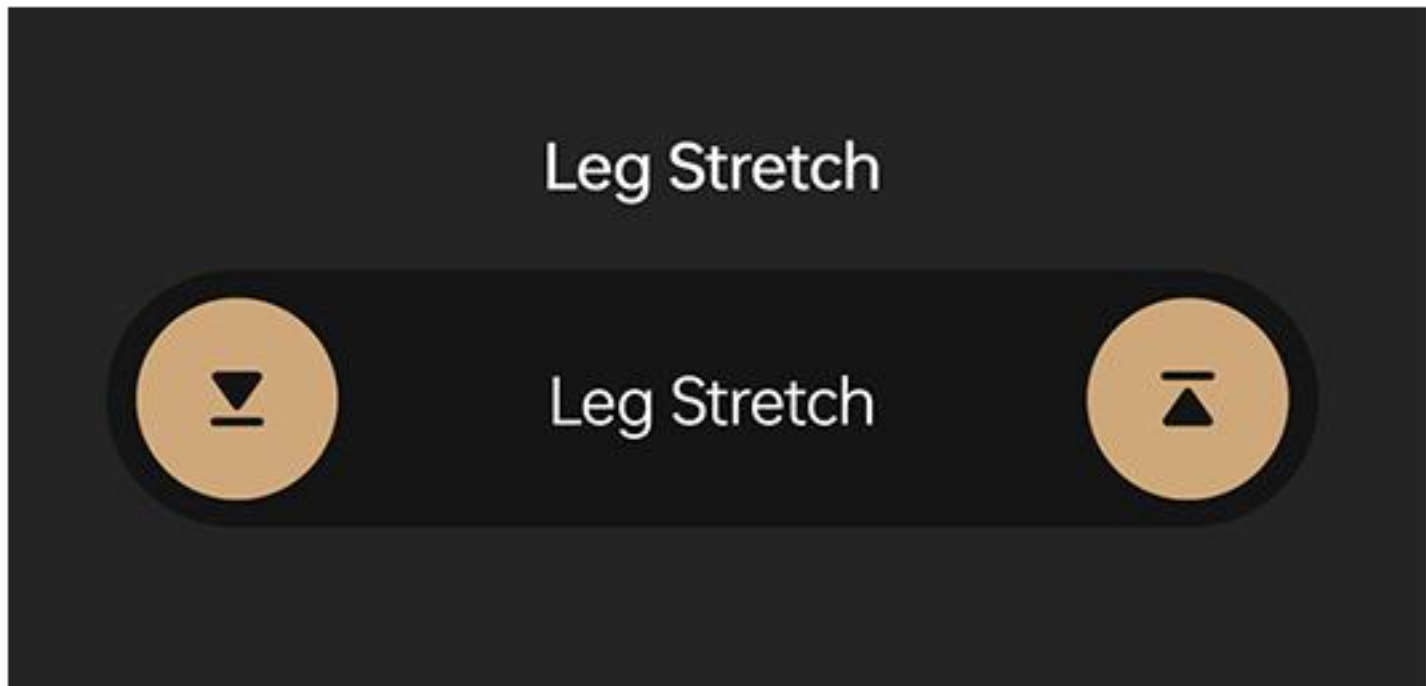
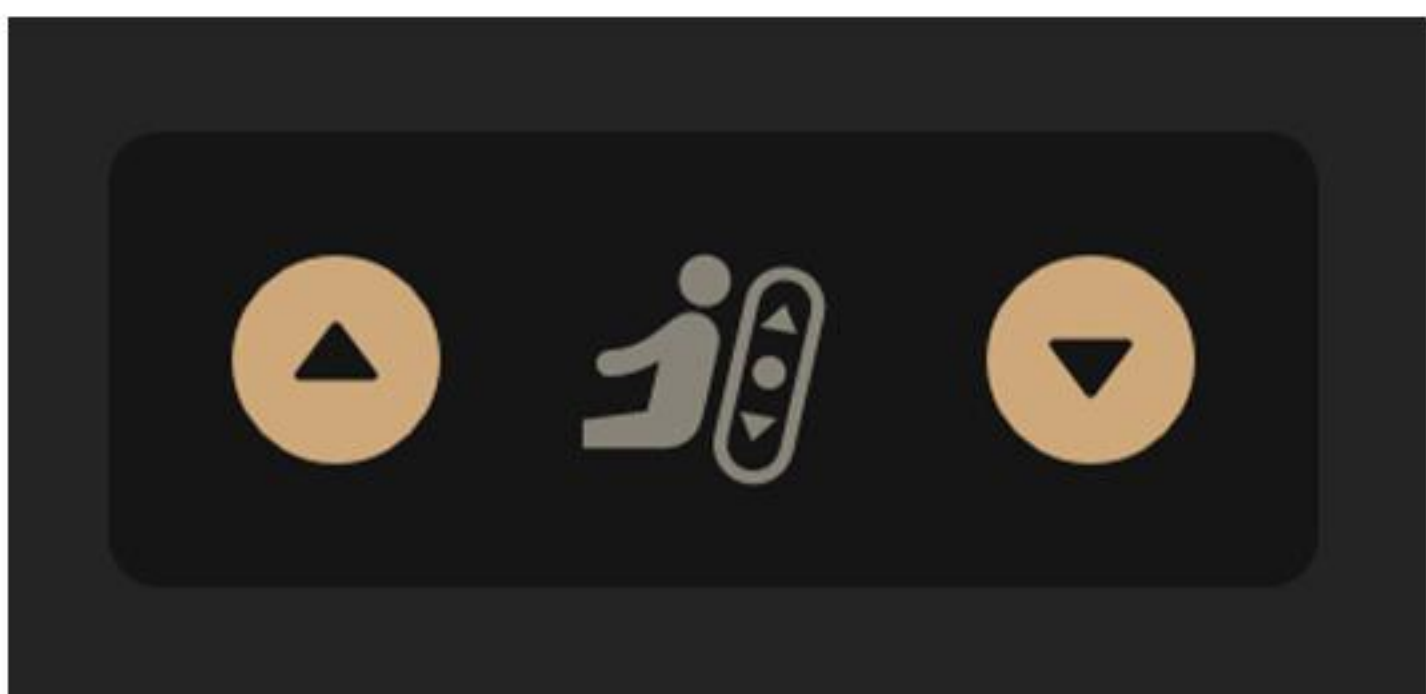
(1) Main operation interface

		
① Click the green power button in the upper right corner to start your massage journey.	② Start the body detection. After the detection is completed, please confirm or adjust to a position that is suitable for your shoulders.	③ Enter the operation interface. When the massage chair is turned on, it defaults to the sleep mode in the auto mode, and the time is 20 Mins.

(2) Main Icons and Functions

Icon	Details	Name and Function
		Power Button ➤ Press to turn on the massage chair. ➤ Press again to turn off the massage chair.
		Power Button ➤ Press to pause the operation of the massage chair. ➤ Press 'Continue' and the massage chair will resume working. ➤ Press 'Off' and the massage chair will turn off. ➤ Press 'click here' to return to the previous interface.
		Setting Button ➤ Press to enter the settings interface. ➤ Press 'Disconnect' to break the connection.
		Time Button ➤ Click to set the massage time from 10 - 30 minutes. ➤ Select the time you need, confirm and click 'Confirm'.
		Legrest Up Button ➤ Long Press " to raise the leg rest. Release to lock the current angle. ➤ Long Press " to lower the leg rest. Release to lock the current angle. ➤ Note: It cannot be adjusted in stretch mode.

		Backrest Up Button ➤ Long Press " to raise the backrest. Release to lock the current angle. ➤ Long Press " to lower the backrest. Release to lock the current angle. ➤ Note: It cannot be adjusted in stretch mode.
		Zero Gravity Button ➤ You can adjust three zero - gravity levels. ➤ Note: It cannot be adjusted in stretch mode.
		Foot Roller Button ➤ Press the Switch Button to turn on/off the foot roller function. ➤ Select the foot roller intensity 1 - 3 levels.
		Heating Button ➤ Press to turn heat on/off.
		Airbag Adjust Button ➤ Press the Switch Button to turn on/off the airbag function. ➤ Select the airbag intensity 1 - 3 levels. ➤ You can select the airbag position during manual settings: All, Shoulder, Arm, Leg. ➤ Note: Auto mode cannot adjust the airbag position.

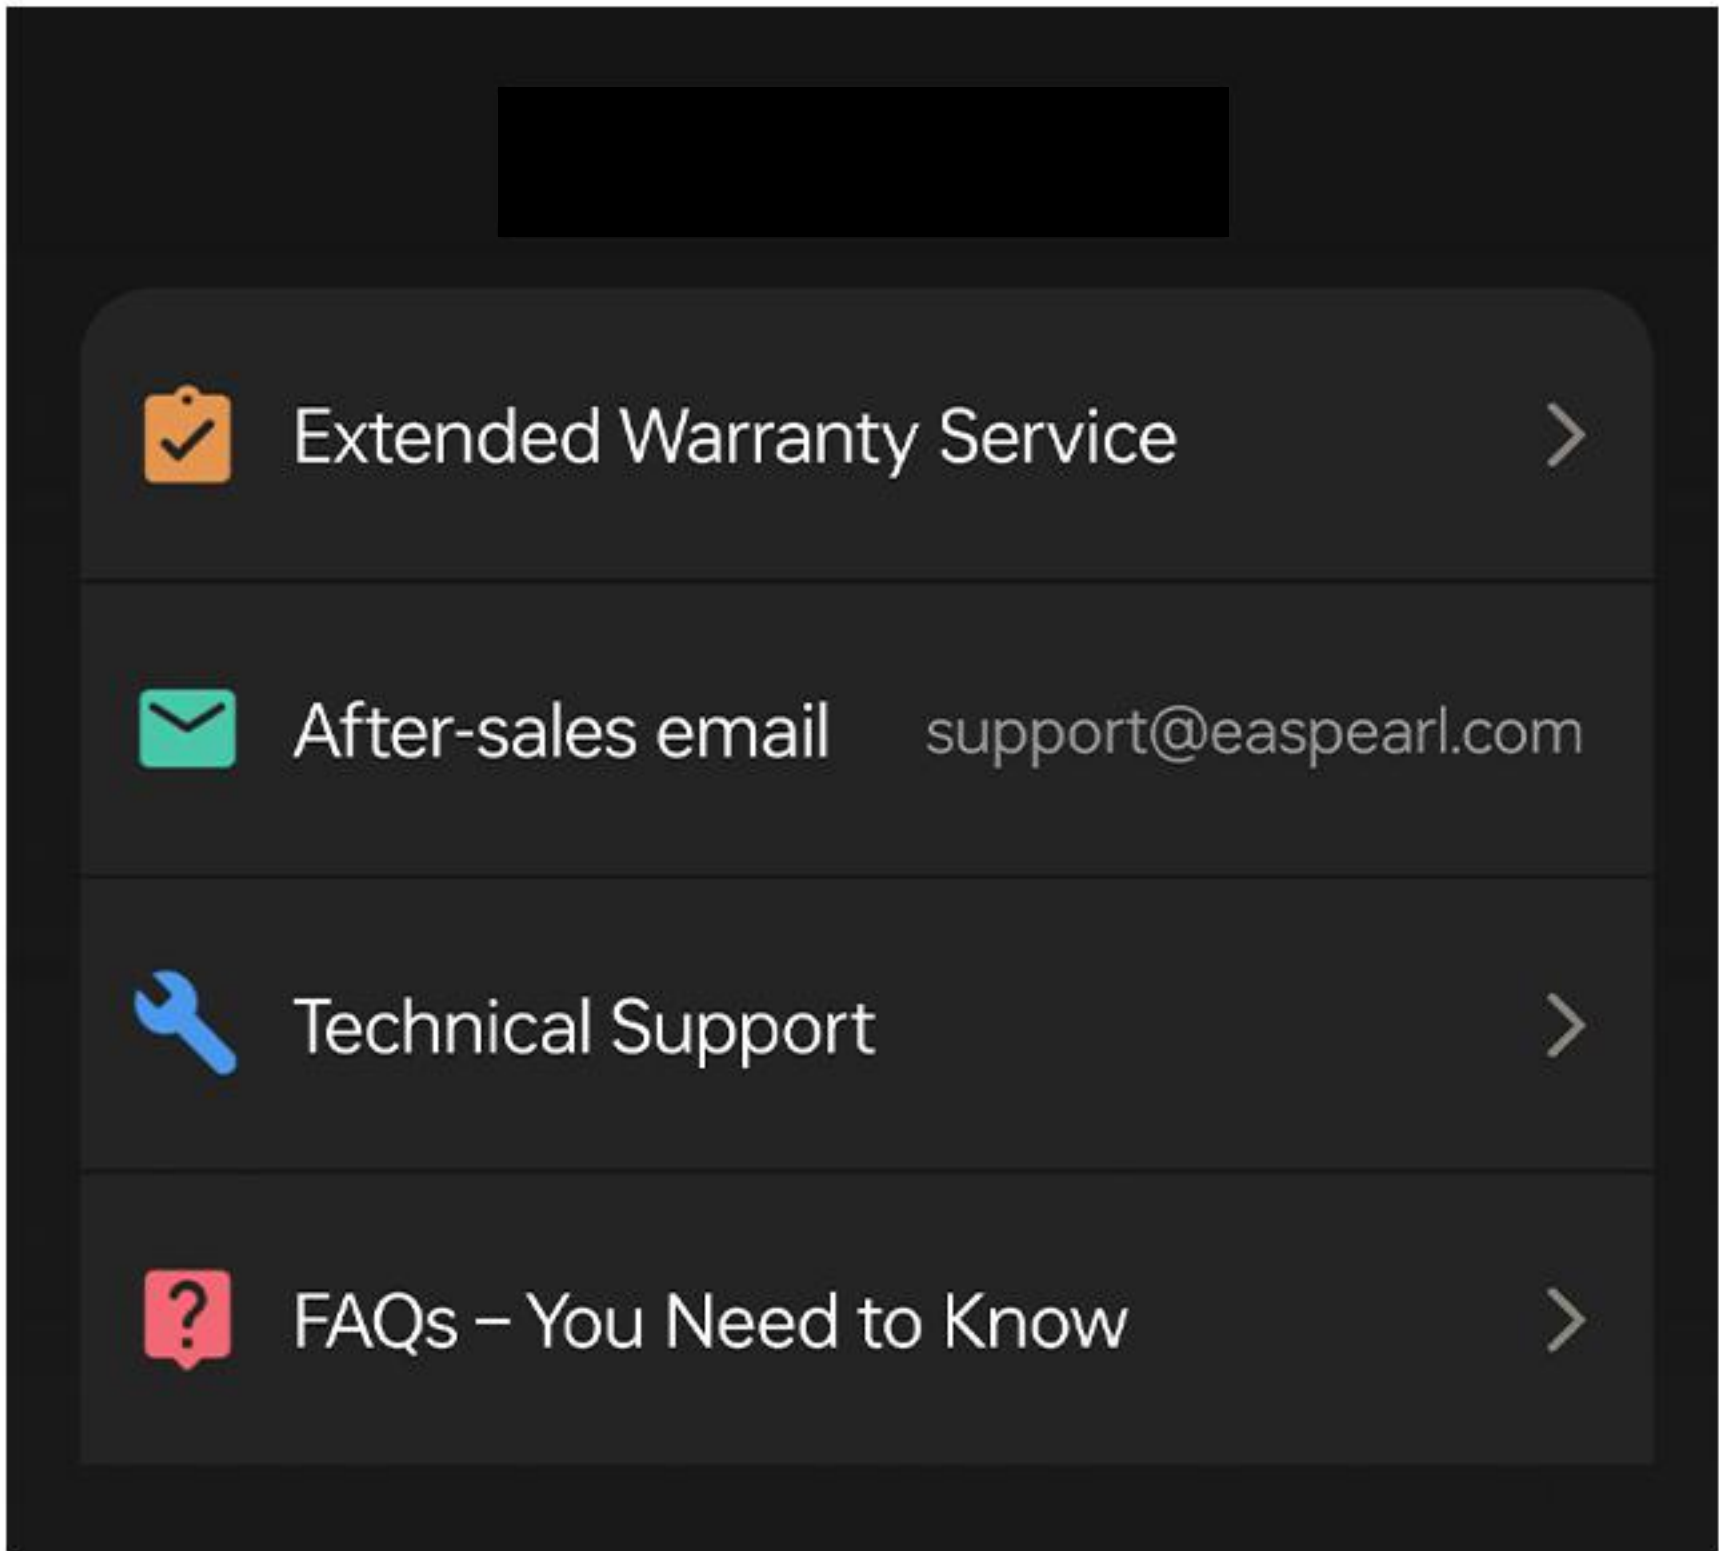
		Massage Strength Button ➤ Select a suitable message intensity 1 - 3 levels during manual mode.
		Massage Width Button ➤ Select the message width you want: Widest, Middle, Narrow. ➤ Note: The width cannot be adjusted when using the kneading/tapping technique in manual mode.
		Leg Stretch ➤ Long Press " to extend the footrest upward. Release to lock the current angle. ➤ Long Press " to extend the footrest downward. Release to lock the current angle. ➤ Note: It cannot be adjusted in stretch mode.
		Roller Up / Down Button ➤ During shoulder detection, long press the Up/Down to adjust the back rollers upward/downward. ➤ During manual massage, long press the Up/Down to adjust the back rollers to the target position. ➤ Note: The roller up/down buttons cannot be used for adjustment when running auto programs or during whole massage.

2. Auto Mode, Manual Mode and Favourite Mode

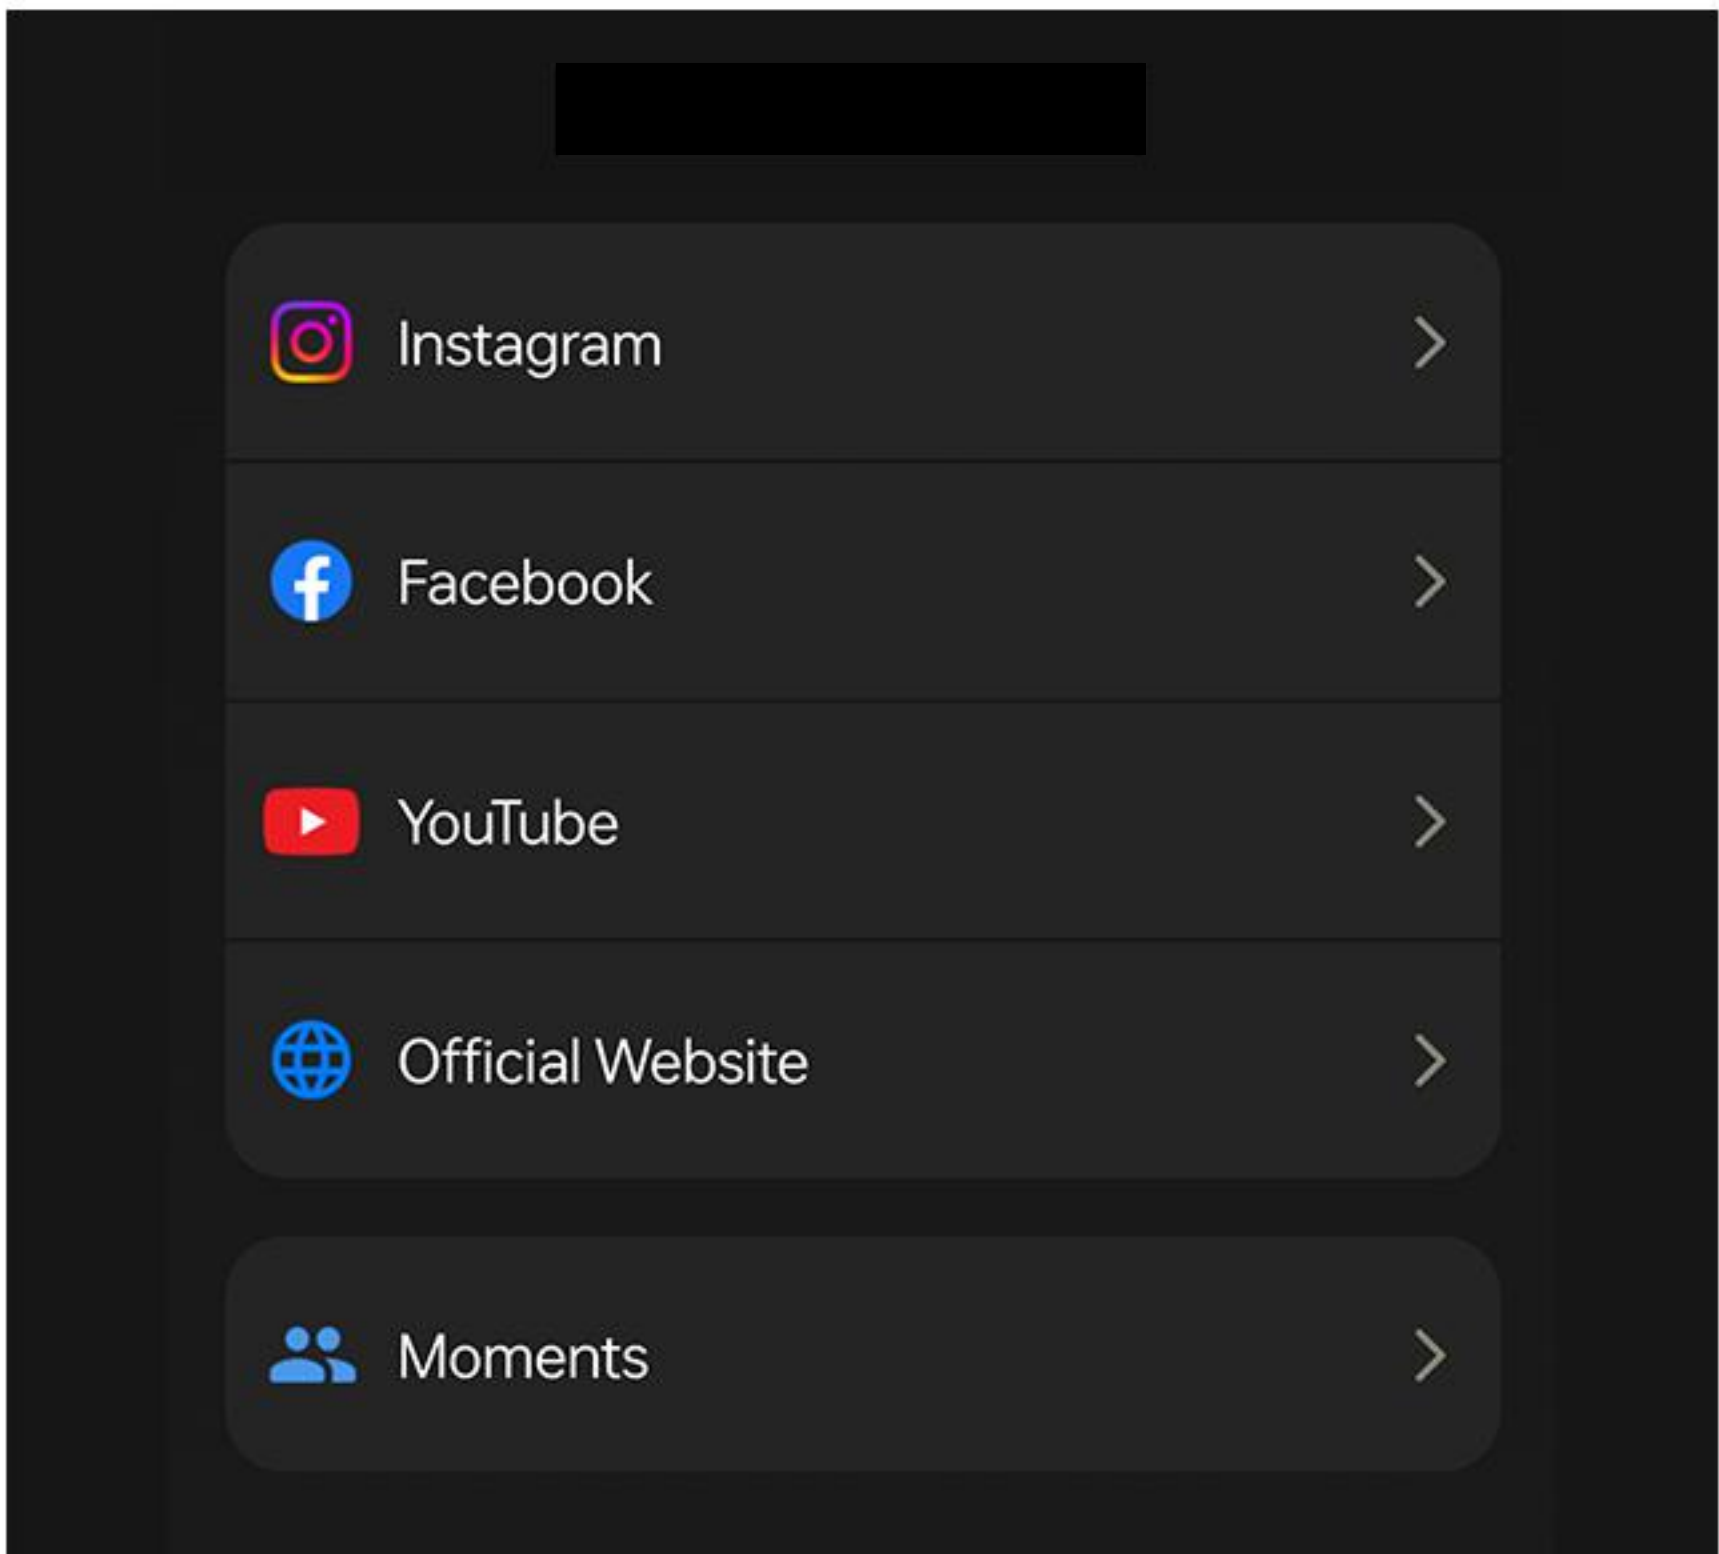
Auto Mode	Manual Mode	Favourite Mode
AutomaticCustomizedFavorites Sleep The cradle-type swing function, and the soft r... ➤ Press 'Automatic'. ➤ Press 'Use Auto Massage'. ➤ Select the auto mode, click 'Start', and start enjoying the massage. ➤ Set other functions.	AutomaticCustomizedFavorites Use Custom Massage Click here to select an custom message ➤ Press 'Customized'. ➤ Press 'Use Custom Massage'. ➤ Select the massage technique and the massage part. ➤ Set other functions.	AutomaticCustomizedFavorites UseAdd ➤ Press 'Favorites' to save the user preferences. ➤ Click 'Add', fill in the mode name and click 'Confirm' to save the current massage mode and functions for future use.
Automatic Classical MasterRelaxing StretchSleep The cradle-type swing function, and the soft roller and air pressure massage, help you relax and fall asleep. Intensity: Soft Spine CareRefreshing Customization SoftSPA Sport Care Focus Shoulder & neckWaist & back Slim Start	Customized Techniques KneadingKnocking RollingTapping ClappingShiatsu Part WholeSpot Shoulder & NeckWaist & Back Successful operation	R8089 15 Min On Pause Power Chair add EasPearl-R8089 Father Cancel Confirm

3.Other Functions

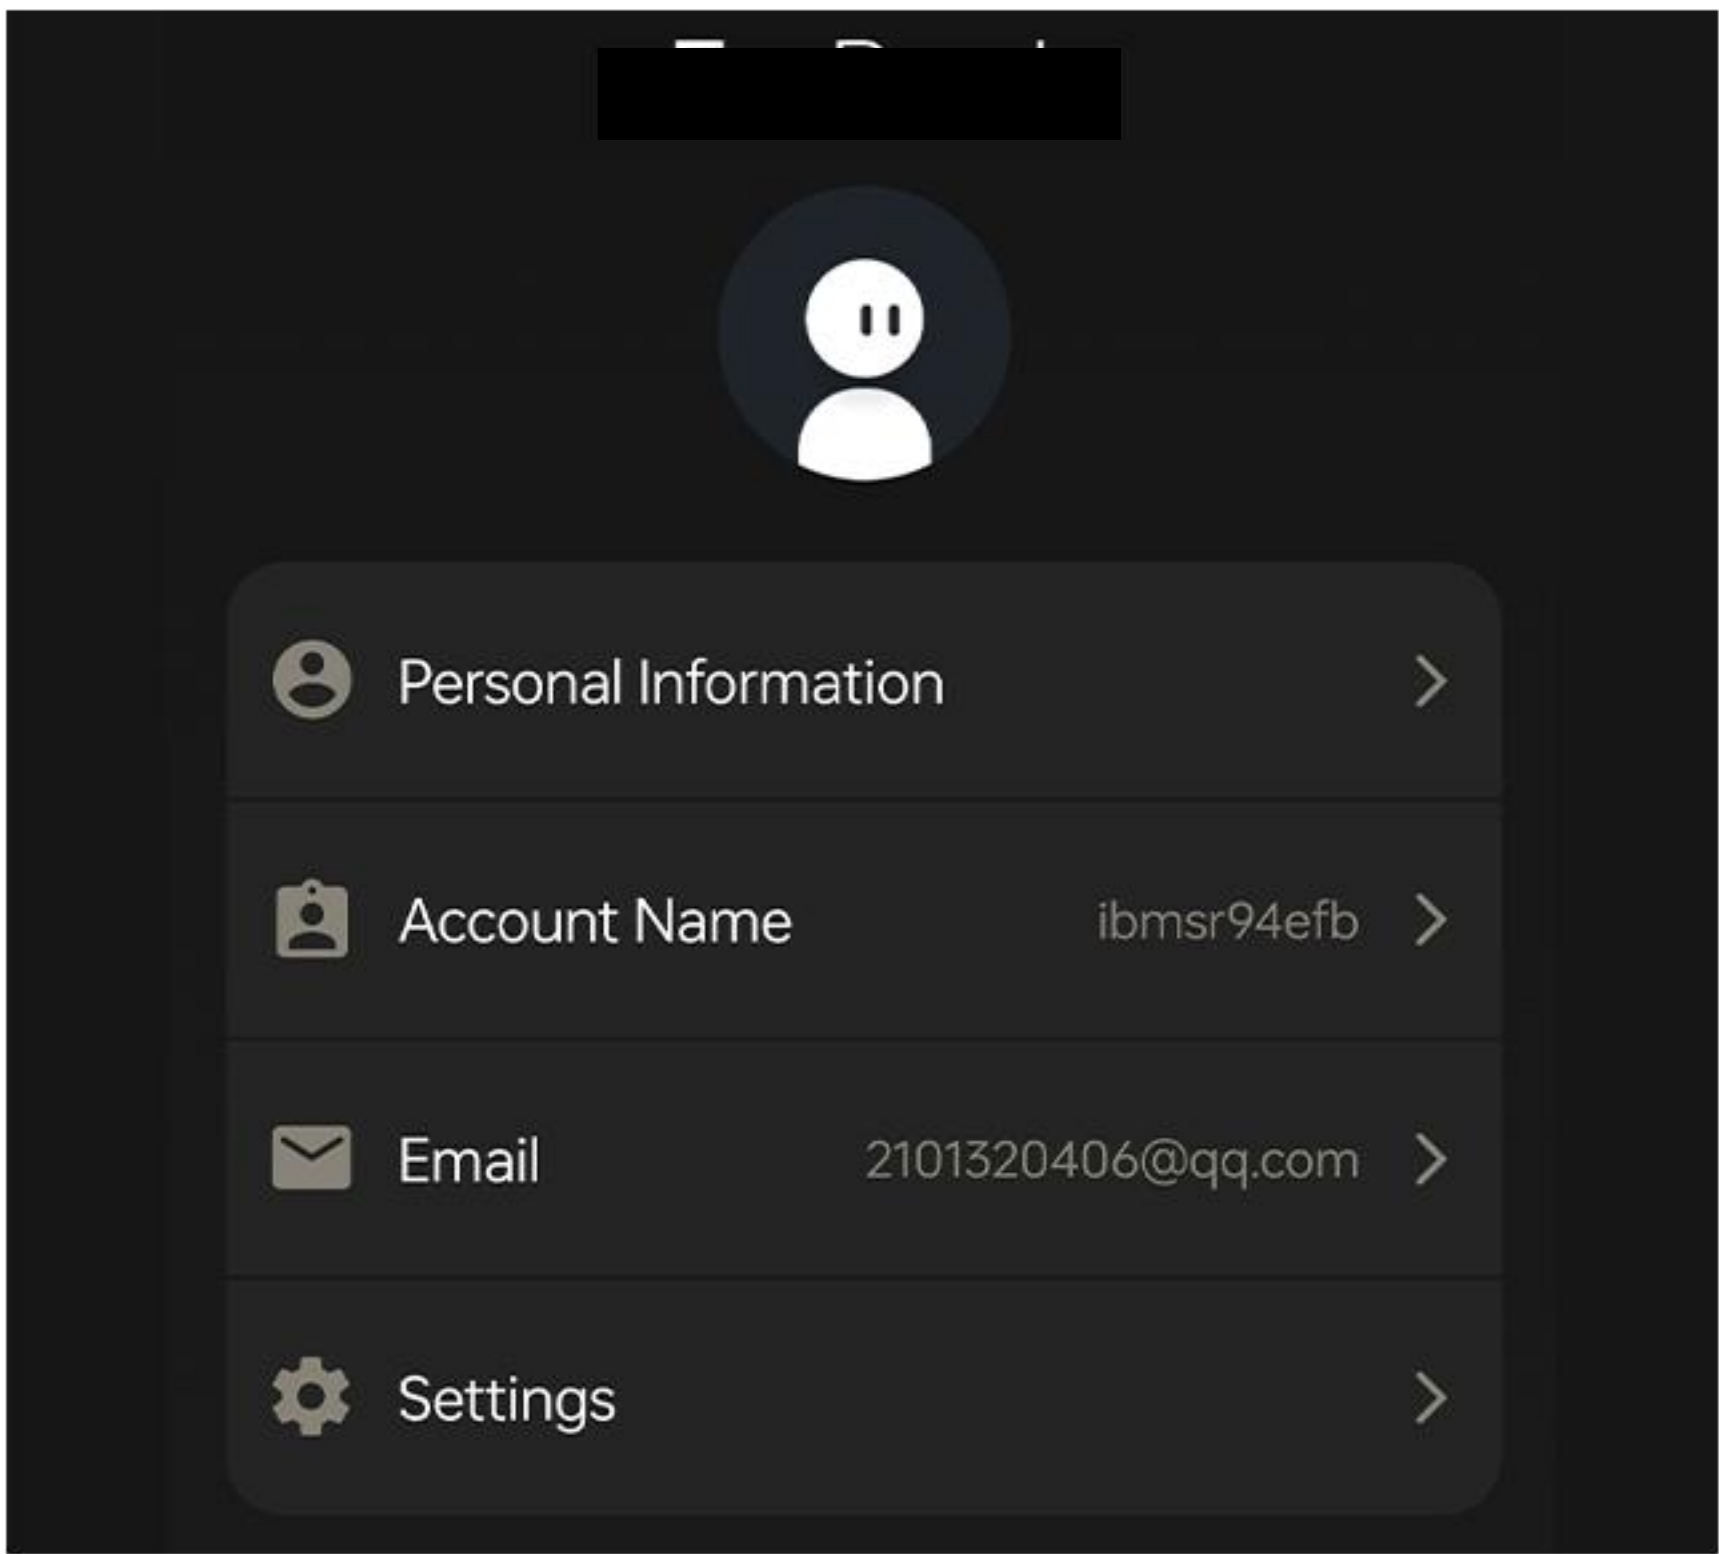
(1) Support

	➤ Click on 'Extended Warranty Service', select Extended Warranty Service. ➤ Click 'Technical Support' to give us feedback on your problem so that we can provide you with technical support. ➤ Click 'FAQs - You Need to Know' to view the Frequently Asked Questions.
--	--

(2) Socials

	➤ Follow us at iBooMas for the latest news and promotions. ➤ Share the video of every moment and feeling of your massage chair at Moment for a chance to win \$50~200 bonus.
---	--

(3) Account

	➤ Modify personal information and account settings.
---	---

5. Maintenance & Care

5.1 Cleaning Instructions

Regular cleaning helps maintain the massage chair's condition and prevents dust and dirt buildup.

Step 1: Dampen a soft cotton cloth with a mild detergent, wring it out, and use it to wipe the pillow, backrest, armrests, leg supports, and any plastic parts of the chair.

Step 2: Use a damp cloth (without detergent) to wipe the pillow and backrest again.

Step 3: Use a soft, dry cloth to wipe the armrests, leg supports, and any plastic parts of the chair.

Step 4: Wipe the controller and power box with a soft, dry cloth.

Step 5: To clean the foot/leg unit cover, remove it from the chair, hand wash with a mild detergent, and allow it to air dry.

5.2 Cleaning Precautions

- (1) Power off and unplug the device before cleaning.
- (2) Do not use acidic, alkaline, or corrosive chemicals (e.g., benzene, alcohol) for cleaning.
- (3) When cleaning the back cover, prevent liquids from entering the power terminal box.

5.3 Maintenance Guidelines

- (1) Regularly inspect the power cord and components to ensure safe operation.
- (2) Promptly replace any worn or damaged parts identified during inspection.
- (3) Unplug the power cord and cover with a dust-proof cloth during prolonged non-use.
- (4) Avoid placing heavy or sharp objects on the massage chair when not in use to prevent structural deformation or scratches on the leather surface.
- (5) Minimize relocation – Due to the chair's complex internal structure, weight, and size, frequent movement may cause dents or scratches. Secure it in a fixed position for long-term stability.

6.Frequently Asked Questions (FAQ)

Issue Type	Specific Issue	Solution
User Experience	1. Is it normal to feel pain in a specific area after using the massage chair?	Recommendation: Limit each session to ≤ 30 minutes. First, check for any underlying conditions in the painful area. If none, adjust the massage chair's mode and intensity. Next, verify the intensity setting (see automatic mode instructions on Page 17), and adjust if necessary. Cover the massage area with a blanket to reduce intensity if needed.
	2.Auto Body Scan inaccuracies	1.Posture Adjustment. Sit deeply into the chair, rest your head on the headrest, relax, and start the massage chair. 2.Manual Calibration. Upon hearing two audible beeps (scan completion signal), press and hold UP/DOWN buttons to fine-tune roller positioning. 3.Headrest Removal. Bring the massage rollers closer to the body.
	3.What is the normal noise level during operation?	Noise level: ≤ 60 dB when measured at 50 cm with all functions fully operational per testing standards.
	4.Discomfort in the leg extension	No need to press down forcefully. Relax your feet and allow the natural pressure from your leg length to extend downward.
	5.Roller massage discomfort in head	Upon completion of the auto body scan, press and hold the DOWN button to lower the massage rollers below the head area.

Function Operations	1.What is the APP?	Download the iBooMas+ app from the Google Play Store or Apple App Store.
	2.How to connect the APP?	Turn on your phone's Bluetooth, scan for and pair with the Bluetooth device ending with "LE".
	3.App Connection Issues	Go to Settings→ App→ Toggle Location Access to On.
	4.Incorrect Password	Check the password for correct case. If you can't log in, use Guest Mode. Contact us for the guide.
	5.How to connect Bluetooth speakers?	Scan for and connect to the Bluetooth device named R8089.
	6.Bluetooth Connection Issues	Step 1: Ensure the Bluetooth module cable is properly connected. If damaged, replace the cable. Step 2: Use a multimeter to check for 5V DC at the Bluetooth module connector. If voltage is present, replace the module; if not, replace the motherboard.
	7.Heating issue	After operating the massage chair for 5 minutes, manually check the temperature of the heating zone (expected range: 100–114°F). If no temperature increase is detected, contact customer support immediately.

Massage Mechanism	1.The Mechanism remains stationary at the neck position, but the massage rollers are still operational. 2.The Mechanism fails to descend and remains at the top position; massage rollers are inoperative.	Step 1: Check the DC 5V operating voltage on the red and black wires of the Hall limit switch board connector. Step 2: Check the DC 24V supply voltage to the travel motor. Step 3: Check the upper limit magnet	Please contact customer service, provide a detailed description of the massage chair's current condition, and send a video showing the issue along with a photo of the barcode on the bottom of the backrest.
	3.The Mechanism is jammed at the hip area and fails to perform vertical movement.	Step 1: Check the DC 5V operating voltage on the red and black wires of the Hall limit switch board connector. Step 2: Check the DC 24V supply voltage to the travel motor. Step 3: Check the lower limit magnet.	
	4.The Mechanism continues operating after the massage	Power off the chair, then restart it. If the issue persists, replace the main control board.	
	5.Unusual noise during roller operation? / Unusual noise with one-side roller not working?	Unzip the seat cushion and remove the lining. Check for loose or deformed massage rollers and arm screws. Replace the massage head and arm if needed.	

Backrest	1. Backrest Adjustment Failure & Zero-Gravity cannot be adjusted 2. Zero-Gravity Position Reset Failure (Other Functions Normal)	Check for 24V DC at the actuator's matching connector port on the mainboard. If voltage is present, replace the actuator. If no voltage is detected, replace the main control board.
	3. Unusual noise from the backrest	Open the back cover of the massage chair, then turn it on and run the chair. Listen carefully to identify the source of the noise. If the noise comes from the motor unit during movement, apply wheel lubricant to both sides of the rail to resolve the issue.

Actuator	Massage chair fails to respond or operate when powered on	Step 1: Check the power rocker switch	Connect the power cord and turn on the main power switch located at the lower rear of the massage chair. If the red indicator does not illuminate, the rocker switch is faulty and requires replacement.
		Step 2: Inspect the switching power supply	Use a multimeter to measure the input terminals for 220V AC and 24V DC. If no voltage is detected, the SMPS is faulty and need to be replaced.
		Step 3: Inspect the main control board	Use a multimeter to test for voltage. If no voltage is detected and the manual controls fail to respond, the main control board is faulty and must be replaced.

Airbags	1. Calf airbags fail to inflate	Step 1: Check the solenoid valve DC power supply (24V). If abnormal, replace the solenoid valve or air tubing.
		Step 2: Inspect the airbag for any damage and replace it if necessary.
		Step 3: Use a multimeter to measure the solenoid valve socket on the mainboard for DC 24V voltage. If there is no voltage, replace the mainboard.
	2. Uneven compression force in left and right arm airbags	Unzip the airbag cover and inspect the air tubing for kinks or flattening. Adjust or replace the air tubing if necessary.

Footrest	1. Foot rollers fail to operate	Step 1: Inspect the leg connection cable	Re-seat the footrest connection plug. If the issue persists, use a multimeter to check for a 24V DC voltage at the connector. If no voltage is present, replace the connection cable.
		Step 2: Inspect the foot roller mechanism	Use a multimeter to measure the 24V DC voltage at the foot roller mechanism connector. If voltage is present, replace the foot roller mechanism.
		Step 3: Inspect the main control board	Use a multimeter to measure the 24V DC voltage at the footrest socket. If no voltage is detected, replace the mainboard.

Footrest	2. The footrest cannot return to the original position	Step 1: Inspect the leg connection cable	Re-seat the footrest connection plug. If the issue persists, use a multimeter to check for a 24V DC voltage at the connector. If no voltage is present, replace the connection cable.
		Step 2: Inspect the leg actuator	Check for 24V voltage at the actuator connection port on the mainboard. If voltage is present, replace the actuator.
		Step 3: Inspect the main control board	Use a multimeter to measure the 24V DC voltage at the footrest socket. If no voltage is detected, replace the mainboard.

Footrest	3. Unusual noise during footrest operation	Step 1: Inspect the leg extension mechanism	If sticking or grinding occurs internally, lubricate the track with silicone grease to eliminate noise. For severe mechanical resistance, replace the footrest.
	4. Unusual noise during foot rollers operation	Step 2: Check the leg airbags	Misaligned airbags may cause noise due to compression during inflation. Adjust the airbag positioning to ensure proper alignment.
		Power on the massage chair and press down on the foot rollers. If grinding or squeaking is heard, replace the foot roller.	

	1.Remote control screen does not illuminate after powering on	Step 1: Ensure the remote control cable plug is securely inserted into the socket. Step 2: Check for any damage or breaks in the extension cable. If damaged, replace the remote control. Step 3: Operate the massage chair using the shortcut buttons. If the chair functions properly, replace the remote control. Step 4: Use a multimeter to measure 5V DC across the red and black wires at the remote control socket. If no voltage is detected, replace the mainboard. If voltage is present, the issue lies with the remote control or cable. Refer to Steps 1-3 for further troubleshooting.
Remote control	2. Remote control displays "Checking" continuously	Step 1:Check the shoulder position detection infrared signal board: Inspect for any abnormalities. If faulty, replace the signal board. Step 2:Check the mechanism board: Look for poor connections, damaged sockets, or a faulty circuit board. Replace the mechanism board if necessary. Step 3: Check the mechanism cable and connector: Inspect for poor contact or damage. Reconnect or replace the mechanism cable if damaged. Step 4:Check the mainboard mechanism cable socket: Inspect for damage or abnormalities. If faulty, replace the mainboard.

Electrical control box	No power and burnt odor detected in the electrical control box.	Step 1: Inspect for any blown fuses and replace. Step 2: Use a multimeter to check the rocker switch and power cable: Burned-out switch or cable: Replace the rocker switch and power cable. Damaged socket/plug: Replace the corresponding connectors (socket or plug). Step 3: Measure voltage on the main control board with a multimeter. No voltage or visible charred/burnt traces: Replace the main control board. Step 4: Inspect expansion/module boards for burns, short circuits, or open circuits. Replace any damaged module board or wiring harness. Step 5: Check other components (e.g., air pump, air valve): If the air pump or air valve is burnt, replace them.
--------------------------------------	---	--

Whole machine	1. The massage chair continues to operate after shutdown	Step 1: Inspect Remote Control	Disconnect the remote control connector plug. Operate the chair using the manual control panel. If the chair stops working, replace the remote control.
		Step 2: Inspect Mainboard	Operate the chair using the manual control panel. If the chair remains operational, replace the mainboard.
	2. Automatic shutdown occurs	Disconnect the remote control connector plug. Operate the chair using the manual control panel. If automatic shutdown stops, replace the remote control. If automatic shutdown persists, replace the manual control panel.	

Whole machine	3. Foot/shoulder airbags or rollers are not working. Possible malfunction?	Step 1: Verify Selected Massage Mode	Confirm which functions are inactive in the current mode. If the issue is caused by incorrect mode selection, test other massage modes.
		Step 2: Inspect Travel Motor	If the travel motor is inactive: Measure its supply voltage (DC24V). If voltage is present: Replace the travel motor.
		Step 3: Inspect the mechanism	If the travel motor isn't working and there is no voltage (DC24 V), check the wiring connectors and the mechanism's sealing plate. If there is an issue, replace the mechanism board.
		Step 4: Inspect Mainboard	If the travel motor socket shows no DC24V output voltage, replace the mainboard.

Whole machine	4.Unusual noise in Sleep mode? 5.Unusual noise during lift and lower operation?	Step 1: Inspect the Actuator Step 2: Inspect the Metal Frame	Please contact customer service, provide a detailed description of the massage chair's current condition, and send a video showing the issue along with a photo of the barcode on the bottom of the backrest.
	6. Troubleshooting steps for housing abnormal noise	Inspection Checklist: 1.Armrests 2.Backrest Cover 3.Rear Housing 4.Footrest Cover 5.Protective Guard	Start the massage chair and locate the source of any unusual noise from the external parts. Re-secure the parts to eliminate the noise. If any fixation points are damaged or if parts are loose, replace the affected components.

Whole machine	7. The lift button is not responding, and the massage chair emits a beeping sound when the control buttons are pressed	Step 1: Inspect Actuator	Measure voltage at the actuator connector socket (DC24V). If voltage is present: Reconnect the connector. If the actuator still fails to operate, replace it.
		Step 2: Inspect Mainboard	Measure voltage at the actuator socket (DC24V). If no voltage is detected: Replace the mainboard.

7. After-Sales Service

7.1 Warranty Policy

- **Warranty Period:**

Year 1: Free parts and labor.

Years 2-3: Free parts only. Customer bears shipping costs.

Year 4 onward: Customer bears all parts and shipping costs.

- **Warranty Coverage:**

Covers non-user-induced damage to core components:

Main control board, Drive mechanism, Rollers, Airbags, Seat cushions.

- **Warranty Conditions:**

Valid only with Order ID provided.

Excludes damage caused by misuse, accidents, or unauthorized modifications.

Note: Retain your Order ID for all service requests.

7.2 Repair Services

- **On-Site Repair:** Currently unavailable.
- **Service Scope:** Motor failure, Roller jamming, Airbag leaks, Remote control malfunctions, Seat cushion issues.
- **Self-Repair Support:** Replacement guides (PDF/video) are available for customer self-repair.

7.3 Replacement Parts

Genuine Parts: Available to ensure compatibility and manufacturer-grade quality.