

iBooMas®

IBM-P03



SCAN THE QR CODE FOR
A DETAILED USER GUIDE VIDEO

USER MANUAL

ENJOY SMARTER RELAXATION - REFER TO THIS MANUAL!





Dear friend,
Nice to meet you.

Thank you sincerely for choosing iBooMas.
This massage chair is not only a product, but also
a companion, a pursuit of a better life, carrying
our blessing for your healthy life.

Whether you are tired after work or stressed in life, we
hope it brings you and your family relaxation
and pleasure in body and mind.

When you use it for the first time, it may take
some adaptation time and break-in. If you have
any questions, please feel free to contact us and we will
be at your service within 12 hours. We hope you can
give it a little more time and make it your indispensable
and most faithful partner in your life.

Best Regards

www.iboomas.com



Scan the QR Code

to get more information



[Installation Video](#)

Please save this page so that you can quickly find ways to access the User Instructions in case you lose it.



[E-book Online](#)



[PDF Download](#)

Password: `iboomas@P03`

Contents

1. Product Introduction	1
1.1 Product Overview	1
1.2 Technical Specifications	2
1.3 Core Functions.....	2
1.4 Product Features	4
2. Safety Instructions	5
2.1 Intended Users	5
2.2 Safety Instructions Before Use	5
2.3 Safety Instructions After Use.....	6
2.4 Important Safety Warnings	6
2.5 Special Population Warnings	7
2.6 Emergency Handling	8
3. Installation & Setup.....	9
3.1 Unboxing Guide.....	9
3.2 Installation Procedure	9
3.3 Pre-Use Safety Guidelines.....	14
4. Operating the Massage Chair	16
4.1 Operating Instructions	16
4.1.1 Automatic Modes	16
4.1.2 Manual Mode	18
4.1.3 Air Mode Overview	19

4.1.4 Bluetooth Connection	19
4.2 Control Methods	21
4.2.1 Touch Panel Control.....	21
4.2.2 Shortcut Key	25
4.2.3 APP Control	26
4.2.4 AI Voice Control	35
5. Maintenance & Care.....	37
5.1 Cleaning Instructions	37
5.2 Cleaning Precautions	37
5.3 Maintenance Guidelines	37
6. Frequently Asked Questions (FAQ).....	38
7. After-Sales Service	43
7.1 Warranty Policy	43
7.2 Repair Services	43
7.3 Replacement Parts	43
7.4 Technical Support	43
7.5 Returns & Exchanges	44
8. Share & Earn Rewards	45
8.1 Buyer Show Collection.....	45
8.2 How to Participate	45

1. Product Introduction

Product name: iBooMas IBM-P03 Harmony Massage Chair

Product purpose: This intelligent massage chair is designed for home use. It offers a variety of massage programs and features to simulate a professional massage experience.

1.1 Product Overview



Bluetooth speaker




Shortcut key and USB port



Backpad



Armrest

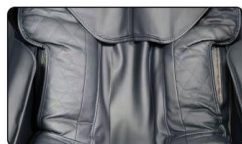

Waist airbags



Leg airbags



Pillow



Charge panel



Touch panel



Shoulder airbags



Knees massager



Footstep airbags

1.2 Technical Specifications

Upright Dimensions	60.3 in (L) × 30.2 in (W) × 33.5 in (H)
Reclined Dimensions	66.4 in (L) × 29.8 in (W) × 38.8 in (H)
Package Dimensions	57.7 in (L) × 29.8 in (W) × 44.4 in (H)
Net Weight	209 lb (95 kg)
Gross Weight	260.5 lb (118 kg)
Rated Voltage	120 V
Rated Power	180 W
Rated Frequency	60 Hz
Recommended Height Range	5 ft ~ 6.5 ft (150 cm ~ 200 cm)
Maximum Recommended Weight	330 lb (150 kg)
Color	Black/ Beige/ Grey

1.3 Core Functions

(1) 6 Massage Techniques

The chair features six massage techniques: Shiatsu, Clapping, Knocking, Kneading, Tapping, and Rolling — accurately replicating the hands of a professional masseur.

(2) 24 Auto Programs

Enjoy a wide range of massage experiences with 24 auto programs, divided into four categories: Master, Partial Focusing, Body Care, and Customization.

(3) Airbag Massage

Equipped with 40 airbags distributed across the shoulders, neck, waist, arms, calves, and feet. Users can select specific areas and choose from three intensity levels for a full-coverage, customized massage experience.

(4) Multi-Area Roller Massage

4D rollers target multiple areas including the neck, shoulders, back, waist, and hips. The 4D mechanism offers six levels of intensity and speed adjustment to suit personal preferences.

(5) Heating Function

Heating elements are located in the shoulders, back, and insteps. Users can select heating zones independently and adjust among three levels of warmth to promote blood circulation and enhance relaxation.

(6) Zero Gravity

The chair supports a zero-gravity recline angle of $180^{\circ} \pm 7^{\circ}$, with three adjustable levels. The reclining system is ergonomically designed (Standard ASTM F1854) to elevate the knees above the heart, reducing spinal pressure and simulating a weightless state.

(7) Timer Function

Multiple session durations are available (5/10/15/20/25/30 minutes) with auto shut-off. The recommended maximum duration per session is 45 minutes to avoid over-stimulation of the muscles.

(8) Bluetooth Speakers

Built-in dual high-quality Bluetooth speakers allow you to enjoy music wirelessly by connecting your smartphone.

(9) Leg Extension

The footrest can be electrically extended and manually adjusted up to 7.09 inches for optimal leg support.

(10) Body Scan

An automatic body scanning system detects your height, weight, and shoulder width before each massage session to adjust the rollers for a more precise and tailored massage experience.

(11) Negative Ion Generator

A built-in negative ion generator can be manually turned on or off from the settings menu, helping purify the air and enhance overall comfort.

(12) Language Options

Supports both English and Chinese. Language preference can be selected in the settings to accommodate different users.

(13) Key Tone Control

Key tone volume can be adjusted in the settings to match personal preferences and improve the user experience.

(14) Mood Lighting Control

Users can turn the mood lights on or off in the settings according to their preferences or environment.

(15) AI Voice Control

Enable AI voice control in the settings to operate the massage chair hands-free using voice commands for a fully immersive experience.

(16) App Control

Connect the chair to the companion app to control all functions from your phone. Favorite modes can also be saved for quick access in future sessions.

1.4 Product Features

- (1) Enjoy a massage anytime at home — No appointments or travel needed.
- (2) Privacy-friendly — Ideal for users who prefer not to visit public massage facilities.
- (3) Multi-functional — Integrated with music playback and Bluetooth connectivity to enhance your overall experience.
- (4) Rich massage programs — Offers 24 auto massage programs designed for various needs and scenarios (see the Operation Guide for details).
- (5) Custom Mode - Allows you to adjust massage intensity, speed, roller position, airbag intensity, and targeted areas according to your personal preferences.

2. Safety Instructions

2.1 Intended Users

The massage chair provides convenient relaxation for diverse lifestyles, but usage should be adjusted based on individual health conditions.

Office Workers: Prolonged sitting in fixed positions can cause muscle stiffness and fatigue. The massage chair helps relax the shoulders, neck, and back to relieve discomfort.

Long-Standing Individuals: For individuals such as teachers or salespeople, the massage chair helps relax leg muscles and reduce swelling.

Elderly Users: Promotes blood circulation and eases pain, but it is recommended to choose a gentle mode.

Fitness Enthusiasts: Helps relax muscles and speeds up recovery after exercise.

People with High Stress or Poor Sleep: Reduces stress, relaxes the body and mind, and improves sleep quality.

Chronic Pain Sufferers: For conditions like muscle strain or cervical spondylosis, the chair helps alleviate pain, but consult a doctor before use.

Pregnant Women: Use with caution and consult a doctor to avoid pressure on the abdomen.

Recovery Patients: Individuals recovering from surgery or illness can use the chair under doctor supervision to aid muscle relaxation and recovery.

Individuals with Poor Circulation: Improves blood flow, benefiting those with cold extremities or frequent fatigue.

Quality of Life Seekers: For those who value comfort and relaxation, a massage chair offers an excellent way to unwind and enhance daily life.

2.2 Safety Instructions Before Use

Power Check: Ensure the power cord is intact to prevent electric shock or short circuits.

Component Inspection: Inspect rollers, airbags, and other parts for damage before use.

Session Duration: Limit each session to 30 minutes to avoid over-relaxing or muscle strain.

Usage Frequency: For best results, use 1–2 times per day. Excessive use may reduce effectiveness.

Avoid Use on Empty Stomach: Using on an empty stomach may cause dizziness or discomfort.

Wait After Meals: Wait at least 30 minutes after eating to prevent digestive issues.

Proper Posture: Maintain correct sitting position to avoid discomfort or injury.

Remove Personal Items: Remove items that could cause harm, including jewelry, hair accessories, hats, belts, glasses, and anything hard in your pockets (e.g., wallet).

2.3 Safety Instructions After Use

Stand Up Slowly: Rise gradually to prevent dizziness caused by sudden blood pressure changes.

Rehydrate: Drink water after use to help your body recover.

2.4 Important Safety Warnings

To reduce the risk of fire, burns, electric shock, or injury, please adhere to these guidelines:

- **ELECTRICAL SAFETY**

- (1) Unplug the unit when unattended or not in use for extended periods. Always turn off all controls before unplugging.
- (2) Disconnect power before installing or removing any components.
- (3) Do not pull the power cord or use it to move the massage chair.
- (4) Keep the power cord away from heat sources.
- (5) Never unplug while the chair is in operation.
- (6) Do Not Use If:

- ✘ *Power cord/plug is damaged.*
- ✘ *Unit malfunctions or operates abnormally.*
- ✘ *Chair is physically damaged or exposed to water.*

- **ENVIRONMENT & PLACEMENT**

- (1) Avoid damp, high-temperature, or flammable/explosive environments.
- (2) Indoor use only. Do not use outdoors.

- (3) Avoid aerosol products or oxygen-rich environments during operation.
- (4) Keep away from direct sunlight to prevent material fading/cracking.
- (5) Avoid prolonged contact with vinyl or wallpaper (risk of discoloration).
- (6) Ensure ventilation. Do not use in tightly enclosed spaces for long periods.

• **OTHER PRECAUTIONS**

- (1) Do not use if damaged or malfunctioning. Exposed moving parts from torn fabric may cause injury.
- (2) Use only in a seated position. Standing on or inside the chair is prohibited.
- (3) Avoid prolonged use of the heating function to prevent the risk of burns.
- (4) The massage chair is for use by one person at a time only.
- (5) Be sure to follow all the setup instructions in the “Settings” section to properly configure your device. Improper installation may cause injury or damage.
- (6) Do not combine with external devices (heating pads, electric blankets, etc.) during operation.
- (7) Wear comfortable, cotton clothing while using the chair. Synthetic fabrics may cause static buildup.
- (8) Always supervise children to prevent unsafe play.
- (9) Do not exceed the chair’s weight limit to avoid damage.
- (10) Avoid using the chair for long periods at a time to prevent motor overheating.

2.5 Special Population Warnings

- (1) Not suitable for pets, children, individuals with disabilities, intoxicated persons, or those with sensory impairments.
- (2) Any person requiring special care or elderly individuals must use this massage chair under the supervision of an adult.
- (3) Individuals with sensory loss, numbness, or cognitive impairments (including children) must use this product under adult supervision.
- (4) Consult a doctor before use if you have:
 - Implanted medical devices (e.g., pacemakers)
 - Heart disease
 - Pregnancy or recent childbirth

- Heat/pressure sensitivity
- Open wounds or injuries
- Bone fractures, osteoporosis, low bone density, or fragility
- Blood thinners or bruising susceptibility
- Skin disorders or allergies

2.6 Emergency Handling

- (1) Immediately power off and unplug the chair, then contact authorized service personnel if you observe:
 - Burning odors
 - Overheated power cords
 - Malfunctions or abnormal operations
 - Failure to activate despite proper power connection
- (2) Discontinue use and consult a healthcare provider if experiencing rashes, redness, itching, or other skin reactions.

3. Installation & Setup

3.1 Unboxing Guide

<p>Step 1: Cut the straps and clear tape on the carton.</p>	<p>Step 2: Two people should stand on opposite sides of the carton and lift it together.</p>
	
<p>Step 3: After lifting the carton, remove all inner protective cardboard pieces.</p>	<p>Step 4: Carefully detach the footrest from the massage chair (note: it is heavy), and remove the plastic protective film.</p>
	

3.2 Installation Procedure

Step 1: Check the Product and Accessories




After unboxing, please inspect the massage chair for any damage and verify that all accessories are included.

If the chair is damaged or any parts are missing, please contact us immediately.




Below is the list of included accessories.

<p>1. Power Cord Connects the massage chair to a power outlet.</p>	<p>2. Touch Panel Used to control all functions of the massage chair.</p>	<p>3. Touch Panel Bracket Holds the touch panel in place.</p>	<p>4. Screwdriver & Screws Used to secure certain chair components during setup.</p>
			
<p>5. Foot Pads Provide cushioning for users with more sensitive soles during the massage.</p>	<p>6. Locking Clip Secures the footrest support bracket in place.</p>	<p>7. Dust Cover Prevents dust accumulation when the chair is not in use.</p>	
			





Step 2: Install the Touch Panel Bracket

<p>1. Unscrew and remove the three screws from the bracket slot.</p>	<p>2. Align the holes on the base of the bracket with the screw holes inside the slot. Insert the previously removed screws and tighten them securely.</p>	<p>3. Align the bottom cover clips of the bracket with the slot and press down firmly. Ensure the bracket is securely installed.</p>
		


Step 3: Connect the Touch Panel Cable

<p>1. Lift the seat cushion to locate the cable on the massage chair. Connect the touch panel cable to the socket beneath the cushion, following the alignment guide inside the connector.</p>	<p>2. Tighten the locking ring on the connector to ensure a secure connection.</p>	<p>3. Mount the touch panel onto the bracket. The panel can be easily removed and used during operation.</p>
		

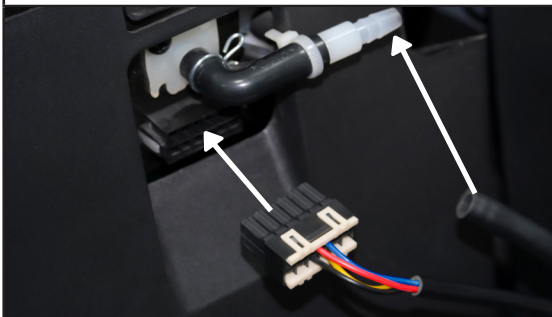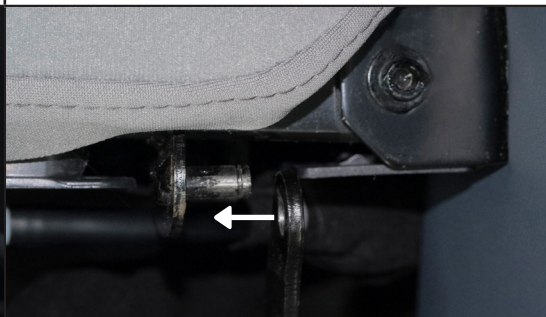Step 4: Install Footrest

<p>1. Insert the air hose and signal cable into the corresponding ports on the main body of the massage chair.</p>	<p>2. Align the holes on the footrest bracket with the mounting shafts on the main body. Start by aligning and inserting one side of the footrest onto the shaft.</p>
	
<p>3. Align the hole on the other side of the footrest with the mounting shaft and insert it into place.</p>	<p>4. Position the open end of the locking clip over the groove on the pin, then push the clip forward until it locks securely in place.</p>
	

Step 5: Install the Backpad

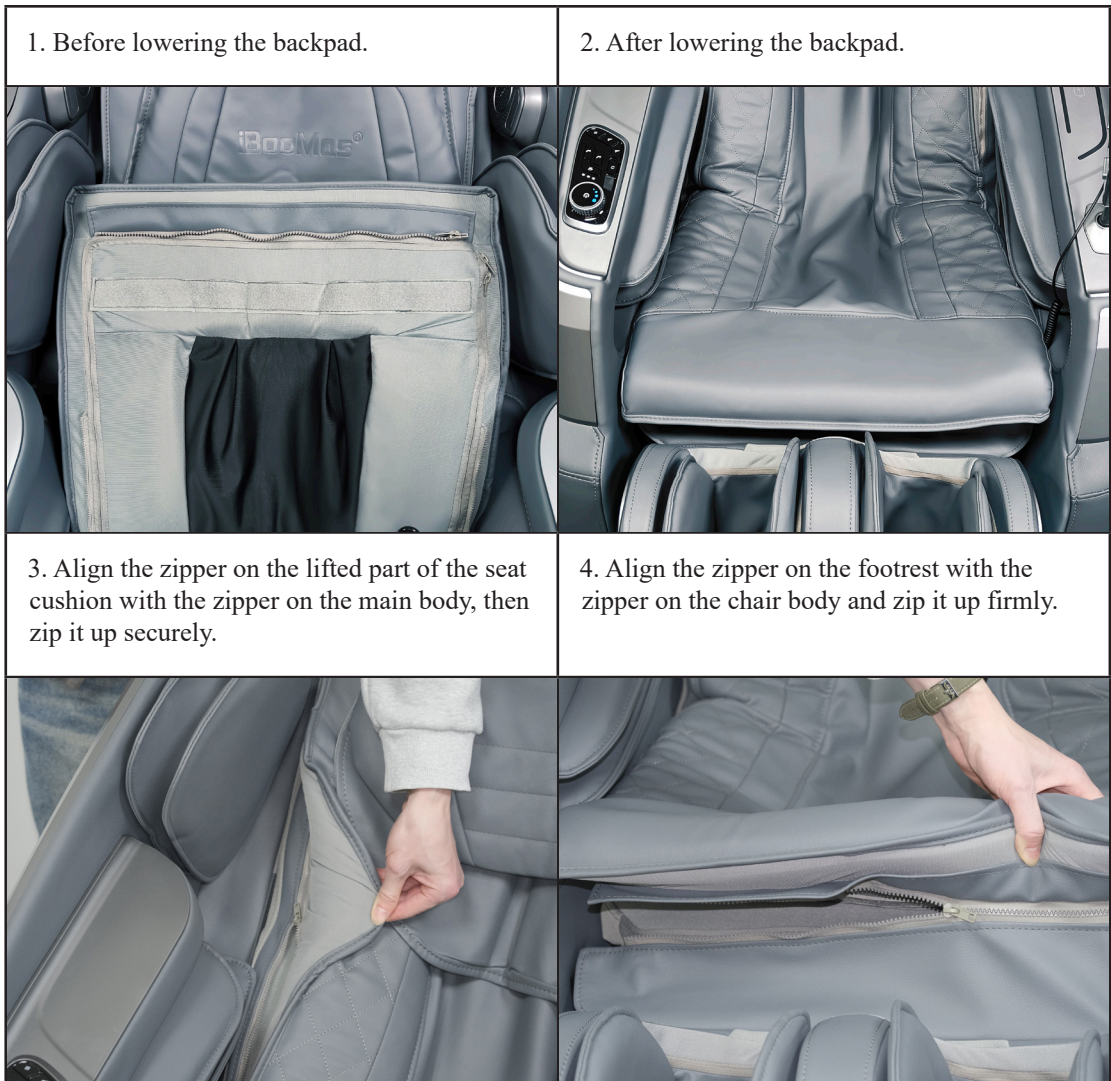


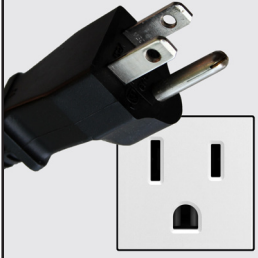


Step 6: Grounding Instructions:

This device must be grounded. In the event of a malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock.

This product is equipped with a power cord containing a grounding conductor and a grounding plug.

The plug must be inserted into a properly installed and grounded outlet that complies with all local codes and regulations.

Connecting to Power:

<p>1. Make sure the power switch is in the OFF position, then insert the power cord into the port located at the bottom of the chair.</p>	<p style="text-align: center;">Switch Power Inlet</p> 	
<p>2. Plug the three-prong power cord into a properly grounded three-prong power outlet.</p>	<p>3. Turn on the power switch.</p>	<p>4. After plugging in the power cord and turning on the switch, use the touch panel to test the functions of the massage chair.</p>
		

⚠ CAUTION:

- This product is intended for use on a circuit with a nominal voltage of 100–240V and is equipped with a grounding plug similar to the one shown in the illustration. Ensure the product is connected to an outlet configured for this type of plug. Do not use an adapter.
- Improper connection of the equipment grounding conductor can result in a risk of electric shock. If you are unsure whether the product is properly grounded, consult a qualified electrician or service technician. Do not modify the plug provided with the product—if it does not fit the outlet, have a proper outlet installed by a qualified electrician.

3.3 Pre-Use Safety Guidelines

(1) How to Move the Massage Chair

- **Method A**

Turn off the main power switch and unplug the power cord from the outlet.

Tilt the massage chair backward as shown below, then push it to the desired location.

When moving the chair, always place a protective mat on the floor to avoid damaging the surface.



- **Method B**

Two people should firmly grasp the steel frame beneath the armrests to avoid damaging other parts of the chair, and lift the chair slowly and steadily. Once it is moved to the desired position, carefully lower the massage chair to the ground.

Always handle the massage chair with care during relocation to avoid injury, as well as damage to the floor or the chair itself.



(2) Placement Requirements for the Massage Chair

Ensure that there is at least 14 inches (approximately 35 cm) of space in front and at least 4 inches (approximately 10 cm) of space behind the chair. This will allow the leg support to fully extend and prevent the backrest from hitting the wall.



⚠ ATTENTION

- Ensure the massage chair is placed within 4 feet (approximately 1.2 meters) of a power outlet.
- Make sure there are no objects, people, or pets near the device.
- Do not expose the massage chair to direct sunlight or high-temperature environments, as this may cause the synthetic leather to discolor or become stiff.
- Do not place the massage chair on a carpet to prevent damage to the carpet.

4. Operating the Massage Chair

4.1 Operating Instructions

4.1.1 Automatic Modes

The P03 is equipped with 24 automatic massage modes designed for various usage scenarios. You can select an automatic mode based on your personal needs. Below is an overview of the 24 available modes:

Function	Description	Intensity	Function	Description	Intensity
Master	Full body massage, strong intensity of rollers and airbags massage.	High	Deep Shiatsu	Full body massage, focus on shoulder and neck massage, deep shiatsu and rolling massage, help relieve neck and shoulder pain for office workers caused by long-term sedentary.	Gentle
Deep Stretch	Full body massage, stretch your leg and back to better relieve muscle soreness after sport or hard work.	High	Gentleman Care	Program customized for gentlemen. By the inter-working of rollers and airbags, massage from soft to deep on the neck, shoulder, waist, back and feet, relieve the fatigue of the whole body.	Strong
Sport Care	Full body massage, a program designed specifically for athletes and fitness person.	Medium	Lady Care	Program customized for ladies. Soothing Heating treatment help warm up and relax the body. Gentle kneading, slow tapping, and other Chinese Traditional massage techniques, help further relieve body fatigue as well.	Gentle
Waist & Back	Partial massage, focus on waist and back, help to relieve muscle soreness of back and waist.	Medium	Wake Up	Wake up in the morning to energize your day. Give a soothing, gentle massage all over your body to help open up the meridians and allow blood to flow freely. Soothing massage allows the body have a buffering process, which can effectively help you adjust your mentality and welcome the new day in a better state.	Soft
Neck & Shoulder	Partial massage, focus on neck and shoulder, help to relieve muscle soreness of back and waist.	Medium	Yoga	By the inter-working of back rollers and whole body airbags, integrate some YOGA stretching action on the body to stretch the leg, waist and arm. Help relieve pressure on the body, relax joint space.	Soft
Deep Sleep	Full body massage with swing function, soft massage help to have a nice nap.	Low	Lumbar Care	Focusing on the lumbar and buttocks. Moderate kneading and hammering on the buttocks can effectively improve the backache after sitting for a long time, relieve the tight muscles, reduce the pressure on the lumbar and cervical vertebrae, and relax the body.	Gentle







Function	Description	Intensity	Function	Description	Intensity
Relaxing	Full body massage, medium intensity of rollers and airbags massage.	Medium	Sole Relieving	This program mainly focuses to reduce the pressure on feet. Different levels of kneading massage on the button of feet, combined with soothing air pressure massage help promote blood circulation and pain relief.	Gentle
Refreshing	Full body massage wake up the body, strong intensity for roller and airbag massage.	High	Space	Enjoy your own private space, enjoy a moment of tranquility, and get the impetuous mind calm down. Under the zero gravity, enjoy the whole body soothing massage, clear the impetuous mood, to have a better mind for achieving life goals.	Gentle
SPA	Full airbag massage and foot roller massage.	Medium	Gentle Care	Massage Part: Waist & Back, Calves and Pelma. Effect: Relax joint space, dredge channels and collateral, relieve back pain. (Recommended People: Who are seated or stood for long time calf care.)	Gentle
Spine Care	Massage focus on the spine area to relax the body.	Medium	TCM Recuperating	Massage Part: Calf and Foot. Effect: De-stress calf pressure by soothing air pressure massage and relax feet by roller kneading and rolling, help promote metabolism, relieve fatigue and improve sleep quality as well. (Recommended People: Who with sore legs and feet.)	Gentle
Soft	Suitable for elderly, full body massage in the lightest way to relieve back pain and leg cramp for the elderly.	Low	Noon Rest	Have a massage during your lunch break to relieve tension. With the swing function under zero gravity, you can better enter a relaxed state, relieve muscle tension, eliminate fatigue, wake up the body vitality. And welcome the coming afternoon with full energy.	Soft
Slim	Soft massage focused on the waist and hip.	Low	Calf Care	Massage Part: Calf and Foot Effect: De-stress calf pressure by soothing air pressure massage and relax feet by roller kneading and rolling, help promote metabolism, relieve fatigue and improve sleep quality as well. (Recommended People: Who with sore legs and feet.)	Gentle

⚠ ATTENTION





- Massage Speed, and Massage Width cannot be adjusted in any automatic mode.
- If you attempt to adjust the airbag massage position during an automatic mode, the system will automatically switch to Temporary Massage mode.
- Air Intensity cannot be adjusted in Deep Stretch mode.
- Zero Gravity, Footrest, and Backrest adjustments are not available in Deep Stretch, Deep Sleep, and Noon Rest modes.

4.1.2 Manual Mode

The P03 offers 6 massage techniques and 4 targeted body areas, allowing you to fully customize your personal massage experience.

 Kneading	Uses a rotating and pressing motion to mimic real hand kneading, effectively relieving muscle tension and improving blood circulation.	 Knocking	Applies deep, firm knocking movements, mimicking knuckle pressure to alleviate muscle stiffness and stimulate acupressure points.
 Rolling	The massage rollers move up and down along the spine, helping to relax back muscles and reduce stiffness.	 Tapping	Uses gentle, intermittent tapping, resembling fingertip touches to relax the nerves and relieve localized muscle fatigue.
 Clapping	Delivers rhythmic tapping motions, simulating the feeling of real palm strikes to soothe soreness and release deep muscle tension.	 Shiatsu	Inspired by Japanese acupressure techniques, this method applies deep pressure to specific points, promoting circulation and reducing muscle stress.

4 targeted body areas:

 Whole	Full-body massage coverage.	 Spot	Fixed-point massage with manually adjustable position.
 Shoulder & Neck	Focused massage for shoulders and neck.	 Waist & Back	Focused massage for waist and back.

ATTENTION






- When using the Kneading and Knocking technique, roller width cannot be adjusted.
- In manual mode, please select a massage technique before choosing other functions.
- When Point is selected as the massage area, press and hold “Up” or “Down” under Mechanism Position Adjustment to move the rollers to the desired position.

4.1.3 Air Mode Overview

The P03 is equipped with 40 airbags and features a dedicated airbag massage mode, offering a gentle and soothing massage experience. Available target areas in airbag mode include: Whole, Back, Waist, Arm, Leg, and Foot. Three intensity levels are available for a customized experience.

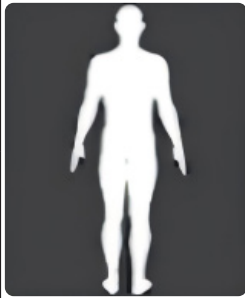Please select the massage area first, then adjust intensity and other settings as needed.



Note: In the Temporary massage mode on the app, 4D Strength and Roller Speed cannot be adjusted.

	<p>Whole: Full-body air-massage coverage.</p>		
		<p>Arm: Focused air-massage for arms.</p>	<p>Leg & Foot: Focused air-massage for legs and feet.</p>
			
		<p>Waist: Focused air-massage for waist.</p>	<p>Shoulder: Focused air-massage for shoulders.</p>



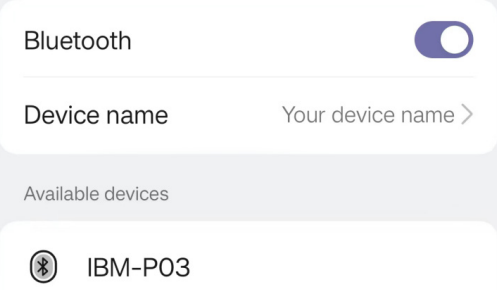

4.1.4 Bluetooth Connection

Step 1: Turn on the Bluetooth function of the massage chair.

You can enable Bluetooth either from the touch panel or through the mobile app.
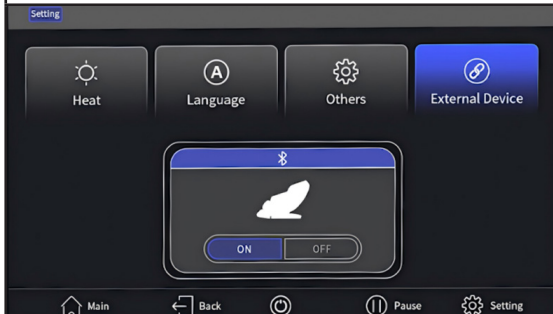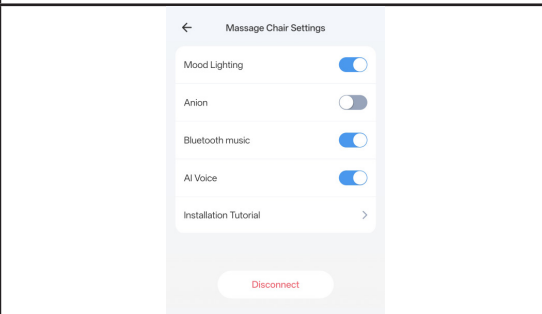
<p>Method 1: On the massage chair, go to the “Settings” screen and tap “External Device”. You will see the Bluetooth toggle. Tap “ON” to enable Bluetooth.</p>	<p>Method 2: After connecting the app to the massage chair, enter the P03 control interface, tap the gear icon in the top right corner to access Settings, and switch on “Bluetooth Music”.</p>
	

Step 2: Turn on Bluetooth on your mobile device and pair it with the massage chair.

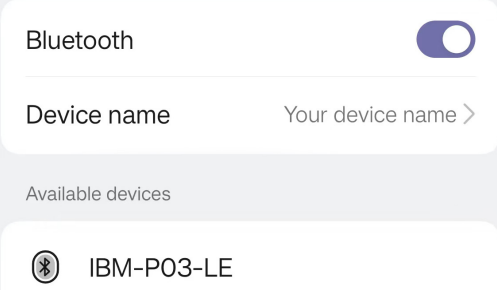
<p>The Bluetooth name shown in the app is for device recognition only. It is used to locate the massage chair in the app and does not require manual pairing.</p>	<p>The other Bluetooth name refers to the massage chair's built-in Bluetooth speaker. Tap to pair, and you can play music through the speaker.</p>
 <p>Bluetooth <input checked="" type="checkbox"/></p> <p>Device name Your device name ></p> <p>Available devices</p> <p> IBM-P03-LE</p>	 <p>Bluetooth <input checked="" type="checkbox"/></p> <p>Device name Your device name ></p> <p>Available devices</p> <p> IBM-P03</p>



4.2 Control Methods

4.2.1 Touch Panel Control

(1) Press and hold the power button to turn on the P03.

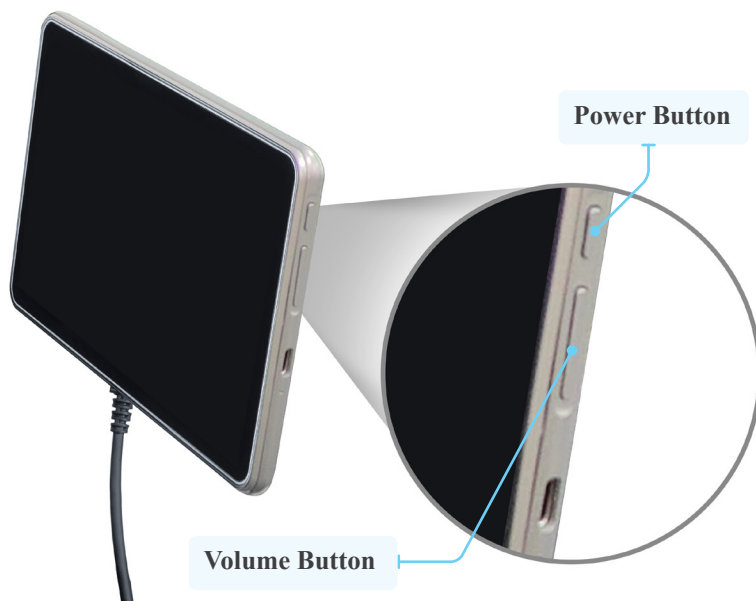


(2) After powering on, the P03 will begin an automatic full-body scan.

Volume Indicator:
Displays the current volume level.

Bluetooth Indicator:
Indicates whether the Bluetooth music function is enabled.

Message Time:
Tap the plus or minus icon to increase or decrease the massage duration.

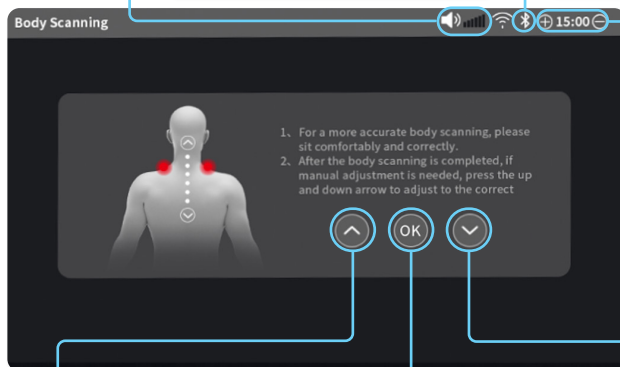

Roller Adjustment Button (Up):
Raises the roller height.

Confirm Button:
Press to confirm the roller position after adjustment.

Roller Adjustment Button (Down):
Lowers the roller height.

(3) Once the scan is complete, the main interface will appear, where you can select the massage mode:

Auto Mode: Select the pre-set auto mode here.

Manual Mode: Customize your own massage program.

Air Massage: Use airbag to massage only.

Setting: Get to setting page.

Main page: Get in to the main page.

Back: Back to previous page.

Power: Turn off the chair.

Pause: Pause or Continue the previous program.

(4) After selecting Automatic Mode, you will enter this interface:

Program types:
The 24 auto mode are divided into 4 parts.

Auto | Manual | Air

Master | Partial Focusing | Body Care | Customization

Master | Relaxing | Deep Shiatsu

Refreshing | Wake Up | Noon Rest

Main | Back | Power | Pause | Setting

Programs:
Tap one of it to launch the program.

(5) Choose the mode you wish to experience, then proceed to the adjustment interface for the automatic mode:

Speed: Adjust roller speed.

4D: Adjust roller intensity.

Calf Roller: Adjust calf roller intensity.

Foot Roller: Adjust the foot roller intensity.

Zero Gravity Level: Adjust the level of zero gravity.

Footrest Angle: Press and hold to adjust the footrest angle up and down.

Footrest Extention: Press and hold to adjust the length to suit for your leg.

Backrest Angle: Adjust the backrest to ensure you're comfortable.

Heating: Switch the heater on/off, and setting the temperature levels.

(6) Tap “Manual Mode” to enter this interface, where you can manually customize your personalized massage experience:

Technique: Here are 6 techniques can be selected.

Roller Position Adjustment: When Partial or Point Massage is selected, place the roller on any part of the body as desired.

Whole: Massage your whole body.

Partial: Focus on any area you want to massage.

Point: The massage rollers will be fixed at one point for massage.

Roller Width Adjustment: Select the roller width to ensure you're comfortable.


(7) Tap “Air” to enter the airbag mode. In this mode, you can select the airbag massage area and adjust the intensity for the calves and feet:

Massage Area:
Select the area you want to massage.

Air Intensity:
Increase or decrease the airbags intensity.

Foot Roller:
Adjust the foot roller intensity.

Foot Roller:
Adjust the foot roller intensity.

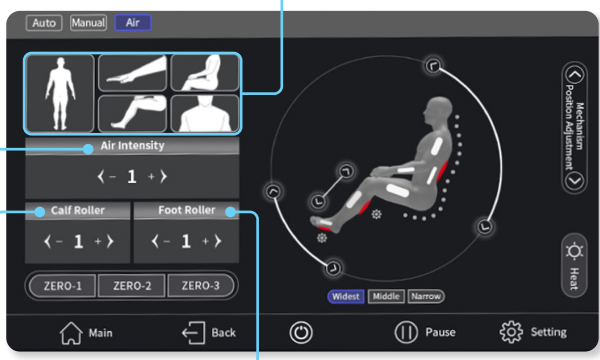

(8) In the Settings interface, you can adjust the following functions:


Setting - Heat: Switch the heater on/off, and setting the temperature levels.

Setting - Language: Select your language.



Setting - Others: Switch AI Voice, Oxygen Ion and LED Light on/off. Adjust volume and luminance levels.



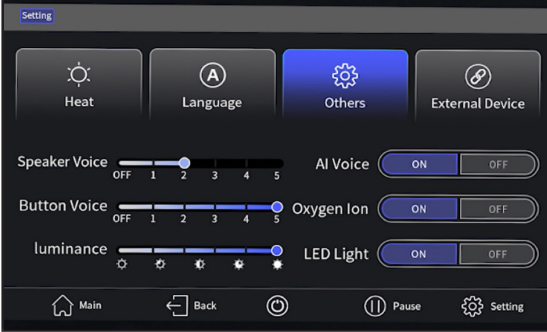







External Device: Switch Bluetooth on/off.



4.2.2 Shortcut Key




Shortcut Key Functions:

	<p>Power Button Press and hold to power on the chair. When the chair is running, press once to pause or resume the massage program. Press and hold again to power off.</p>		<p>Backrest Down Button Press the “Down” button to lower the angle of the backrest.</p>
	<p>Rotary Knob Massage intensity has 6 levels. Rotate clockwise to increase the intensity, and counterclockwise to decrease it.</p>		<p>Footrest Up Button Press the “Up” button to raise the footrest.</p>
	<p>Zero Gravity Button There are 3 levels of Zero Gravity. Press this button to cycle through the available positions.</p>		<p>Footrest Down Button Press the “Down” button to lower the footrest.</p>
	<p>Auto Mode Button Press to enter the automatic massage mode interface. Select your desired program to start the massage.</p>		<p>Heating Button Press to activate or deactivate the heating function for the shoulders, back, or feet.</p>
	<p>Backrest Up Button Press the “Up” button to raise the angle of the backrest.</p>		<p>USB Port Keeps your phone charged while enjoying a massage.</p>


4.2.3 APP Control

4.2.3.1 APP Login & Basic Setup Guide


Step 1: Download, Register, and Log In

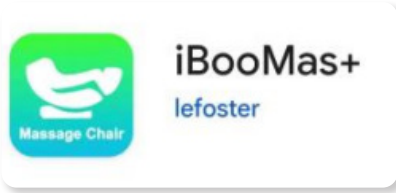

1. Download and install **iBooMas+** from the App Store or Play Store.

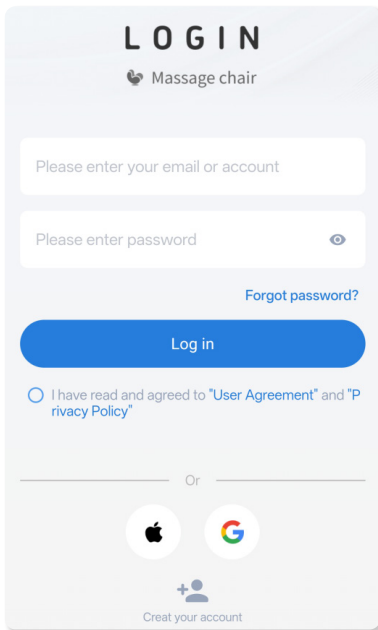


2. If you already have an account, simply log in with your username and password. If you don't have an account, you can log in using your Apple ID or Google ID, or register a new account. Make sure to save your login information securely.

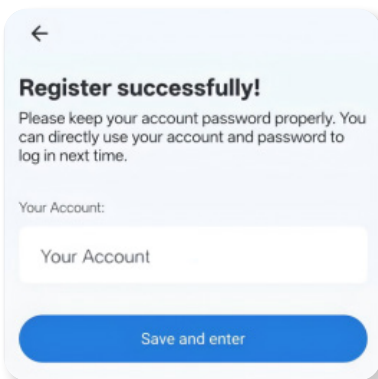


3. Once registration is complete, keep your account credentials safe. The next time you log in, just enter your saved account and password. Then click Save and Enter to proceed


Step 2: Complete the New User Onboarding

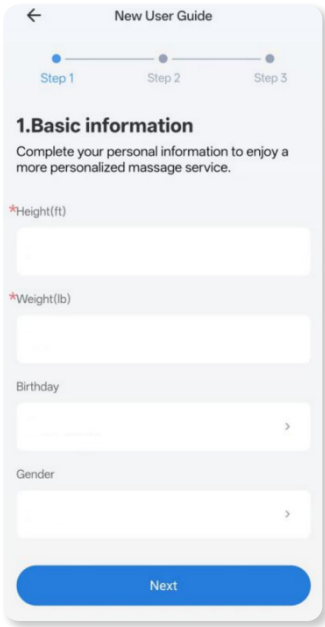


1. Enter your basic personal information to enjoy a tailored massage experience.

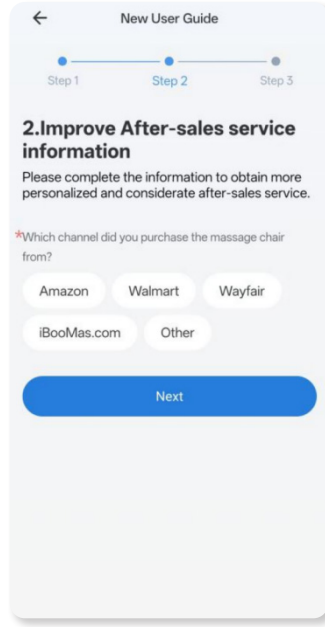

2. Select your purchase channel to receive personalized after-sales support.

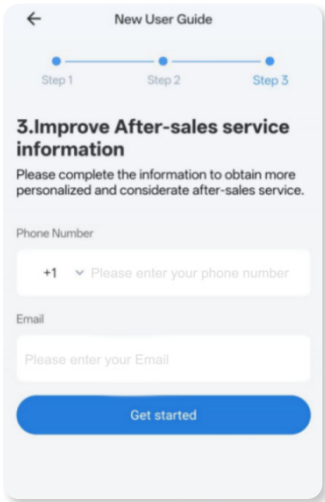


3. Provide your contact details to ensure comprehensive customer service.

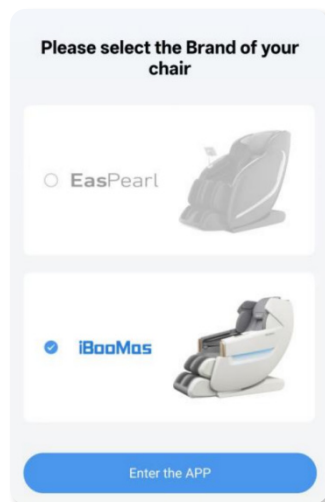


4. Choose the brand of the product you purchased to start enjoying your massage through the app.

Step 3: Open the App and Enable Permissions

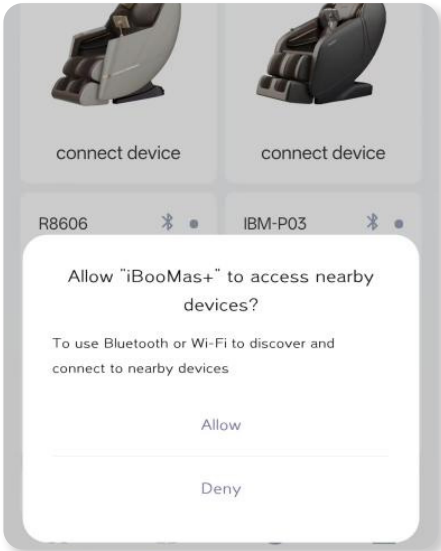


1. Grant the app permission to access “Nearby Devices.”

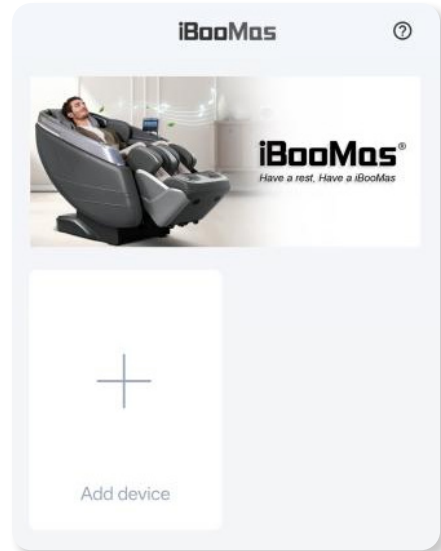

2. Tap “Add Device.”



3. Search for nearby devices via Bluetooth.

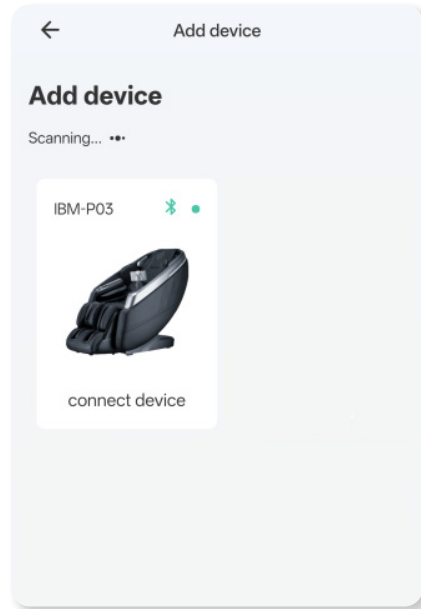

4. Select P03 and tap “Connect.”

4.2.3.2 Control the Massage Chair via the App

1. Introduction to the App Home Screen

The screenshot shows the app interface for a massage chair (model IBM-P03). At the top, there is a back arrow, the model number, and a settings gear icon. Below this is a '0 Min' timer with a clock icon and an 'Off' status. A central image of the massage chair is shown. To the right of the chair is a green power button. Below the chair image are three tabs: 'Automatic', 'Customized', and 'Favorites'. The 'Customized' tab is active, showing a grid of nine icons: Zero Gravity, Foot Roller, Heating, Airbag Adjust, 4D Strength, Massage Speed, Massage Width, Calf Rub, and Leg Stretch. Callout boxes provide descriptions for these controls:

- Time Button:** Select the duration of the massage.
- Automatic:** Select the program you like.
- Customized:** Select a technique and focus area to customize your massage.
- Setting Button:** Turn functions on/off.
- Power Button:** Turn on the massage chair.
- Favorites:** Save your favorite program for quick access.

	Zero Gravity: Select the level you like.		Massage Speed: Adjust the massage strength.		Massage Width: Adjust the massage width to suit your body.
	Foot Roller: Switch foot roller on/off, and adjust the intensity.		Airbag Adjust: Switch airbag on/off, adjust the intensity and select air massage area.		Calf Rub: Switch calf rub function on/off, and adjust the intensity.
	Heating: Switch the heater on/off, and setting the temperature levels.		4D Strength: Adjust the strength of the 4D roller.		Leg Stretch: Adjust the length of the footrest to suit your leg length.

2. Guide to Using the Automatic Mode



Footrest Adjustment: Hold “Up” or “Down” to adjust the footrest angle.

Automatic: Select the program you like.

Power Button: Turn on the massage chair.


Pause Button: Pause the massage.

Backrest Adjustment: Hold “up” or “down” to adjust the backrest angle.

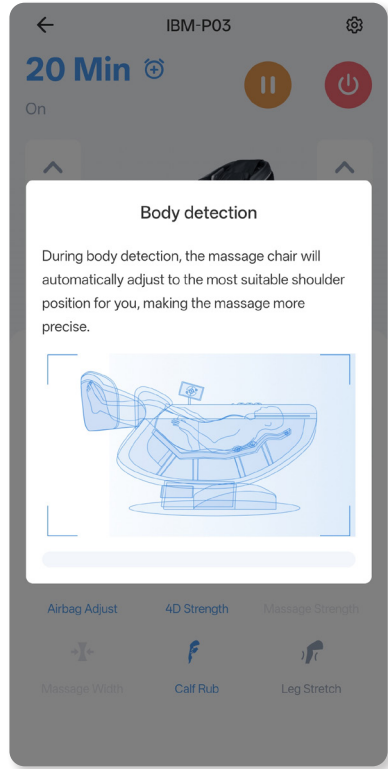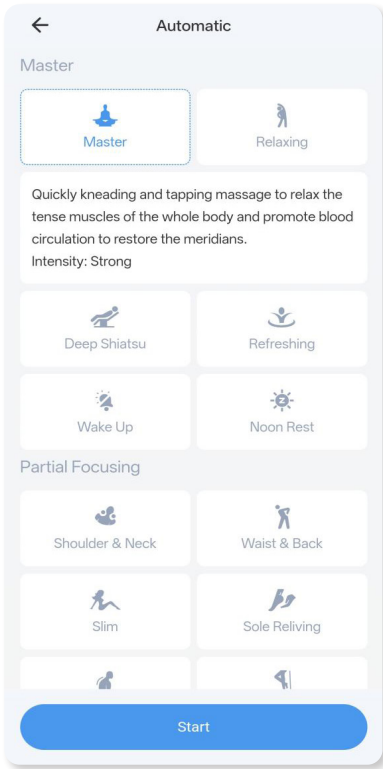


1. In Automatic Mode, select the desired mode and click to start.

2. After clicking start, the massage chair will begin automatic body detection.

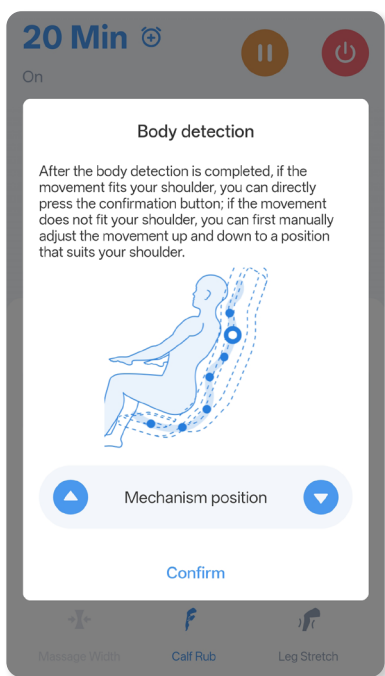


3. Once the detection is complete, you can adjust the roller position again, then click “Confirm” when finished.

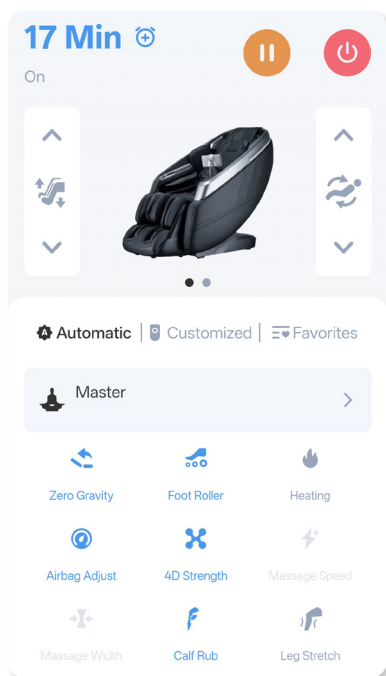


4. Start enjoying g your massage. On this screen, you can adjust various features.

3. Guide to Using the Manual Mode

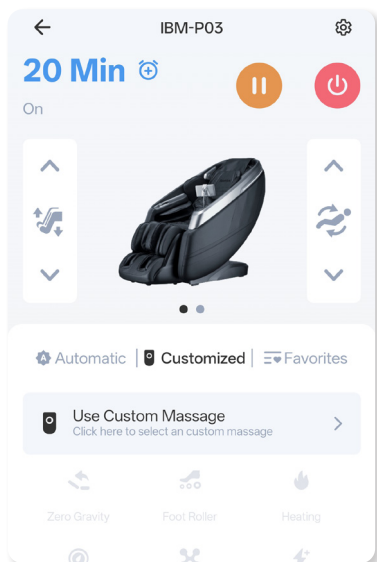


1. Click “Use Custom Massage” to start customizing your massage program.

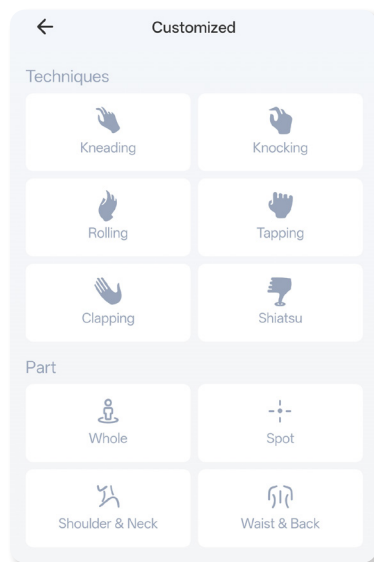


2. First, select “Techniques,” then choose “Part,” and after that, click the back button.

Return to the control interface to adjust individual features:

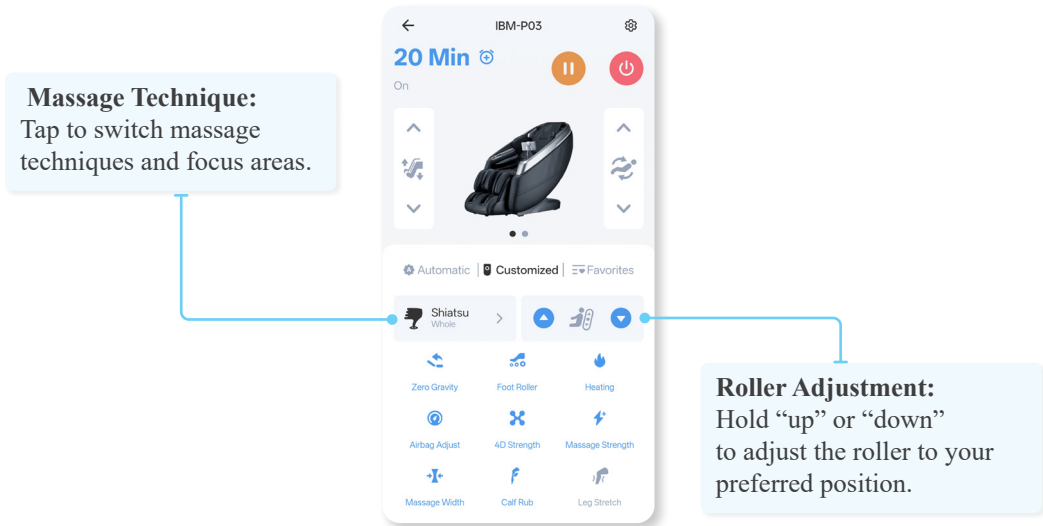


4. Guide to Using the Air Mode

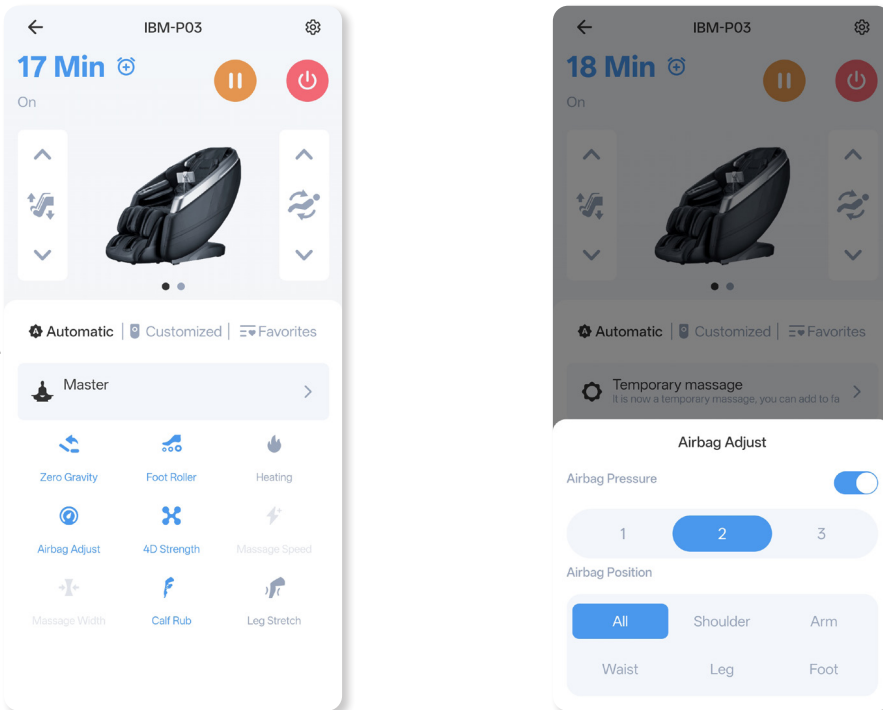


1. Select and start any automatic program.

2. Tap “Airbag Adjustment” and select a position to enter Temporary Massage mode. Rollers will stop, and only the airbags will operate.

5. Favorites Function Introduction

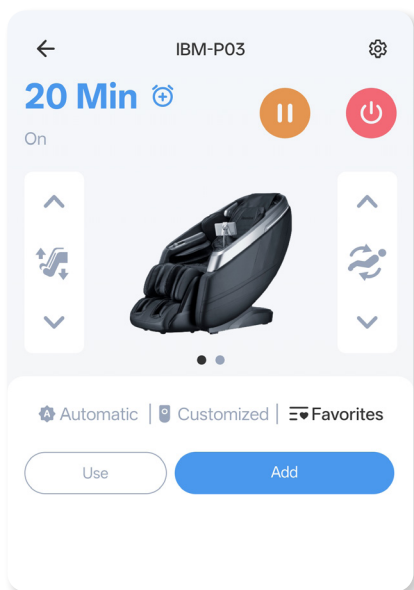

1. Click “Favorite” to enter the favorites section, then click “Add” to create a new favorite.

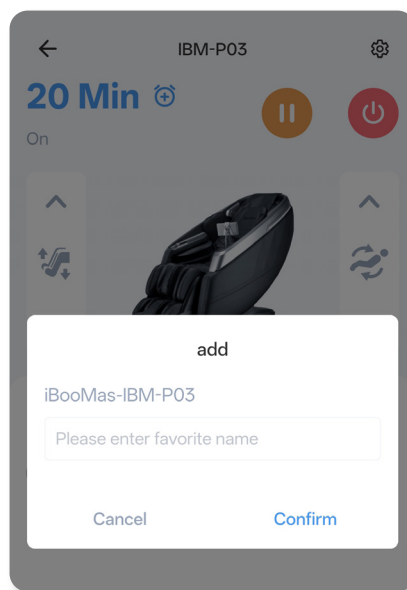


2. Set a name for the current massage program and click “Confirm” when finished.

6. Overview of the App Settings Interface:

Mood Lighting Switch:
Turn Mood lighting on or off.

Bluetooth Music Switch:
Turn Bluetooth music on or off. When enabled, connect to the chair and enjoy music through the built-in speakers.

Installation Tutorial:
If you need help, tap to watch the installation guide video.

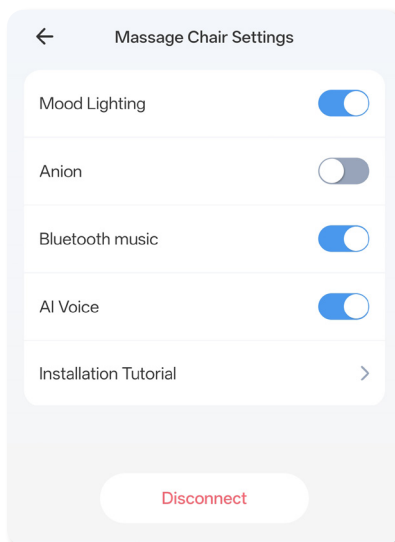


Anion Switch:
Turn Anion on or off to refresh the air just like in a rainforest.


AI Voice Switch:
Turn AI Voice on to control the chair with voice commands.

Disconnect:
Tap here to disconnect from the chair.


7. Introduction to Other App Features:

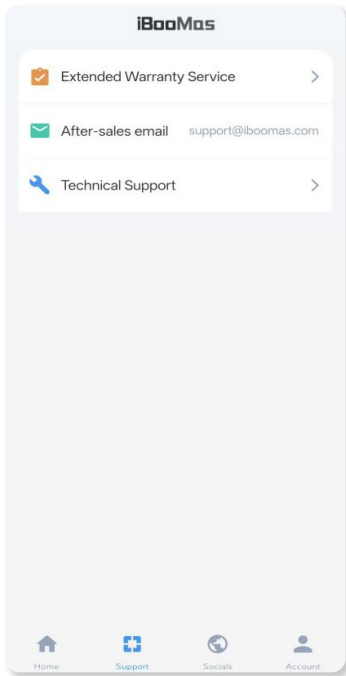

- Click “Extended Warranty Service” to select the extended warranty service.
- Click “Technical Support” to report any issues you encounter, so we can provide you with technical support.
- Click “FAQs” to view frequently asked questions and their answers.

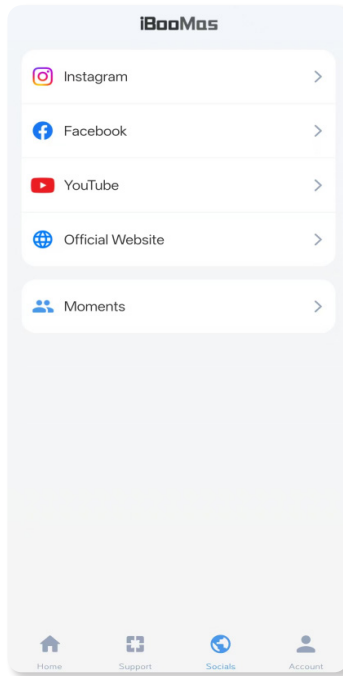

- Through social media, you can stay up-to-date with our new product releases, promotions, and brand news.
- We hope to establish a closer relationship with you to provide better service and experience.
- You can share your exciting moments and experiences using the message chair in “Moments.”

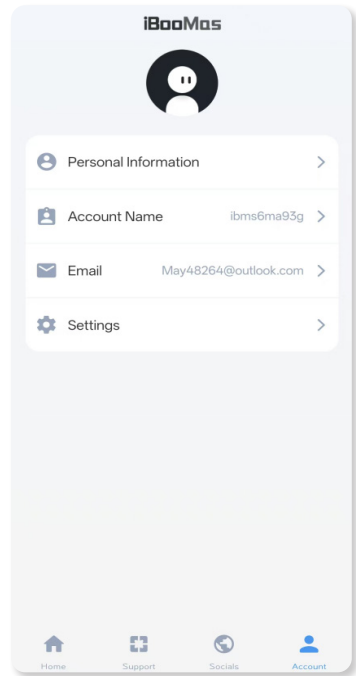

- Modify Personal Information: Including avatar, nickname, height, weight, birthday, and gender.
- Modify account name.
- Modify email address.
- Language, Change Password, Check Version, Brand switching, Log upload, Community Norms, Logout

4.2.4 AI Voice Control

⚠ ATTENTION:

After saying “Hello, Massage Chair,” the chair will wake up and be able to receive and execute voice commands within six seconds, resetting the wake-up timer. If no command is received within six seconds, the voice system will enter sleep mode.

Category	Commands	Replies
Wake Up	Hello massage chair	Hello Master
Basic Function	Power on/Turn on massage chair	Please select your favorite program to start the massage. During auto-body scanning, please relax and lean your head on the pillow.
	Power off/Turn off massage chair	During shutdown, please leave or restart the massage chair after the chair is completely reset. Thank you and hope you enjoy the massage.
	Pause massage	Massage paused
	Continue to massage	Massage resumed
	Increase strength	Increase back roller intensity
	Decrease strength	Decrease back roller intensity
	Turn on Bluetooth	OK, Bluetooth on
	Turn off Bluetooth	OK, Bluetooth off
	Turn on Heating	OK, Heating on
	Turn off Heating	OK, Heating off
	Turn on foot roller	OK, Foot roller on
	Turn off foot roller	OK, Foot roller off
	Start airbag massage	OK, Start airbag massage
	Stop airbag massage	OK, Stop airbag massage
	Increase air intensity	Air intensity up
	Decrease air intensity	Air intensity down
	Zero gravity	OK, command complete
	Back up	OK, command complete
	Back down	OK, command complete
	Leg up	OK, command complete
Leg down	OK, command complete	

Category	Commands	Replies
Angle Adjustment	Back up	OK, command complete
	Back down	OK, command complete
	Leg up	OK, command complete
	Leg down	OK, command complete
Auto Massage Functions	Master massage	Start Master massage
	Sport Care massage	Start Sport Care massage
	Soft massage	Start Soft massage
	Relaxing massage	Start Relaxing massage
	Spine care massage	Start Spine care massage
	Spa massage	Start Spa massage
	Refreshing massage	Start Refreshing massage
	Waist & Back massage	Start Waist & Back massage
	Neck & Shoulder massage	Start Neck & Shoulder massage
	Slim massage	Start Slim massage
	Deep Stretch massage	Start Deep Stretch massage
	Deep Sleep massage	Start Deep Sleep massage
Manual Massage Functions	Kneading massage	Kneading massage
	Shiatsu massage	Shiatsu massage
	Knocking massage	Knocking massage
	Rolling massage	Rolling massage
	Tapping massage	Tapping massage
	Clapping massage	Clapping massage
	Whole body massage	Whole body massage
	Local massage	Local massage
	Spot massage	Spot massage

5. Maintenance & Care

5.1 Cleaning Instructions

Regular cleaning helps maintain the massage chair's condition and prevents dust and dirt buildup.

Step 1: Dampen a soft cotton cloth with a mild detergent, wring it out, and use it to wipe the pillow, backrest, armrests, leg supports, and any plastic parts of the chair.

Step 2: Use a damp cloth (without detergent) to wipe the pillow and backrest again.

Step 3: Use a soft, dry cloth to wipe the armrests, leg supports, and any plastic parts of the chair.

Step 4: Wipe the controller and power box with a soft, dry cloth.

Step 5: To clean the foot/leg unit cover, remove it from the chair, hand wash with a mild detergent, and allow it to air dry.

5.2 Cleaning Precautions

- (1) Power off and unplug the device before cleaning.
- (2) Do not use acidic, alkaline, or corrosive chemicals (e.g., benzene, alcohol) for cleaning.
- (3) When cleaning the back cover, prevent liquids from entering the power terminal box.

5.3 Maintenance Guidelines

- (1) Regularly inspect the power cord and components to ensure safe operation.
- (2) Promptly replace any worn or damaged parts identified during inspection.
- (3) Unplug the power cord and cover with a dust-proof cloth during prolonged non-use.
- (4) Avoid placing heavy or sharp objects on the massage chair when not in use to prevent structural deformation or scratches on the leather surface.
- (5) Minimize relocation – Due to the chair's complex internal structure, weight, and size, frequent movement may cause dents or scratches. Secure it in a fixed position for long-term stability.

6. Frequently Asked Questions (FAQ)

Issue Type	Specific Issue	Solution
User Experience	1. Is it normal to feel pain in a specific area after using the massage chair?	<p>Recommendation: Limit each session to ≤ 30 minutes.</p> <p>First, check for any underlying conditions in the painful area. If none, adjust the massage chair's mode and intensity.</p> <p>Next, verify the intensity setting (see auto mode instructions on Page 15), and adjust if necessary.</p> <p>Cover the massage area with a blanket to reduce intensity if needed.</p>
	2. Auto Body Scan inaccuracies	<p>1. Posture Adjustment. Sit deeply into the chair, rest your head on the headrest, relax, and start the massage chair.</p> <p>2. Manual Calibration. Upon hearing two audible beeps (scan completion signal), press and hold UP/DOWN buttons to fine-tune roller positioning.</p> <p>3. Headrest Removal. Bring the massage rollers closer to the body.</p>
	3. What is the normal noise level during operation?	Noise level: ≤ 60 dB when measured at 50 cm with all functions fully operational per testing standards.
	4. Discomfort in the leg extension	No need to press down forcefully. Relax your feet and allow the natural pressure from your leg length to extend downward.
	5. Roller massage discomfort in head	Upon completion of the auto body scan, press and hold the DOWN button to lower the massage rollers below the head area.
Function Operations	1. What is the APP?	Download the iBooMas+ app from the Google Play Store or Apple App Store.
	2. How to connect the APP?	Turn on your phone's Bluetooth, scan for and pair with the Bluetooth device ending with "LE".
	3. App Connection Issues	Go to Settings \rightarrow App \rightarrow Toggle Location Access to On
	4. Incorrect Password	Check the password for correct case. If you can't log in, use Guest Mode. Contact us for the guide.
	5. How to connect Bluetooth speakers?	Scan for and connect to the Bluetooth device named P03.
	6. Bluetooth Connection Issues	<p>Step 1: Ensure the Bluetooth module cable is properly connected. If damaged, replace the cable.</p> <p>Step 2: Use a multimeter to check for 5V DC at the Bluetooth module connector. If voltage is present, replace the module; if not, replace the motherboard.</p>
	7. Heating issue	After operating the massage chair for 5 minutes, manually check the temperature of the heating zone (expected range: 100–114°F). If no temperature increase is detected, contact customer support immediately.

Issue Type	Specific Issue	Solution		
Massage Mechanism	1.The Mechanism remains stationary at the neck position, but the massage rollers are still operational.	Step 1: Check the DC 5V operating voltage on the red and black wires of the Hall limit switch board connector. Step 2: Check the DC 24V supply voltage to the travel motor. Step 3: Check the upper limit magnet.	Please contact customer service, provide a detailed description of the massage chair’s current condition, and send a video showing the issue along with a photo of the barcode on the bottom of the backrest.	
	2.The Mechanism fails to descend and remains at the top position; massage rollers are inoperative.			
	3.The Mechanism is jammed at the hip area and fails to perform vertical movement.	Step 1: Check the DC 5V operating voltage on the red and black wires of the Hall limit switch board connector. Step 2: Check the DC 24V supply voltage to the travel motor. Step 3: Check the lower limit magnet		
	4.The Mechanism continues operating after the massage	Power off the chair, then restart it. If the issue persists, replace the main control board.		
	5.Unusual noise during roller operation? / Unusual noise with one-side roller not working?	Unzip the seat cushion and remove the lining. Check for loose or deformed massage rollers and arm screws. Replace the massage head and arm if needed.		
Backrest	1. Backrest Adjustment Failure & Zero-Gravity cannot be adjusted	Check for 24V DC at the actuator’s matching connector port on the mainboard. If voltage is present, replace the actuator. If no voltage is detected, replace the main control board.		
	2. Zero-Gravity Position Reset Failure (Other Functions Normal)			
	3.Unusual noise from the backrest	Open the back cover of the massage chair, then turn it on and run the chair. Listen carefully to identify the source of the noise. If the noise comes from the motor unit during movement, apply wheel lubricant to both sides of the rail to resolve the issue.		

Issue Type	Specific Issue	Solution	
Actuator	Massage chair fails to respond or operate when powered on	Step 1: Check the power rocker switch	Connect the power cord and turn on the main power switch located at the lower rear of the massage chair. If the red indicator does not illuminate, the rocker switch is faulty and requires replacement.
		Step 2: Inspect the switching power supply	Use a multimeter to measure the input terminals for 220V AC and 24V DC. If no voltage is detected, the SMPS is faulty and need to be replaced.
		Step 3: Inspect the main control board	Use a multimeter to test for voltage. If no voltage is detected and the manual controls fail to respond, the main control board is faulty and must be replaced.
Airbags	1. Calf airbags fail to inflate	Step 1: Check the solenoid valve DC power supply (24V). If abnormal, replace the solenoid valve or air tubing.	
		Step 2: Inspect the airbag for any damage and replace it if necessary.	
Step 3: Use a multimeter to measure the solenoid valve socket on the mainboard for DC 24V voltage. If there is no voltage, replace the mainboard.			
	2. Uneven compression force in left and right arm airbags	Unzip the airbag cover and inspect the air tubing for kinks or flattening. Adjust or replace the air tubing if necessary.	
Footrest	1. Foot rollers fail to operate	Step 1: Inspect the leg connection cable	Re-seat the footrest connection plug. If the issue persists, use a multimeter to check for a 24V DC voltage at the connector. If no voltage is present, replace the connection cable.
		Step 2: Inspect the foot roller mechanism	Use a multimeter to measure the 24V DC voltage at the foot roller mechanism connector. If voltage is present, replace the foot roller mechanism.
		Step 3: Inspect the main control board	Use a multimeter to measure the 24V DC voltage at the footrest socket. If no voltage is detected, replace the mainboard.
	2. Unusual noise during footrest operation	Step 1: Inspect the leg extension mechanism	If sticking or grinding occurs internally, lubricate the tracks with silicone grease to eliminate noise. For severe mechanical resistance, replace the footrest.
		Step 2: Check the leg airbags	Misaligned airbags may cause noise due to compression during inflation. Adjust the airbag positioning to ensure proper alignment.
	3. Unusual noise during foot rollers operation	Power on the massage chair and press down on the foot rollers. If grinding or squeaking is heard, replace the foot roller.	

Issue Type	Specific Issue	Solution	
Remote Control	1. Remote control screen does not illuminate after powering on	<p>Step 1: Ensure the remote control cable plug is securely inserted into the socket.</p> <p>Step 2: Check for any damage or breaks in the extension cable. If damaged, replace the remote control.</p> <p>Step 3: Operate the massage chair using the shortcut buttons. If the chair functions properly, replace the remote control.</p> <p>Step 4: Use a multimeter to measure 5V DC across the red and black wires at the remote control socket. If no voltage is detected, replace the mainboard. If voltage is present, the issue lies with the remote control or cable. Refer to Steps 1-3 for further troubleshooting.</p>	
	2. Remote control displays “Checking” continuously	<p>Step 1: Check the shoulder position detection infrared signal board: Inspect for any abnormalities. If faulty, replace the signal board.</p> <p>Step 2: Check the mechanism board: Look for poor connections, damaged sockets, or a faulty circuit board. Replace the mechanism board if necessary.</p> <p>Step 3: Check the mechanism cable and connector: Inspect for poor contact or damage. Reconnect or replace the mechanism cable if damaged.</p> <p>Step 4: Check the mainboard mechanism cable socket: Inspect for damage or abnormalities. If faulty, replace the mainboard.</p>	
Electrical Control Box	No power and burnt odor detected in the electrical control box.	<p>Step 1: Inspect for any blown fuses and replace.</p> <p>Step 2: Use a multimeter to check the rocker switch and power cable: Burned-out switch or cable: Replace the rocker switch and power cable. Damaged socket/plug: Replace the corresponding connectors (socket or plug).</p> <p>Step 3: Measure voltage on the main control board with a multimeter. No voltage or visible charred/burnt traces: Replace the main control board.</p> <p>Step 4: Inspect expansion/module boards for burns, short circuits, or open circuits. Replace any damaged module board or wiring harness.</p> <p>Step 5: Check other components (e.g., air pump, air valve): If the air pump or air valve is burnt, replace them.</p>	
Whole Machine	1. The massage chair continues to operate after shutdown	Step 1: Inspect Remote Control	Disconnect the remote control connector plug. Operate the chair using the manual control panel. If the chair stops working, replace the remote control.
		Step 2: Inspect Mainboard	Operate the chair using the manual control panel. If the chair remains operational, replace the mainboard.
	2. Automatic shutdown occurs	Disconnect the remote control connector plug. Operate the chair using the manual control panel. If automatic shutdown stops, replace the remote control. If automatic shutdown persists, replace the manual control panel.	

Issue Type	Specific Issue	Solution	
Whole Machine	3. Foot/shoulder airbags or rollers are not working. Possible malfunction?	Step 1: Verify Selected Massage Mode	Confirm which functions are inactive in the current mode. If the issue is caused by incorrect mode selection, test other massage modes.
		Step 2: Inspect Travel Motor	If the travel motor is inactive: Measure its supply voltage (DC24V). If voltage is present: Replace the travel motor.
		Step 3: Inspect the mechanism	If the travel motor isn't working and there is no voltage (DC24V), check the wiring connectors and the mechanism's sealing plate. If there is an issue, replace the mechanism board.
		Step 4: Inspect Mainboard	If the travel motor socket shows no DC24V output voltage, replace the mainboard.
	4. Unusual noise in Sleep mode?	Step 1: Inspect the Actuator Step 2: Inspect the Metal Frame	Please contact customer service, provide a detailed description of the massage chair's current condition, and send a video showing the issue along with a photo of the barcode on the bottom of the backrest.
	5. Unusual noise during lift and lower operation?		
	6. Troubleshooting steps for housing abnormal noise	Inspection Checklist: 1. Armrests 2. Backrest Cover 3. Rear Housing 4. Footrest Cover 5. Protective Guard	Start the massage chair and locate the source of any unusual noise from the external parts. Re-secure the parts to eliminate the noise. If any fixation points are damaged or if parts are loose, replace the affected components.
	7. The lift button is not responding, and the massage chair emits a beeping sound when the control buttons are pressed	Step 1: Inspect Actuator	Measure voltage at the actuator connector socket (DC24V). If voltage is present: Reconnect the connector. If the actuator still fails to operate, replace it.
		Step 2: Inspect Mainboard	Measure voltage at the actuator socket (DC24V). If no voltage is detected: Replace the mainboard.

7. After-Sales Service

7.1 Warranty Policy

- **Warranty Period:**

Year 1: Free parts and labor.

Years 2-3: Free parts only. Customer bears shipping costs.

Year 4 onward: Customer bears all parts and shipping costs.

- **Warranty Coverage:**

Covers **non-user-induced damage** to core components:

Main control board, Drive mechanism, Rollers, Airbags, Seat cushions.

- **Warranty Conditions:**

Valid only with **Order ID** provided.

Excludes damage caused by misuse, accidents, or unauthorized modifications.

Note: Retain your Order ID for all service requests.

7.2 Repair Services

- **On-Site Repair:**

Currently unavailable.

- **Service Scope:**

Motor failure, Roller jamming, Airbag leaks, Remote control malfunctions, Seat cushion issues.

- **Self-Repair Support:**

Replacement guides (PDF/video) are available for customer self-repair.

7.3 Replacement Parts

Genuine Parts: Available to ensure compatibility and manufacturer-grade quality.

7.4 Technical Support

- **Email Support:**

For after-sales technical assistance, contact us at support@iboomas.com.

- **Online Support:**

Reach our **WhatsApp** at +1 (323) 552-0419 or request troubleshooting video guides.

- **Additional Channels:**

App: Submit issues via **iBooMas+** (available for iOS/Android).

Website: Visit www.iboomass.com

7.5 Returns & Exchanges

- **30-Day Hassle-Free Returns:**

30-day no-questions-asked return and exchange service.

- **Conditions:**

1) Item must be in original condition with undamaged packaging and all accessories.

2) Provided with Order ID.

8. Share & Earn Rewards

8.1 Buyer Show Collection

Chance to win a bonus of \$50 to \$200!!!

Dear Valued Customer, thank you for choosing our massage chair to start your journey of comfort and relaxation. We sincerely invite you to share your experience.

Whether you're unwinding after a long day or recharging during a busy afternoon, snap a photo or video of:

- **Your relaxed moments in the chair,**
- **The chair's elegant details,**
- **Joyful sessions with family or friends.**

8.2 How to Participate

- **Create a Video:**

Film a video (45+ seconds) featuring unboxing, your experience, or a product introduction.

- **Share on Social Media:**

Upload it to your YouTube, Facebook, Instagram, or TikTok. Include these hashtags: #iBooMas #iBooMas Massage Chair. And add the product purchase link in your post.

- **Contact us:**

Email the video link to **support@iboommas.com** with your **Order ID** as the subject.

Based on video quality and views, you'll earn a \$50–200 bonus!

Extra Reward for TikTok:

Get 5% commission for every massage chair sold through your video!

Details: WhatsApp +1 (323) 552-0419.