



Please check contents **before assembly**. If any items are missing or damaged, **do not take the unit back to the store**.

GLIDER COMPONENTS

Preassembled Back

1 Left Front Leg 26" Long

1 Right Front Leg 26" Long

Preassembled Seat

2 Back Legs 26" Long

2 Arms 20" Long

Rail 57" Long

2 Glider End Assemblies

6 Braces 9" Long

NOTE: Cracks or Checks in logs are part of the natural beauty of cedar logs and should not be considered defects.

HARDWARE
(Not shown actual size)

Twenty-Four 2-1/2" Screws

4 Glider Straps

Eight 1/4" Washers

Eight 1/4"x2-1/2" Lag Screws

TOOLS REQUIRED

Rubber Mallet

Block of Wood & Hammer

7/16" Wrench

Socket

#2 Phillips Screwdriver

Optional: Power or battery screw gun

TIPS


- A battery operated or electric drill will make assembly faster and easier.
- Use a good quality penetrating oil or wood deck sealer with a UV inhibitor and an anti-fungal. (Make sure product is intended for outdoor use.)
- If staining or finishing before assembling, tape off all dowel ends. (Finishes will cause the dowels to swell, making assembly difficult.)

NOTE: Read all instructions before starting.

- Do not completely tighten any screws until the unit is fully assembled and setting on a level surface.
- Use a rubber mallet (or a block of wood between the hammer and the unit) to drive doweled ends into holes as far as possible.

STEP 1 Lay assembled seat on floor. Insert dowel end of uprights on assembled back into holes on the back seat rail, adjust uprights in or out as needed to align properly. Do not tap on seat back with hammer.

Tap uprights in or out until dowel drops into hole.

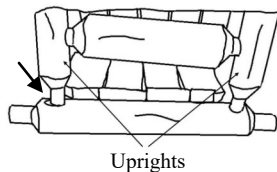

To keep the seat rail from splitting, lay the back on the floor and drive the seat onto the doweled ends by hitting on the bottom of the seat assembly. (See Figure 1)

STEP 2 Make a right leg set and a left leg set by inserting dowel end of back leg into angled hole of front leg. The drilled holes on each leg should face the same direction as shown in Figure 2. Put arms onto legs by inserting dowel end of front legs into the hole in the arms. Drive arm onto leg assembly as far as possible.

Figure 1

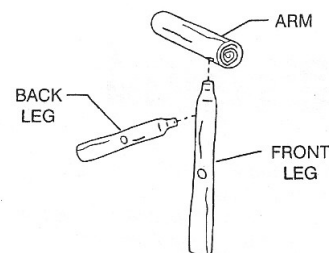
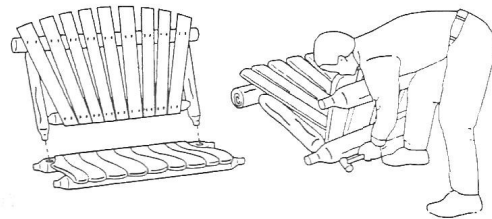


figure 2

STEP 3 Tip the back and seat assembly up onto its side and insert dowel ends of seat rails into holes on leg sets. Drive legs on as far as possible. Turn assembly over and repeat procedure for the other side.

Screw a brace onto the seat rail and to the leg. Repeat process on other side. As illustrated in figure 3.

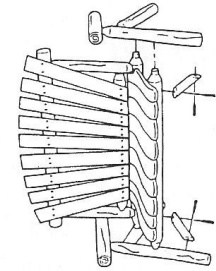


Figure 3

STEP 4 Insert glider rail into glider ends. Rail should be off centered to the back of the glider base. Screw on braces as shown using 2-1/2" Philips head screws, by placing them on the top and front of each end of the glider rail.

Note the location of washer and glider strap on lag screw.

STEP 5 Attach all four glider straps to glider base with the 1/4" x 2 1/2" lag screws into pre-drilled holes. See figure 4.

STEP 6 Turn glider base on it's side. Secure dowel joints in place with 2" flat head screws perpendicular to doweled end as shown in Figure 5 and 6. Repeat on other end of glider base.

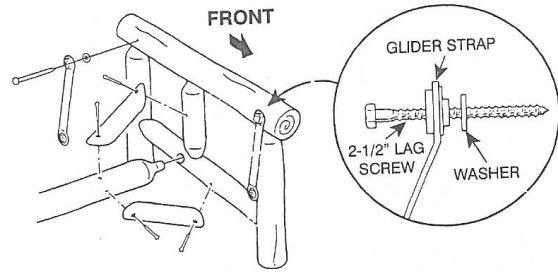


Figure 4

STEP 7 Set chair in upright position on a level surface and when legs are in proper position, bring ARM in against UPRIGHT. Tighten the preinstalled lag screws into the pilot hole in the arm with a wrench or socket. Secure doweled joints in place with screws perpendicular to the doweled ends as shown in figure 6. Repeat procedure for other side.

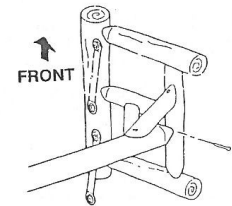


Figure 5

STEP 8 Set assembled seat into glider base and attach bottom of glider strap to legs of unit with lag screws in pilot holes. As shown in figure 7.

STEP 9 Tighten down all lag screws firmly to secure unit. Your glider is now assembled and ready for finish or immediate use. *Relax and enjoy!*

Check all joints for tightness before and during each usage season.

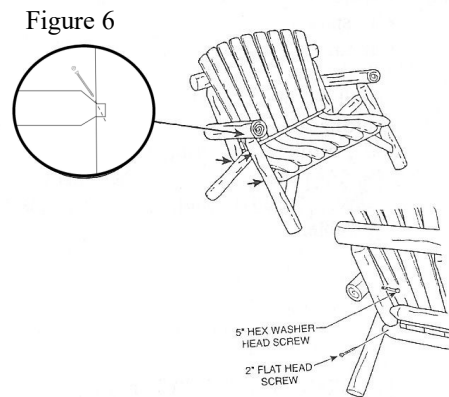


Figure 6

Figure 7

