


User Manuals

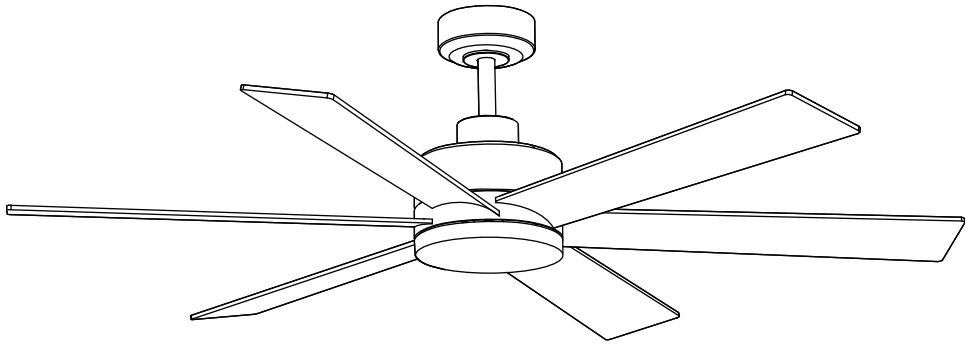

CEILING FAN

WARM TIPS

1. Insert the downrod ball head into the groove of the mounting bracket. (Figure 1)


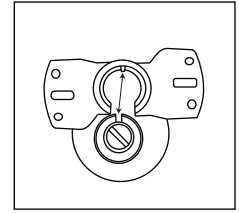


Figure 1


TOOLS MAY REQUIRED




Ladder

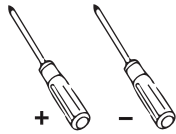

Screwdriver



Wire Strippers

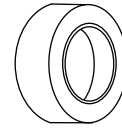

Tape




Goggles

ACCESSORIES



AA

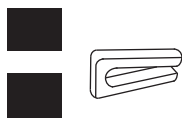

BB



CC




DD



EE



FF



GG



HH




AA	Expansion screw	2
BB	Balance kit	2+1
CC	Blade screw	2 spare
DD	Wire nut	5
EE	Plastic expansion tube	4
FF	Self-tapping screw	4



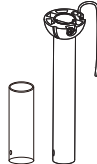
CEILING FAN




GG	J-box screw and washer	4+4
HH	Red washer	2 spare

PACKAGE CONTENTS

- In addition to the parts included in the accessory package, there are a total of 12 fan light accessories. Please check carefully whether any parts are missing from the package and make sure to confirm all parts inside the box. (Each 1 pack)

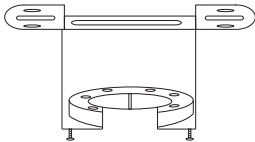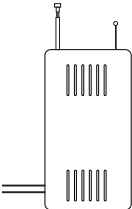Mounting bracket	Receiver	Magnetic deco cover
A spare	B	C
		
1	1	1

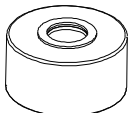Motor top cover	Fan blade	Downrod
D	E	F
		
1	6	2

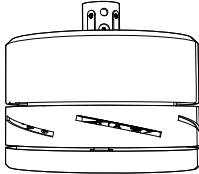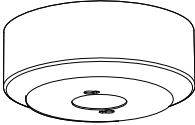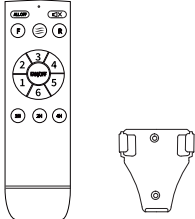Fan motor host	Canopy cover	Remote controlle
G	H	I
		
1	1	1

CEILING FAN

IMPORTANT WARNING

- To reduce the risk of electric shock, turn off all power sources.
- All wiring must comply with the National Electrical Code and local electrical codes. Electrical installation should be performed by a qualified licensed electrician.
- **WARNING:** To reduce the risk of personal injury, use only the two steel screws (and lock washers) provided with the outlet box for installation. Most outlet boxes are typically used to support lighting devices instead of fans and may need to be replaced. If in doubt, please consult a qualified electrician.



WARNING




TO REDUCE THE RISK OF FIRE
ELECTRIC SHOCK OR PERSONAL INJURY
MOUNT FAN TO OUTLET BOX MARKED
ACCEPTABLE FOR FAN SUPPORT

- Do not turn the fan blades until the fan installation is completed.
- To avoid personal injury or damage to the fan and other items, maintain and clean the fan with care.
- Do not use water or detergents to clean the fan or fan blades. A dry rag or slightly damp cloth is suitable for cleaning.
- Electrical diagrams are for reference only. Please refer to the instructions used with the packaging for properly assembled lighting kits.

CEILING FAN

ELECTRICAL AND STRUCTURAL REQUIREMENTS

- Your new ceiling fan will require a grounded electrical supply line of AC110~130V/60Hz15 Amp Circuit. Electrical code requires use of a fan-rated outlet box to support the extra weight and motion associated with a ceiling fan. A fan-rated box will be labeled as such and typically supports up to a 70lbs ceiling fan. Fan-Rated Outlet Boxes vary in rating and design. Ensure the ratings of your ceiling fan outlet box meet the requirements for the ceiling fan being installed. Figure 1, Figure 2 and Figure 3 depicts different structural configurations that may be used for mounting the outlet box.
- Low-profile use (Figure 1):
A 1/2-deep pancake box is meant to be screwed to a joist or block. It is used if only one cable is coming into the box. It is also available in a saddle-mount configuration.
- Deep-profile use (Figure 2)
A 2-1/4" deep box can be attached to blocking between joists and is roomy enough to handle more than one cable.
- Brace use (Figure 3)
Paired with a deep box, this hanger is meant to span between two joists and takes the place of wooden blocking.

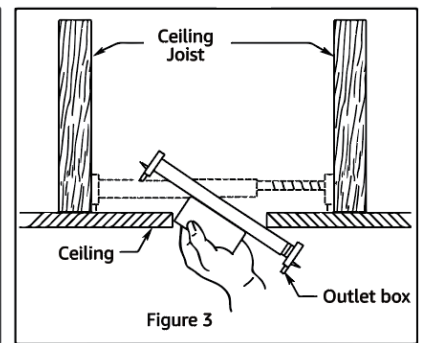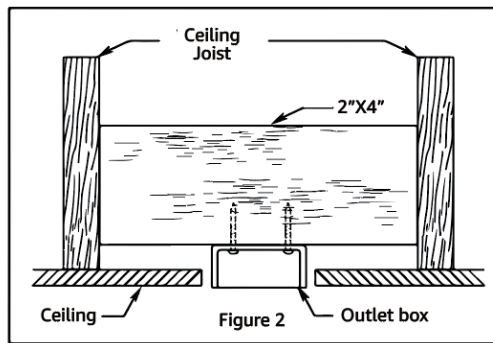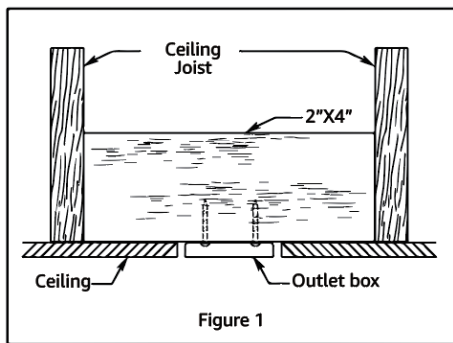

- If your fan is to replace an existing light fixture, turn power off at the main fuse box and remove the existing light fixture.

⚠ WARNING



Turning off wall switch is not sufficient, to avoid possible electrical shock be sure electricity is turned off at the main fuse box before wiring. All wiring must be in accordance with National and Local codes and the ceiling fan must be properly grounded as a precaution against possible electrical shock.

⚠ WARNING



Do not operate this fan with a variable (Rheostat) wall controller or dimmer switch. Doing so could result in damage to the ceiling fan's remote control unit.

CEILING FAN



INITIAL INSTALLATION

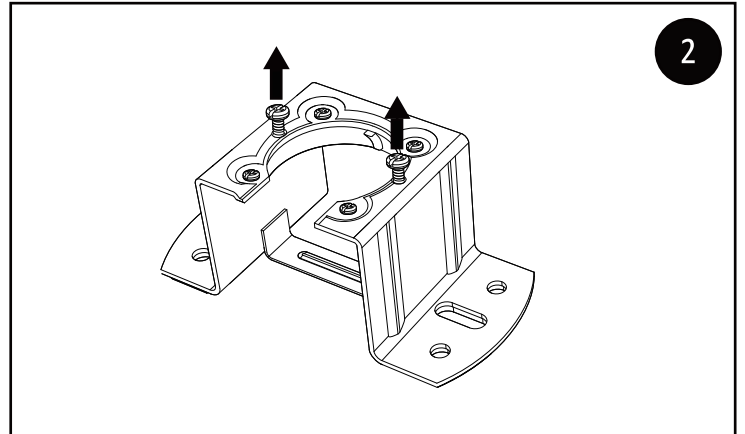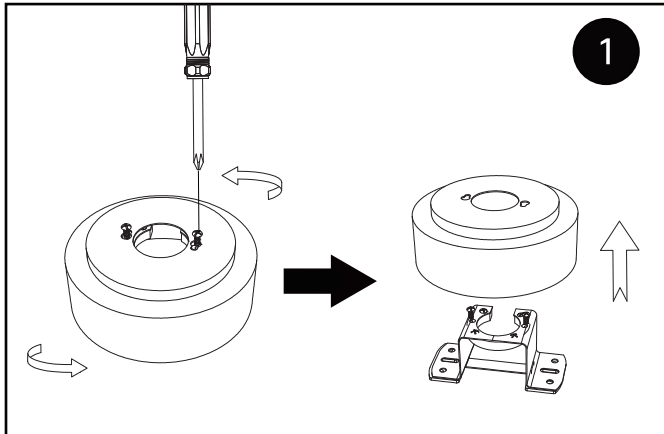

- 1 Use a screwdriver to loosen the screws, rotate the canopy cover so that the screws move to the larger hole end, and then remove the bracket.
- 2 Loosen the two screws in the middle of the mounting bracket by 2 ~ 3 turns, ensuring that they remain securely fixed to the bracket.

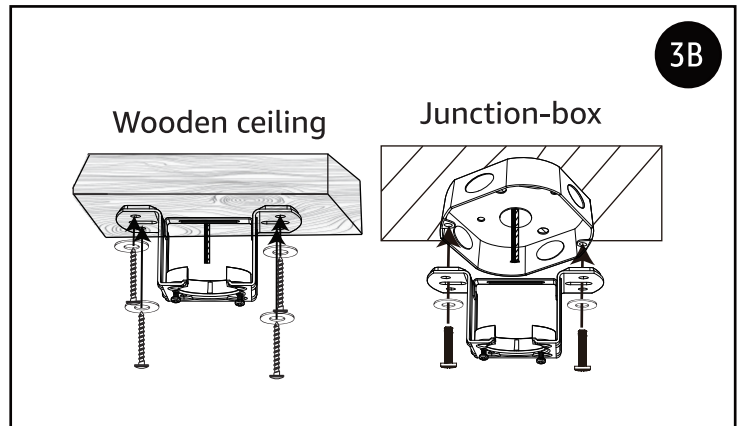
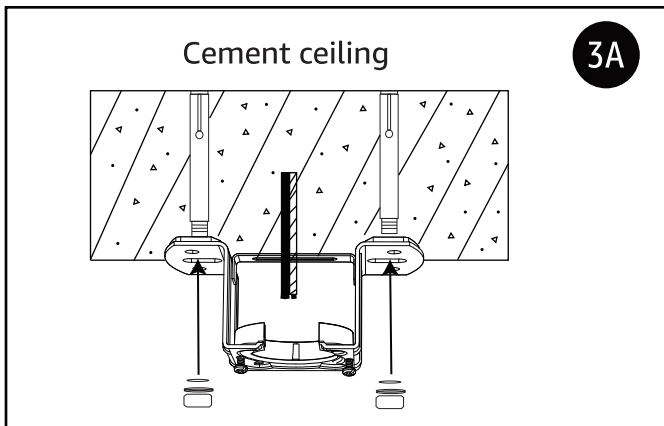


- 3A Mount the bracket onto the ceiling and secure it using appropriate accessory screws based on the type of ceiling material.
Cement ceiling: Drill a hole in the cement ceiling, and then use expansion screws to secure it.
- 3B Wooden ceiling: Use self-tapping screws and washers to secure the bracket to the wooden ceiling.
Junction box: Use j-box screw and washer to fix the bracket to the ceiling.

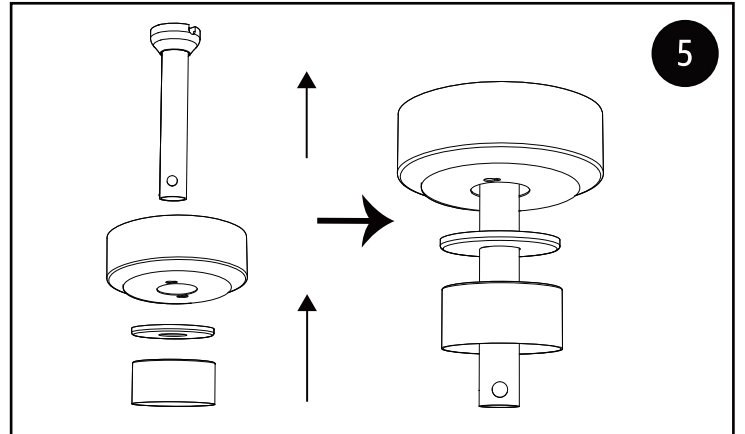
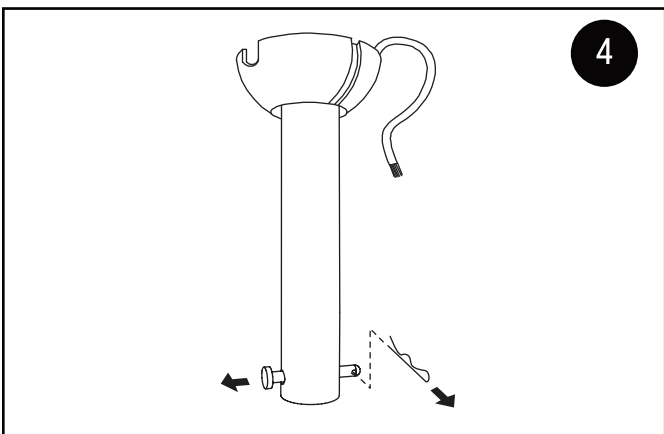


- 4 Take out the downrod pin of the downrod assembly.
- 5 Mount the canopy cover and magnetic deco cover and coupling cover onto the downrod.



CEILING FAN

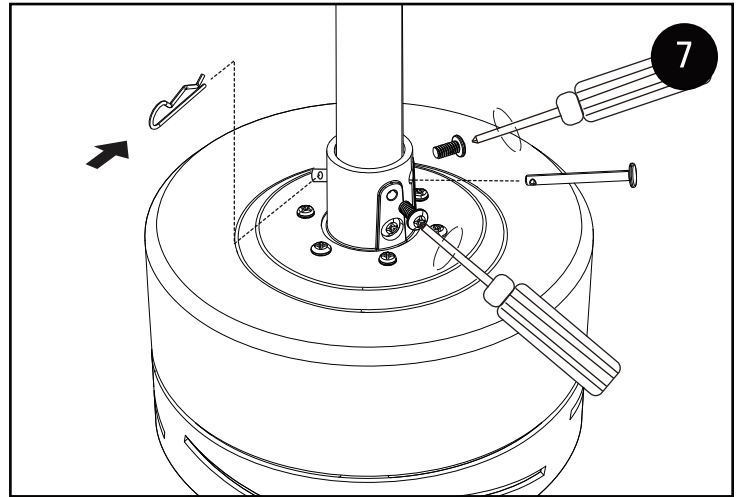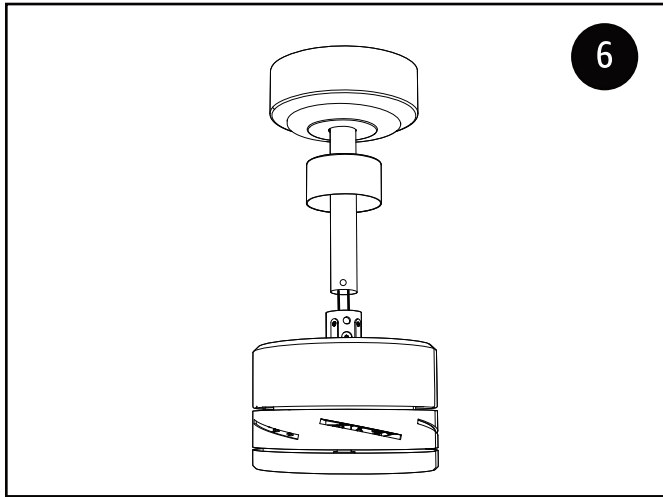

- 6 Assemble the fan motor host and downrod as shown in the diagram, and thread the wires through the downrod. (If the wires are blocked, please remove the pin on the ball head.)
- 7 Insert the downrod pin, lock it with the downrod clip, and then tighten the two screws on the yoke.

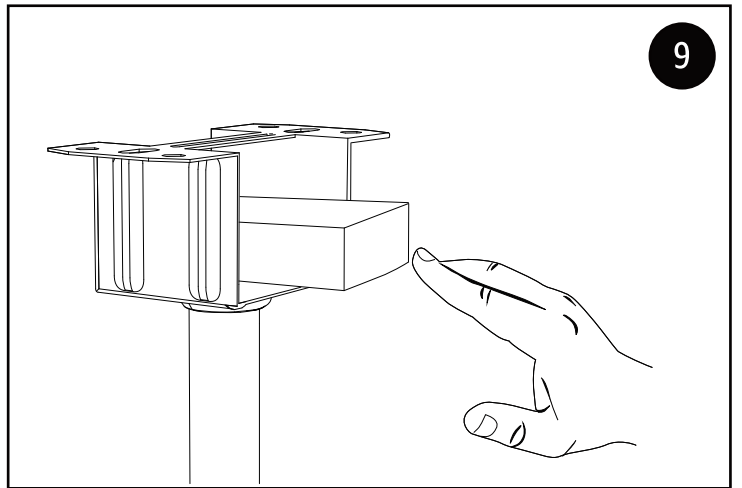
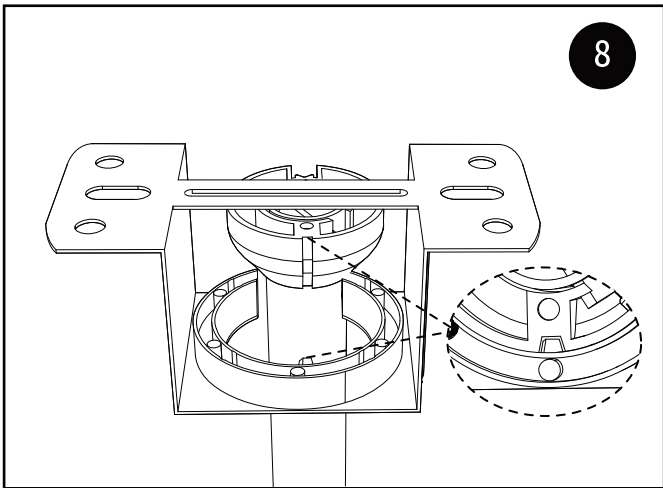


- 8 Hang the downrod onto the bracket, ensuring that the two slots align.
- 9 Place the receiver on the bracket.

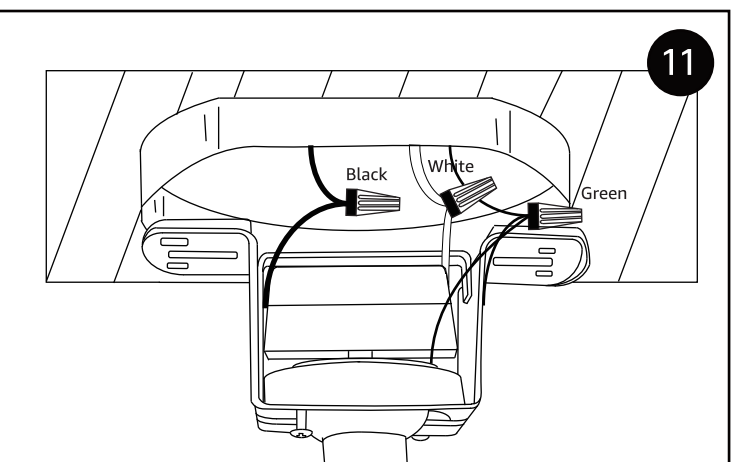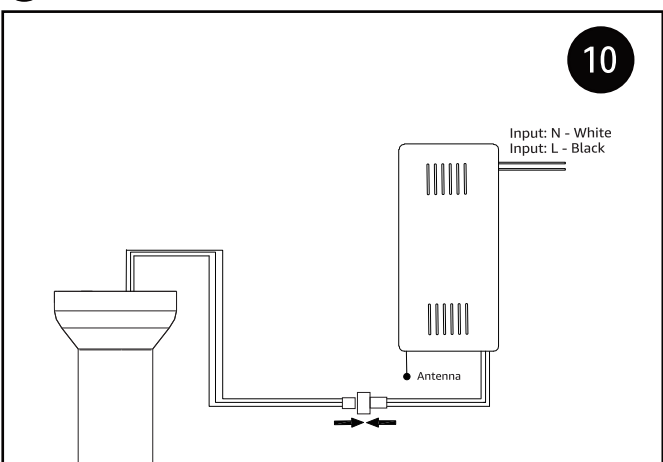



- 10 Connect the wires between the controller and the fan motor: align and insert the 3-pin wire connector.
- 11 Wiring:
Connect the "Neutral wire" (white wire) from ceiling to the white wire.
Connect the "Live wire" (black wire) from ceiling to the black wire.
Connect the "Ground wire" (green or yellow/green or bare) from ceiling to the green wire.

CEILING FAN

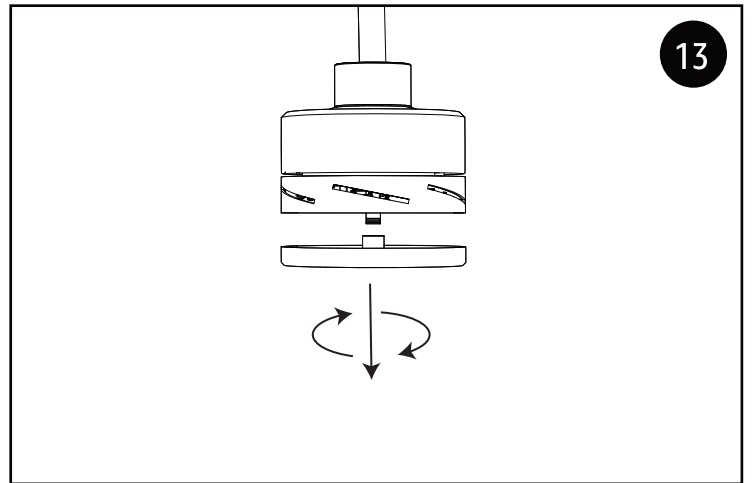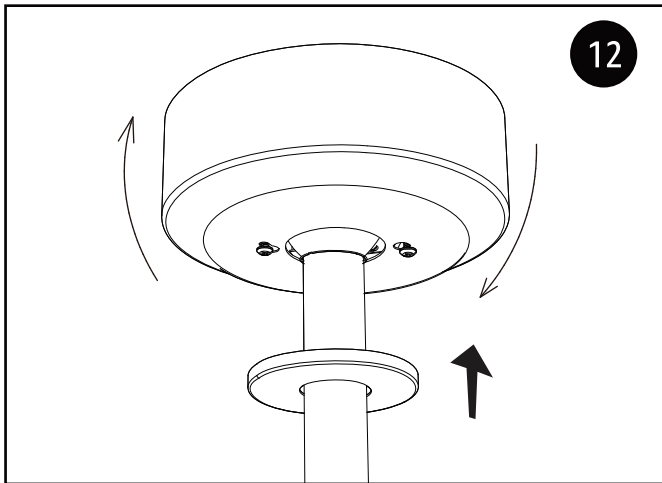



12 Push the canopy cover upward, align it with the two screws from step two, then rotate and tighten the screws to secure the canopy cover, and push the magnetic deco cover upward to cover the screws.

13 Unscrew the bottom plate pre-installed on the fan motor host.

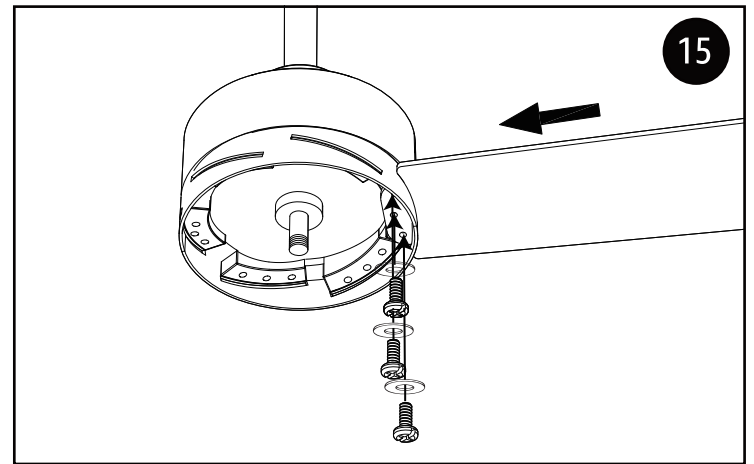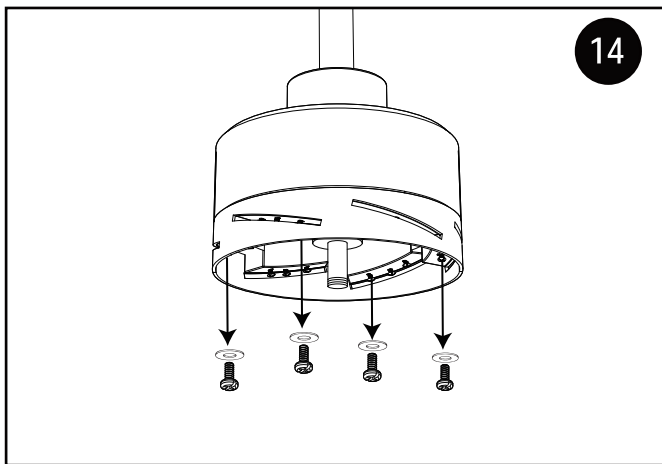

14 Remove the 18 screws and 18 red washers pre-installed on the motor chassis.

15 Align the holes on the fan blade with those on the motor, and secure them with 3 red washers and 3 screws. Repeat this step to install the remaining fan blades.

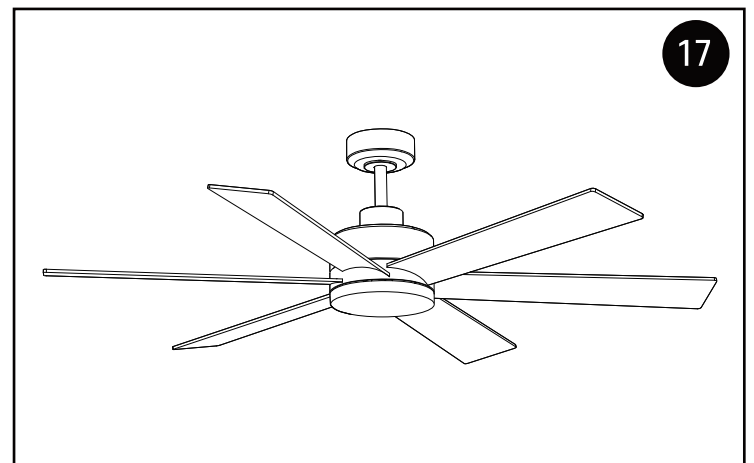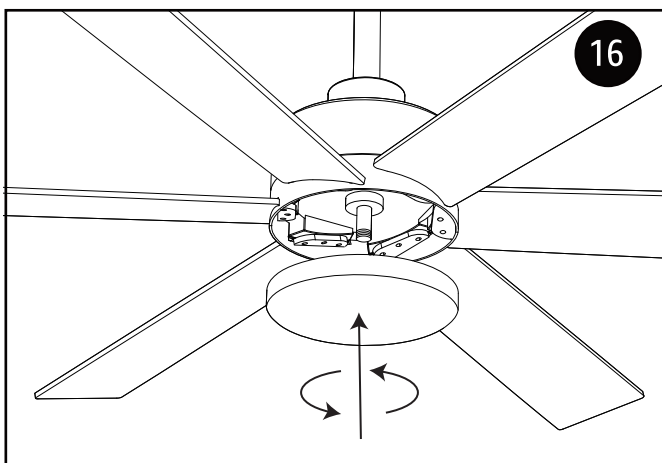








16 Rotate the bottom plate counterclockwise and tighten to secure.

17 Complete the Installation

CEILING FAN

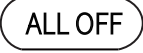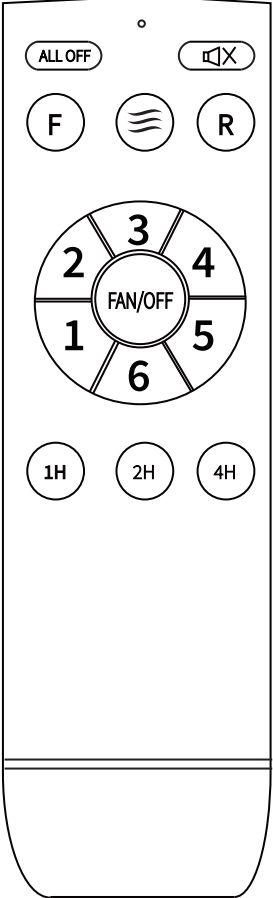REMOTE CONTROL

- To operate the fan, please install 2 AAA batteries (included) in the handheld remote transmitter. If not used for extended periods of time, remove the batteries to prevent damage to the transmitter. Store the remote away from excessive temperatures and humidity.

	All off	
	Mute	
	Forward	
	Natural wind	
	Reverse	
1-6	Speed setting	
	Fan off	
1H-2H-4H	Quick timer setting (1H-2H-4H)	


Remote Controller Pairing:

The remote controller can be used to control multiple ceiling fans.

1. For the ceiling fans you want to pair, turn the main power switch off for at least 1 minute.
2. Long press the "Fan off" button after turning on the switch.
3. The fan will make two "di di" sounds, then release the button. Pairing is complete. If pairing is unsuccessful, please repeat the steps above.

Installing Wall Plate:

Attach the wall plate using the two provided screws.

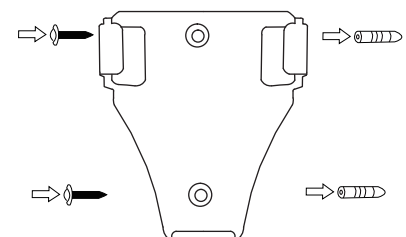

CEILING FAN

HOW TO OPERATE YOUR CEILING FAN

- **IMPORTANT:** Using a full range dimmer switch(not included) to control fan speed will damage the fan. To reduce the risk of fire or electrical shock, do not use a full range dimmer switch to control the fan speed (Figure 1).
- Restore electrical power to the outlet box by turning the electricity on at the main fuse box.



Figure 1

! WARNING

Check to see that all connections are tight, including ground, and that no bare wire is visible at the wire connectors, except for the ground wire.


Do not operate this fan with a variable(Rheostat) wall controller or dimmer switch. Doing so could result in damage to the ceiling fan's remote control unit.

TROUBLESHOOTING

PROBLEM	SUGGESTED REMEDY
If fan does not start	<ol style="list-style-type: none"> 1. Check main and branch circuit fuses or circuit breakers. 2. Make sure that the wall control is turned "ON" 3. Check line wire connections to fan and switch wire connections in switch housing. CAUTION: Make sure main power is turned off. 4. Make sure battery has power, change battery(2*AAA) to try again. 5. The remote controller is not paired, check Page.8 to pair. 6. The motor or receiver or remote controller is fault, contact our customer service. 7. Make sure do not connect to any dimmer or fan speed adjust switch.
If fan sounds noisy	<ol style="list-style-type: none"> 1. Make sure all screws in motor housing are snug. (not over tightened) 2. Make sure the screws which attach the fan blade bracket to the motor are tight. 3. Make sure the blade is correct installed, blade arm "UP" side up. 4. Too close to the wall, make sure the blades at least 3ft to the wall. 5. Make sure wire connectors in switch housing are not rattling against each other or against the interior wall of the switch housing. <p>CAUTION: Make sure main power is turned off before entering switch housing.</p>

CEILING FAN

TROUBLESHOOTING

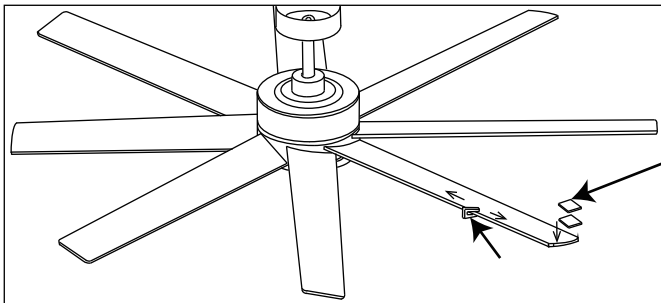PROBLEM	SUGGESTED REMEDY
If fan sounds noisy	<p>6. DO NOT USE a Solid State variable speed control.</p> <p>7. Allow "break-in" period of 24 hours. Most noises associated with a new fan will disappear after this period.</p> <p>8. Made sure the ceiling bracket is screwed securely.</p>
If fan wobbles	<p>All blades are weighed and grouped by weight. The following procedures should eliminate most of the wobble. Check for wobble after each step.</p> <ol style="list-style-type: none"> 1. Check that all blades are screwed firmly into motor housing. 2. Make sure that canopy and mounting bracket are tightened securely to ceiling junction box and junction box is mounted firmly to ceiling joist. 3. Make sure the ball head into the slot. (*downrod installation only) 4. Make sure the downrod is well fixed by screws.(*downrod installation only) 5. Interchanging two adjacent blades could redistribute the weight and possibly result in smoother operation. 6. The balancing kit should only be used if there is an unacceptable amount of fan wobble after completing all the steps: <p><u>How to use balancing kit:</u></p> <ol style="list-style-type: none"> (1) Turn the fan on and set the speed control setting to a speed at which the wobble is the greatest. (2) Turn off the fan and allow it to come to a complete stop. Select one blade and place the balance clip on it, halfway between the blade holder and the blade tip on the trailing edge of the blade. (3) Turn the fan on. Note whether the wobble has increased or decreased. Turn the fan off, move the clip to another blade, and retest. Repeat this procedure on all blades, noting the blade on which the greatest improvement is achieved. (4) Move the clip back to the blade that showed the greatest improvement. Move the clip inward and outward on this blade and operate the fan to find the position where the clip gives the greatest improvement. (5) Remove the clip and install a balancing weight to the top of the blade along the centerline, near the point where the clip was positioned. (6) If the fan wobble problem has not been corrected, you can try to improve the balancing further by using the balancing clip and additional weights. <div data-bbox="411 1800 1394 2101" style="text-align: center;">  <p>The diagram shows a top-down view of a ceiling fan with five blades. One blade is highlighted with a dashed line. A small metal clip is attached to the trailing edge of this blade. An arrow points to the clip with the text 'WEIGHT BALANCING'. Another arrow points to the top surface of the blade, indicating where a weight should be placed.</p> </div>

CEILING FAN

CUSTOMER SERVICE

30-Days Full Refund Guarantee

If you are not completely satisfied or the item isn't what you expected, just tell us within 30 days. We will give you a full refund unconditionally.

Friendly Reminder

It's better to contact us than leaving a negative shopping experience. Nothing is more important than your satisfaction, and we will do our best to serve you.

Quick Response within 12 Hours

You can contact us without any hesitation at any time of the day, and we will reply to you within 12 hours. (It would be appreciated if you could provide us with a video or pictures, if available)

2-year Warranty

Your fan light comes with a two-year warranty. If a malfunction occurs due to product quality issues, we will assist in diagnosing the problem and provide replacement parts free of charge to ensure your fan light resumes normal operation.

REPLACE THE DOWNROD

⚠ WARNING

To prevent serious injury or death: Fan fall hazard

- Always follow the downrod assembly instructions exactly.
- Verify the downrod is assembled correctly by firmly pulling on the hanger ball.
- Pin must be reinserted to secure downrod assembly

